

# Contrail Service Orchestration Customer Portal User Guide

Published  
2020-11-10

Release  
5.3.0

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*Contrail Service Orchestration Customer Portal User Guide*

5.3.0

Copyright © 2020 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

## About the Documentation | xxxii

Documentation and Release Notes | xxxii

Documentation Conventions | xxxii

Documentation Feedback | xxxv

Requesting Technical Support | xxxv

Self-Help Online Tools and Resources | xxxvi

Creating a Service Request with JTAC | xxxvi

## 1

## Introduction

### Customer Portal Overview | 2

About the Customer Portal User Guide | 2

Customer Portal Overview | 3

Accessing Customer Portal | 10

Switching the Tenant Scope | 12

Setting Up Your Network with Customer Portal | 12

About the Customer Portal Dashboard | 13

Tasks You Can Perform | 14

Field Descriptions | 14

Changing the Customer Portal Password | 17

Resetting the Password | 18

Changing the Password on First Login | 19

Extending the User Login Session | 21

View and Edit Tenant Settings | 22

## **Users and Roles | 29**

Role-Based Access Control Overview | 29

About the Users Page in Customer Portal | 30

Tasks You Can Perform | 31

Field Descriptions | 31

Adding Tenant and OpCo Tenant Users | 32

Editing and Deleting Tenant and OpCo Tenant Users | 34

Editing Tenant and OpCo Tenant Users | 34

Deleting Tenant and OpCo Tenant Users | 35

Resetting the Password for Tenant Users | 35

Roles Overview | 36

Types of Roles | 36

Role Scopes | 37

Access Privileges | 37

Relationship Between User, Roles, and Access Privileges | 37

Benefits of role-based access control (RBAC) | 38

About the Tenant Roles Page | 39

Tasks You Can Perform | 39

Field Descriptions | 39

Adding User-Defined Roles for Tenant Users | 40

Editing, Cloning, and Deleting User-Defined Roles for Tenant Users | 41

Editing Roles | 42

Cloning Roles | 42

Deleting Roles | 43

Access Privileges for Role Scopes (Tenant and Operating Company) | 44

## **2**

## **Managing Sites, Site groups, and Site Templates**

### **Managing Sites | 54**

About the Sites Page | 55

Tasks You Can Perform | 55

Field Descriptions | 56

Multihoming Overview | 57



Enterprise Hubs Overview	58
Benefits of Enterprise Hubs	59
Adding and Provisioning Switches to Provide LAN Capability to a Site Overview	59
Standalone Switch Overview	60
Switch Behind a CPE or Next Generation Firewall Overview	61
Monitoring Switches Overview	63
Upgrading Sites Overview	64
Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities	65
Adding Provider Hub Sites for SD-WAN Deployment	90
Adding Cloud Spoke Sites for SD-WAN Deployment	91
Provisioning a Cloud Spoke Site in AWS VPC	99
Add a Cloud Spoke Site	99
Download the Cloud Formation Template	100
Provision the Device on AWS Server	101
Activate the Device	102
Manually Adding On-Premise Spoke Sites	103
Add an On-Premise Spoke Site with SD-WAN Capability	103
Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities	121
Add an On-Premise Spoke Site with LAN Capability	141
Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities	155
Adding and Provisioning a Next Generation Firewall Overview	166
Overview	166
Topology	167
Workflow	168
Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site	168
Add Switches to an Existing SD-LAN Site	175
Enabling Integration with Mist Access Points	186
Discover Mist Access Points	186
Adding a Standalone Next Generation Firewall Site	187
Managing LAN Segments on a Tenant Site	193
Adding LAN Segments	194
Deploying LAN Segments	198
Reassigning a Department to a LAN Segment	199
Deleting LAN Segments	200

Managing a Single Site | 200

Viewing the Sites History | 202

Viewing Jobs Initiated to Add and Configure Sites | 202

Viewing Jobs Initiated to Delete Sites | 203

Edit Site Overview | 205

Benefits of Editing Site Parameters | 207

Edit On-Premise Spoke and Enterprise Hub Site Parameters | 207

Reconfigure Static Tunnels | 212

Edit Site Examples | 214

Example 1: Configure a Site with a LAN segment, WAN link, and Local Breakout Enabled | 215

Example 2: Configure a Site with a LAN Segment, Active WAN Link, Backup WAN Link, and Local Breakout Enabled | 216

Example 3: Configure a Site with a LAN Segment and Two Active WAN Links | 217

Example 4: Configure a Site integrated with Zscaler | 218

Example 5: Configure Site-to-Site Traffic Through DVPN Tunnels | 219

Example 6: Configure a Fully Functional Site with Enterprise and Provider Hubs | 220

Upgrading Sites | 221

Upgrading a Site | 221

Upgrading Sites in Bulk | 222

Deleting a Site | 223

**Managing Site Groups | 225**

About the Site Groups Page | 225

Tasks You Can Perform | 225

Field Descriptions | 225

Creating Site Groups | 226

## **Managing Site Templates | 227**

About the Site Templates Page | 227

Tasks You Can Perform | 227

Add On-Premise Spoke Sites by Using a Site Template | 228

Cloning, Editing, and Deleting Site Templates | 230

Cloning Site Templates | 230

Editing Site Templates | 231

Deleting Site Templates | 231

Adding a Site Template | 232

Adding and Configuring Sites by Importing a JSON File | 243

## **Managing Mesh Tags | 245**

Mesh Tags Overview | 245

About the Mesh Tags Page | 246

Tasks You Can Perform | 246

Field Descriptions | 246

Creating User-defined Mesh Tags | 247

## **Managing Dynamic Mesh | 248**

Dynamic Mesh Tunnels Overview | 249

Adding On-Demand Mesh Tunnels | 250

Deleting On-Demand Mesh Tunnels | 251

## **Managing Devices and Resources**

### **Managing Devices | 254**

Device Redundancy Support Overview | 255

Prerequisites for SRX Series Devices | 255

Supported Connection Plans | 255

Create and Configure an SD-WAN Site | 256

Dual CPE Devices Logical Topology for NFX Network Services Platform | 256

Dual CPE Devices Logical Topology for SRX Series Gateway Devices	256
Activating a CPE Device	257
Manually Activating a Switch	260
Manage an EX Series Switch	262
View the Chassis Information of an EX Series Switch	263
View Information about an EX Series Switch	266
View Information about Ports on an EX Series Switch	268
Deploying an Access Profile on a Switch	271
Dissociating an Access Profile	272
Managing Ports on an EX Series Switch	273
View Port Details	273
Enable Ports	274
Disable Ports	275
Deploy or Redeploy a Port Profile	275
Configure EX Series Switch Ports Overview	276
Configure Switch Ports	277
Life Cycle of a Port Profile	278
Edit Configuration of Ports	279
Dissociate a Profile from a Port	281
Activating Dual CPE Devices (Device Redundancy)	282
Viewing the History of Tenant Device Activation Logs	285
Zero Touch Provisioning Overview	287
Devices Supported	287
Benefits	287
Workflow for Onboarding a Device Using ZTP	288
<b>Managing Device Images  </b>	<b>291</b>
Device Images Overview	291
About the Device Images Page	291
Tasks You Can Perform	291
Field Descriptions	292
Deleting Device Images	292

## **Managing Resources | 294**

Multidepartment CPE Device Support | **295**

About the Devices Page | **296**

Tasks You Can Perform | **296**

Field Descriptions | **297**

Perform Return Material Authorization (RMA) for a Device | **299**

Perform Return Material Authorization (RMA) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device | **300**

Perform Return Material Authorization (RMA) for a Dual-CPE Device | **302**

Perform RMA for an NFX Cluster | **302**

Perform RMA for an SRX Cluster | **305**

Grant Return Material Authorization (RMA) for a Device | **307**

Grant Return Material Authorization (RMA) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device | **308**

Grant RMA for a Dual-CPE Device | **309**

Grant RMA for an SRX Device within an SRX Cluster | **311**

Manage a Single CPE Device | **313**

Rebooting a CPE Device | **316**

Configuring APN Settings on CPE Devices | **317**

Configuring APN Settings with SIM Change on CPE Devices | **318**

Configuring APN Settings without SIM Change on CPE Devices | **319**

Identifying Connectivity Issues by Using Ping | **320**

Identifying Connectivity Issues by Using Traceroute | **324**

Remotely Accessing a Device CLI | **326**

Configuring the Firewall Device | **327**

About the Physical Interfaces Page | **329**

Tasks You Can Perform | **329**

Field Descriptions | **330**

About the Logical Interfaces Page | **330**

Tasks You Can Perform | **330**

Field Descriptions | **331**

Adding a Logical Interface | **331**

## Editing, Deleting, and Deploying Logical Interfaces | 334

- Editing Logical Interfaces | 334

- Deleting Logical Interfaces | 335

- Deploying Logical Interfaces | 335

## Adding a Security Zone | 335

## Adding a Routing Instance | 338

## About the Static Routes Page | 339

- Tasks You Can Perform | 339

- Field Descriptions | 340

## Adding a Static Route | 340

## Editing, Deleting, and Deploying Static Routes | 343

- Editing Static Routes | 343

- Deleting Static Routes | 344

- Deploying Static Routes | 344

## Managing Device Templates | 345

## Device Template Overview | 345

- SD-WAN CPE | 346

- Secure Internet CPE | 348

- Managed Internet CPE | 349

## About the Device Template Page | 350

- Tasks You Can Perform | 350

- Field Descriptions | 350

- Supported Device Templates | 351

## Cloning a Device Template | 354

## Importing a Device Template | 355

- Creating a Device Template File | 356

- Importing a Device Template File | 356

## Updating Stage-2 Configuration Template in a Device Template | 357

## Configuring Stage-2 Initial Configuration in a Device Template | 361

## **Managing Configuration Templates | 365**

About the Configuration Templates Page | 365

Tasks You Can Perform | 366

Field Descriptions | 367

Edit, Clone, and Delete Configuration Templates | 368

Edit a Configuration Template | 369

Clone a Configuration Template | 369

Delete a Configuration Template | 370

Deploy Configuration Templates to Devices | 371

Deploy from the Configuration Templates Page | 372

Deploy from the Devices Page | 375

Undeploy a Configuration Template from a Device | 376

Dissociate a Configuration Template from a Device | 378

Preview and Render Configuration Templates | 379

Import Configuration Templates | 380

Export a Configuration Template | 382

Assign Configuration Templates to Device Templates | 383

Add Configuration Templates | 385

View the Configuration Deployed on Devices | 394

## **Managing Licenses | 396**

About the Device Licenses Page | 396

Tasks You Can Perform | 396

Field Descriptions | 396

About the CSO Licenses Page | 397

Tasks You Can Perform | 398

Field Descriptions | 398

## **Managing Signature Database and Certificates | 400**

Signature Database Overview | 400

About the Signature Database Page | 401

Tasks You Can Perform | 401

Field Descriptions | 401

Installing Signatures | 402

Certificates Overview | 403

About the Certificates Page | 404

Tasks You Can Perform | 404

Field Descriptions | 404

Importing a Certificate | 406

Installing and Uninstalling Certificates | 408

Installing a Certificate | 408

Uninstalling a Certificate | 409

About the VPN Authentication Page | 409

Tasks You Can Perform | 410

Changing the Method of Renewing PKI Certificates for a Tenant | 410

Changing the Method of Renewing PKI Certificates for Sites | 411

Updating the CRL URL of Certificates | 412

Change the CA Server URL and Password | 412

Manually Renewing Certificates for Sites | 412

Field Descriptions | 413

## **Managing Juniper Identity Management Service | 415**

Juniper Identity Management Service Overview | 415

Access Token Query | 416

Batch or Periodic Query | 416

IP Address Query | 417

User Mapping Query | 417

About the Identity Management Page | 418

Tasks You Can Perform | 418

Configuring CSO and JIMS Connection | 419

Configuring JIMS for an SRX Device | 421

## **Managing Policies, Profiles, and Proxies**

### **Managing Firewall Policies | 425**

Firewall Policy Overview | 426

About the Firewall Policy List Page | 428

Tasks You Can Perform | 428

Field Descriptions | 428



About the Firewall Policy Name Page | 429

Tasks You Can Perform | 429

Field Descriptions | 430

Adding a Firewall Policy | 430

Editing and Deleting Firewall Policies | 432

Editing Firewall Policies | 432

Deleting Firewall Policies | 432

Adding Firewall Policy Intents | 433

Editing, Cloning, and Deleting Firewall Policy Intents | 439

Editing Firewall Policy Intents | 440

Cloning Firewall Policy Intents | 440

Deleting Firewall Policy Intents | 441

Selecting Firewall Source | 441

Adding an End Point as Firewall Source | 442

Selecting Firewall Source Using Abbreviations | 443

Selecting a Firewall Source from the End Points Panel | 443

Creating and Selecting a Firewall Source from the End Points Panel | 444

Creating Addresses from Source | 444

Selecting Firewall Destination | 445

Adding an End Point as Firewall Destination | 445

Selecting Firewall Destination Using Abbreviations | 446

Selecting a Firewall Destination from the End Points Panel | 446

Creating and Selecting a Firewall Destination from the End Points Panel | 447

Creating Addresses from Destination | 447

Firewall Policy Examples | 448

Example 1: Firewall Policy that Permits Traffic from Departments in Site A to the Departments in Site B | 450

Example 2: Firewall Policy that Permits Internet Access for all Departments in Site A and Site B | 452

Example 3: Firewall Policy that Permits Any Public Internet Address to Access the Sales Department in Site B | 455

Example 4: Firewall Policy that Permits Social Media Access to all Departments in Site A | 456

Example 5: Firewall Policy that Controls Access to Specific Applications for Various Departments | 458

Example 6: Firewall Policy that Denies Access to Social Networking Sites | 466

Example 7: Firewall Policy that Controls Access to an Address over the Internet (HTTP) | 469

Example 8: Firewall Policy that Permits or Denies the Use of HTTP or FTP as a Service | 475

Example 9: Firewall Policy that Denies Access to BitTorrent to the Finance Departments across both Site A and Site B | 477

Example 10: Firewall Policy that Allows Access to Facebook for Users in User Group A | 480

Example 11: Firewall Policy that Permits User B in Site A Access to YouTube with UTM Enabled | 484

Example 12: Firewall Policy that blocks access to Internet and allow access to Google Drive. | 487

Firewall Policy Schedules Overview | 488

About the Firewall Policy Schedules Page | 489

Tasks You Can Perform | 489

Field Descriptions | 489

Creating Schedules | 490

Editing, Cloning, and Deleting Schedules | 492

Editing Schedules | 492

Cloning Schedules | 492

Deleting Schedules | 493

Deploying Firewall Policies | 493

About the Default Profiles for Unified Firewall Policy Page | 494

Tasks You Can Perform | 495

Field Descriptions | 495

Editing Default Settings for the Unified Firewall Policy | 496

Importing Policies Overview | 498

Importing Firewall Policies | 500

## Managing UTM Profiles | 502

UTM Overview | 503

UTM Licensing | 504

UTM Components | 504

Configuring UTM Settings | 505

About the UTM Profiles Page | 507

Tasks You Can Perform | 507

Field Descriptions | 507

Creating UTM Profiles | 509

Editing, Cloning, and Deleting UTM Profiles | 512

Editing UTM Profiles | 512

Cloning UTM Profiles | 513

Deleting UTM Profiles | 513

About the Web Filtering Profiles Page | 514

Tasks You Can Perform | 514

Field Descriptions | 515

Creating Web Filtering Profiles | 516

Editing, Cloning, and Deleting Web Filtering Profiles | 520

Editing Web Filtering Profiles | 521

Cloning Web Filtering Profiles | 521

Deleting Web Filtering Profiles | 522

About the Antivirus Profiles Page | 522

Tasks You Can Perform | 523

Field Descriptions | 523

Creating Antivirus Profiles | 524

Editing, Cloning, and Deleting Antivirus Profiles | 527

Editing Antivirus Profiles | 527

Cloning Antivirus Profiles | 527

Deleting Antivirus Profiles | 528

About the Antispam Profiles Page | 529

Tasks You Can Perform | 529

Field Descriptions | 529

Creating Antispam Profiles	530
Editing, Cloning, and Deleting Antispam Profiles	532
Editing Antispam Profiles	533
Cloning Antispam Profiles	533
Deleting Antispam Profiles	534
About the Content Filtering Profiles Page	534
Tasks You Can Perform	534
Field Descriptions	535
Creating Content Filtering Profiles	536
Editing, Cloning, and Deleting Content Filtering Profiles	540
Editing Content Filtering Profiles	540
Cloning Content Filtering Profiles	540
Deleting Content Filtering Profiles	541
About the URL Patterns Page	542
Tasks You Can Perform	542
Field Descriptions	542
Creating URL Patterns	543
Editing, Cloning, and Deleting URL Patterns	544
Editing URL Patterns	545
Cloning URL Patterns	545
Deleting URL Patterns	546
About the URL Categories Page	546
Tasks You Can Perform	546
Field Descriptions	547
Creating URL Categories	547
Editing, Cloning, and Deleting URL Categories	549
Editing URL Categories	549
Cloning URL Categories	549
Deleting URL Categories	550

## **Managing SLA Profiles and SD-WAN Policies | 551**

### **SLA Profiles and SD-WAN Policies Overview | 552**

**SLA Profiles | 552**

**SD-WAN Policies | 553**

### **About the SD-WAN Policy Page | 555**

**Tasks You Can Perform | 555**

**Field Descriptions | 556**

### **Creating SD-WAN Policy Intents | 557**

### **Editing and Deleting SD-WAN Policy Intents | 564**

**Editing SD-WAN Policy Intents | 564**

**Deleting SD-WAN Policy Intents | 565**

### **Application Quality of Experience Overview | 565**

**Benefits of Application Quality of Experience | 567**

### **Configure and Monitor Application Quality of Experience | 567**

### **About the SLA-Based Steering Profiles Page | 568**

**Tasks You Can Perform | 568**

**Field Descriptions | 569**

### **Adding SLA-Based Steering Profiles | 572**

### **Editing and Deleting SLA-Based Steering Profiles | 579**

**Editing an SLA-Based Steering Profile | 579**

**Deleting SLA-Based Steering Profiles | 580**

### **About the Path-Based Steering Profiles Page | 580**

**Tasks You Can Perform | 581**

**Field Descriptions | 581**

### **Adding Path-Based Steering Profiles | 583**

### **Editing and Deleting Path-Based Steering Profiles | 585**

**Editing a Path-Based Steering Profile | 586**

**Deleting a Path-Based Steering Profile | 587**

### **Breakout and Breakout Profiles Overview | 587**

**Cloud Breakout | 589**

**Breakout Profiles | 589**

**SD-WAN Policy Intents for Breakout | 589**

**Benefits of Breakout Profiles | 590**

About the Breakout Profiles Page | 590

Tasks You Can Perform | 590

Breakout Profiles Field Descriptions | 591

Cloud Breakout Settings Field Descriptions | 593

Adding Breakout Profiles | 595

Adding Cloud Breakout Settings | 597

Assigning Cloud Breakout Settings to Sites | 601

Detaching Cloud Breakout Settings from Sites | 602

Editing Breakout Profiles and Cloud Breakout Settings | 603

Editing Breakout Profiles | 604

Editing Cloud Breakout Settings | 604

Deleting Breakout Profiles and Cloud Breakout Settings | 605

Deleting Breakout Profiles | 606

Deleting Cloud Breakout Settings | 606

Configuring Breakout on SD-WAN Sites | 607

## **Managing NAT Policies | 609**

NAT Policies Overview | 610

About the NAT Policies Page | 613

Tasks You Can Perform | 613

Field Descriptions | 613

Creating NAT Policies | 614

Editing and Deleting NAT Policies | 616

Editing NAT Policies | 616

Deleting NAT Policies | 616

About the Single NAT Policy Page | 617

Tasks You Can Perform | 617

Field Descriptions | 618

Creating NAT Policy Rules | 619

Editing, Cloning, and Deleting NAT Policy Rules | 626

Editing NAT Policy Rules | 626

Cloning NAT Policy Rules | 626

Deleting NAT Policy Rules | 627

Deploying NAT Policy Rules | 628

## Selecting NAT Source | 629

- Adding an Endpoint as NAT Source | 629

- Selecting Interfaces when GWR Resides Inside an NFX Box | 629

- Selecting NAT Source Using Abbreviations | 630

- Selecting a NAT Source from the End Points Panel | 631

- Creating and Selecting a NAT Source from the End Points Panel | 631

- Creating Addresses from Source Field | 632

## Selecting NAT Destination | 633

- Adding an Endpoint as NAT Destination | 633

- Selecting Interfaces when GWR Resides Inside an NFX Box | 633

- Selecting NAT Destination Using Abbreviations | 634

- Selecting a NAT Destination from the End Points Panel | 635

- Creating and Selecting a NAT Destination from the End Points Panel | 635

- Creating Addresses from Destination Field | 636

- Creating Services from Destination Field | 636

## NAT Pools Overview | 637

### About the NAT Pools Page | 637

- Tasks You Can Perform | 638

### Creating NAT Pools | 639

### Editing, Cloning, and Deleting NAT Pools | 641

- Editing NAT Pools | 641

- Cloning NAT Pools | 642

- Deleting NAT Pools | 642

### Deploying NAT Policies | 643

### Importing NAT Policies | 643

## Managing IPS Signatures and Profiles | 646

### About the IPS Signatures Page | 646

- Tasks You Can Perform | 647

- Field Descriptions | 647

### Create IPS Signatures | 651

### Create IPS Signature Static Groups | 659

Create IPS Signature Dynamic Groups | **660**

Edit, Clone, and Delete IPS Signatures | **666**

    Edit IPS Signatures | **666**

    Clone IPS Signatures | **667**

    Delete IPS Signatures | **667**

Edit, Clone, and Delete IPS Signature Static Groups | **668**

    Edit IPS Signature Static Groups | **668**

    Clone IPS Signature Static Groups | **669**

    Delete IPS Signature Static Groups | **670**

Edit, Clone, and Delete IPS Signature Dynamic Groups | **671**

    Edit IPS Signature Dynamic Groups | **671**

    Clone IPS Signature Dynamic Groups | **672**

    Delete IPS Signature Dynamic Groups | **673**

About the IPS Profiles Page | **673**

    Tasks You Can Perform | **674**

    Field Descriptions | **674**

Create IPS Profiles | **675**

Edit, Clone, and Delete IPS Profiles | **676**

    Edit IPS Profiles | **676**

    Clone IPS Profiles | **677**

    Delete IPS Profiles | **677**

About the <IPS-Profile-Name> / Rules Page | **678**

    Tasks You Can Perform | **678**

    Field Descriptions | **679**

Create IPS or Exempt Rules | **680**

    Create IPS Rules | **680**

    Create Exempt Rules | **687**

Edit, Clone, and Delete IPS or Exempt Rules | **688**

    Edit IPS or Exempt Rules | **688**

    Clone IPS or Exempt Rules | **689**

    Delete IPS or Exempt Rules | **689**



## Managing SSL Proxies | 691

### SSL Forward Proxy Overview | 691

Supported Ciphers in Proxy Mode | 693

Server Authentication | 694

Root CA | 695

Trusted CA List | 695

Session Resumption | 696

SSL Proxy Logs | 696

### About the SSL Proxy Policy Page | 697

Tasks You Can Perform | 698

Field Descriptions | 698

### Creating SSL Proxy Policy Intents | 699

### Editing, Cloning, and Deleting SSL Proxy Policy Intents | 703

Editing SSL Proxy Policy Intents | 704

Cloning SSL Proxy Policy Intents | 704

Deleting SSL Proxy Policy Intents | 705

### Understanding How SSL Proxy Policy Intents Are Applied | 706

Example 1: Firewall Policy Intent and SSL Proxy Policy Intent Match | 706

Example 2: Firewall Policy Intent and SSL Proxy Policy Intent Do Not Match | 707

Example 3: Applying SSL Proxy Policy Intents on Internal (Site-to-Site) Traffic | 707

### About the SSL Proxy Profiles Page | 708

Tasks You Can Perform | 708

Widget Descriptions | 709

### Creating SSL Forward Proxy Profiles | 710

### Editing, Cloning, and Deleting SSL Forward Proxy Profiles | 714

Editing SSL Forward Proxy Profiles | 715

Cloning SSL Forward Proxy Profiles | 715

Deleting SSL Forward Proxy Profiles | 716

### Configuring and Deploying an SSL Forward Proxy Policy | 717

## **Deploying Policies | 719**

Deploying Policies Overview | 719

About the Deployments Page | 720

Tasks You Can Perform | 720

Field Descriptions | 720

Using the Deployment Icon to Deploy Policies | 722

Deploying Policies | 723

## **Configuring Policies for SD-LAN | 725**

SD-LAN Profiles Overview | 726

Life Cycle of a Port Profile | 727

SD-LAN Profiles Workflow | 729

About the Port Profiles Page | 730

Tasks You Can Perform | 730

Field Descriptions | 730

Add Port Profiles | 731

Edit, Clone, and Delete Port Profiles | 736

Edit a Port Profile | 737

Clone a Port Profile | 737

Delete a Port Profile | 738

About the Authentication Profiles Page | 739

Tasks You Can Perform | 739

Field Descriptions | 739

Add Authentication Profiles | 741

Edit, Clone, and Delete an Authentication Profile | 747

Edit Authentication Profiles | 747

Clone an Authentication Profile | 748

Delete Authentication Profiles | 748

About the Access Profiles Page | 749

Tasks You Can Perform | 749

Field Descriptions | 749

Add Access Profiles | 750

**Edit, Clone, and Delete Access Profiles | 753****Edit Access Profiles | 753****Clone an Access Profile | 754****Delete Access Profiles | 755****About the RADIUS Server Profiles Page | 756****Tasks You Can Perform | 756****Field Descriptions | 756****Add RADIUS Server Profiles | 757****Edit, Clone, and Delete RADIUS Server Profiles | 759****Edit RADIUS Server Profiles | 760****Clone a RADIUS Server Profile | 760****Delete RADIUS Server Profiles | 761****Firewall Filters Overview | 762****Firewall Filter | 762****Firewall Filter Components | 762****Firewall Filter Processing | 763****Configure a Firewall Filter for an EX Series Switch | 763****About the EX Firewall Filters Page | 763****Tasks You Can Perform | 763****Field Descriptions | 764****Add Firewall Filters | 764****Delete Firewall Filters | 765****About the < Firewall-Filters-Name> / Terms Page | 766****Tasks You Can Perform | 766****Field Descriptions | 766****Add Terms to Firewall Filters | 767****Edit, Clone, and Delete Terms | 770****Edit a Firewall Filter Term | 770****Clone a Firewall Filter Term | 771****Delete a Firewall Filter Term | 772****Deploy or Redeploy a Port Profile | 772****Enable Ports | 773****Disable Ports | 774****Edit Configuration of Ports | 774**

## Managing Network Services and Shared Objects

### Configuring Network Services in a Distributed Deployment | 778

Network Service Overview | 778

About the Network Services Page | 779

Tasks You Can Perform | 779

Field Descriptions | 779

About the Service Instances Page | 781

Tasks You Can Perform | 781

Field Descriptions | 781

### Managing Shared Objects | 783

Addresses and Address Groups Overview | 784

About the Addresses Page | 785

Tasks You Can Perform | 785

Field Descriptions | 785

Creating Addresses or Address Groups | 786

Editing, Cloning, and Deleting Addresses and Address Groups | 789

Editing Addresses and Address Groups | 790

Cloning Addresses and Address Groups | 790

Deleting Addresses and Address Groups | 791

Services and Service Groups Overview | 791

About the Services Page | 792

Tasks You Can Perform | 792

Field Descriptions | 792

Creating Services and Service Groups | 793

Creating Protocols | 795

Editing and Deleting Protocols | 798

Editing Protocols | 799

Deleting Protocols | 799

Editing, Cloning, and Deleting Services and Service Groups | 800

Editing Services and Service Groups | 800

Cloning Services or Service Groups | 801

Deleting Services and Service Groups | 801

Application Signatures Overview	802
About the Application Signatures Page	803
Tasks You Can Perform	803
Field Descriptions	803
Understanding Custom Application Signatures	804
Adding Application Signatures	806
Editing, Cloning, and Deleting Application Signatures	811
Editing Application Signatures	811
Cloning Application Signatures	812
Deleting Application Signatures	812
Adding Application Signature Groups	813
Editing, Cloning, and Deleting Application Signature Groups	814
Editing Application Signature Groups	814
Cloning Application Signature Groups	814
Deleting Application Signature Groups	815
About the Departments Page	815
Tasks You Can Perform	816
Field Descriptions	816
Adding a Department	816
Deleting a Department	817
About the MAC Addresses Page	818
Tasks You Can Perform	818
Field Descriptions	818
Add a MAC Address Endpoint	819
Edit or Delete MAC Address Endpoint	820
Edit MAC Address	821
Delete MAC Address	821
About the Protocols Page	822
Tasks You Can Perform	822
Field Descriptions	822
Add a Protocol Endpoint	823
Edit or Delete Protocol Endpoint	824
Edit Protocols	824
Delete Protocols	825

About the Ports Page | 825

Tasks You Can Perform | 825

Field Descriptions | 826

Add a Port Endpoint | 826

Edit or Delete Port Endpoint | 828

Edit Ports | 828

Delete Ports | 829

## 6

### Monitoring Jobs and Audit Logs

#### Managing Jobs | 831

About the Jobs Page | 831

Tasks You Can Perform | 831

Field Descriptions | 831

Field Descriptions | 832

Editing and Deleting Scheduled Jobs | 833

Editing Scheduled Jobs | 834

Deleting Scheduled Jobs | 834

Viewing Job Details | 835

Retrying a Failed Job on Devices | 836

#### Managing Audit Logs | 837

Audit Logs Overview | 837

About the Audit Logs Page | 838

Tasks You Can Perform | 838

Viewing the Details of an Audit Log | 839

Exporting Audit Logs | 842

Purging Audit Logs (After Archiving or Without Archiving) | 843

## 7

### Monitoring Alarms, Events, and Threats

#### Monitoring Security Alerts and Alarms | 848

About the Monitor Overview Page | 848

Tasks You Can Perform | 848

Field Descriptions | 849

Alerts Overview | 850

About the Generated Alerts Page | 850

Tasks You Can Perform | 851

Field Descriptions | 851

About the Alert Definitions/Notifications Page | 852

Tasks You Can Perform | 852

Field Descriptions | 852

Managing Security Alerts Definitions | 853

Tasks You Can Perform | 853

Field Descriptions | 853

Creating Security Alert Definitions | 854

Editing, Cloning, and Deleting Security Alert Definitions | 856

Editing Security Alert Definitions | 856

Cloning Security Alert Definitions | 856

Deleting Security Alert Definitions | 857

About the Alarms Page | 858

Tasks You Can Perform | 858

Field Descriptions | 859

Enable E-mail Notifications for SD-LAN and SD-WAN Alarms | 859

**Monitoring Security | 862**

About the All Security Events Page | 862

Tasks You Can Perform | 862

Summary View | 863

Detail View | 863

About the Firewall Events Page | 867

Tasks You Can Perform | 867

Summary View | 867

Detail View | 868

About the Web Filtering Events Page | 870

Tasks You Can Perform | 870

Summary View | 870

Detail View | 871

**About the IPsec VPNs Events Page | 873****Tasks You Can Perform | 873****Summary View | 873****Detail View | 874****About the Content Filtering Events Page | 875****Tasks You Can Perform | 875****Summary View | 875****Detail View | 876****About the Antispam Events Page | 877****Tasks You Can Perform | 877****Summary View | 878****Detail View | 878****About the Antivirus Events Page | 879****Tasks You Can Perform | 879****Summary View | 880****Detail View | 880****About the IPS Events Page | 882****Tasks You Can Perform | 882****Summary View | 882****Detail View | 883****About the Screen Events Page | 885****Tasks You Can Perform | 885****Summary View | 886****Detail View | 886****About the Traffic Logs Page | 889****Tasks You Can Perform | 889****Monitoring SD-WAN Events | 892****SD-WAN Events Overview | 892****About the SD-WAN Events Page | 893****Tasks You Can Perform | 893****Field Descriptions | 893**



## Monitoring Applications | 895

About the SLA Performance of a Single Tenant Page | 895

Tasks You Can Perform | 895

Field Descriptions | 896

Viewing the SLA Performance of a Site | 898

SLA Not Met by SLA Profiles | 898

Applications SLA Performance by Throughput | 899

SLA Performance for ALL | 901

Viewing the SLA Performance of an Application or Application Group | 902

Application Visibility Overview | 904

Benefits of Application Visibility | 904

About the Application Visibility Page | 905

Tasks You Can Perform | 905

Chart View | 905

Grid View | 906

About the User Visibility Page | 908

Tasks You Can Perform | 908

Chart View | 908

Grid View | 910

Viewing Application or User Visibility Data for Specific Sites | 911

Viewing Application Visibility Data for Specific Sites | 911

Viewing User Visibility Data for Specific Sites | 912

## Monitoring Threats | 914

About the Threats Map (Live) Page | 914

Tasks You Can Perform | 915

Field Descriptions | 916

Threat Types | 917

## Managing Reports

### Security Reports | 921

#### Reports Overview | 921

#### About the Security Report Definitions Page | 922

##### Tasks You Can Perform | 923

##### Field Descriptions | 923

#### Scheduling, Generating, Previewing, and Sharing Security Reports | 925

##### Editing Report Generation Schedule | 925

##### Generating Reports | 926

##### Previewing Reports in PDF | 927

##### Sharing Reports through E-mail | 927

#### About the Security Generated Reports Page | 928

##### Field Descriptions | 928

#### Creating Log Report Definition | 929

#### Creating Bandwidth Report Definition | 933

#### Creating ANR Report Definition | 935

#### Editing, Deleting, and Cloning Log Report Definitions | 938

##### Editing the Log Report Definition | 938

##### Deleting Log Report Definitions | 938

##### Cloning Log Report Definitions | 939

#### Editing, Deleting, and Cloning Bandwidth Report Definitions | 940

##### Editing Bandwidth Report Definitions | 940

##### Deleting Bandwidth Report Definitions | 940

##### Cloning Bandwidth Report Definitions | 941

## Editing, Deleting, and Cloning ANR Report Definitions | 942

- Editing ANR Report Definitions | 942

- Deleting ANR Report Definitions | 943

- Cloning ANR Report Definitions | 943

## SD-WAN Reports | 945

### About the SD-WAN Report Definitions Page | 945

- Tasks You Can Perform | 945

- Field Descriptions | 946

### Editing, Deleting, and Cloning SD-WAN Report Definitions | 947

- Editing the SD-WAN Report Definition | 947

- Deleting SD-WAN Report Definitions | 947

- Cloning SD-WAN Report Definitions | 948

### Creating SD-WAN Tenant Performance Report Definitions | 949

### Creating SD-WAN Site Performance Report Definitions | 953

### About the SD-WAN Generated Reports Page | 956

- Field Descriptions | 956

# About the Documentation

## IN THIS SECTION

- Documentation and Release Notes | xxxii
- Documentation Conventions | xxxii
- Documentation Feedback | xxxv
- Requesting Technical Support | xxxv

Use this guide to understand the features and tasks that you can configure and perform from the Cloud-based Contrail Service Orchestration (CSO) Customer Portal UI . This guide provides, feature overviews, and procedures that help you understand the features and perform CSO configuration tasks.

## Documentation and Release Notes

To obtain the most current version of all Juniper Networks® technical documentation, see the product documentation page on the Juniper Networks website at <https://www.juniper.net/documentation/>.

If the information in the latest release notes differs from the information in the documentation, follow the product Release Notes.

Juniper Networks Books publishes books by Juniper Networks engineers and subject matter experts. These books go beyond the technical documentation to explore the nuances of network architecture, deployment, and administration. The current list can be viewed at <https://www.juniper.net/books>.

## Documentation Conventions

Table 1 on page xxxiii defines notice icons used in this guide.

Table 1: Notice Icons







Icon	Meaning	Description
	Informational note	Indicates important features or instructions.
	Caution	Indicates a situation that might result in loss of data or hardware damage.
	Warning	Alerts you to the risk of personal injury or death.
	Laser warning	Alerts you to the risk of personal injury from a laser.
	Tip	Indicates helpful information.
	Best practice	Alerts you to a recommended use or implementation.

Table 2 on page xxxiii defines the text and syntax conventions used in this guide.

Table 2: Text and Syntax Conventions

Convention	Description	Examples
<b>Bold text like this</b>	Represents text that you type.	To enter configuration mode, type the <b>configure</b> command:  user@host> <b>configure</b>
Fixed-width text like this	Represents output that appears on the terminal screen.	user@host> <b>show chassis alarms</b>  No alarms currently active
<i>Italic text like this</i>	<ul style="list-style-type: none"> <li>Introduces or emphasizes important new terms.</li> <li>Identifies guide names.</li> <li>Identifies RFC and Internet draft titles.</li> </ul>	<ul style="list-style-type: none"> <li>A policy <i>term</i> is a named structure that defines match conditions and actions.</li> <li><i>Junos OS CLI User Guide</i></li> <li>RFC 1997, <i>BGP Communities Attribute</i></li> </ul>

Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<i>Italic text like this</i>	Represents variables (options for which you substitute a value) in commands or configuration statements.	Configure the machine's domain name:  [edit] root@# <b>set system domain-name</b> <i>domain-name</i>
<b>Text like this</b>	Represents names of configuration statements, commands, files, and directories; configuration hierarchy levels; or labels on routing platform components.	<ul style="list-style-type: none"> <li>To configure a stub area, include the <b>stub</b> statement at the [edit <b>protocols ospf area area-id</b>] hierarchy level.</li> <li>The console port is labeled <b>CONSOLE</b>.</li> </ul>
< > (angle brackets)	Encloses optional keywords or variables.	<b>stub</b> <default-metric <i>metric</i> >;
(pipe symbol)	Indicates a choice between the mutually exclusive keywords or variables on either side of the symbol. The set of choices is often enclosed in parentheses for clarity.	<b>broadcast   multicast</b>  ( <i>string1</i>   <i>string2</i>   <i>string3</i> )
# (pound sign)	Indicates a comment specified on the same line as the configuration statement to which it applies.	<b>rsvp { # Required for dynamic MPLS only</b>
[ ] (square brackets)	Encloses a variable for which you can substitute one or more values.	<b>community name members [ <i>community-ids</i> ]</b>
Indentation and braces ( { } )	Identifies a level in the configuration hierarchy.	[edit] routing-options { static { route default { nexthop <i>address</i> ; retain; } } }
; (semicolon)	Identifies a leaf statement at a configuration hierarchy level.	

## GUI Conventions


Table 2: Text and Syntax Conventions (*continued*)

Convention	Description	Examples
<b>Bold text like this</b>	Represents graphical user interface (GUI) items you click or select.	<ul style="list-style-type: none"> <li>In the Logical Interfaces box, select <b>All Interfaces</b>.</li> <li>To cancel the configuration, click <b>Cancel</b>.</li> </ul>
> (bold right angle bracket)	Separates levels in a hierarchy of menu selections.	In the configuration editor hierarchy, select <b>Protocols&gt;Ospf</b> .

## Documentation Feedback

We encourage you to provide feedback so that we can improve our documentation. You can use either of the following methods:

- Online feedback system—Click TechLibrary Feedback, on the lower right of any page on the [Juniper Networks TechLibrary](#) site, and do one of the following:

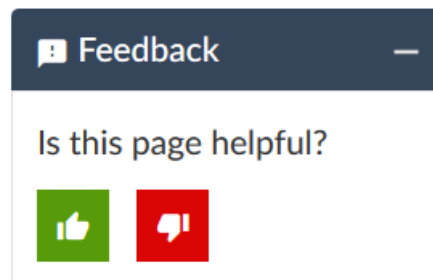

- Click the thumbs-up icon if the information on the page was helpful to you.
- Click the thumbs-down icon if the information on the page was not helpful to you or if you have suggestions for improvement, and use the pop-up form to provide feedback.
- E-mail—Send your comments to [techpubs-comments@juniper.net](mailto:techpubs-comments@juniper.net). Include the document or topic name, URL or page number, and software version (if applicable).

## Requesting Technical Support

Technical product support is available through the Juniper Networks Technical Assistance Center (JTAC). If you are a customer with an active Juniper Care or Partner Support Services support contract, or are

covered under warranty, and need post-sales technical support, you can access our tools and resources online or open a case with JTAC.

- JTAC policies—For a complete understanding of our JTAC procedures and policies, review the *JTAC User Guide* located at <https://www.juniper.net/us/en/local/pdf/resource-guides/7100059-en.pdf>.
- Product warranties—For product warranty information, visit <https://www.juniper.net/support/warranty/>.
- JTAC hours of operation—The JTAC centers have resources available 24 hours a day, 7 days a week, 365 days a year.

## Self-Help Online Tools and Resources

For quick and easy problem resolution, Juniper Networks has designed an online self-service portal called the Customer Support Center (CSC) that provides you with the following features:

- Find CSC offerings: <https://www.juniper.net/customers/support/>
- Search for known bugs: <https://prsearch.juniper.net/>
- Find product documentation: <https://www.juniper.net/documentation/>
- Find solutions and answer questions using our Knowledge Base: <https://kb.juniper.net/>
- Download the latest versions of software and review release notes: <https://www.juniper.net/customers/csc/software/>
- Search technical bulletins for relevant hardware and software notifications: <https://kb.juniper.net/InfoCenter/>
- Join and participate in the Juniper Networks Community Forum: <https://www.juniper.net/company/communities/>
- Create a service request online: <https://myjuniper.juniper.net>

To verify service entitlement by product serial number, use our Serial Number Entitlement (SNE) Tool: <https://entitlementsearch.juniper.net/entitlementsearch/>

## Creating a Service Request with JTAC

You can create a service request with JTAC on the Web or by telephone.

- Visit <https://myjuniper.juniper.net>.
- Call 1-888-314-JTAC (1-888-314-5822 toll-free in the USA, Canada, and Mexico).

For international or direct-dial options in countries without toll-free numbers, see <https://support.juniper.net/support/requesting-support/>.



# 1

PART

## Introduction

---

Customer Portal Overview | 2

Users and Roles | 29

---

# Customer Portal Overview

## IN THIS CHAPTER

- About the Customer Portal User Guide | 2
- Customer Portal Overview | 3
- Accessing Customer Portal | 10
- Switching the Tenant Scope | 12
- Setting Up Your Network with Customer Portal | 12
- About the Customer Portal Dashboard | 13
- Changing the Customer Portal Password | 17
- Resetting the Password | 18
- Changing the Password on First Login | 19
- Extending the User Login Session | 21
- View and Edit Tenant Settings | 22

## About the Customer Portal User Guide

This guide provides an understanding of how to use the Contrail Service Orchestration (CSO) Customer Portal to implement your use cases. This guide is appropriate for tenant administrators and operators who need to know how to use Customer Portal.

Refer to [Table 3 on page 2](#) for additional CSO documentation resources.

**Table 3: Additional CSO Documentation Resources**

Title	Available At
What is SD-WAN?	<a href="https://www.juniper.net/us/en/products-services/what-is/sd-wan/">https://www.juniper.net/us/en/products-services/what-is/sd-wan/</a>
What is Network Functions Virtualization (NFV)?	<a href="https://www.juniper.net/us/en/products-services/what-is/network-functions-virtualization/">https://www.juniper.net/us/en/products-services/what-is/network-functions-virtualization/</a>

Table 3: Additional CSO Documentation Resources (*continued*)

Title	Available At
Learn About NFV	<a href="https://www.juniper.net/documentation/en_US/learn-about/LearnAbout_NFV.pdf">https://www.juniper.net/documentation/en_US/learn-about/LearnAbout_NFV.pdf</a>
Administration Portal User Guide	<a href="https://www.juniper.net/documentation/product/en_US/contrail-service-orchestration">https://www.juniper.net/documentation/product/en_US/contrail-service-orchestration</a> (User Guides section)
Other Resources	<a href="https://www.juniper.net/documentation/product/en_US/contrail-service-orchestration">https://www.juniper.net/documentation/product/en_US/contrail-service-orchestration</a>

## RELATED DOCUMENTATION

[Customer Portal Overview](#) | 3

## Customer Portal Overview

The Customer Portal in Contrail Service Orchestration (CSO) provides a Web-based UI that tenants of service providers (SPs) and operating companies (OpCos) can use to manage sites and devices, apply policies (firewall, NAT, SD-WAN, and so on), and perform administrative tasks. In Customer Portal, the objects that you manage and the actions that you perform are done in the context of a single tenant. Therefore, objects belonging to one tenant are isolated from objects belonging to other tenants.

Customer Portal supports role-based access control (RBAC), which means that the roles assigned to users determine their access privileges and the actions that they can perform. The following predefined roles are available in Customer Portal:

- Tenant Admin
- Tenant Operator

Administrator users have read access and write access to the Customer Portal UI and API capabilities, whereas operator users only have read access. Administrators can also create more users with specific roles and access privileges.

When you log in to Customer Portal, the main menu (left sidebar) that is displayed and the actions that you can perform depend on your access privileges. [Table 4 on page 4](#) displays the main menu available in the Customer Portal, a brief description of each menu item, and a link to the relevant topic in the *Contrail Service Orchestration Customer Portal User Guide*.

Table 4: Customer Portal Main Menu

Main Menu	Description
Favorites	<p>View the list of pages that you have marked as favorite. You can mark pages that you frequently visit to Favorites.</p> <p>To mark a page as favorites, click the star icon on the right corner of each page.</p>
Dashboard	<p>Access a user-configurable dashboard that you can customize with available widgets (also known as dashlets).</p> <p>For more information, see <a href="#">“About the Customer Portal Dashboard”</a> on page 13.</p>
Monitor	<p>Monitor or view the following:</p> <ul style="list-style-type: none"> <li>• Sites: See <a href="#">“About the Monitor Overview Page”</a> on page 848.</li> <li>• Alerts and alarms: See <a href="#">“About the Generated Alerts Page”</a> on page 850 and <a href="#">“About the Alarms Page”</a> on page 858.</li> <li>• Alert definitions and notifications: See <a href="#">“About the Alert Definitions/Notifications Page”</a> on page 852.</li> <li>• Link switchover events (for SD-WAN sites): See <a href="#">“About the SD-WAN Events Page”</a> on page 893.</li> <li>• Security events: See <a href="#">“About the All Security Events Page”</a> on page 862.</li> <li>• Application service-level agreement (SLA) performance (for SD-WAN sites):: See <a href="#">“About the SLA Performance of a Single Tenant Page”</a> on page 895.</li> <li>• Application visibility (for SD-WAN sites): See <a href="#">“About the Application Visibility Page”</a> on page 905.</li> <li>• User visibility: See <a href="#">“About the User Visibility Page”</a> on page 908.</li> <li>• Threat maps: See <a href="#">“About the Threats Map (Live) Page”</a> on page 914.</li> <li>• Jobs (ongoing or completed): See <a href="#">“About the Jobs Page”</a> on page 831.</li> </ul>

Table 4: Customer Portal Main Menu (*continued*)

Main Menu	Description
Resources	<p>Manage the following resources:</p> <ul style="list-style-type: none"><li>• Sites: See <a href="#">“About the Sites Page”</a> on page 55.</li><li>• Devices: See <a href="#">“About the Devices Page”</a> on page 296.</li><li>• Deploy or stage images: See <a href="#">“About the Device Images Page”</a> on page 291.</li><li>• Site groups: See <a href="#">“About the Site Groups Page”</a> on page 225.</li><li>• Mesh tags: See <a href="#">“About the Mesh Tags Page”</a> on page 246.</li><li>• Site templates: See <a href="#">“About the Configuration Templates Page”</a> on page 365.</li><li>• Device templates: See <a href="#">“About the Device Template Page”</a> on page 350.</li><li>• Configuration templates: See <a href="#">“About the Configuration Templates Page”</a> on page 365.</li></ul>

Table 4: Customer Portal Main Menu (*continued*)

Main Menu	Description
Configuration	<ul style="list-style-type: none"> <li>• Configure the following: <ul style="list-style-type: none"> <li>• Intent-based firewall policies: See <a href="#">“About the Firewall Policy List Page”</a> on page 428.</li> <li>• Unified threat management (UTM): See <a href="#">“About the UTM Profiles Page”</a> on page 507.</li> <li>• NAT policies: See <a href="#">“About the NAT Policies Page”</a> on page 613.</li> <li>• Intrusion prevention system (IPS): See <a href="#">“About the IPS Signatures Page”</a> on page 646 and <a href="#">“About the IPS Profiles Page”</a> on page 673.</li> <li>• SSL proxy: See <a href="#">“About the SSL Proxy Policy Page”</a> on page 697.</li> <li>• SD-WAN policies: See <a href="#">“About the SD-WAN Policy Page”</a> on page 555.</li> <li>• SLA-based and path-based steering profiles: See <a href="#">“About the SLA-Based Steering Profiles Page”</a> on page 568 and <a href="#">“Adding Path-Based Steering Profiles”</a> on page 583.</li> <li>• SD-WAN breakout profiles: See <a href="#">“About the Breakout Profiles Page”</a> on page 590.</li> <li>• SD-LAN profiles and firewall filters: See <a href="#">“About the Port Profiles Page”</a> on page 730 and <a href="#">“About the EX Firewall Filters Page”</a> on page 763.</li> <li>• Shared objects (for example, IP addresses): See <a href="#">“About the Addresses Page”</a> on page 785.</li> </ul> </li> <li>• View and manage deployments: See <a href="#">“About the Deployments Page”</a> on page 720.</li> <li>• View network services: See <a href="#">“About the Network Services Page”</a> on page 779.</li> </ul>
Reports	<ul style="list-style-type: none"> <li>• Add and manage security and SD-WAN report definitions, and generate reports: See <a href="#">“About the Security Report Definitions Page”</a> on page 922 and <a href="#">“About the SD-WAN Report Definitions Page”</a> on page 945.</li> <li>• View generated security and SD-WAN reports: See <a href="#">“About the Security Generated Reports Page”</a> on page 928 and <a href="#">“About the SD-WAN Generated Reports Page”</a> on page 956.</li> </ul>

Table 4: Customer Portal Main Menu (*continued*)

Main Menu	Description
Administration	<p>Perform various administrative tasks including the following:</p> <ul style="list-style-type: none"> <li>• Manage users and roles: See <a href="#">“About the Users Page in Customer Portal” on page 30</a> and <a href="#">“About the Tenant Roles Page” on page 39</a>.</li> <li>• Monitor audit logs: See <a href="#">“About the Audit Logs Page” on page 838</a>.</li> <li>• View device and CSO licenses: See <a href="#">“About the Device Licenses Page” on page 396</a> and <a href="#">“About the CSO Licenses Page” on page 397</a>.</li> <li>• Modify tenant settings: See <a href="#">“View and Edit Tenant Settings” on page 22</a>.</li> <li>• Install signatures: See <a href="#">“About the Signature Database Page” on page 401</a>.</li> <li>• Manage certificates and VPN authentication: See <a href="#">“About the Certificates Page” on page 404</a> and <a href="#">“About the VPN Authentication Page” on page 409</a>.</li> <li>• Set up and configure Juniper Identity Management Service (JIMS) See <a href="#">“About the Identity Management Page” on page 418</a>.</li> <li>• Integrate with Mist Access Points (APs): See <a href="#">“Enabling Integration with Mist Access Points” on page 186</a>.</li> </ul>

Table 5 on page 7 lists the icons on the top right corner of the Customer Portal and a brief description of each icon.

Table 5: Customer Portal Icons

Icons	Description
Running Jobs	<p>Displays the list of jobs that are currently in progress. Click <b>Review All</b> to view the list of all jobs on the Jobs page.</p> <p>For more information on the Jobs page, see <a href="#">“About the Jobs Page” on page 831</a>.</p>
Scheduled Jobs	<p>Displays the list of jobs that are scheduled. Click <b>Review All</b> to view the list of all scheduled jobs on the Jobs page.</p> <p>For more information on the Jobs page, see <a href="#">“About the Jobs Page” on page 831</a>.</p>

Table 5: Customer Portal Icons (*continued*)

Icons	Description
Scope	<p>Displays the scope of a user.</p> <p>If you are an SP administrator or an OpCo administrator, you can change the scope from All Tenants to a specific tenant. For more information on switching the scope, see <a href="#">“Switching the Tenant Scope” on page 12</a>.</p>
Alarms and Alerts	<p>Displays the following two tabs:</p> <ul style="list-style-type: none"> <li>• Alarms—Displays the list of alarms that are generated by the device along with the timestamp and the severity of the alarm. Click <b>Review All</b> to view the details about the generated alarms on the Alarms page. For more information about the Alarms page, see <a href="#">“About the Alarms Page” on page 858</a>.</li> <li>• Alerts—Displays the list of alerts that are generated by the device along with the timestamp and the severity of the alert. Click <b>Review All</b> to view the details about the generated alerts on the Alerts page. For more information about the Alerts page, see <a href="#">“About the Generated Alerts Page” on page 850</a>.</li> </ul>
Pending Policies	<p>Displays the list of policies that are due for deployment on the devices managed by CSO. Click <b>Deploy</b> to deploy the policy. The Deploy page appears. Choose the deployment type (Run Now or Schedule at a later time) and click <b>OK</b>.</p> <p>Click <b>Review All</b> to view the details about the pending deployments on the jobs page. See the Awaiting Deployment tab for the list of policies that are due for deployment.</p>
Feedback	<p>Click this icon to provide feedback about the product or report any issues that you are facing.</p>
User Name	<p>Displays the user name of the user who has currently logged into CSO.</p>
Resize	<p>Click this icon to resize the page to full screen.</p>



Table 5: Customer Portal Icons (*continued*)

Icons	Description
Help Menu (?)	<p>Click this icon to access the following panels and online help documentation:</p> <ul style="list-style-type: none"> <li>• Getting Started panel</li> <li>• What's New panel</li> <li>• Quick Help panel</li> <li>• Help Center</li> <li>• Release Notes</li> <li>• About Panel</li> </ul>

Optionally, you can personalize the navigation mode and the theme in the portal. To personalize the portal:

1. Click the icon on the lower left corner of the portal. You have an option to personalize the following settings:
  - Navigation Mode
  - Theme
  - Invert colors
2. Select one of the following navigation modes:
  - Side Menu (default option)—Click this option if you want the main menu items to appear on the left pane.
  - Horizontal Menu—Click this option if you want the main menu items to appear horizontally on the top bar.
3. Select one of the following themes:
  - Default—Click this option if you prefer the background color of the portal to be blue.
  - Grey—Click this option if you prefer the background color of the portal to be grey.
4. Enable the toggle button if you prefer to invert the colors.

## RELATED DOCUMENTATION

[Accessing Customer Portal | 10](#)

[Changing the Customer Portal Password | 17](#)

## Accessing Customer Portal

To access Customer Portal:

1. If you are logging in to Customer Portal for the first time, do the following. If not, skip to [2](#).

**NOTE:** When your administrator creates a CSO account for you, an e-mail (with the subject line CSO Account Created) is sent. This e-mail contains a URL that allows you to log in to Customer Portal. The URL is active for only 24 hours and is valid only for the first log in.

- a. Click the URL that you have received in the e-mail.

The Change Password page appears with a message that you must change your password for security purposes.

- b. Change your password following the guidelines provided in [Table 6 on page 11](#).

- c. (Optional) Click the Terms of Use link to view the Terms of Use document.

- d. Click the check box to accept CSO terms of use.

- e. Click **Ok**.

The login password is changed and you are logged out of the system. When you log in you must use the changed password.

2. Login to Customer Portal using the link provided in the account activation e-mail.

**NOTE:** We recommend that you use Google Chrome (Version 60 or later) or Firefox (Version 78 or later) to access the Contrail Service Orchestration (CSO) GUI.

3. Enter your username (E-mail ID) and password.

The Welcome page appears listing the key features of the release.

4. (Optional) If you want to hide the Welcome page on your next login, select the **Hide this on next login** check box.

5. (Optional) If you want to review the tenant setting, select **Review Settings**.

The Review Settings page appears. For more information see, [“View and Edit Tenant Settings” on page 22.](#)

6. Click **Go to Dashboard**. The menu bar on the left-hand side of the every page allows you to access the different tasks easily. The top-level menu items are listed in [Table 7 on page 11.](#)

**Table 6: Fields on the Change Password Page**

Field	Description
New Password	<p>Enter your new password.</p> <p>The password must be between 6 and 21 characters long, and must include at least one lowercase letter, one uppercase letter, one special character, and one number.</p> <p><b>NOTE:</b> The password strength indicator displays the efficiency of the password that you enter. You cannot proceed to the next step if the password strength indicator shows that the password is weak.</p>
Confirm Password	<p>Reenter the password for confirmation.</p> <p>You can select <b>Show Password</b> to view the password.</p>

**Table 7: Customer Portal Menu**

Menu Name	Description
<b>Dashboard</b>	Configurable dashboard that offers you a customized view of network services through its widgets
<b>Monitor</b>	Monitor alerts and alarms, security, device, and software-defined WAN (SD-WAN) events; applications and jobs
<b>Resources</b>	Manage device and software image, sites, site templates, mesh tags, and site groups
<b>Configuration</b>	Configure network services, shared objects, and policies (firewall, NAT, SD-WAN), and view and manage configuration deployments
<b>Reports</b>	Create report definitions and view reports
<b>Administration</b>	Manage users, licenses, audit logs, tenant settings, certificate management, Identity Management, and the signature database

## RELATED DOCUMENTATION

## Switching the Tenant Scope

Administration Portal users can change the tenant scope from all tenants to a specific tenant by using the tenant switcher displayed on the banner.

When you switch scope from all tenants to a specific tenant, the menu and pages displayed are almost the same as those displayed for Customer Portal users, with some additional actions visible to the Administration Portal users. When you switch back to the **All Tenants** scope, the menu and pages for the Administration Portal are displayed.

To switch from one scope to another:

- From the top right corner of the page, select the **All Tenants** scope to access Administration Portal or select a specific tenant (for example, aaa) to access Customer Portal. The menu and pages for Administration Portal or Customer Portal are displayed based on the scope selected from the drop-down list.

### RELATED DOCUMENTATION

[Role-Based Access Control Overview | 29](#)

## Setting Up Your Network with Customer Portal

Your service provider specifies which sites appear in your network and the network services that you can use. When you start working in Customer Portal, you must set up your network using the available sites and network services.

To set up your network with Customer Portal:

1. You can add the following types of sites from the Sites page:
  - **Provider hub site:** A provider hub site connects to multiple spoke sites using overlay connections. To add a provider hub site, see [“Adding Provider Hub Sites for SD-WAN Deployment” on page 90](#).
  - **On-premise spoke sites:** An on-premise spoke represents an endpoint that is part of customer premise equipment (CPE) at some physical location such as branch office or point of sale location. Typically,

these points are connected using overlay connections to hub sites. You can add on-premise spoke sites manually or by using site templates:

- To manually add an on-premise site with one WAN capability (SD-WAN or Next Gen Firewall), LAN capability, or both WAN and LAN capabilities, see [“Manually Adding On-Premise Spoke Sites” on page 103](#).
  - To add multiple on-premise spoke sites, use site templates. See [“Add On-Premise Spoke Sites by Using a Site Template” on page 228](#).
  - Cloud spoke site: A cloud spoke site connects to a hub site using overlay connections. To add a cloud spoke site, see [“Adding Cloud Spoke Sites for SD-WAN Deployment” on page 91](#).
  - Enterprise hub site: An enterprise hub site carries site-to-site traffic between on-premise spoke sites and to break out backhaul (central breakout) traffic from on-premise spoke sites. To add an enterprise hub site, see [“Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities” on page 65](#).
2. Activate the site.
  3. Deploy network services. See [“Managing a Single Site” on page 200](#).
  4. View and manage policies.
    - View and manage a firewall policy. See [“Adding Firewall Policy Intents” on page 433](#) and [“Deploying Policies” on page 723](#).
    - View and manage an SD-WAN policy. See [“Adding SLA-Based Steering Profiles” on page 572](#), [“Adding Path-Based Steering Profiles” on page 583](#), [“Creating SD-WAN Policy Intents” on page 557](#), and [“Deploying Policies” on page 723](#).

## RELATED DOCUMENTATION

| [Accessing Customer Portal](#) | 10

## About the Customer Portal Dashboard

To access the dashboard, select **Customer Portal > Dashboard**.

The user-configurable dashboard that offers you a customized view of network services through its widgets.

You can drag these widgets from the top of the dashboard to your workspace, where you can add, remove, and rearrange them to meet your needs.

The dashboard automatically adjusts the placement of the widgets to dynamically fit on your browser window without changing their order. You can manually reorder the widgets by using the drag and drop option. In addition, you can press and hold the top portion of the widget to move it to a new location.

Tasks You Can Perform

You can perform the following tasks from this page:

- Customize the dashboard by adding, removing, and rearranging the widgets.
- Update the dashboard or an individual widget by clicking the refresh icon.
- Show or hide widget thumbnails in the carousel by selecting the category of widgets that you want to view from the list at the top left of the carousel; the default is **All Widgets**.
- Add a widget to the dashboard by dragging the widget from the palette or thumbnail container into the dashboard.
- Delete a widget from the dashboard page by clicking delete icon (X) in the title bar of the widget and confirming the delete operation.
- Add a dashboard tab by clicking the + icon, (optionally) entering a name, and pressing Enter.

You can then add widgets to the dashboard as needed.

- Rename a dashboard by double-clicking on the title bar of the dashboard, entering a name, and pressing Enter.
- Delete a dashboard by clicking the delete icon (X icon ) in the title bar of the dashboard and confirming the delete operation.
- Search for a widget by clicking the search icon (magnifying glass) at the top left of the carousel, entering search text, and pressing Enter.

Field Descriptions

You can quickly view important data by using the widgets at the top of your dashboard.

Table 8 on page 14 describes the dashboard widgets.

Table 8: Widgets on the Customer Portal Dashboard

Widget	Description
Tenant Sites: Total Alerts	Displays the total number of alerts grouped by severity level.  Click each alert name to view the total number of tenant sites receiving alerts that are critical, major, or minor.

Table 8: Widgets on the Customer Portal Dashboard (*continued*)

Widget	Description
Top 5 Sites with Alerts	<p>Displays the top five sites in the tenant receiving alerts.</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of the tenant site.</li> <li>• <b>Location</b>—Location of the tenant site.</li> <li>• <b>Status</b>—Type of alerts received: critical, major, or minor.</li> </ul>
Top Sites not meeting SLA	<p>Displays a bar chart of the top sites in the tenant that did not meet SLA requirements and the percentage of time that SLA requirements were not met.</p> <p>You can sort the information based on profile and period ranging from the last hour to the last month.</p>
Top Profiles not meeting SLA	<p>Displays a bar chart of the top SLA profiles that did not meet SLA requirements and the percentage of time that SLA requirements were not met.</p> <p>You can sort the information based on location and period ranging from the last hour to the last month.</p>
Top Sites Switching Links	<p>Displays a column chart of the top sites in the tenant that switched WAN links to meet SLA requirements and the number of link-switch events for the sites.</p> <p>You can sort the information based on profile and period ranging from the last hour to the last month.</p>
Top Profiles Switching Links	<p>Displays a column chart of the top SLA profiles that switched WAN links and the number of link-switch events for the SLA profiles.</p> <p>You can sort the information based on location and period ranging from the last hour to the last month.</p>
Top Applications by Throughput	<p>Displays a bar chart of the top sites in the tenant that did not meet SLA requirements and the percentage of time that SLA requirements were not met.</p> <p>You can sort the information based on profile, location, and time period.</p>
Firewall: Top Denials	<p>Displays a column chart of the top requests denied by the firewall based on their source IP addresses, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
Firewall: Top Events	<p>Displays a bar chart of the top firewall events of the network traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>

Table 8: Widgets on the Customer Portal Dashboard (continued)

Widget	Description
IPS: Top Events	<p>Displays the top IPS events of the network traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
Applications: Top by Sessions	<p>Displays a bar chart of the top applications with a maximum number of sessions, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
IP: Top Destinations	<p>Displays the top IP destination addresses of the network traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
IP: Top Sources	<p>Displays the top IP source addresses of the network traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
IP: Top Spams by Source IPs	<p>Displays the number of spams detected by the source IPs.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
Virus: Top Blocked	<p>Displays viruses with the maximum number of blocks, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
Web Filtering: Top Blocked Websites	<p>Displays a bar chart of websites with the maximum number of blocks, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days.</p>
IP: Top Source IPs by Volume	<p>Displays the top source IP addresses based on volume of traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 15 minutes to 7 days.</p>
Application: Top Application by Volume	<p>Displays the applications based on volume of traffic, sorted by count.</p> <p>You can sort the information based on time period ranging from 5 minutes to 7 days and view the information in a bar chart or a bubble chart.</p>
IP: Top Users/IP by Sessions	<p>Displays the top source IP addresses by sessions, sorted by count.</p> <p>You can sort the information based on time period ranging from 15 minutes to 7 days.</p>



Table 8: Widgets on the Customer Portal Dashboard (*continued*)

Widget	Description
Threat Map: Virus	<p>Displays a world map showing total virus event count across countries.</p> <p>You can sort the information based on source, destination, and time period ranging from 5 minutes to 7 days.</p>
Threat Map: IPS	<p>Displays a world map showing total IPS event count across countries.</p> <p>You can sort the information based on source, destination, and time period ranging from 5 minutes to 7 days.</p>

## RELATED DOCUMENTATION

[Customer Portal Overview](#) | 3

## Changing the Customer Portal Password

To change the Customer Portal password:

1. Click the customer username that is located at the right side of the Customer Portal banner.

The drop-down list appears.

2. Click **Change Password**.

The Change Password page appears.

3. Specify the current password.

4. In the New Password text box, specify your new password.

The login password that you set must conform to a particular set of requirements such as minimum length of 6 characters, a maximum length of 21 characters, and that includes at least one lowercase letter, one uppercase letter, an alpha-numeric character, and a numeric character.

You must change the password periodically (every 90 days) and you cannot reuse the old password. Your user account will be locked after five consecutive unsuccessful login attempts.

5. In the Confirm Password text box, specify your new password again.

Select the Show Password option to view the password.

6. Click **OK**.

You are logged out of the system. To log in to Customer Portal again, you must use your new password. Other sessions logged in with the same username are unaffected until the next login.

## RELATED DOCUMENTATION

[Customer Portal Overview](#) | 3

[Accessing Customer Portal](#) | 10

## Resetting the Password

If you have forgotten your password, you can reset the password from the Contrail Service Orchestration (CSO) login page.

**NOTE:** If you have entered an incorrect password, your account will be locked after five consecutive unsuccessful login attempts.

To reset the password:

1. On the login page, enter the username , and then press **Enter**.
2. Click the **Forgot Password** link.

The Forgot Password page appears, with a message that an e-mail notification with a verification code is sent to your e-mail address.

**NOTE:** The **Forgot Password** link appears only after you specify the username.

3. In **Verification Code**, specify the verification code that you have received through an e-mail.

**NOTE:** The verification code expires after a time duration of 15 minutes.

- 4. Click **OK**.  
The Reset Password page appears.
- 5. Change your password following the guidelines provided in [Table 9 on page 19](#).
- 6. Click **OK**.

Your password is reset.

Table 9: Fields on the Reset Password Page

Field	Description
Username	Enter your username.
New Password	<p>Enter your new password.</p> <p>The login password that you set must be between 6 and 21 characters long, and it must include at least one lowercase letter, one uppercase letter, one special character, and one number.</p> <p><b>NOTE:</b> The password strength indicator displays the efficiency of the password that you enter. You cannot proceed to the next step if the password strength indicator shows that the password is weak.</p>
Confirm Password	<p>Reenter the password for confirmation.</p> <p>You can select <b>Show Password</b> to view the password.</p>

RELATED DOCUMENTATION

<a href="#">Accessing Customer Portal   10</a>
<a href="#">Changing the Password on First Login   19</a>
<a href="#">Changing the Customer Portal Password   17</a>

## Changing the Password on First Login

To enhance the security related to login credentials, you are prompted to change the password when you login to the portal for the first time.

To change the password when you log in for the first time:

1. Log in to the portal with the default login credentials.

The Change Password page appears with a message that you must change your password for security purposes.

**NOTE:** The Change Password page appears only if you are logging in to the portal for the first time.

2. Change your password following the guidelines provided in [Table 6 on page 11](#).
3. (Optional) Click the Terms of Use link to view the Terms of Use document
4. Click the check box to accept CSO terms of use.
5. Click **Ok**.

**NOTE:** It is mandatory to change the password when you log in to the portal for the first time. If you click **Cancel**, you are redirected to the login page.

The login password is changed and you are logged out of the system. When you log in you must use the changed password.

**Table 10: Fields on the Change Password Page**

Field	Description
New Password	<p>Enter your new password.</p> <p>The password must be between 6 and 21 characters long, and must include at least one lowercase letter, one uppercase letter, one special character, and one number.</p> <p><b>NOTE:</b> The password strength indicator displays the efficiency of the password that you enter. You cannot proceed to the next step if the password strength indicator shows that the password is weak.</p>
Confirm Password	<p>Reenter the password for confirmation.</p> <p>You can select <b>Show Password</b> to view the password.</p>

## RELATED DOCUMENTATION

[Accessing Customer Portal | 10](#)

[Changing the Customer Portal Password | 17](#)

[Resetting the Password | 18](#)

## Extending the User Login Session

In the unified portal, a login session expires in 60 minutes. After 55 minutes, the **Extend Session** page is displayed and, prompting you to enter your password. You must enter your password to extend the session. The **Extend Session** page is displayed when the **Local** authentication method is configured.

If you have logged in to the portal with SSO authentication, the **Extend Session** page is displayed and you can authenticate with the external SSO server. However, the SSO expiration is not under the control of CSO and the following can happen:

- If the external SSO session is expired, you will be authenticated in the **Extend Session** page. After successful authentication, the **Extend Session** page is closed automatically.
- If the external SSO session is not expired, the **Extend Session** page is closed automatically.

To extend the login session:

1. On the **Extend Session** page, enter your password in the **Password** field. If you want to end your session and exit from the portal, click **Cancel** instead and you are redirected to the Login page.
2. Click **OK**.

The success message **Your Session has been successfully extended** is displayed.

## RELATED DOCUMENTATION

[Changing the Customer Portal Password | 17](#)

## View and Edit Tenant Settings

Users with a tenant administrator role can view and modify the tenant settings that are configured on the Administration Portal, while users with tenant operator role can only view the tenant settings.

**NOTE:** You cannot add or remove services (configured in Administration Portal) for the tenant.

To modify the settings configured for a tenant:

1. If the Welcome to CSO *Release-Number* page is displayed after you log in, click **Review Settings**. Alternatively, select **Administration > Tenant Settings**.

The Tenant Settings page appears.

2. (Optional) Click the Expand icon or the Collapse icon on the top-right corner of the page to expand or collapse the different sections displayed.

3. Modify the tenant settings as explained in [Table 11 on page 22](#).

4. Click **Save** to save the changes.

A tenant edit job is triggered and a confirmation message, indicating that a tenant edit job is created successfully, appears on the Tenant Settings page.

5. (Optional) You can click the job name in the message to view details of the job (including job status, start date and time, and end date and time) on the **Update tenant settings Details** page. Alternatively, you can view the status of the job on the Jobs (**Monitor > Jobs**) page.

If the job is completed successfully, a confirmation message appears on top of the Tenant Settings page.

**Table 11: Fields on the Tenant Settings Page**

Field	Description	Tenant Capabilities (Services)
Services	Displays the services supported for the tenant You cannot modify this setting.	SD-WAN Next Gen Firewall LAN

Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
<i>Password Policy</i>		SD-WAN Next Gen Firewall LAN
Password Expiration Days	<p>Specify the duration (in days) after which the password expires and must be changed.</p> <p>Range: 1 through 365.</p> <p>Default: 180 days.</p> <p><b>NOTE:</b> The modifications are applicable only to new users and users whose password has expired.</p>	SD-WAN Next Gen Firewall LAN
<i>SSL Settings</i>	<b>NOTE:</b> You can modify this setting only if you have not added any SD-WAN sites for the tenant.	SD-WAN
<b>Default SSL Proxy Profile</b>	<p>Click the toggle button to enable or disable a default SSL proxy profile for the tenant.</p> <p>If you enable this option, the following items are created:</p> <ul style="list-style-type: none"> <li>• A default root certificate with the certificate content specified (in the Root Certificate field)</li> <li>• A default SSL proxy profile</li> <li>• A default SSL proxy profile intent that references the default profile</li> </ul> <p><b>NOTE:</b> You use this option to create a tenant-wide default profile; enabling or disabling this option does <i>not</i> mean that SSL is enabled or disabled.</p> <p>If you enable this option, you must add a root certificate.</p>	SD-WAN

Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
Root Certificate	<p><b>NOTE:</b> This field is displayed only if you enabled the default SSL proxy profile.</p> <p>You can add a root certificate (X.509 ASCII format) by importing the certificate content from a file or by pasting the certificate content:</p> <ul style="list-style-type: none"> <li>To import the certificate content directly from a file: <ol style="list-style-type: none"> <li>Click <b>Browse</b>.</li> </ol> <p>The <b>File Upload</b> dialog box appears.</p> <ol style="list-style-type: none"> <li>Select a file and click <b>Open</b>.</li> </ol> <p>The content of the certificate file is displayed in the Root Certificate field.</p> </li> <li>Copy the certificate content from a file and paste it in the text box.</li> </ul> <p>After the tenant is successfully added, a default root certificate, a default SSL proxy profile, and a default SSL proxy profile intent are created.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>The root certificate must contain both the certificate content and the private key.</li> <li>For full-fledged certificate operations, such as certificates that need a passphrase, or that have RSA private keys, you must use the Certificates page (<b>Administration &gt; Certificates</b>) to import the certificates and install on one or more sites.</li> </ul>	SD-WAN
VPN Authentication		SD-WAN



Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
Authentication Type	<p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If PKI Certificate was configured as the authentication type, you can modify the PKI properties (CA Server URL, Password, CRL Server, and Auto Renew) even after you add sites for the tenant.</li> <li>• If Preshared Key was configured as the authentication type, then you can modify the authentication type only if you have not added SD-WAN sites for the tenant.</li> </ul> <p>Select the VPN authentication method to establish a secure IPsec tunnel:</p> <ul style="list-style-type: none"> <li>• <b>Preshared Key</b>, which means that CSO establishes IPsec tunnels using keys.</li> <li>• <b>PKI Certificate</b>, which means that CSO establishes IPsec tunnels using public key infrastructure (PKI) certificates.</li> </ul> <p>If you select this option, you can configure the following:</p> <ul style="list-style-type: none"> <li>• <b>CA Server URL</b>—Specify the Certificate Authority (CA) Server URL. For example, <code>http://CA-Server-IP-Address/certsrv/mscep/mscep.dll/pkiclient.exe</code>.</li> <li>• <b>Password</b>—Specify the password for the CA server. This field is optional.</li> <li>• <b>CRL Server URL</b>—Specify the certificate revocation list (CRL) server URL. For example, <code>http://Revocation-List-Server-IP-Address/certservices/abc.crl</code>. CSO retrieves the list of revoked certificates from the CRL server.</li> <li>• <b>Auto Renew CA Certificates</b>—Click the toggle button to enable or disable automatic renewal of certificates. If you enable this option, certificates are automatically renewed for all sites in the tenant. If you disable this option, certificates must be manually renewed.</li> </ul> <p><b>NOTE:</b> If the certificate expires before the renewal, CSO might not be able to reach the device.</p> <ul style="list-style-type: none"> <li>• <b>Renew before expiry</b>—If you enabled automatic renewal, select the period (3 days, 1 week, 2 weeks, or 1 month) before the expiration date when the certificates get automatically renewed.</li> </ul> <p><b>NOTE:</b> You can also change the duration in the VPN Authentication page in Customer Portal (<b>Administration &gt; Certificate Management &gt; VPN Authentication</b>) page.</p>	SD-WAN
Overlay Tunnel Encryption	<p><b>NOTE:</b> You can modify this setting only if you have not added any SD-WAN sites for the tenant.</p>	SD-WAN

Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
<b>Encryption Type</b>	<p>For security reasons, all data that passes through the VPN tunnel must be encrypted. Select the encryption type:</p> <ul style="list-style-type: none"> <li>• 3DES-CBC—Triple Data Encryption Standard with Cipher-Block Chaining (CBC) algorithm.</li> <li>• AES-128-CBC—128-bit Advanced Encryption Standard with CBC algorithm.</li> <li>• AES-128-GCM—128-bit Advanced Encryption Standard with Galois/Counter Mode (GCM) algorithm.</li> <li>• AES-256-CBC—256-bit Advanced Encryption Standard with CBC algorithm.</li> <li>• AES-256-GCM—256-bit Advanced Encryption Standard with GCM algorithm.</li> </ul> <p>The default encryption type is AES-256-GCM.</p>	SD-WAN
<i>Network Segmentation</i>	<b>NOTE:</b> You can modify this setting only if you have not added any SD-WAN sites for the tenant.	SD-WAN
<b>Network Segmentation</b>	Click the toggle button to disable network segmentation on the tenant.	SD-WAN
<i>Dynamic Mesh</i>	<b>NOTE:</b> You can modify these settings even after you add sites for the tenant.	SD-WAN
<b>Threshold for Creating a Tunnel</b>		SD-WAN
<b>Number of Sessions</b>	<p>Specify the maximum number of sessions closed (for a time duration of 2 minutes) between two spoke sites.</p> <p>The dynamic mesh tunnel is created between two spoke sites if the number of sessions closed (for a time duration of 2 minutes) is greater than or equal to the value that you specified.</p> <p>The default threshold value (the number of sessions for 2 minutes) is 5.</p>	SD-WAN
<i>Threshold for Deleting a Tunnel</i>		SD-WAN

Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
<b>Number of Sessions</b>	<p>Specify the minimum number of sessions closed (for a time duration of 15 minutes) between two spoke sites.</p> <p>The dynamic mesh tunnel is deleted between two spoke sites if the number of sessions closed (for a time duration of 15 minutes) is lesser than or equal to the value that you specified.</p> <p>The default threshold value (the number of sessions for 15 minutes) is 2.</p>	SD-WAN
<i>Max Dynamic Mesh Tunnels</i>		SD-WAN
<b>Max tunnels per CSO</b>	<p>Displays the maximum number of dynamic mesh tunnels that can be created in CSO. The total number of dynamic mesh tunnels that can be created by all tenants in CSO is limited to 125000.</p> <p>You cannot modify this field.</p>	SD-WAN
<b>Max tunnels per tenant</b>	<p>Specify the maximum number of dynamic mesh tunnels that the tenant can create.</p> <p>Range: 1 through 50,000.</p>	SD-WAN
<b>Dynamic Mesh</b>	Click the toggle button to disable or enable dynamic meshing between sites in the tenant.	SD-WAN
<i>Cloud Breakout Settings</i>	<b>NOTE:</b> You can modify these settings even after you add sites for the tenant.	SD-WAN
<b>Customer Domain Name</b>	Enter the domain name of the tenant. The domain name is used in cloud breakout profiles to generate the fully qualified domain name (FQDN). The cloud security providers use the FQDN to identify the IPsec tunnels.	SD-WAN

Table 11: Fields on the Tenant Settings Page (*continued*)

Field	Description	Tenant Capabilities (Services)
<i>Tenant-Specific Attributes</i>	<p><b>NOTE:</b> You can modify these settings even after you add sites for a tenant.</p> <p>If you have set up a third-party provider edge (PE) device by using software other than CSO, then configure settings on that router by specifying custom parameters and its corresponding values.</p> <p>You can modify existing attributes or add attributes.</p> <ul style="list-style-type: none"> <li>To add an attribute: <ol style="list-style-type: none"> <li>Click the add (+) icon. An editable row appears inline in the table.</li> <li>Specify any information about the site that you want to pass to a third-party router; for example, location.</li> <li>Specify a value for the information about the site that you want to pass to a third-party device; for example, Chicago.</li> <li>Click ✓ (check mark) to save your changes. The prefix that you entered is displayed in the table.</li> </ol> </li> <li>To modify an attribute, select a row, click the edit (pencil) icon, and modify the name and value.</li> </ul>	<p>SD-WAN</p> <p>Next Gen Firewall</p> <p>LAN</p>

## RELATED DOCUMENTATION

[About the Sites Page](#) | 55

# Users and Roles

IN THIS CHAPTER

- [Role-Based Access Control Overview | 29](#)
- [About the Users Page in Customer Portal | 30](#)
- [Adding Tenant and OpCo Tenant Users | 32](#)
- [Editing and Deleting Tenant and OpCo Tenant Users | 34](#)
- [Resetting the Password for Tenant Users | 35](#)
- [Roles Overview | 36](#)
- [About the Tenant Roles Page | 39](#)
- [Adding User-Defined Roles for Tenant Users | 40](#)
- [Editing, Cloning, and Deleting User-Defined Roles for Tenant Users | 41](#)
- [Access Privileges for Role Scopes \(Tenant and Operating Company\) | 44](#)

## Role-Based Access Control Overview

Conrail Service Orchestration supports the authentication and authorization of users. Both service provider and tenant users access the pages within the unified Administration and Customer Portal based on their role and access permissions.

In addition to predefined roles, CSO enables you to add object-based custom roles. You can create custom roles and assign access privileges (read, create, update, delete, and other actions) to each role.

[Table 12 on page 29](#) shows predefined service provider, tenant, and OpCo roles and their access privileges.

Table 12: Roles and Access Privileges

Role	Role Scope	Access Privileges
Tenant Admin	Tenant	Users with the Tenant Admin role have full access to the Customer Portal UI and APIs. They can add one or more users with the Tenant Administrator or Tenant Operator roles.

Table 12: Roles and Access Privileges (*continued*)

Role	Role Scope	Access Privileges
Tenant Operator	Tenant	Users with the Tenant Operator role have read-only access to the Customer Portal UI and APIs.
OpCo Admin	Operating Company	Users with the OpCo Admin role have full access to the OpCo's Administration Portal UI or API capabilities. They can use the UI or APIs to add one or more users with OpCo Admin, OpCo Operator, and custom roles. They can onboard tenants, and add the first tenant user during the OpCo's tenant onboarding process. They can also add tenant administrators or operators by switching the scope to a specific tenant.
OpCo Operator	Operating Company	Users with the OpCo Operator role have read-only access to the OpCo's Customer Portal UI and APIs.

## RELATED DOCUMENTATION

[About the Users Page in Customer Portal](#) | 30

## About the Users Page in Customer Portal

To access the Users page for a tenant or OpCo tenant, click **Administration > Users** in the Customer Portal.

Use this page to manage tenants and OpCo tenant users in the Tenant and OpCo scopes respectively. In the Tenant scope, the SP Admin, SP Operator, Tenant Admin, and Tenant Operator can access the Users page for tenants. The SP Admin and the SP Operator can switch scope from all tenants to a specific tenant.

In the OpCo scope, the SP Admin, SP Operator, OpCo Admin and OpCo Operator can access the OpCo Tenant Users page.

For information about the predefined roles and access permissions of OpCo tenant users and tenant users, see *Role-Based Access Control Overview*.

The information listed on the Users page changes depending on the authentication mode configured:

- **Local Authentication** —The **Users** page lists local users that you can add, edit, and delete.
- **Authentication and Authorization with SSO Server**—The **Users** page is not displayed because users are externally managed in the single sign-on (SSO) server.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Add a tenant user or an OpCo tenant user. See [“Adding Tenant and OpCo Tenant Users” on page 32](#).
- Edit or delete a tenant user or an OpCo tenantuser. See [“Editing and Deleting Tenant and OpCo Tenant Users” on page 34](#).
- View details of users in the respective scope. See [Table 13 on page 31](#).
- Show or hide columns about users. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a user. Click the Search icon in the top right corner of the page to search for a user.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

## Field Descriptions

[Table 13 on page 31](#) describes the fields on the Users page for the Tenant and OpCo scopes in the Customer Portal.

**Table 13: Fields on the Users Page**

Field	Description
Username	Username of the user.  Example: <i>abc@example.com</i>
First Name	First name of the user.
Last Name	Last name of the user.
Status	Indicates whether the user is enabled (can log in to CSO) or disabled (cannot log in to CSO).
Role	Depending on the scope selected, indicates the roles assigned to the tenant or OpCo tenant user.  By default, this column lists only one role assigned to the user. When a user is assigned more than one role, a <b>+&lt;integer&gt;</b> icon (for example: +2) appears to the right of the role. The integer indicates the number of additional roles assigned to the user. Click on the integer to view the additional roles.

Table 13: Fields on the Users Page (continued)

Field	Description
Last Login	Date and time of the last login. The format is MM/DD/YYYY HH:MM.  Example: 07/22/2017 20:07  A date and time is not displayed when a user has not logged in to the Customer Portal.

RELATED DOCUMENTATION

| [Switching the Tenant Scope](#) | 12

## Adding Tenant and OpCo Tenant Users

Use the Add Tenant User page and Add OpCo Tenant User page in the Customer Portal to add tenant users and OpCo tenant users respectively to Contrail Service Orchestration (CSO). After you add a user, the user receives an e-mail with the initial login credentials.

**NOTE:** To add users, you should be assigned a role, such as Tenant Admin, that allows you to add users.

To add a tenant user or an OpCo tenant user:

1. Select **Administration > Users**.  
  
The Users page appears.
2. Click the add icon (+) or click **Add User button**. The Add User button appears when there are no users configured in the scope.  
  
In the Tenant scope, the Add Tenant User page appears. In the OpCo scope, the Add OpCo Tenant User page appears.
3. Complete the configuration as described in [Table 14 on page 33](#).
4. Click **OK** to save the changes. If you want to discard the changes, click **Cancel**.



If you click OK, a confirmation message indicating that the user account is created appears and the user account is listed on the Users page.

To enhance the security related to login credentials, an automatically generated password is sent to the e-mail address that you have specified for the user. You are prompted to change the password when you login to the portal with the automatically generated password. For more information about changing the password on first login, see [“Changing the Password on First Login” on page 19](#).

**Table 14: Fields on the Add Tenant User and Add OpCo Tenant User Pages**

Field	Description
<b>First Name</b>	Enter the first name as a string of alphanumeric characters, some special characters [underscore (_) and period(.)], and spaces. The maximum length allowed is 32 characters.
<b>Last Name</b>	Enter the last name as a string of alphanumeric characters, some special characters [underscore (_) and period(.)] and spaces. The maximum length allowed is 32 characters.
<b>Username (E-mail)</b>	Enter a valid e-mail address in the <i>user@domain</i> format.
<b>Status</b>	<p>Click the toggle button to enable or disable the user.</p> <p>By default, the status is enabled. A user can log in to CSO only when the status is enabled.</p>
<b>Role</b>	<p>Select one or more roles (both predefined and custom) that you want to assign to the tenant or OpCo tenant user.</p> <p>The following predefined roles are available—Tenant Operator, Tenant Admin, and ConfigureSite. To know more about the predefined roles for tenant users and OpCo tenant users, see <i>Role-Based Access Control Overview</i>.</p> <p>Click the right-arrow icon to move the selected roles from the <b>Available</b> column to the <b>Selected</b> column. Note that you can use the search icon on the top right of each column to search for role names.</p> <p>Click the role name to preview the access privileges assigned to the tenant user.</p>

## Editing and Deleting Tenant and OpCo Tenant Users

### IN THIS SECTION

- [Editing Tenant and OpCo Tenant Users | 34](#)
- [Deleting Tenant and OpCo Tenant Users | 35](#)

You can edit the information of tenant and OpCo tenant users and delete one or more users.

**NOTE:** To edit and delete users, you should be assigned a role, such as Tenant Admin, that allows you to edit and delete users.

### Editing Tenant and OpCo Tenant Users

To modify a tenant user or an OpCo tenant user:

1. Select **Administration > Users**.

The Users page appears.

2. Select the user that you want to modify, and click the edit icon.

In the Tenant scope, the Edit Tenant User page appears. In the OpCo scope, the Edit OpCo Tenant User page appears.

3. Modify the parameters following the guidelines provided in [Table 14 on page 33](#).

**NOTE:** You cannot modify the **Username (E-mail)** field.

4. Click **OK** to save the changes or click **Cancel** to discard your changes.

If you click OK, a confirmation message indicating that the user information is modified appears on top of the Users page.

## Deleting Tenant and OpCo Tenant Users

To delete one or more tenant users and OpCo tenant users:

1. Select **Administration > Users**.

The Users page appears.

2. Select the users that you want to delete and click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the users or click **No** to cancel the deletion.

If you click **Yes**, a confirmation message indicating that the selected users account are deleted from CSO appears on top of the Users page.

## Resetting the Password for Tenant Users

Users with the Tenant Administrator role can reset the password for tenant users. Also, users with the Update capability for Users objects can reset the password for tenant users.

To reset the password:

1. Select **Administration > Users** in Customer Portal.

The Users page appears, displaying a list of tenant users.

2. Select the username for which you want to reset the password, and then select **More > Reset Password**.

An alert message appears, asking you to confirm the reset password operation.

3. Click **Yes** to confirm the reset password operation.

A confirmation message appears, indicating that the password has been successfully reset, and an e-mail with a new system-generated password is sent to the user.

The user can use the new system-generated password to log in to CSO.

### RELATED DOCUMENTATION

| [About the Users Page in Customer Portal](#) | 30

## Roles Overview

### IN THIS SECTION

- [Types of Roles | 36](#)
- [Role Scopes | 37](#)
- [Access Privileges | 37](#)
- [Relationship Between User, Roles, and Access Privileges | 37](#)
- [Benefits of role-based access control \(RBAC\) | 38](#)

A role is a function assigned to a user that defines the tasks that the user can perform within CSO. Each user can be assigned one or more roles depending on the tasks that the user is expected to perform.

User roles enable you to classify users based on the privileges to perform tasks on CSO objects. Roles assigned to a user determine the tasks and actions that the user can perform.

This topic contains the following sections:

### Types of Roles

There are two types of roles: predefined roles and custom roles.

- **Predefined roles**—System-defined roles with a set of predefined access privileges assigned to a user to perform tasks within the CSO application. Predefined roles are created in the system during CSO installation. For more information about predefined roles, see *Role-Based Access Control Overview*.
- **Custom roles**—Object-based user-defined roles with a set of access privileges assigned to a user to perform tasks within the CSO application. Objects include menu and submenu items (for example, Resources, Devices, Images, and POPs) in the CSO application, from which you can create, edit, clone, and delete objects.

Custom roles can be created by:

- An OpCo Administrator, or a Tenant Administrator.
- A tenant user with the Create Role privilege. This user can create custom roles for tenant users.
- An OpCo user with the Create Role privilege. This user can create custom roles for both OpCo and tenant users.

You can create custom roles and assign access privileges to each role by using the Roles page (**Administration > Roles**).

You can assign one or more roles to a user when you create or edit a user account. Each role can have one or more access privileges.

## Role Scopes

A role scope defines the specific scope, which is assigned to the role, such as service provider, OpCo, or tenant. An OpCo Administrator can assign OpCo, and tenant roles to OpCo users and tenant roles to tenant users. A Tenant Administrator can assign tenant roles only to tenant users. A role can have the following scopes:

- **Tenant**—Represents a customer that can view, configure, and manage its sites through Customer Portal.
- **Operating Company (OpCo)**—Similar to a service provider that can manage its own tenants. Tenants managed by one OpCo are isolated from tenants of another OpCo. An OpCo can manage all activities related to its own tenants.

## Access Privileges


The following access privileges and actions can be assigned to a user role:

- Read
- Create
- Update
- Delete
- Other actions (Example: For device templates object, the following other actions are supported: Clone and Edit Device Template) .

## Relationship Between User, Roles, and Access Privileges

[Figure 1 on page 38](#) shows the relationship between a user, user roles, and access privileges. A user can have one or more roles and each role can have one or more access privileges.

Figure 1: Relationship Between User, Roles, and Access Privileges

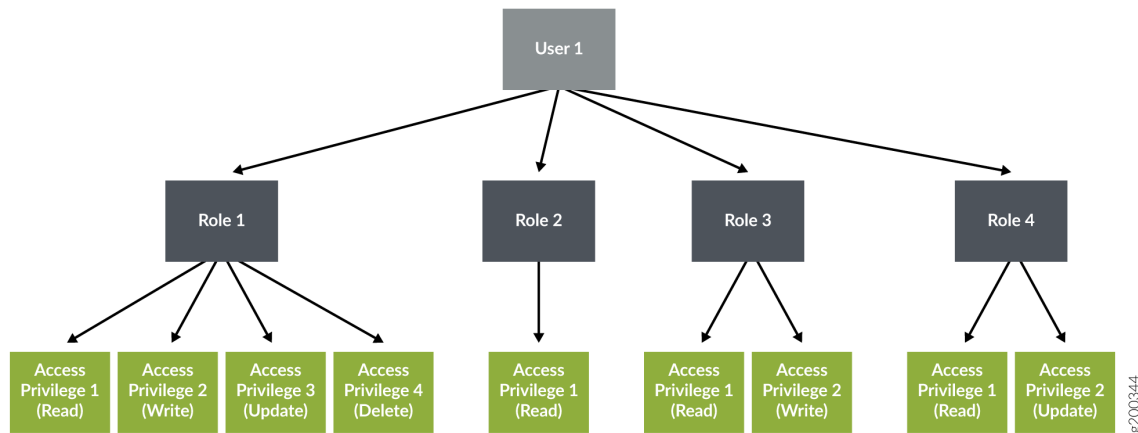

### Benefits of role-based access control (RBAC)

- CSO provides pre-defined and user-defined set of roles for day-to-day system operations on the unified Administration and Customer portal.
- Controls which system users can view, read, write, and execute objects based on certain business and operation needs.
- Provides granular level access control on CSO objects within each navigation menu.
- Helps service providers in upselling advanced features to their tenants as a power user.
- CSO supports RBAC and authenticate users using local authentication and the external Single Sign On (SSO) server.

### RELATED DOCUMENTATION

[About the Tenant Roles Page | 39](#)

[Adding User-Defined Roles for Tenant Users | 40](#)

[Editing, Cloning, and Deleting User-Defined Roles for Tenant Users | 41](#)

## About the Tenant Roles Page

To access this page, select **Administration > Roles** in the Customer Portal.

You can use the Roles page to view a list of predefined (system-defined) and custom (user-defined) roles that can be assigned to tenant users. You can create, edit, or delete custom roles and clone both custom and predefined roles.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a custom role for the tenant users. See [“Adding User-Defined Roles for Tenant Users” on page 40](#).
- Edit, clone, or delete a custom role. See [“Editing, Cloning, and Deleting User-Defined Roles for Tenant Users” on page 41](#).

### Field Descriptions

[Table 15 on page 39](#) describes the fields on the Roles page.

Table 15: Fields on the Roles Page

Field	Description
Role Name	Displays the name of the role.
Role Scope	Displays the scope of the role.
Role Type	Displays whether the role is a predefined role or a custom role.
Created By	Displays the name of the user that created the role.

### RELATED DOCUMENTATION

[Roles Overview | 36](#)

[Role-Based Access Control Overview | 29](#)

[Adding User-Defined Roles for Tenant Users | 40](#)

[Editing, Cloning, and Deleting User-Defined Roles for Tenant Users | 41](#)

## Adding User-Defined Roles for Tenant Users

Use the Add Role page to create custom (user-defined) roles and assign access privileges (read, create, update, delete, and other actions) to the tenant user roles.

A Tenant Administrator or a user with the Create Role privilege can create custom roles for tenant users.

To create a custom role:

1. Select **Administration > Roles** in Customer Portal.

The Roles page appears.

2. Click the add icon (+) to create a new role.

The Add Role page appears.

3. Complete the configuration according to the guidelines provided in [Table 16 on page 40](#).

4. Click **OK**.

A new role is created and listed on the Roles page.

Table 16: Fields on the Add Role Page

Field	Description
Role Name	Enter a unique role name. The name can contain alphanumeric characters, underscore, period, and space.
Description	Enter a description for the role.
Role scope (Visibility)	Select the scope of the role.  If you select the scope as Tenant, then the Privileges section of the page displays all the objects of Customer Portal.



Table 16: Fields on the Add Role Page (continued)

Field	Description
Privileges	<p><b>All Objects</b>—Displays the objects of the Customer Portal. You must select the check box against each object and then select the type of privileges (read, create, update, delete, and other actions (schedule, deploy, reboot, activate, retry, schedule update, schedule delete, and so on)) that you want to assign the user for the selected object. You can select one or more access privileges to assign to the tenant user role.</p> <p><b>NOTE:</b> You must assign at least one access privilege to a role.</p> <p>If you select the first-level objects, the submenu items that belong to the main object and the corresponding access privileges are selected by default.</p> <p>The following access privileges can be assigned to a user role:</p> <ul style="list-style-type: none"><li>• <b>Read</b>—Enables the user to read existing objects.</li><li>• <b>Create</b>—Enables the user to create new objects.</li><li>• <b>Update</b>—Enables the user to modify existing objects.</li><li>• <b>Delete</b>—Enables the user to delete existing objects.</li></ul> <p>You can also assign other actions to tenant roles. The other actions include retry, schedule update, schedule delete, activate, reboot, push license, RMA, deploy, schedule, start, disable, deploy, move, run, send, preview, renew, configure, and download.</p>

RELATED DOCUMENTATION

<a href="#">Roles Overview   36</a>
<a href="#">Role-Based Access Control Overview   29</a>
<a href="#">About the Tenant Roles Page   39</a>
<a href="#">Editing, Cloning, and Deleting User-Defined Roles for Tenant Users   41</a>

Editing, Cloning, and Deleting User-Defined Roles for Tenant Users

IN THIS SECTION

- [Editing Roles | 42](#)
- [Cloning Roles | 42](#)
- [Deleting Roles | 43](#)

You can edit and delete custom (user-defined) roles for tenant users from the Roles page. This topic has the following sections:

**NOTE:** You cannot modify or delete the predefined roles.

## Editing Roles

To modify the parameters configured for a role.

1. Select **Administration > Roles**.

The Roles page appears, displaying the existing role names.

2. Select the role that you want to edit and click the edit icon (pencil) to modify the parameters.

The Edit Role page appears. The fields on the Edit Role page are available for editing.

**NOTE:** You cannot modify the role name and role scope.

3. Modify the role description and privileges as needed.

4. Click **OK** to save the changes.

A confirmation message appears, indicating the status of the edit operation.

## Cloning Roles

You can clone a role (both custom and predefined) when you want to quickly create a copy of an existing role and modify its access privileges.

**NOTE:** You cannot modify the role name and role scope.

1. Select **Administration > Roles**.

The Roles page appears, displaying the existing role names.

2. Select the role that you want to clone and then click the **Clone** button at the top-right corner of the page.

The Clone Role: *Role-Name* page appears.

3. Specify an appropriate name for the new clone role.

4. Click **OK** to save your changes.

A confirmation message appears, indicating the status of the clone operation.

The name of the clone role is displayed on the Roles page.

5. Select the new clone role and click the edit icon (pencil) to modify its parameters.

The Edit Role page appears.

6. Select the objects, and modify the access privileges of the role, as needed.

7. Click **OK** to save your changes.

A confirmation message appears, indicating the status of the edit operation.

## Deleting Roles

To delete a role name:

1. Select **Administration > Roles**.

The Roles page appears, displaying the existing role names.

2. Select the role name that you want to delete and then click the delete icon (X).

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected role name.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

---

[About the Tenant Roles Page](#) | 39

[Adding User-Defined Roles for Tenant Users](#) | 40

## Access Privileges for Role Scopes (Tenant and Operating Company)

This topic describes the access privileges for the tenant and Operating company (OpCo) role scopes. For more information about roles and role scopes, see [“Roles Overview” on page 36](#).

[Table 17 on page 45](#) shows the access privileges for operating company scope.

[Table 18 on page 48](#) shows the access privileges for tenant scope.

Table 17: Access Privileges for Operating Company Scope

Role Scope	Menu Name	Actions	Other Actions
Operating company (OpCo)	<b>Monitor</b>		
	SP Geo Map	Read	-
	Tenants SLA Performance	Read	-
	Alerts	Read and Delete	-
	Alarms	Read	-
	Jobs	Read	Retry Schedule Update Schedule Delete
	<b>Resources</b>		
	POPs	Read, Edit, and Delete	-
	Provider Hub Devices	Read, Edit, and Delete	-
	Tenant Devices	Read	-
	Device Templates	Read, Create, Update, and Delete	Clone Edit Template
	Configuration Templates	Read, Edit, and Delete	-
	Images	Read	-
	<b>Configuration</b>		
	Site management	Edit and Delete	Add provider hub
	Path based steering profiles	Read, Edit, and Delete	-
		Read, Edit, and Delete	-

Table 17: Access Privileges for Operating Company Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	SDWAN Breakout Profiles		
	Application Signatures	Read, Edit, and Delete	-
	Network Services	-	Allocate Server and Detach Server
	Application SLA Profiles	Read, Create, Update, and Delete	-
	Application Traffic Type Profiles	Read	-
	Tenants	Read, Create, Update, and Delete	-
<b>Administration</b>			
	Users	Read, Create, Update, and Delete	-
	Roles	Read, Create, Update, and Delete	-
	Audit Logs	-	Explore and Purge
	Authentication	Read, Create, Update, and Delete	-
	Licenses	Read, Create, Update, and Delete	Push License
	Dynamic Mesh	Edit	-
	Signature Database	Read	Download Signature Database
	SMTP	Read, Create, Update, and Delete	-
	Email Templates	Read and Update	-
	Terms of Use	Update	-
	Display Differences	Modify	-
<b>Help Menu (?)</b>			

Table 17: Access Privileges for Operating Company Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	Getting Started	Read	-
	What's New	Read	-
	Quick Help	Read	-
	Help Center	Read	-
	FAQ	Read	-
	Release Notes	Read	-
	About	Read	-

Table 18: Access Privileges for Tenant Scope

Role Scope	Menu Name	Actions	Other Actions
Tenant	<b>Monitor</b>		
	Tenant GeoMap	Read	-
	Alerts	Read and Delete	Jump to Event Viewer
	Alarms	Read and Delete	
	Link Switch Events	Read	-
	Traffic Logs	Read	View only threat Show exact match Show raw log Create Alert Create Report Export to CSV
	Security Events	Read	Manage Filter Create Alert Create Report
	Application SLA Performance	Read	-
	Application Visibility	Read	-
	User Visibility	Read and Edit	-
	Threats Map (Live)	Read	-
	Jobs	Read	Retry Schedule Update Schedule Delete
	<b>Resources</b>		



Table 18: Access Privileges for Tenant Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	Site Management	Read, Create, and Delete	Configure Upgrade
	Devices	Read and Delete	Activate Push License Reboot RMA Traceroute Ping Discover APs Configure Stage-2
	Site Groups	Read, Create, Update, and Delete	-
	Mesh Tags	Read, Create, and Delete	-
	Site Templates	Read, Create, Clone, and Delete	-
	Device Templates	Read, Update, and Delete	Import device templates
	Configuration Templates	Read, Update, and Delete	-
	Images	Read	Upgrade History Deploy Stage
	<b>Configuration</b>		
	Firewall Policy	Read, Create, Update, and Delete	Deploy
	Schedule	Read, Create, Update, and Delete	-
	Default Settings	Edit	-

Table 18: Access Privileges for Tenant Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	Unified Threat Management	Read, Create, Update, and Delete	-
	NAT Policies	Read, Create, Update, and Delete	Deploy
	NAT Pools	Read, Create, Update, and Delete	Deploy
	IPS Profiles	Read, Create, Update, and Delete	Clone
	IPS Signatures	Read, Create, Update, and Delete	Clone Clear All Sections
	SSL Proxy Policy	Read, Create, Update, and Delete	Deploy Clone
	SSL Proxy Profiles	Read, Create, Update, and Delete	Clone
	SD-WAN Policy	Read, Create, Update, and Delete	Deploy Clone
	SLA Based Steering Profiles	Read, Create, Update, and Delete	Clone
	Path Based Steering Profiles	Read, Create, Update, and Delete	-
	Cloud Breakout Profiles	Read, Create, Update, and Delete	Assign Sites Detach Sites
	Port Profiles	Read, Create, Update, and Delete	Clone
	Authentication Profiles	Read, Create, Update, and Delete	Clone
	Firewall Filters	Read, Create, Update, and Delete	-
	Access Profiles	Read, Create, Update, and Delete	Clone
	RADIUS Server Profiles	Read, Create, Update, and Delete	Clone

Table 18: Access Privileges for Tenant Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	Address	Read, Create, Update, and Delete	-
	Department	Read, Create, and Delete	-
	Service	Read, Create, Update, and Delete	-
	Application Signature	Read, Create, Update, and Delete	Clone
	MAC	Read, Create, Update, and Delete	-
	Ports	Read, Create, Update, and Delete	-
	Protocols	Read, Create, Update, and Delete	-
	Network Services	Read, Update, and Delete	Start Disable
	<b>Reports</b>		
	Report Definitions - Security	Read, Create, Update, and Delete	Run/Preview Send Clone
	Report Definitions - SD-WAN	Read, Create, Update, and Delete	Run/Preview Send Clone
	Generated Reports -Security	Read and Delete	-
	Generated Reports SD-WAN	Read and Delete	-
	<b>Administration</b>		
	Users	Read, Create, Update, and Delete	-
	Roles	Read, Create, Update, and Delete	-

Table 18: Access Privileges for Tenant Scope (continued)

Role Scope	Menu Name	Actions	Other Actions
	Audit Logs		
	Device Licenses	Read, Create, Update, and Delete	Push License
	CSO Licenses	Read	
	Tenant Setting	Read, create, and update	
	Tenant Signature Database	Read	Install
	Certificates	Read, Create, Update, and Delete	-
	Identity Management	Read and Update	-
	Wi-Fi Settings	Read and Update	-
	<b>Help Menu (?)</b>		
	Getting Started	Read	-
	What's New	Read	-
	Quick Help	Read	-
	Help Center	Read	-
	FAQ	Read	-
	Release Notes	Read	-
	About	Read	-

## RELATED DOCUMENTATION

[About the Tenant Roles Page | 39](#)
[Role-Based Access Control Overview | 29](#)

# 2

PART

## Managing Sites, Site groups, and Site Templates

---

Managing Sites | 54

Managing Site Groups | 225

Managing Site Templates | 227

Managing Mesh Tags | 245

Managing Dynamic Mesh | 248

---

# Managing Sites

## IN THIS CHAPTER

- [About the Sites Page | 55](#)
- [Multihoming Overview | 57](#)
- [Enterprise Hubs Overview | 58](#)
- [Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)
- [Upgrading Sites Overview | 64](#)
- [Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities | 65](#)
- [Adding Provider Hub Sites for SD-WAN Deployment | 90](#)
- [Adding Cloud Spoke Sites for SD-WAN Deployment | 91](#)
- [Provisioning a Cloud Spoke Site in AWS VPC | 99](#)
- [Manually Adding On-Premise Spoke Sites | 103](#)
- [Add an On-Premise Spoke Site with SD-WAN Capability | 103](#)
- [Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities | 121](#)
- [Add an On-Premise Spoke Site with LAN Capability | 141](#)
- [Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities | 155](#)
- [Adding and Provisioning a Next Generation Firewall Overview | 166](#)
- [Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site | 168](#)
- [Add Switches to an Existing SD-LAN Site | 175](#)
- [Enabling Integration with Mist Access Points | 186](#)
- [Discover Mist Access Points | 186](#)
- [Adding a Standalone Next Generation Firewall Site | 187](#)
- [Managing LAN Segments on a Tenant Site | 193](#)
- [Managing a Single Site | 200](#)
- [Viewing the Sites History | 202](#)
- [Edit Site Overview | 205](#)
- [Edit On-Premise Spoke and Enterprise Hub Site Parameters | 207](#)
- [Reconfigure Static Tunnels | 212](#)
- [Edit Site Examples | 214](#)

- Upgrading Sites | 221
- Deleting a Site | 223

## About the Sites Page

To access this page, click **Resources > Site Management**.

You can use the **Sites** page to view and manage existing sites. You can also add different types of sites (manually and by using a site template) and configure the sites with WAN (SD-WAN and Next-Generation Firewall) and LAN capabilities.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add provider hub sites that connect multiple spoke sites by establishing IPsec tunnels. See [“Adding Provider Hub Sites for SD-WAN Deployment” on page 90](#).
- Add on-prem spoke sites that represent endpoints at a physical location and connect to hub sites in either a hub-and-spoke or full mesh topology. A spoke site can be configured with WAN, LAN, or both WAN and LAN capabilities.
  - To manually add on-premise spoke sites, see [“Manually Adding On-Premise Spoke Sites” on page 103](#).
  - To add multiple on-premise spoke sites by using a site template, see [“Add On-Premise Spoke Sites by Using a Site Template” on page 228](#).
- Add enterprise hub sites that carry site-to-site traffic between on-premise spoke sites and break out backhaul traffic from the on-prem spoke sites. See [“Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities” on page 65](#).
- Add cloud spoke sites that represent endpoints in a virtual private cloud. See [“Adding Cloud Spoke Sites for SD-WAN Deployment” on page 91](#).
- Add multiple sites by uploading a JSON file. See [“Adding and Configuring Sites by Importing a JSON File” on page 243](#).
- Add a switch to an existing site:
  - To add a switch to an existing SD-WAN or Next-Generation Firewall site, see [“Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site” on page 168](#).
  - To add multiple switches to an existing SD-LAN site, see [“Add Switches to an Existing SD-LAN Site” on page 175](#).

- Upgrade one or more sites. See [“Upgrading Sites” on page 221](#).
- Click on the site name to view the site details and to manage the site. See [“Managing a Single Site” on page 200](#).
- View the jobs executed to add and delete sites for a tenant. see [“Viewing the Sites History” on page 202](#).
- Edit on-premise spoke and enterprise hub site parameters. See [“Edit Site Overview” on page 205](#).
- Delete a site. See [“Deleting a Site” on page 223](#).
- View device activation logs. See [“Viewing the History of Tenant Device Activation Logs” on page 285](#).

## Field Descriptions

[Table 19 on page 56](#) describes the fields on the **Sites** page.

**Table 19: Fields on the Sites Page**

Field	Description
Alert Icon	Alert associated with the site. The alert can be critical (indicated by a red icon), major (indicated by an orange icon), or minor (indicated by a yellow icon).  <b>NOTE:</b> The alert icon is displayed only if there is an alert associated with the site. If there is no alert, no icon is displayed.
Site Name	Name of the tenant site.  Click the name of the site to go to the <i>Site-Name</i> page where you can view the site details and configure parameters related to the site. See <a href="#">“Managing a Single Site” on page 200</a> .
Location	Location of the tenant site.
Template	Displays whether an on-premise spoke site is associated with a site template (displays site template name) or not (-).
Sites Connected To	Number of sites to which the site is connected or N/A (not applicable) if no sites are connected.  Mouse over the number to view the list of sites to which the site is connected.
Operational Status	Operational status (Up or Down) of the site.
Type	Indicates whether a site is an on-premise site or a cloud site.



Table 19: Fields on the Sites Page (*continued*)

Field	Description
Site Status	<p>The current status of the site:</p> <ul style="list-style-type: none"> <li>• Created—Indicates that the site was added but not configured.</li> <li>• Configured—Indicates that the site was configured but not activated.</li> <li>• Partially-Provisioned—Indicates that one or more DHCP WAN links of the site does not have an IP address after ZTP is complete. The site status changes to Provisioned after an IP address is assigned to the DHCP WAN link.</li> <li>• Provisioned—Indicates that the site is provisioned (activated).</li> <li>• Upgrade-Required—Indicates that the site needs to be upgraded.</li> <li>• Maintenance—Indicates that the site upgrade is in progress; any deployments that might occur because of other jobs are skipped when the site status is Maintenance.</li> </ul>
Role	Indicates whether the site is a hub site or a spoke site.
Local Breakout	Indicates whether local breakout is enabled for at least one WAN link of the site. If it is enabled for at least one WAN link, the number of links on which local breakout is enabled is also displayed. Mouse over the number to view the list of links on which local breakout is enabled.
Version	Contrail Service Orchestration (CSO) version in which the site was added.

## RELATED DOCUMENTATION

[Enterprise Hubs Overview | 58](#)

[Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)

## Multihoming Overview

Multihoming is the ability of a spoke site to connect to two different hub devices in a hub and spoke topology, thereby providing redundancy. The hub devices function as primary and the secondary hub devices. If there are multiple spokes in the system, the same hub device may act as primary hub device for one spoke and secondary hub device for another spoke. That is, the selection of the primary and the secondary hub devices is only in the context of a spoke site. The spoke is connected to both the hub devices through an underlay network.

The hub devices can be SRX1500 or SRX4000 series routers. To enable multihoming for a site, you must select the hub and spoke topology when you create the tenant. If you enable multihoming for a site, you must specify a primary and back up site when you configure the site.

Traffic is switched from the primary hub to the secondary hub in the following scenarios:

- The primary hub is down
- The primary hub is up, but all the overlay tunnels between the spoke and the primary hub are down
- The tunnels are up, but the iBGP session between the primary hub and vRR is down. In this case, the failover occurs only after the BGP hold-time expires and the default route is withdrawn.

**NOTE:** In addition to hub-level redundancy, you can provide VRR-level redundancy by creating two VRRs—primary and secondary—in two different redundancy groups.

## Enterprise Hubs Overview

### IN THIS SECTION

- [Benefits of Enterprise Hubs](#) | 59

An *enterprise hub* is an SD-WAN site that is used to carry site-to-site traffic between on-premise spoke sites and to break out backhaul (central breakout) traffic from on-premise spoke sites. An enterprise hub typically has a data center department behind it; however, this is not enforced in Contrail Service Orchestration (CSO). You add a enterprise hub from the **Sites** page.

You can add one or more enterprise hubs to act as central breakout (backhaul) nodes and then associate enterprise hubs with on-premise spoke sites. The enterprise hub that is associated with a spoke site functions like a data hub and performs the following functions:

- Before the creation of site-to-site tunnels, site-to-site traffic to or from a spoke site is sent through the enterprise hub. This traffic triggers the creation of the site-to-site tunnel based on dynamic mesh thresholds and matching mesh tags that you configure for the spoke site.
- If Internet-bound traffic from the spoke site (and all departments associated with the spoke site) is destined for central breakout (backhaul), the traffic first reaches the assigned enterprise hub and then breaks out from the enterprise hub.

- If a provider hub is associated with the spoke site, the provider hub works as a fallback option in case traffic cannot be sent through the enterprise hub.

**NOTE:** You must attach an on-premise spoke site (with SDWAN capability) to a provider hub site or an enterprise hub site, or to both hub sites.

If a tenant has more than one enterprise hub configured, CSO statically meshes these sites with overlay tunnels so that the enterprise hubs can exchange routing information for the on-premise spoke sites with which they are associated. This enables the site-to-site communication between the spoke sites that are associated with different enterprise hubs.

The creation of static tunnels between one enterprise hub and another and between a enterprise hub and a spoke site depends on matching mesh tags. These static tunnels are created during the Zero Touch Provisioning (ZTP) workflow. For more information about mesh tags, see [“Mesh Tags Overview” on page 245](#).

Enterprise hubs can have their own departments similar to other sites. If an enterprise hub does not have directly connected LAN segments in the departments used by the associated spoke sites, then CSO automatically pushes the appropriate department virtual routing and forwarding (VRF) instances to the enterprise hub for connectivity.

### Benefits of Enterprise Hubs

- Because enterprise hubs can be used to carry backhaul (central breakout) traffic and are used as an anchor for site-to-site traffic, the volume of traffic sent to the provider hub (controlled by the service provider) is reduced.

### RELATED DOCUMENTATION

| [Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities](#) | 65

## Adding and Provisioning Switches to Provide LAN Capability to a Site Overview

You can use Contrail Service Orchestration (CSO) to provision, deploy, and monitor EX Series switches in branch deployments of enterprise networks. You can deploy an EX Series switch by connecting to a Customer Premise Equipment (CPE) (SRX Series devices only) functioning as a secure SD-WAN router or next-generation firewall. You can also connect the EX Series switch to a third-party Internet gateway device.

CSO Release 5.1.1 supports only EX2300, EX3400, EX4300, EX4600, and EX4650 switches as both, physical switches and Virtual Chassis.


You can provision a switch on a branch network by using CSO in one of the following ways:

- By adding a site with the switch and connecting it to an Internet gateway device.
- By adding a site with an SD-WAN CPE and the switch.
- By adding a site with a next-generation firewall site and the switch.
- By adding a site with an enterprise hub and the switch.
- By adding the switch to an SD-WAN CPE that is already provisioned and managed by CSO.
- By adding the switch to a next-generation firewall site that is already provisioned and managed by CSO.
- By adding the switch to an enterprise hub site that is already provisioned and managed by CSO.
- By adding one or more switches to an SD-LAN site that is already provisioned and managed by CSO.

## Standalone Switch Overview

Figure 2 on page 60 shows a site with LAN capability managed by CSO.

Figure 2: Site With LAN Capability (Standalone Switch)

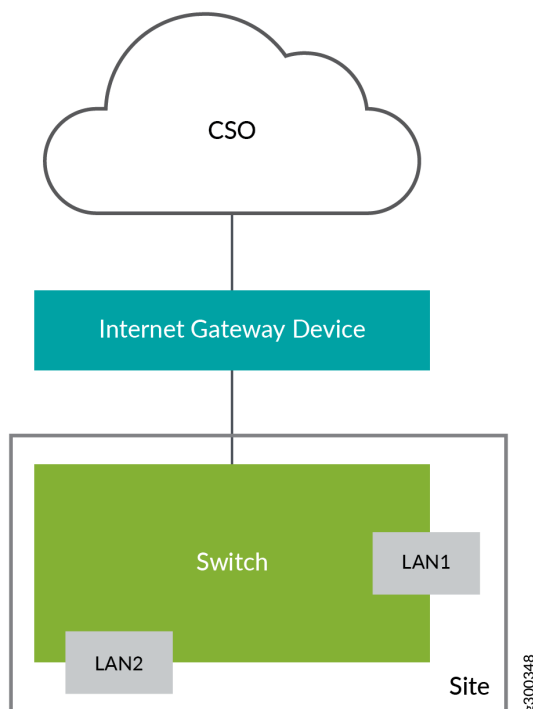

In [Figure 2 on page 60](#), the EX Series switch is connected to CSO through an internet gateway. The gateway can be a device from a manufacturer other than Juniper Networks.

When provisioning a standalone switch (physical or Virtual Chassis), you can use either ZTP (if the EX Series switch supports Phone-Home client) or manually configure the stage-1 configuration on the switch. See [“Add an On-Premise Spoke Site with LAN Capability” on page 141](#) for details.


**NOTE:**

- Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.
- EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.

### Switch Behind a CPE or Next Generation Firewall Overview

[Figure 3 on page 61](#) shows a site with SD-WAN and LAN capabilities managed by CSO.


**Figure 3: Site with LAN and SD-WAN Capabilities**

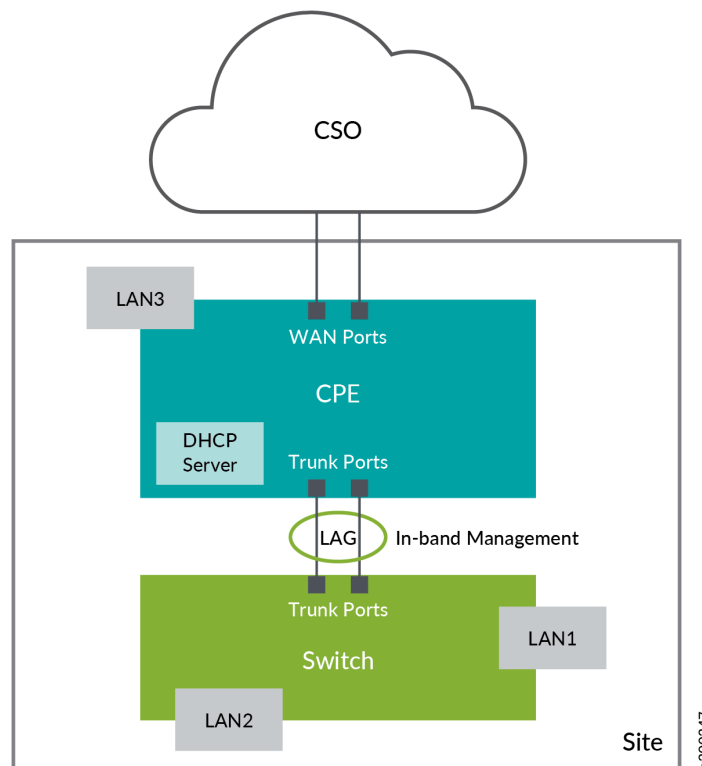

[Figure 3 on page 61](#) shows an example of a switch configured behind a CPE where the switch is connected to two LAN segments (LAN1 and LAN2) and the CPE. The CPE is connected to a LAN segment (LAN3)

and to the EX Series switch. The switch can also be connected to a next-generation firewall as shown in [Figure 4 on page 62](#).

**Figure 4: Site with LAN and Next-Generation Firewall Capabilities**

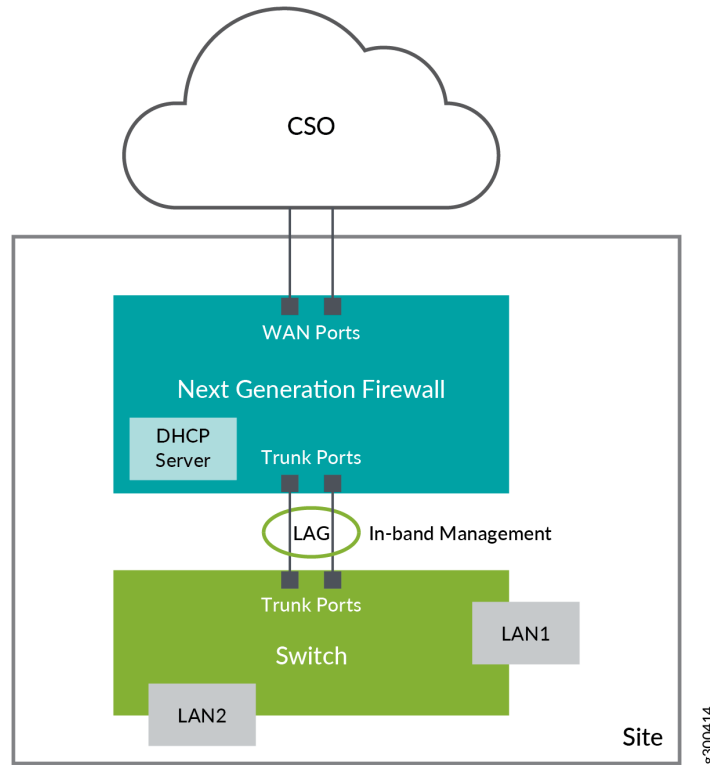

**NOTE:** You cannot add a LAN segment to the next-generation firewall by using CSO.

The switch and the CPE or firewall can be connected through a trunk port. However, you can use two trunk ports to connect the CPE and the switch and combine them to form a Link Aggregation Group (LAG) for higher throughput and redundancy. Traffic from LAN segments connected to the switch are routed to the CPE or firewall through the trunk ports for further routing into WAN.

You can manage the switch by in-band management, where in, the trunk ports carry the management traffic in addition to data.

**NOTE:** The ae0 port of the SRX Series device is configured as the trunk port for communication with the switch.

The DHCP server, configured on the CPE or firewall, runs on the trunk ports to:

- Allocate unique IP addresses to the access devices connected to the switch.
- Provide management connectivity to the switch.

During ZTP of a site with both WAN and LAN capabilities, the switch is provisioned after the CPE or firewall is provisioned.

When you add a switch to an already provisioned site, CSO redeploys the stage-2 configuration on the CPE or firewall to configure DHCP and LAG. The DHCP configuration enables management connectivity to the switch and allows CSO to discover and provision the switch.

## Monitoring Switches Overview

You can monitor the following for an EX Series switch on the *Device-Name* page (**Resources > Devices**):

- Resource utilization (memory and CPU) on the switch for the past one hour, past eight hours, past one day, past one week, and past one month.
- Status of ports.
- Alerts and alarms generated on the switch for the past one hour, past eight hours, past one day, past one week, and past one month.
- Top Ports consuming the maximum bandwidth.
- Top Ports with the maximum number of errors.
- Top Ports with the maximum packet loss.

## RELATED DOCUMENTATION

---

[Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities | 121](#)

---

[Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities | 155](#)

---

[Add an On-Premise Spoke Site with LAN Capability | 141](#)

---

[Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site | 168](#)

---

[Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities | 65](#)

## Upgrading Sites Overview

When you upgrade Contrail Service Orchestration (CSO), the existing sites continue to have the functionality of earlier releases. However, there might be changes in:

- Device templates
- Image version of a device
- Application configurations (For example, SD-WAN policies)
- Stage-1 and Stage-2 configurations of a device

For CSO to support sites that are created in earlier releases, you must upgrade the existing sites to the new version. You can upgrade a single site or upgrade multiple sites simultaneously.

Users with the SP Administrator, OpCo Administrator, or Tenant Administrator role can upgrade a site from the Sites page. The Sites page provides information about sites that must be upgraded and sites for which the upgrade is optional. In the Sites page, following two new columns have been added to indicate whether the site upgrade is mandatory or optional:

- **Site Status**—Indicates the status of the site. If the site status is Configured or Provisioned, the upgrade is optional. If the site status is UPGRADE-REQUIRED, the site upgrade is mandatory. You cannot upgrade a site if the site status is Created, Provision Failed, and Activation Failed.
- **Site Version**—Indicates the release number in which the site was created.

If you create a site in a release that is tagged as a Long Term Support (LTS) release, the site remains functional in the subsequent two LTS releases. For example, if you have created a site in Release X.2 (LTS release), upgrading the site in Release (X+1).2 and Release (X+2).2 is optional, while it is mandatory to upgrade the site in Release (X+3).2.

If you have created a site in a non-LTS release, the site remains functional in the successive release only. For example if you have created a site in Release X.0 (non-LTS), upgrading the site in Release X.1 is optional, while it is mandatory to upgrade the site in Release X.2.

### RELATED DOCUMENTATION

[Upgrading Sites](#) | 221



## Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities

An enterprise hub site is an SD-WAN site that is used to carry site-to-site traffic between on-premise spoke sites and to break out backhaul (central breakout) traffic from on-premise spoke sites. An enterprise hub *typically* has a data center department behind it; however, this is not enforced in Contrail Service Orchestration (CSO). The following device templates are supported for enterprise hubs:

- SRX as SD-WAN CPE (vSRX only)
- Dual SRX as SD-WAN CPEs (vSRX only)
- SRX-1500 as SD-WAN CPE
- Dual SRX1500 as SD-WAN CPEs
- SRX4x00 as SD-WAN CPE
- Dual SRX4x00 as SD-WAN CPEs

To add an enterprise hub site:

**NOTE:** You can add enterprise hub sites only for tenants with real-time optimized SD-WAN mode.

1. Click **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add Enterprise Hub**.

The **Add Enterprise Hub for *Tenant-Name*** page appears.

3. Do one of the following:

- To add an enterprise hub with only SD-WAN capability, complete configuration settings according to guidelines provided in [Table 20 on page 67](#).
- To add an enterprise hub with both SD-WAN and LAN capabilities, complete configuration settings according to guidelines provided in [Table 20 on page 67](#) for the SD-WAN capability and [Table 22 on page 80](#) for LAN capability.

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. (Optional) You can review the configuration in the **Summary** tab and modify the settings, if required.

5. Click **OK**.

The site activation job is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the enterprise hub and the switch (when LAN capability is selected). The enterprise hub is activated first and then the process to activate the switch is initiated.

If you selected LAN capability for the enterprise hub site, go to step 6..

6. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

• If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.

b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

c. Copy the stage-1 configuration and log in to the console of the EX Series switch.

d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability)

Field	Description
<b>General</b>	
<i>Site Information</i>	
<b>Site Name</b>	Enter a unique name for the site. You can use alphanumeric characters and hyphen (-); the maximum length is 32 characters.
<b>Site Group</b>	Select a site group to which you want to assign the site.
<i>Site Capabilities</i>	
<b>WAN Capabilities</b>	SD-WAN capability is selected by default. You cannot clear the selection.
<b>LAN Capabilities</b>	Select <b>LAN</b> if you want to include LAN capability in the enterprise hub site.
<i>Configuration</i>	
<b>Primary Provider Hub</b>	<p>Select the provider hub site (or primary provider hub site in case of multihoming) to which you want to connect the enterprise hub site.</p> <p>If you do not specify a provider hub site, then the enterprise hub site can connect only to the on-premise spoke sites that are associated with the enterprise hub site.</p> <p>If you specify a provider hub site, then the enterprise hub site can also connect to the on-premise spoke sites to which that provider hub site is associated.</p>
<b>Secondary Provider Hub</b>	<p>Select the secondary provider hub site (in case of multihoming) to which you want to connect the enterprise hub site.</p> <p>When the primary provider hub is down, the enterprise hub connects to the secondary provider hub and the on-premise spoke sites to which that provider hub site is associated.</p>
<i>On-Demand Mesh Threshold</i>	

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Threshold for Tunnel Creation</b>	<p>Specify the threshold for the number of sessions (flows) closed (in a two-minute duration) between the enterprise hub and a destination site. When the number of sessions closed exceeds the specified threshold, a tunnel is created between the enterprise hub and the destination site.</p> <p>The default value is 5.</p> <p>For example, if you specify the Create Threshold as 5, dynamic mesh tunnels are created if the number of sessions closed between the enterprise hub and destination site exceeds 5 in 2 minutes.</p>
<b>Threshold for Tunnel Deletion</b>	<p>Specify the threshold for the number of sessions closed (in a 15-minute duration) between the enterprise hub and a destination site. When the number of sessions closed is lower than the specified threshold, the tunnel between the enterprise hub and destination site is deleted.</p> <p>The default value is 2.</p> <p>For example, if you specify the number of sessions closed as 2, dynamic mesh tunnels between the enterprise hub and destination site are deleted if the number of sessions closed is lesser than or equal to 2.</p>
<i>Address and Contact Information</i>	
<b>Street Address</b>	Enter the street address of the site.
<b>City</b>	Enter the name of the city where the site is located.
<b>State/Province</b>	Select the state or province where the site is located.
<b>ZIP/Postal Code</b>	Enter the postal code for the site.
<b>Country</b>	<p>Select the country where the site is located.</p> <p>You can click the <b>Validate</b> button to verify the address that you specified:</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address can be verified. You can click the <b>View location on a map</b> link to see the address location.</li> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed .</li> </ul>
<b>Contact Name</b>	Enter the name of the contact person for the site.

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Email</b>	Enter the e-mail address of the contact person for the site.
<b>Phone</b>	Enter the phone number of the contact person for the site.  Click <b>Next</b> to continue.
<i>Advanced Configuration</i>	
<b>Name Server IP List</b>	Specify one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on..  DNS servers are used to resolve hostnames into IP addresses.
<b>NTP Server</b>	Specify the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers.  Example: ntp.example.net  The site must have DNS reachability to resolve the FQDN during site configuration.
<b>Select Timezone</b>	Select the time zone of the site.
<b>WAN</b>	
<i>Device Template</i>	
<b>Device Template</b>	Select a device template, which contains information for configuring a device.
<i>Device Information</i>	
<b>NOTE:</b> Some fields in this section are displayed only if you select a dual CPE device template.	
<b>Serial Number</b>	For a single CPE device, enter the serial number of the CPE device. Serial numbers are case-sensitive.
<b>Device Redundancy</b>	For dual CPE device templates, displays Enabled indicating that redundancy is enabled. You cannot modify this field.
<b>Primary Serial Number</b>	For a dual CPE device, enter the serial number of the primary CPE device. The serial number is case sensitive.

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Secondary Serial Number</b>	For a dual CPE device, enter the serial number of the secondary CPE device. The serial number is case sensitive.
<b>Auto Activate</b>	<p>Click the toggle button to enable (default) or disable automatic activation of the CPE device.</p> <p>When you enable this field, zero-touch provisioning (ZTP) of the CPE device is automatically triggered after the site is added to CSO.</p> <p>The device template that you select determines whether this option is enabled or disabled by default.</p>
<b>Activation Code</b>	For a single CPE device, if the automatic activation of the device is disabled, enter the activation code to manually activate the device.
<b>Primary Activation Code</b>	For a dual CPE device, if the automatic activation of the device is disabled, enter the activation code to manually activate the primary CPE device.
<b>Secondary Activation Code</b>	For a dual CPE device, if the automatic activation of the device is disabled, enter the activation code to manually activate the secondary CPE device.
<b>Boot image</b>	<p>Select the boot image from the drop-down list if you want to upgrade the image for the CPE device.</p> <p>The boot image is the latest build image uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the procedure to upgrade the device image. The boot image is populated based on the device template that you have selected while creating a site. See <i>Uploading a Device Image</i>.</p>
<i>WAN Links</i>	
<b>WAN_0 (WAN-Interface-Name)</b>	<p>This field is enabled by default.</p> <p>Enter parameters related to the WAN_0 (WAN-Interface-Name) link. Fields marked with an asterisk (*) must be configured to proceed.</p>
<b>Link Type</b>	Select whether the link would be an MPLS link or Internet link.

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Egress Bandwidth</b>	<p>Enter the maximum bandwidth (in Mbps) that the CPE allows towards the WAN link.</p> <p>Range: 1 through 10,000.</p>
<b>Address Assignment</b>	<p>Displays the method of assigning an IP address to the WAN link (STATIC).</p> <p>You must provide the IP address prefix and the gateway address for the WAN link.</p>
<b>Static IP Prefix</b>	Enter the IP address prefix of the WAN link.
<b>Gateway IP Address</b>	Enter the IP address of the gateway of the WAN service provider.
<b>Public IP Address</b>	<p>Enter the public IPv4 address for the link.</p> <p><b>NOTE:</b> This IP address should be provided only if the static IP prefix is a private IP address and 1:1 NAT is configured.</p>
<b>WAN Link (Primary or Secondary)</b>	For dual CPE device templates, displays whether the WAN link is a primary link or a secondary link. You cannot modify this field.
<i>Advanced Settings</i>	
<b>Provider</b>	Enter the name of the service provider providing the WAN service.
<b>Cost/Month</b>	<p>Enter the cost for using the WAN link per month and select the currency in which the cost is indicated from the adjacent drop-down list.</p> <p>Range: 1 through 10,000.</p> <p>In bandwidth-optimized SD-WAN, CSO uses this information to identify the least-expensive link to route traffic when multiple WAN links meet SLA profile parameters.</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Enable Local Breakout</b>	<p>Click the toggle button to enable local breakout on the WAN link. By default, local breakout is disabled.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you enable this option, the WAN link can be used for local breakout. The decision of whether traffic breaks out locally from the site depends on the breakout profile that is referenced in the SD-WAN policy intent.</li> <li>• If you do not enable local breakout on at least one WAN link for a single CPE connection plan and at least two WAN links for a dual CPE connection plan, then local breakout is disabled for the site.</li> </ul>
<b>Breakout Options</b>	<p>When the <b>Enable Local Breakout</b> field is enabled, select whether you want to use the WAN link for both breakout and WAN traffic (default) or only for breakout traffic.</p>
<b>Autocreate Source NAT Rule</b>	<p>Click the toggle button to enable or disable the automatic creation of source NAT rules. By default, this field is enabled when local breakout is enabled on the WAN link.</p> <p><a href="#">Table 21 on page 79</a> explains how source NAT rules are automatically created on the WAN link. The automatically-created source NAT rules are implicitly defined and applied to the site and is not visible on the NAT Policies page.</p> <p><b>NOTE:</b> You can manually override automatically created NAT rules, by creating a NAT rule within a particular rule-set. For example, to use a source NAT pool instead of an interface for translation, create a NAT rule within this particular rule-set, that includes the relevant department zone and WAN interface as the source and destination. For example:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-2</pre> <p>The manually created NAT rule is placed at a higher priority than the corresponding automatically created NAT rule.</p> <p>You can also add other fields (such as addresses, ports, protocols, and so on) as part of the source or destination endpoints. For example:</p> <pre>Dept-Zone1, Port 56578 --&gt; W1: Translation=Pool-2</pre>



Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
Translation	<p>Select the type of NAT to use for the traffic on the WAN link:</p> <ul style="list-style-type: none"> <li>• <b>Interface</b>—Use interface-based NAT, which is the default.</li> <li>• <b>Pool</b>—Use pool-based NAT. If you select this option, you must specify the IP addresses that are to be used for the NAT pool.</li> </ul> <p><b>NOTE:</b> No NAT is performed for tenant-owned public IP addresses that were added during the tenant addition workflow.</p>
IP Addresses	<p>For pool-based NAT, enter one or more IP addresses, subnets, or an IP address range. Separate multiple IP addresses by using commas and use a hyphen to denote a range; for example, 192.0.2.1-192.0.2.50.</p>
Preferred Breakout Link	<p>Click the toggle button to enable the WAN link as the most preferred breakout link.</p> <p>If you disable this option, then the breakout link is chosen using ECMP from the available breakout links.</p>
BGP Underlay Options	<p><b>NOTE:</b> This setting can be configured only if the address assignment is static and local breakout is enabled.</p> <p>Click the toggle button to enable BGP underlay routing.</p> <p>When you enable BGP underlay routing, route advertisements to the primary PE node and, if configured, the secondary PE node occur as follows:</p> <ul style="list-style-type: none"> <li>• CSO advertises the WAN interface subnet.</li> <li>• If you configured pool-based translation, CSO advertises the NAT address pool.</li> </ul> <p><b>NOTE:</b> If underlay BGP is enabled for a WAN link, then the routes learnt from BGP are installed for local breakout; CSO does not generate the static default route.</p>
Primary Neighbor	<p>Displays the IP address that you entered for the gateway for the WAN link.</p>
Secondary Neighbor	<p>If you want to provide PE resiliency, you can configure a secondary PE node.</p> <p>Enter the IP address of the secondary PE node.</p> <p><b>NOTE:</b> If the primary PE node goes down, then the secondary PE is used as the next hop. When the primary PE comes back up, the route next hops are changed to the primary PE.</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
eBGP Peer-AS-Number	<p>Enter the autonomous system (AS) number for the external (EBGP) peer.</p> <p><b>NOTE:</b> If the peer AS number is not configured or the peer AS number that is configured is the same as that of the CPE site, then the BGP type is assumed to be internal BGP (IBGP).</p>
Local AS Number	<p>Enter the local AS number for the WAN link. When you configure this parameter, the local AS number is used for eBGP peering instead of the global AS number configured for the device.</p> <p><b>NOTE:</b> The local AS number must be different from the global AS and eBGP peer AS numbers.</p>
Authentication	<p>Select the BGP route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—Indicates that no authentication should be used. This is the default.</li> <li>• <b>Use MD5</b>—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
Auth Key	<p>If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.</p>
Advertise Public LAN Prefixes	<p>Click the toggle button to enable the advertisement of public LAN prefixes. This field is disabled by default.</p> <p>If the tenant has a public IP address pool configured and you enable the advertisement of public LAN prefixes, then for LAN segments that are created with a subnet that falls under the tenant public IP address pool, CSO advertises the LAN subnet to the BGP underlay.</p> <p><b>NOTE:</b> When public LAN advertisement is enabled for the WAN link, public LAN prefixes are advertised through the BGP underlay towards MPLS or the Internet. If a site has two versions of the route installed for the same LAN prefix in the overlay and underlay, the overlay routes are always preferred over underlay.</p>
Use For Fullmesh	<p>Click the toggle button to specify whether the WAN link can be a part of a full mesh topology.</p> <p>A site can have all WAN links enabled for meshing.</p> <p><b>NOTE:</b> You must enable at least one WAN link for full mesh.</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Mesh Overlay Link Type</b>	<p>When <b>Use for Fullmesh</b> field is enabled, select the type of mesh overlay link—GRE and GRE_IPSEC.</p> <ul style="list-style-type: none"> <li>• If the link type is Internet, the value for mesh overlay link type is GRE_IPSEC.</li> <li>• If the link type is MPLS, select one of the following options: <ul style="list-style-type: none"> <li>• GRE-IPSEC</li> <li>• GRE</li> </ul> </li> </ul>
<b>Mesh Tag</b>	<p>When the <b>Use for Fullmesh</b> field is enabled, select one or more mesh tags to be associated with the WAN link for creating tunnels.</p> <p>Matching mesh tags is one of the criteria used to form tunnels between sites that support meshing.</p> <p>For more information about mesh tags, see <a href="#">“Mesh Tags Overview” on page 245</a>.</p>
<b>Connects to Hubs</b>	<p>Click the toggle button to specify that the WAN link of the site connects to a hub.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• For sites with a single CPE, you must enable at least one WAN link to connect to the hub so that OAM traffic can be transmitted.</li> <li>• For sites with a dual CPE, you must enable at least one WAN link per device to connect to the hub so that OAM traffic can be transmitted.</li> </ul>
<b>Use for OAM Traffic</b>	<p>If you have specified that the WAN link is connected to a hub, click the toggle button to enable sending the OAM traffic over the WAN link.</p> <p>This WAN link is then used to establish the OAM tunnel.</p>
<b>Overlay Peer Device</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and only a one provider hub (primary) is specified.</p> <p>Displays the peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and only a one provider hub (primary) is specified.</p> <p>Select the interface name of the hub device to which the WAN link of the site is connected.</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Overlay Tunnel Type 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the mesh overlay tunnel type (GRE and GRE_IPSEC) for the tunnel to the primary hub.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
<b>Overlay Peer Device 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Displays the primary peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the interface name of the primary hub device to which the WAN link of the site is connected.</p>
<b>Overlay Tunnel Type 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the mesh overlay tunnel type (GRE and GRE_IPSEC) for the tunnel to the secondary hub.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
<b>Overlay Peer Device 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Displays the secondary peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the interface name of the secondary hub device to which the WAN link of the site is connected.</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>Backup Link</b>	<p>Select a backup link through which traffic can be routed when the primary (other) links are unavailable. You can select any link other than the default links or links that are configured exclusively for local breakout traffic.</p> <p>When a primary link comes back online, CSO monitors the performance on the primary link and when the primary link meets the SLA requirements, the traffic is switched back to the primary link. However, SLA data is not monitored for the backup link.</p>
<b>Default Link</b>	<p>Select one or more links that will be used for routing traffic in the absence of matching SD-WAN policy intents. A site can have multiple default links to the hub site.</p> <p>Default links are used primarily for overlay traffic but can also be used for local breakout traffic. However, a default link cannot be used exclusively for local breakout traffic. If you do not specify a default link, then equal-cost multipath (ECMP) is used to choose the link on which to route traffic.</p>
<b>Data VLAN ID</b>	<p>Enter a VLAN ID for the WAN link.</p> <p>Range: 0 through 4049 (4050 to 4094 is reserved by CSO).</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you are configuring more than one WAN link on the same physical interface, only one WAN link can be untagged; for the remaining WAN links, you must configure a VLAN ID.</li> <li>• A combination of tagged and untagged on the same physical interface is supported only for single CPE devices.</li> </ul> <p>To enable the configuration of WAN links as logical interfaces in on-premise SD-WAN spoke sites, the SP Administrator user must modify the device template and configure the WAN ports as logical interfaces.</p>
<b>WAN_1 (WAN-Interface-Name)</b>	<p>Click the toggle button to enable or disable (default) the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed.</p> <p>Refer to the fields described for WAN_0 (WAN-Interface-Name) for an explanation of the fields</p>

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
<b>WAN_2 (WAN-Interface-Name)</b>	<p>Click the toggle button to enable or disable (default) the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed.</p> <p>Refer to the fields described for WAN_0 (WAN-Interface-Name) for an explanation of the fields</p>
<b>WAN_3 (WAN-Interface-Name)</b>	<p>Click the toggle button to enable or disable (default) the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed.</p> <p>Refer to the fields described for WAN_0 (WAN-Interface-Name) for an explanation of the fields</p>
<i>Management Connectivity</i>	
<b>IP Prefix</b>	<p>Enter an IPv4 address prefix for the loopback interface on the CPE device. The IP address prefix must be a /32 IP address prefix and must be unique across the entire management network. If you do not specify an IPv4 address prefix, CSO automatically assigns the IP prefix from the reserved pool 100.124.0.0/14.</p>
<i>Additional Configuration</i>	

Table 20: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (WAN Capability) (continued)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>

Refer to [Table 25 on page 86](#) for configuring LAN segments.

Table 21: Automatic Creation of Source NAT Rules

Autocreate Source NAT Rule	Translation	NAT Rules Creation
Disabled	Not applicable (No NAT)	None.

Table 21: Automatic Creation of Source NAT Rules (*continued*)

Autocreate Source NAT Rule	Translation	NAT Rules Creation
Enabled	Interface-Based (Default)—CSO creates interface-based NAT rules.	<p>Source NAT rules are automatically created, with each rule from a department zone to the WAN interface, with a translation of type interface. Each pair of [zone - interface] represents a rule-set.</p> <p>For example, the following department zone to (WAN link) W1 interface rule-set might be created:</p> <pre>Dept-Zone1 --&gt; W1: Translation=Interface Dept-Zone2 --&gt; W1: Translation=Interface Dept-Zone3 --&gt; W1: Translation=Interface</pre>
Enabled	Pool-Based—CSO automatically creates pool-based NAT rules.	<p>NAT source rules are automatically created, with each rule from a department zone to the WAN NAT pool with a translation of type pool.</p> <p>For example, a source NAT rule from department zone to NAT pool might be created:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-1 Dept-Zone2 --&gt; W1 : Translation=Pool-1</pre>

Table 22: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (LAN Capability)

Field	Description
<b>LAN</b>	
<p><b>NOTE:</b> This tab is enabled only if you select <b>LAN</b> under LAN Capabilities in General Settings.</p>	



Table 22: Add Enterprise Hub for &lt;Tenant-Name&gt; Settings (LAN Capability) (continued)

Field	Description
Switch Devices	<p>Displays the switches that you have added to the site.</p> <ul style="list-style-type: none"> <li>To add a switch, click the + icon on the top right corner of the Switch Devices table. The Add New Switch page appears. See <a href="#">Table 23 on page 81</a> for details.</li> <li>To edit details of a switch, select the switch and click the <b>Edit</b> icon on the top right corner of the Switch Devices table. The Edit Switch Details page appears, displaying the same parameters that you configured while adding a switch. Modify the parameters as needed and Click <b>OK</b>. The changes that you made for the switch are saved and the updated parameters appear on the Switch Devices table.</li> <li>To delete one or more switches, select the switches and click the <b>Delete</b> icon on the top right corner of the Switch Devices table.</li> <li>To manage the configuration of one or more switches added to the site, select the switches from the list and click <b>Configuration</b>. The Switch Configuration page appears. See <a href="#">Table 24 on page 84</a> for details.</li> </ul>
LAN Segments	<p>Displays the VLANs and their IDs that you configured on the switch.</p> <ul style="list-style-type: none"> <li>Optional: To add a VLAN, click the + icon on the top, right corner of the LAN Segments table. The Create LAN Segment page appears. See <a href="#">Table 25 on page 86</a> for details.</li> <li>To edit details of a VLAN, select the LAN segment and click the <b>Edit</b> icon (pencil) on the top right corner of the LAN Segments table. The Edit LAN Segment page appears, displaying the same fields that are presented when you add a VLAN. Modify the parameters as needed and click <b>OK</b>. The changes that you made for the LAN segment are saved and the updated parameters appear on the LAN Segments table.</li> <li>To delete one or more VLANs, select the VLANs and click the <b>Delete</b> icon (trash can) on the top right corner of the LAN Segments table.</li> </ul>

[Table 23 on page 81](#) displays the fields on the Add New Switch Page.

Table 23: Fields on the Add New Switch Page

Field	Description
Device Profile	

Table 23: Fields on the Add New Switch Page (*continued*)

Field	Description
Device Name	<p>Enter a unique name for the switch.</p> <p>You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.</p>
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<i>CPE Settings</i>	
Trunk Ports	<p>Select at least two trunk ports on the CPE device to connect with the switch.</p> <p>The trunk ports are used for carrying the following:</p> <ul style="list-style-type: none"> <li>• LAN traffic between the switch and the CPE.</li> <li>• Management traffic for in-band management of the switch.</li> </ul>
Switch Management Subnet	<p>Specify the subnet that the DHCP can use to assign IP addresses. The DHCP server runs on the following ports:</p> <ul style="list-style-type: none"> <li>• Trunk ports to provide DHCP information to all devices connected to the switch and to the in-band management port, switch management port, and LAN ports on the CPE.</li> <li>• Out-of-band management port on the CPE to provide DHCP information to the management port on the switch.</li> <li>• LAN ports on the CPE to provide information to the devices connected to the CPE LAN ports.</li> </ul>
<i>Switch Details</i>	
Virtual Chassis	This toggle button is disabled for an enterprise hub site with SD-WAN and LAN capability. You can add a Virtual Chassis to a site with only LAN capability.
Serial Number	<p>If you disabled the Virtual Chassis toggle button, specify the serial number of the physical switch.</p> <p>To obtain the serial number, log in to the CLI of the switch in operational mode and enter <b>show chassis hardware</b>. Alternatively, you can view the serial number on the barcode sticker, which is on the rear-panel of the switch.</p> <p>The serial number is a case-sensitive, alphanumeric string.</p>

Table 23: Fields on the Add New Switch Page (*continued*)

Field	Description
Zero Touch Provisioning	<p>Click the toggle button to enable or disable zero-touch provisioning (ZTP) of the switch through ZTP.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See <a href="#">Step 5</a> for details.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the switch.</p> <p>The boot image is the latest device image that is uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p><b>NOTE:</b> This option is not available for a Virtual Chassis.</p> <p>To provision a Virtual Chassis in CSO, you must manually upgrade the image to either JUNOS 18.4R2.7 or 18.4R3.3.</p>
Auto activate	<p>Click the toggle button to enable or disable automatic activation of the switch when the switch is detected by CSO (that is, management status of the device is Device_Detected).</p> <p>When you enable this field, zero-touch provisioning (ZTP) of the switch is automatically triggered when the device communicates with CSO.</p> <p>By default, auto activation for the switch is enabled or disabled if it is enabled or disabled for the CPE.</p> <p><b>NOTE:</b> You must physically connect the switch to the CPE and power it on for the switch to be automatically activated when you enable this option.</p>
Activation code	<p>If you disabled the <b>Auto activate</b> field, enter the activation code to be used for manually activating the switch</p> <p>For information on manually activating a switch, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>

[Table 24 on page 84](#) describes the tabs on the Switch Configuration page.

The Access Profiles tab and Port Profiles tab are available only if you have added a physical switch or a preprovisioned Virtual Chassis, and the selected switches are of the same device type and model. If you have added an autoprovisioned Virtual Chassis, only the Configuration Templates tab is available. The Port Profiles tab is unavailable because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis. The Access Profiles tab is unavailable because the access profile requires a RADIUS authentication server to be added to it. The parameters related to communication between the RADIUS server and the supplicant are defined in the authentication profile, which is, in turn, referenced by the port profile.

**Table 24: Tabs on the Switch Configuration page**

Tab	Description
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>

Table 24: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Port Profiles	<p data-bbox="513 331 1073 363">Displays the list of interfaces (ports) available in CSO.</p> <p data-bbox="513 394 1268 426">You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p data-bbox="513 457 1143 489">Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol data-bbox="513 520 1451 1304" style="list-style-type: none"> <li data-bbox="513 520 1451 642">1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table. The Edit Port Configuration page appears.</li> <li data-bbox="513 688 1451 810">2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li data-bbox="513 869 1451 1062">3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column. If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li data-bbox="513 1115 1451 1188">4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li data-bbox="513 1234 1451 1304">5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

Table 24: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Configuration Templates	<p>Displays the list of configuration templates. This list is filtered based on the device that you select.</p> <p>Configuration templates are predefined stage-2 templates that are added by your OpCo administrators or SP administrators.</p> <p>To add configuration templates and set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates.</li> <li>3. (Optional) View the CLI commands in the Summary tab.</li> <li>4. Click <b>OK</b>. You have added and set the parameters for the configuration templates.</li> </ol>

Table 25: Add LAN Segment Settings

Field	Description
<b>Name</b>	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length allowed is 15 characters.</p>
<b>Type</b>  <b>NOTE:</b> This field is displayed only for LAN segments associated with enterprise hub sites.	<p>Select the type of LAN segment:</p> <ul style="list-style-type: none"> <li>• <b>Directly Connected (default)</b>—Indicates that the LAN segment is directly connected to the site.</li> <li>• <b>Dynamic Routed</b>—Indicates that the LAN segment is not directly connected to the site and is reachable by using a dynamic route. If you select this option, you must specify the dynamic routing information.</li> </ul>
<b>VLAN ID</b>	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>

Table 25: Add LAN Segment Settings (*continued*)

Field	Description
<b>Department</b>	<p>Select a department to which the LAN segment is assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You can group LAN segments as departments for ease of management and for applying policies at the department-level. For LAN segments that are dynamically routed, you can assign only a data center department.</p>
<b>Protocol</b>	For dynamically routed LAN segments, select the routing protocol (BGP or OSPF) to be used by the data center department to learn routes from the data center.
<b>Advertise LAN Prefix</b>	<p>For dynamically routed LAN segments, click the toggle button to advertise the LAN prefix of the SD-WAN spoke site to the data center through the data center department associated with the enterprise hub.</p> <p>By default, the Advertise LAN Prefix field is disabled.</p> <p><b>NOTE:</b> You must avoid overlapping IP addresses between the SD-WAN LAN network and the datacenter network.</p>
<b>Gateway Address/Mask</b>	<p>Enter a valid gateway IP address and mask for the LAN segment. This address will be the default gateway for endpoints in this LAN segment.</p> <p>For example: 192.0.2.8/24.</p>
<b>DHCP</b>	<p>For directly connected LAN segments, click the toggle button to enable DHCP (default).</p> <p>You can enable DHCP if you want to assign IP addresses by using a DHCP server or disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, additional fields appear on the page.</p>
Additional fields related to DHCP	
<b>Address Range Low</b>	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
<b>Address Range High</b>	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.

Table 25: Add LAN Segment Settings (*continued*)

Field	Description
<b>Maximum Lease Time</b>	<p>Specify the maximum duration (in seconds) for which a client can request for and hold a lease on the DHCP server.</p> <p>Default: 1440</p> <p>Range: 0 through 4,294,967,295 seconds.</p>
<b>Name Server</b>	<p>Specify one or more IPv4 addresses of the DNS server.</p> <p>To enter more than one DNS server address, type the address, press Enter, and then type the next address.</p> <p><b>NOTE:</b> DNS servers are used to resolve hostnames into IP addresses.</p>
<b>CPE Ports</b>	<ul style="list-style-type: none"> <li>For sites with LAN capability, click the toggle button to include or exclude the CPE in the LAN segment. <ul style="list-style-type: none"> <li>When you include the CPE in the LAN segment: <ul style="list-style-type: none"> <li>CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> <li>The <b>Switch Ports</b> field is disabled. CSO automatically assigns LAN ports on the Switch device and creates the same LAN segment on the Switch.</li> </ul> </li> <li>If you click to exclude the CPE from the LAN segment, you must specify the switch ports that connect with the LAN in the <b>Switch Ports</b> field. CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.</li> </ul> <p><b>NOTE:</b> You can select only one port if the CPE is a physical SRX Series device.</p></li> <li>For sites without LAN capability, the CPE Ports field is disabled and the CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> </ul>
<b>Switch Ports</b>  <b>NOTE:</b> This field is displayed only when LAN capability is selected for the enterprise hub.	<p>If you disable the CPE ports field, select ports on the switch to be part of the LAN segment. The Switch ports and CPE ports are mutually exclusive.</p> <p>Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</p>

*BGP Configuration*

**NOTE:** This section is displayed only for dynamic routed LAN segments with BGP specified as the protocol.



Table 25: Add LAN Segment Settings (*continued*)

Field	Description
<b>Authentication</b>	<p>Select the BGP route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• None—Indicates that no authentication should be used. This is the default.</li> <li>• Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
<b>Peer IP Address</b>	Enter the IP address of the BGP neighbor.
<b>Peer AS Number</b>	Enter the autonomous system (AS) number of the BGP neighbor.
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.

*OSPF Configuration*

**NOTE:** This section is displayed only for dynamic routed LAN segments with OSPF specified as the protocol.

<b>OSPF Area ID</b>	Specify the OSPF area identifier to be used for the dynamic route.
<b>Authentication</b>	<p>Select the OSPF route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• Password—Indicates that password-based authentication should be used. If you choose this option, you must specify the password. (This is the default).</li> <li>• Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> <li>• None—Indicates that no authentication should be used.</li> </ul>
<b>Password</b>	Enter the password to be used to verify the authenticity of OSPF packets.
<b>Confirm Password</b>	Retype the password for confirmation purposes.
<b>MD5 Auth Key ID</b>	<p>If you specified that MD5 should be used for authentication, enter the OSPF MD5 authentication key ID.</p> <p>Range: 1 through 255.</p>
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, enter an MD5 authentication key, which is used to verify the authenticity of OSPF packets.

## RELATED DOCUMENTATION

About the Sites Page | 55

Enterprise Hubs Overview | 58

Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site | 168

## Adding Provider Hub Sites for SD-WAN Deployment

A provider hub site represents an automation endpoint that is part of a data center or POP that is owned by the service provider. The provider hub site is connected to multiple spoke sites using the overlay connections. Provider hubs sites are logical entities in a multi-tenant device (provider hub device). You add a provider hub site from the **Sites** page. This page describes how to add a provider hub site for a tenant.

To add a provider hub site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add Provider Hub**.

The **Add Provider Hub for *Tenant-Name*** page appears.

3. Complete the configuration settings according to the guidelines provided in [Table 26 on page 90](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

The newly added provider hub site is displayed on the **Sites** page.

Table 26: Fields on the Provider Hub for Tenant-Name Page

Field	Description
<b>Configuration</b>	
Service POP	Select the name of the point of presence (POP) for the site. A network POP is a location at which a service provider instantiates a network function, such as a virtualized network function (VNF).

Table 26: Fields on the Provider Hub for Tenant-Name Page (*continued*)

Field	Description
Hub Device Name	<p>Select the provider hub device for the hub site. The provider hub devices with <b>DATA_ONLY</b> capability and <b>DATA_AND_OAM</b> capability are listed.</p> <p><b>NOTE:</b> You need not onboard a provider hub with OAM_ONLY capability. By default, the provider hub with OAM_ONLY capability will be imported.</p>

## RELATED DOCUMENTATION

[About the Sites Page | 55](#)
[About the Site Groups Page | 225](#)

## Adding Cloud Spoke Sites for SD-WAN Deployment

A cloud spoke represents an automation endpoint (virtual machine (VM) or an EC2 Instance) running a Juniper Networks vSRX image in the Amazon Web Services(AWS) virtual private cloud (VPC). The cloud spoke sites are connected to the hub sites using the overlay connections. You create a cloud spoke site from the **Sites** page. This topic describes how to add a cloud spoke site for a tenant.

**NOTE:**

- You can add a cloud spoke site only in hub-and-spoke topology.
- To ensure that only hub-and-spoke topology is created, we recommend you to disable the DVPN configuration while adding the tenant.
- You cannot add a cloud spoke site in full mesh topology.

To add a cloud spoke site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add Cloud Spoke**.

The **Add On-Premise Spoke Site for Tenant Name** page appears.

3. Complete the configuration settings according to the guidelines provided in [Table 27 on page 92](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Review the configuration and modify the settings, if needed, from the **Summary** tab.
5. Click **OK**.

The newly added cloud spoke site is displayed on the **Sites** page.

**Table 27: Fields on the Add Cloud Spoke Site Page**

Field	Description
<b>General</b>	
<b>Site Information</b>	
Site Name	Enter a unique name for the site. Enter a unique string of alphanumeric characters and special character (-). The maximum length is 32 characters.  Example: aws-cloud-spoke
Site Group	(Optional) Select a site group to which you want to assign the site.  Example: cloud-spoke
<b>Site Capabilities</b>	
WAN Capabilities	Select <b>SD-WAN</b> to include SD-WAN capabilities in the cloud spoke site
<b>Configuration</b>	
Primary Provider Hub	Select the hub site to which the spoke site must connect.
<b>Advanced Configuration</b>	
Name Server IP List	Enter one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.
NTP Server	Enter the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers. Example: ntp.example.net The site must have DNS reachability to resolve the FQDN during site configuration.

Table 27: Fields on the Add Cloud Spoke Site Page (*continued*)

Field	Description
Select Timezone	Select the time zone for the site.
<b>WAN</b>	
Device Template	<p>Click a device template to select the plan for WAN connectivity.</p> <p>A device template contains information such as device family, a list of SD-WAN features supported, and the number of links supported.</p> <p><b>NOTE:</b> vSRX as SD-WAN spoke in AWS template supports cloud spoke site for AWS VPC.</p>
<b>Cloud Information</b>	
Region	<p>Select the region to which the site belongs. The regions in CSO are mapped to the regions in the AWS account.</p> <p>Example: Ohio</p>
VPC ID	<p>Enter the VPC ID from the AWS account.</p> <p>To obtain VPC ID:</p> <ol style="list-style-type: none"> <li>1. Log in to your AWS account.</li> <li>2. Search for the VPC service.</li> <li>3. Click the VPC dashboard.</li> <li>4. Select a VPC ID.</li> </ol> <p>Ensure that the VPC is connected to an Internet gateway.</p> <p>To check whether VPC is attached:</p> <ol style="list-style-type: none"> <li>1. Log in to your AWS account.</li> <li>2. Search for the VPC service.</li> <li>3. Click the Internet Gateway dashboard.</li> <li>4. Check whether the VPC state is <b>attached</b>.</li> </ol> <p>Example: vpc-6d810314</p>

Table 27: Fields on the Add Cloud Spoke Site Page (continued)

Field	Description
Management Subnet	<p>Specify whether CSO must create a new subnet or use an existing subnet from the AWS account. The management subnet of vSRX is used to push the initial stage-1 configuration. The following options are available:</p> <ul style="list-style-type: none"> <li>• Use an existing subnet in AWS account</li> <li>• Create new</li> </ul>
IP Prefix	<p>Enter the management IP prefix. The first four IP addresses in the subnet are reserved by AWS. For example, IP addresses x.x.x.0/x through x.x.x.3/x are always reserved by AWS. Hence, provide an IP address prefix other than the reserved IP address prefix.</p> <p>Example: 105.0.1.5/24</p>
<b>Device Information</b>	
Activation Code	<p>Enter the activation code of the primary device that your service provider supplied for the device. If you do not want to specify an activation code, on the Template Settings page, disable the ACTIVATION_CODE_ENABLED field and save the changes.</p>
<b>WAN Links</b>	
WAN_0 (ge-0/0/0) WAN_1 (ge-0/0/1)	<p>Select the check boxes to configure the WAN links. You can configure up to two WAN links per site that support SD-WAN.</p>
Link Type	<p>Displays the connection type for WAN underlays. Only Internet link is supported.</p>
Egress Bandwidth	<p>Enter the maximum bandwidth (in Mbps) to be allowed for a specific WAN link.</p>
Address Assignment	<p>Select the method of assigning an IP address to the WAN link—DHCP or STATIC.</p> <ul style="list-style-type: none"> <li>• If you select DHCP, the IP address is provided by using the DHCP server of the service provider of the WAN link.</li> <li>• If you select STATIC, you must provide the IP address prefix and the gateway address for the WAN link.</li> </ul>
Static IP Prefix	<p>If you configure the address assignment method as STATIC, enter the private IPv4 address of the WAN link from the subnet. For example, if the IPv4 CIDR address is 105.0.2.0/24 for a WAN interface in the AWS account, then enter any IP address within the subnet. The first four IP addresses in the subnet are reserved by AWS. Hence, provide an IP prefix other than the reserved IP prefix.</p> <p>Example: 105.0.2.12/24</p>

Table 27: Fields on the Add Cloud Spoke Site Page (continued)

Field	Description
Gateway IP	<p>If you configured the address assignment method as STATIC, enter the IPv4 address for the gateway of the WAN service provider. Typically, the first IP address in the subnet is selected for gateway IP address.</p> <p>Example: 105.0.2.1</p>
Elastic IP	<p>Elastic IP address is a public, static IPv4 address designed for dynamic cloud computing. The public IP address is mapped to the private subnet IP using one-to-one NAT. You must allocate the IP addresses based on the number of WAN links that are enabled. For example, If two WAN links are enabled, then you must allocate two elastic IP addresses.</p> <p>Example: 34.213.255.184</p>
<b>Advanced Settings</b>	Based on the connectivity requirement, the following fields are populated:
Provider	Enter the name of the service provider (SP).
Cost/Month	Enter the cost per month of the subscribed bandwidth in the specified currency. In bandwidth-optimized SD-WAN, this information is used to identify the least-expensive link to route traffic when multiple WAN links meet SLA profile parameters.
Enable Local Breakout	<p>Click the toggle button to enable or disable (default) local breakout on the WAN link.</p> <ul style="list-style-type: none"> <li>• If you enable this option, the WAN link can be used for local breakout. The decision of whether traffic breaks out locally from the site depends on the breakout profile that is referenced in the SD-WAN policy intent.</li> <li>• If you do not enable local breakout on at least one WAN link for a single CPE connection plan and at least two WAN links for a dual CPE connection plan, then local breakout is disabled for the site.</li> </ul>
Breakout Options	Select whether you want to use the WAN link for both breakout and WAN traffic (default) or only for breakout traffic.

Table 27: Fields on the Add Cloud Spoke Site Page (*continued*)

Field	Description
Autocreate Source NAT Rule	<p>If the WAN link is enabled for local breakout, you can click the toggle button to automatically create an interface-based source NAT rule on the WAN link. The automatically-created source NAT rule is implicitly defined and applied to the site and is not visible on the NAT Policies page.</p> <p>By default, this field is disabled.</p> <p><b>NOTE:</b> If this option is enabled for a WAN interface W1 during the site addition workflow, a series of NAT source rules are automatically created. Each automatically created NAT rule is from a zone to the WAN interface, with a translation of type interface. Each pair of [zone - interface] represents a rule-set.</p> <p>For example, the following zone to W1 interface rule-set might be created:</p> <pre>Zone1 --&gt; W1: Translation=Interface Zone2 --&gt; W1: Translation=Interface Zone3 --&gt; W1: Translation=Interface</pre> <p>To manually override any of these rules, you can create a NAT rule within a particular rule-set. For example, to use a source NAT pool instead of an interface for translation, create a NAT rule within this particular rule-set, that includes the relevant zone and WAN interface as the source and destination. For example:</p> <pre>Zone1 --&gt; W1 : Translation=Pool-2</pre> <p>The manually created NAT rule is placed at a higher priority than the corresponding automatically created NAT rule.</p> <p>You can also add other fields (such as addresses, ports, protocols, and so on) as part of the source or destination endpoints. For example:</p> <pre>Zone1, Port 56578 --&gt; W1: Translation=Pool-2</pre>
Preferred Breakout Link	<p>Click the toggle button to enable the WAN link as the preferred breakout link.</p> <p>If you disable this option, then the breakout link is chosen using ECMP from the available breakout links.</p>
Use for OAM Traffic	<p>If you have specified that the WAN link is connected to a hub, click the toggle button to enable sending the OAM traffic over the WAN link.</p> <p>This WAN link is then used to establish the OAM tunnel.</p>
Overlay Tunnel Type	<p>Select the mesh overlay tunnel type—GRE and GRE_IPSEC.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>



Table 27: Fields on the Add Cloud Spoke Site Page (*continued*)

Field	Description
Overlay Peer Device	Displays the peer hub device to which the site is connected.
Overlay Peer Interface	Select the interface name of the hub device to which the WAN link of the site is connected.
Backup Link	<p>Select a backup link through which traffic can be routed when the primary links are unavailable. You cannot select the default link as the backup link. Note that you cannot assign the backup link for exclusive breakout traffic (the <b>Use only for breakout traffic</b> option). If local breakout is enabled for the site, the breakout traffic is also routed through the backup link when the breakout link is not available.</p> <p>When a primary link comes back online, CSO monitors the performance on the primary link and when the primary link meets the SLA requirements, the traffic is switched back to the primary link. However, note that the SLA data is not monitored for the backup link.</p>
Default Links	<p>Select the default links that must be used for routing traffic. The site can have multiple default links to the hub site as well as to the Internet.</p> <p>Default links are used primarily for overlay traffic but can be used for local breakout traffic as well. A default link cannot be used exclusively for local breakout traffic. The default link is optional and in case it is not chosen, all links are used through equal-cost multipath (ECMP).</p>
<b>Management Connectivity</b>	
IP Prefix	<p>Enter an IPv4 address prefix for the loopback interface on the CPE device. The IP address prefix must be a /32 IP address prefix and must be unique across the entire management network. If you do not specify an IPv4 address prefix, CSO automatically assigns the IP prefix from the reserved pool 100.124.0.0/14</p> <p>Example: 192.0.2.10/32</p>
<b>LAN</b>	Add at least one LAN segment.
LAN Segment	<p>Displays the LAN segment that you configure on the switch.</p> <p>To add a LAN segment, click the + icon on the top, right corner of the LAN table. The Add LAN Segment page appears. See <a href="#">Table 28 on page 97</a>.</p>

Table 28: Fields on the Add LAN Segment Page

Field	Description
<b>Add LAN Segment</b>	

Table 28: Fields on the Add LAN Segment Page (*continued*)

Field	Description
Name	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters. No spaces are allowed and the maximum length is 15 characters.</p>
Department	<p>Select a department to which the LAN segment is to be assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You group LAN segments as departments for ease of management and for applying policies at the department-level.</p>
Gateway Address/Mask	Enter a valid gateway IP address and mask for the LAN segment; for example, 192.0.2.8/24.
CPE Ports	<p>Click the toggle button to include or exclude the CPE in the LAN segment. When you include the CPE in the LAN segment:</p> <ul style="list-style-type: none"> <li>• CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> <li>• The <b>Switch Ports</b> field is disabled. CSO automatically assigns LAN ports on the switch device and creates the same LAN segment on the switch.</li> </ul> <p>If you exclude the CPE from the LAN segment, you must specify the switch ports that connect with the LAN in the <b>Switch Ports</b> field. CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.</p> <p><b>NOTE:</b> You can select only one port if the CPE is an SRX Series device.</p>

## RELATED DOCUMENTATION

[Provisioning a Cloud Spoke Site in AWS VPC | 99](#)
[About the Sites Page | 55](#)
[About the Site Groups Page | 225](#)

## Provisioning a Cloud Spoke Site in AWS VPC

### IN THIS SECTION

- Add a Cloud Spoke Site | 99
- Download the Cloud Formation Template | 100
- Provision the Device on AWS Server | 101
- Activate the Device | 102

Use the following high-level steps to provision a vSRX cloud spoke site in Amazon Web Services (AWS) virtual private cloud (VPC).

Before you begin:

- Set up your Amazon Web Services (AWS) account.
- Identify the virtual private cloud (VPC) in which the AWS spoke site must be provisioned.
- Install licenses to use vSRX features. Choose any of the following AWS vSRX Image Licenses.
  - Bring Your Own License (BYOL)— If you plan to use a BYOL, then you must install the license on the device before deploying CSO SD-WAN functionality. See <https://aws.amazon.com/marketplace/pp/B01LYWCGDX>.
  - License included. See <https://aws.amazon.com/marketplace/pp/B01NAUWN0G>.
- Ensure that you have the supported software version for the AWS spoke.
- Reserve two elastic IP (public IP) addresses on AWS.

To set up and monitor your network:

### Add a Cloud Spoke Site

To add a cloud spoke site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add > Add Cloud Spoke**.

The **Add On-Premise Spoke Site for *Tenant-Name*** page appears.

3. Specify the site information such as, site name, AWS region, VPC ID, management subnet, IP prefix and click **Next**.
4. Specify vSRX as SD-WAN spoke in AWS as the device template.

**NOTE:**

- Only hub-and-spoke topology is supported for AWS cloud spoke site.
- Only Internet link is supported for WAN underlay connections.

5. Provide the WAN details and click **Next**.

The WAN traffic page appears, displaying a set of values for the WAN link configuration.

6. Specify additional requirements and click **Next**.
7. Specify LAN segment information and click **Next**.
8. In the **Summary** tab, check the configuration and click **Edit** to modify the settings.
9. Click **OK** to save the changes.

The new cloud spoke site that you created appears in the Sites page.

## Download the Cloud Formation Template

To download the cloud formation template:

1. Click **Resources > Devices**.

The Devices List page appears.

2. Select the device and click **Cloud Info Template**.

The Cloud Info Template page appears.

3. Click **Download** to download the cloud formation template.

The template is downloaded to your local computer in JSON format.

## Provision the Device on AWS Server

CSO creates cloud formation template with stage-1 configuration bundled in JSON format. You must download this template and then upload to AWS to provision the vSRX. The cloud formation template creates the required resources such as subnet, interface, vSRX and so on and applies the stage-1 configuration.

To provision the device on AWS server:

1. Log in to your AWS account.
  - If you have already logged in to your AWS account, the Create Stack page appears.
  - If you are not logged into your AWS account, a new Web page opens in your browser, displaying the AWS login information. Log in to your AWS account.

**TIP:** If you do not see the Create Stack page when you log in to or access your AWS account, then search for CloudFormation service.

The Create Stack page appears.

2. Select **CloudFormation > Stacks > Create Stack > Upload a template to Amazon S3**.
3. Click **Choose File** and select the cloud formation template that you downloaded in JSON format .
4. Click **Next**.
5. Specify the Stack name. For example, Oregonstack.
6. In the Parameters section, specify the KeyName for your EC2 instance.
7. Click **Next**.
8. Select **I acknowledge that AWS CloudFormation might create IAM Resources**.
9. Click **Create**.

The Create Stack pages displays a list of existing stacks and indicates that it is creating the stack that you requested. The create stack process takes up to 30 minutes. if the process does not complete in 30 minutes, a timeout occurs and you need to retry the process.

## Activate the Device

To activate the device:

1. After the create stack process is complete, return to the Customer Portal and click **Next**.

The Activate Device page displays a status indicating that CSO is detecting the provisioning agent. This process takes up to 30 minutes. If the process does not complete in 30 minutes, a timeout occurs and you need to retry the process.

**NOTE:** You need not download the cloud formation template again. You can log in to the Customer Portal, access the Activate Device page, enter the activation code and click **Next**. After the CREATE\_COMPLETE message is displayed on the AWS server, click Next on the Activate Device page to proceed with device activation.

If the spoke on AWS has been spawned successfully on AWS, it will contact CSO through outbound SSH connection. The device is detected and normal ZTP process is triggered. The rest of the workflow is consistent with the normal on-premise workflow.

On Device Activation page, the device is activated through the following steps:

- Detecting the device
- Applying stage-one configuration to the device
- Bootstrapping of device
- Activating the device

After each successful step, you can see a green check mark. If any of these steps fails, a red exclamation mark appears.

2. After the activation process is complete, click **OK**.

The Sites page appears. To see the device activation status, hover over the device icon on the Sites page.

## RELATED DOCUMENTATION

[Adding Cloud Spoke Sites for SD-WAN Deployment](#) | 91

[vSRX Deployment Guide for AWS](#)

## Manually Adding On-Premise Spoke Sites

An on-premise site can be added with one WAN capability (SD-WAN or Next Gen Firewall), LAN capability, or both WAN and LAN capabilities.

**NOTE:** The WAN and LAN capabilities that are displayed in the Add On-premise Spoke Site page are filtered based on the service types that are assigned to the tenant.

For more information on adding an on-premise spoke site with the following capabilities:

- WAN capability as SD-WAN, see [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103](#).
- WAN capability as Next Gen Firewall, see [“Adding a Standalone Next Generation Firewall Site” on page 187](#).
- WAN capability as SD-WAN and LAN capability, see [“Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities” on page 121](#).
- WAN capability as Next Gen Firewall and LAN capability, see [“Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities” on page 155](#).
- Only LAN capability, see [“Add an On-Premise Spoke Site with LAN Capability” on page 141](#).

## Add an On-Premise Spoke Site with SD-WAN Capability

An on-premise spoke represents an endpoint that is part of customer premise equipment (CPE) at some physical location such as branch office or point of sale location. Typically, these points are connected using overlay connections to hub sites. You add an on-premise spoke site from the **Sites** page. The following device templates are supported for on-premise spoke sites:

- NFX150 as SD-WAN CPE
- NFX250 as SD-WAN CPE
- Dual NFX250 as SD-WAN CPEs
- SRX as SD-WAN CPE
- Dual SRX as SD-WAN CPEs
- SRX4x00 as SD-WAN CPE
- Dual SRX4x00 as SD-WAN CPEs

To add an on-premise spoke site with only SD-WAN capability:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke (Manual)**.

The **Add On-Premise Spoke Site for *Tenant-Name*** page appears.

3. Complete the configuration settings according to the guidelines provided in [Table 29 on page 104](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. (Optional) You can review the configuration in the **Summary** tab and modify the settings, if required.

5. Click **OK**.

You are returned to the Sites page and a message indicating that the site creation job was triggered is displayed. You can click the job ID link to view the progress of the job. After the job is completed successfully, a confirmation message is displayed and the site that you added is displayed on the Sites page.

**Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability**

Field	Description
<b>General</b>	
<b>Site Information</b>	
Site Name	Enter a unique name for the site. You can use alphanumeric characters and hyphen (-); the maximum length is 32 characters.
Site Group	Select a site group to which you want to assign the site.
<b>Site Capabilities</b>	
WAN Capabilities	Select <b>SD-WAN</b> to include SD-WAN capability in the on-premise spoke site.
LAN Capabilities	You need not select this option because you are creating an on-premise spoke site with only SD-WAN capability.
<b>Configuration</b>	



Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
Primary Provider Hub	Select the primary hub site to which this spoke site must connect.
Secondary Provider Hub	<p>Select the secondary hub site to which this site must connect.</p> <p>This site connects to the secondary data hub site when the primary data hub is not reachable.</p>
Primary Enterprise Hub	Select the enterprise hub with which you want to connect the spoke site. If you specify an enterprise hub, then the initial site-to-site traffic as well as the central breakout (backhaul) traffic (if applicable) is sent through the enterprise hub instead of the hub site.
Secondary Enterprise Hub	<p>Select the secondary enterprise hub for this spoke site.</p> <p>The spoke site connects with secondary enterprise hub when the primary enterprise hub is not reachable.</p>
<b>On-Demand Mesh Threshold</b>	
Threshold for Tunnel Creation	<p>Enter the maximum number of sessions closed between the connected sites in a duration of two minutes at which full mesh is created between the two sites.</p> <p>The default value is 5.</p> <p>For example, if you specify the number of sessions as 5, dynamic mesh tunnels are created if the number of sessions closed between two spoke sites in 2 minutes exceeds 5.</p>
Threshold for Tunnel Deletion	<p>Enter the number of sessions closed between the connected sites in a duration of 15 minutes below which full mesh is deleted between the two sites.</p> <p>The default value is 8.</p> <p>For example, if you specify the number of sessions closed as 8, dynamic mesh tunnels are deleted if the number of sessions closed is lesser than or equal to 8.</p>
<b>Address and Contact Information</b>	
Street Address	Enter the street address of the site.
City	Enter the city where the site is located.
State/Province	Select the state or province where the site is located.
ZIP/Postal Code	Enter the postal code for the site.

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (continued)

Field	Description
Country	<p>Select the country where the site is located.</p> <p>Click the <b>Validate</b> button to verify the address.</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address is verified. You can click the <b>View location on a map</b> link to see the address location.</li> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed .</li> </ul>
Contact Name	Enter the name of the contact person for the site.
Email	Enter the e-mail address of the contact person for the site.
Phone	Enter the phone number of the contact person for the site.
<b>Advanced Configuration</b>	
Name Server IP List	<p>Specify one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on..</p> <p>DNS servers are used to resolve hostnames into IP addresses.</p>
NTP Server	<p>Specify the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers.</p> <p>Example: ntp.example.net</p> <p>The site must have DNS reachability to resolve the FQDN during site configuration.</p>
Select Timezone	Select the time zone of the site.
<b>WAN</b>	
<b>Device Template</b>	
Device Series	<p>Select the device series to which the CPE belongs—SRX, NFX150, or NFX250.</p> <p>Based on the device series that you select, the supported device templates (containing information for configuring devices) are listed.</p> <p>Select a device template for the selected device series.</p>
<b>Device Information</b>	
<b>NOTE:</b> Some fields in this section are displayed only if you select a dual CPE device template.	

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (continued)

Field	Description
Device Model	For NFX150 devices, select the device model number.
Serial Number	For a single CPE device, enter the serial number of the CPE device. Serial numbers are case-sensitive.
Device Redundancy	For dual CPE device templates, displays Enabled indicating that redundancy is enabled. You cannot modify this field.
Primary Serial Number	For a dual CPE device, enter the serial number of the primary CPE device. The serial number is case sensitive.
Secondary Serial Number	For a dual CPE device, enter the serial number of the secondary CPE device. The serial number is case sensitive.
Auto Activate	<p>Click the toggle button to enable or disable automatic activation of the CPE device.</p> <p>When you enable this field, zero-touch provisioning (ZTP) of the CPE device is automatically triggered after the site is added to CSO.</p> <p>The device template that you select determines whether this option is enabled or disabled by default.</p>
Activation Code	If the automatic activation of the device is disabled, enter the activation code to manually activate the device. The activation code is provided by the administrator who adds the site.
Primary Activation Code	For a dual CPE device, if the automatic activation of the device is disabled, enter the activation code to manually activate the primary CPE device..
Secondary Activation Code	For a dual CPE device, if the automatic activation of the device is disabled, enter the activation code to manually activate the secondary CPE device.
Boot Image	<p>Select the boot image from the drop-down list if you want to upgrade the image for the CPE device.</p> <p>The boot image is the latest build image uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the procedure to upgrade the device image. The boot image (NFX or SRX) is populated based on the device template that you have selected while creating a site. See <i>Uploading a Device Image</i>.</p>

WAN Links

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>WAN_0</b> <b>WAN-Interface-Name</b>	<p>This field is enabled by default.</p> <p>Enter parameters related to WAN_0. Fields marked with an asterisk (*) must be configured to proceed.</p>
<b>Link Type</b>	Select whether the link would be an MPLS link or Internet link.
<b>Access Type</b> (NFX150, NFX250, and SRX300 line of Services Gateways)	<p>If you select Internet as the link type, select the access type for the underlay link—Ethernet, LTE, ADSL, or VDSL.</p> <p>You can select the LTE, ADSL, or VDSL access type only for one WAN link.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>You cannot configure an access type (LTE, ADSL, and VDSL) if you are using the Dual SRX and Dual NFX device templates. By default, Ethernet is configured as the access type for the underlay link.</li> <li>As of Release 5.2.0, CSO supports only LTE, VDSL, and ADSL access types on SRX300 line of Services Gateways. SRX300 does not support ADSL access type.</li> </ul>
<b>PPPoE</b>	<p>Point-to-Point Protocol over Ethernet (PPPoE) connects multiple hosts on an Ethernet LAN to a remote site through a single Customer Premises Equipment (CPE) device.</p> <p>PPPoE field is available only if the access type is ADSL, VDSL, or Ethernet for SRX and NFX device series.</p> <p>Click the toggle button to enable PPPoE for an SD-WAN link. By default, PPPoE is disabled.</p> <p>If you have enabled PPPoE, you must specify the PPPoE parameters (username, password, and authentication protocol) while configuring a site. For more information, see <i>PPPoE Settings</i> section in this table.</p> <p><b>NOTE:</b> For on-premise SD-WAN sites with Dual CPE devices, PPPoE is supported when the access type is Ethernet, and not supported when the access type is VDSL or ADSL.</p>
<b>Egress Bandwidth</b>	<p>Enter the maximum bandwidth, in Mbps, allowed on the WAN link.</p> <p>Range: 1 through 10,000.</p>
<b>Address Assignment</b>	<p>Select the method of assigning an IP address to the WAN link—DHCP or STATIC.</p> <p>If you select STATIC, you must provide the IP address prefix and the gateway address for the WAN link.</p>
<b>Static IP Prefix</b>	If you configured the address assignment method as STATIC, enter the IP address prefix of the WAN link.

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>Gateway IP</b>	If you configured the address assignment method as STATIC, enter the IP address of the gateway of the WAN service provider.
<b>WAN Link (Primary or Secondary)</b>	For dual CPE device templates, displays whether the WAN link is a primary link or a secondary link. You cannot modify this field.
<i>Advanced Settings</i>	
<b>Provider</b>	<p>Enter the name of the service provider (SP) providing the WAN service.</p> <p>Only alphanumeric characters and '_', '@', '.', '/', '#', '&amp;', '+', and '-' are allowed. The maximum number of characters allowed is 15.</p>
<b>Cost/Month</b>	<p>Enter the cost for using the WAN link per month and select the currency in which the cost is indicated from the adjacent drop-down list.</p> <p>Range: 1 through 10,000.</p> <p>In bandwidth-optimized SD-WAN, CSO uses this information to identify the least-expensive link to route traffic when multiple WAN links meet SLA profile parameters.</p>
<b>Enable Local Breakout</b>	<p>Click the toggle button to enable local breakout on the WAN link. By default, local breakout is disabled.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you enable this option, the WAN link can be used for local breakout. The decision of whether traffic breaks out locally from the site depends on the breakout profile that is referenced in the SD-WAN policy intent.</li> <li>• If you do not enable local breakout on at least one WAN link for a single CPE connection plan and at least two WAN links for a dual CPE connection plan, then local breakout is disabled for the site.</li> </ul>
<b>Breakout Options</b>	Select whether you want to use the WAN link for both breakout and WAN traffic (default) or only for breakout traffic.

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>Autocreate Source NAT Rule</b>	<p>Click the toggle button to enable or disable the automatic creation of source NAT rules. By default, this field is enabled when local breakout is enabled on the WAN link.</p> <p><a href="#">Table 30 on page 117</a> explains how source NAT rules are automatically created on the WAN link. The automatically-created source NAT rules are implicitly defined and applied to the site and is not visible on the NAT Policies page.</p> <p><b>NOTE:</b> You can manually override automatically created NAT rules, by creating a NAT rule within a particular rule-set. For example, to use a source NAT pool instead of an interface for translation, create a NAT rule within this particular rule-set, that includes the relevant department zone and WAN interface as the source and destination. For example:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-2</pre> <p>The manually created NAT rule is placed at a higher priority than the corresponding automatically created NAT rule.</p> <p>You can also add other fields (such as addresses, ports, protocols, and so on) as part of the source or destination endpoints. For example:</p> <pre>Dept-Zone1, Port 56578 --&gt; W1: Translation=Pool-2</pre>
<b>Translation</b>	<p>Select the type of NAT to use for the traffic on the WAN link:</p> <ul style="list-style-type: none"> <li>● <b>Interface</b>—Use interface-based NAT, which is the default.</li> <li>● <b>Pool</b>—Use pool-based NAT. If you select this option, you must specify the IP addresses that are to be used for the NAT pool.</li> </ul> <p><b>NOTE:</b> No NAT is performed for tenant-owned public IP addresses.</p>
<b>IP Addresses</b>	<p>For pool-based NAT, enter one or more IP addresses, subnets, or an IP address range. Separate multiple IP addresses by using commas and use a hyphen to denote a range; for example, 192.0.2.1-192.0.2.50.</p>
<b>Preferred Breakout Link</b>	<p>Click the toggle button to enable the WAN link as the most preferred breakout link.</p> <p>If you disable this option, then the breakout link is chosen using ECMP from the available breakout links.</p>

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>BGP Underlay Options</b>	<p><b>NOTE:</b> This setting can be configured only if the address assignment is static and local breakout is enabled.</p> <p>Click the toggle button to enable BGP underlay routing.</p> <p>When you enable BGP underlay routing, route advertisements to the primary PE node and, if configured, the secondary PE node occur as follows:</p> <ul style="list-style-type: none"> <li>• CSO advertises the WAN interface subnet.</li> <li>• If you configured pool-based translation, CSO advertises the NAT address pool.</li> </ul> <p><b>NOTE:</b> If underlay BGP is enabled for a WAN link, then the routes learnt from BGP are installed for local breakout; CSO does not generate the static default route.</p>
<b>Primary Neighbor</b>	Displays the IP address that you entered for the gateway for the WAN link.
<b>Secondary Neighbor</b>	<p>If you want to provide PE resiliency, you can configure a secondary PE node.</p> <p>Enter the IP address of the secondary PE node.</p> <p><b>NOTE:</b> If the primary PE node goes down, then the secondary PE is used as the next hop. When the primary PE comes back up, the route next hops are changed to the primary PE.</p>
<b>eBGP Peer-AS-Number</b>	<p>Enter the autonomous system (AS) number for the external (EBGP) peer.</p> <p><b>NOTE:</b> If the peer AS number is not configured or the peer AS number that is configured is the same as that of the CPE site, then the BGP type is assumed to be internal BGP (IBGP).</p>
<b>Authentication</b>	<p>Select the BGP route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—Indicates that no authentication should be used. This is the default.</li> <li>• <b>Use MD5</b>—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>Advertise Public LAN Prefixes</b>	<p>Click the toggle button to enable the advertisement of public LAN prefixes. This field is disabled by default.</p> <p>If the tenant has a public IP address pool configured and you enable the advertisement of public LAN prefixes, then for LAN segments that are created with a subnet that falls under the tenant public IP address pool, CSO advertises the LAN subnet to the BGP underlay.</p> <p><b>NOTE:</b> When public LAN advertisement is enabled for the WAN link, public LAN prefixes are advertised through the BGP underlay towards MPLS or the Internet. If a site has two versions of the route installed for the same LAN prefix in the overlay and underlay, the overlay routes are always preferred over underlay.</p>
<b>Use For Fullmesh</b>	<p>Click the toggle button to specify whether the WAN link can be a part of a fullmesh topology.</p> <p>A site can have a maximum of three links enabled for meshing.</p>
<b>Mesh Overlay Link Type</b>	<p>When <b>Use for Fullmesh</b> field is enabled, select the type of mesh overlay link—GRE and GRE_IPSEC.</p> <p>If the link type is Internet, by default, the value for mesh overlay link type is GRE_IPSEC.</p> <p>If the link type is MPLS, select one of the following options:</p> <ul style="list-style-type: none"> <li>• GRE-IPSEC</li> <li>• GRE</li> </ul>
<b>Mesh Tag</b>	<p>When the <b>Use for Fullmesh</b> field is enabled, enter the tag to be associated with the WAN link for creating tunnels. You can assign only one tag to the link.</p> <p>Matching mesh tags is one of the criteria used to form tunnels between sites that support meshing.</p> <ul style="list-style-type: none"> <li>• For an on-premise spoke site, you can select one mesh tag.</li> <li>• For a enterprise hub you can select one or more mesh tags.</li> </ul> <p>For more information about mesh tags, see <a href="#">“Mesh Tags Overview” on page 245</a>.</p>
<b>Connects to Hubs</b>	<p>Click the toggle button to specify that the WAN link of the site connects to a hub.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• For sites with a single CPE, you must enable at least one WAN link to connect to the hub so that OAM traffic can be transmitted.</li> <li>• For sites with a dual CPE, you must enable at least one WAN link per device to connect to the hub so that OAM traffic can be transmitted.</li> </ul>



Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
<b>Use for OAM Traffic</b>	<p>If you have specified that the WAN link is connected to a hub, click the toggle button to enable sending the OAM traffic over the WAN link.</p> <p>This WAN link is then used to establish the OAM tunnel.</p>
<b>Overlay Tunnel Type</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and only a one provider hub (primary) is specified.</p> <p>Select the mesh overlay tunnel type (GRE and GRE_IPSEC) of the tunnel to the hub.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
<b>Overlay Peer Device</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and only a one provider hub (primary) is specified.</p> <p>Displays the peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and only a one provider hub (primary) is specified.</p> <p>Select the interface name of the hub device to which the WAN link of the site is connected.</p>
<b>Overlay Tunnel Type 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the mesh overlay tunnel type (GRE and GRE_IPSEC) for the tunnel to the primary hub.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
<b>Overlay Peer Device 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Displays the primary peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface 1</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the interface name of the primary hub device to which the WAN link of the site is connected.</p>

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (continued)

Field	Description
<b>Overlay Tunnel Type 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the mesh overlay tunnel type (GRE and GRE_IPSEC) for the tunnel to the secondary hub.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
<b>Overlay Peer Device 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Displays the secondary peer hub device to which the site is connected.</p>
<b>Overlay Peer Interface 2</b>	<p>This field is displayed when the <b>Connects to Hubs</b> field is enabled and both primary and secondary hubs are specified.</p> <p>Select the interface name of the secondary hub device to which the WAN link of the site is connected.</p>
<b>Backup Link</b>	<p>Select a backup link through which traffic can be routed when the primary (other) links are unavailable. You can select any link other than the default links or links that are configured exclusively for local breakout traffic.</p> <p>When a primary link comes back online, CSO monitors the performance on the primary link and when the primary link meets the SLA requirements, the traffic is switched back to the primary link. However, SLA data is not monitored for the backup link.</p>
<b>Default Link</b>	<p>Select one or more links that will be used for routing traffic in the absence of matching SD-WAN policy intents. A site can have multiple default links to the hub site.</p> <p>Default links are used primarily for overlay traffic but can also be used for local breakout traffic. However, a default link cannot be used exclusively for local breakout traffic. If you do not specify a default link, then equal-cost multipath (ECMP) is used to choose the link on which to route traffic.</p>

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
Data VLAN ID	<p>Enter a VLAN ID for the WAN link.</p> <p>Range: 0 through 4049 (4050 to 4094 is reserved by CSO).</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you are configuring more than one WAN link on the same physical interface, only one WAN link can be untagged; for the remaining WAN links, you must configure a VLAN ID.</li> <li>• A combination of tagged and untagged on the same physical interface is supported only for single CPE devices.</li> </ul>
WAN_1 WAN-Interface-Name	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 WAN-Interface-Name for an explanation of the fields</p>
WAN_2 WAN-Interface-Name	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 WAN-Interface-Name for an explanation of the fields</p>
WAN_3 WAN-Interface-Name	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 WAN-Interface-Name for an explanation of the fields</p>
<i>Management Connectivity</i>	
IP Prefix	<p>Enter an IPv4 address prefix for the loopback interface on the CPE device.</p> <p>The IP address prefix must be a /32 IP address prefix and must be unique across the entire management network. If you do not specify an IPv4 address prefix, CSO automatically assigns the IP prefix from the reserved pool 100.124.0.0/14.</p> <ul style="list-style-type: none"> <li>• For NFX150 and NFX250 devices, if the USE_SINGLE_SSH_TO_NFX parameter is disabled in the device template, then enter the IP address prefix as /29 or lower based on the number of VNFs.</li> <li>• For all other devices, enter the IP address prefix as /32.</li> </ul>
<i>PPPoE Settings</i>	

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
Username	Enter the username for the CPE device. For example, ISP-ANetwork.
Password	Enter the password for the CPE device.
Authentication Protocol	Select Password Authentication Protocol (PAP) or Challenge Handshake Authentication Protocol (CHAP) for authentication.
<b>LAN</b>	
Add LAN Segment	<p>You must add at least one LAN segment for the on-premise site. To add a LAN segment:</p> <ol style="list-style-type: none"> <li>1. Click the + icon. The Add LAN Segment page appears.</li> <li>2. Complete the configuration settings according to the guidelines provided in <a href="#">Table 31 on page 118</a>.</li> <li>3. Click <b>Save</b>. The LAN segment is added and you are returned to the Add Site for <i>Tenant-Name</i> page.</li> </ol>
<b>Additional Configuration</b>	

Table 29: Fields on the Add Site for Tenant-Name Page With only SD-WAN Capability (*continued*)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>

Table 30: Automatic Creation of Source NAT Rules

Autocreate Source NAT Rule	Translation	NAT Rules Creation
Disabled	Not applicable (No NAT)	None.
Enabled	Interface-Based (Default)—CSO creates interface-based NAT rules.	<p>Source NAT rules are automatically created, with each rule from a department zone to the WAN interface, with a translation of type interface. Each pair of [zone - interface] represents a rule-set.</p> <p>For example, the following department zone to (WAN link) W1 interface rule-set might be created:</p> <pre>Dept-Zone1 --&gt; W1: Translation=Interface Dept-Zone2 --&gt; W1: Translation=Interface Dept-Zone3 --&gt; W1: Translation=Interface</pre>

Table 30: Automatic Creation of Source NAT Rules (*continued*)

Autocreate Source NAT Rule	Translation	NAT Rules Creation
Enabled	Pool-Based—CSO automatically creates pool-based NAT rules.	<p>NAT source rules are automatically created, with each rule from a department zone to the WAN NAT pool with a translation of type pool.</p> <p>For example, a source NAT rule from department zone to NAT pool might be created:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-1 Dept-Zone2 --&gt; W1 : Translation=Pool-1</pre>

Table 31: Fields on the Add LAN Segment page

Field	Description
<b>Name</b>	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length allowed is 15 characters.</p>
<b>Type</b>  <b>NOTE:</b> This field is displayed only for LAN segments associated with enterprise hub sites.	<p>Select the type of LAN segment:</p> <ul style="list-style-type: none"> <li>• <b>Directly Connected (default)</b>—Indicates that the LAN segment is directly connected to the site.</li> <li>• <b>Dynamic Routed</b>—Indicates that the LAN segment is not directly connected to the site and is reachable by using a dynamic route. If you select this option, you must specify the dynamic routing information.</li> </ul>
<b>VLAN ID</b>	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>
<b>Department</b>	<p>Select a department to which the LAN segment is assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You can group LAN segments as departments for ease of management and for applying policies at the department-level. For LAN segments that are dynamically routed, you can assign only a data center department.</p>
<b>Protocol</b>	<p>For dynamically routed LAN segments, select the routing protocol (BGP or OSPF) to be used by the data center department to learn routes from the data center.</p>

Table 31: Fields on the Add LAN Segment page (*continued*)

Field	Description
<b>Advertise LAN Prefix</b>	<p>For dynamically routed LAN segments, click the toggle button to advertise the LAN prefix of the SD-WAN spoke site to the data center through the data center department associated with the enterprise hub.</p> <p>By default, the Advertise LAN Prefix field is disabled.</p> <p><b>NOTE:</b> You must avoid overlapping IP addresses between the SD-WAN LAN network and the datacenter network.</p>
<b>Gateway Address/Mask</b>	<p>Enter a valid gateway IP address and mask for the LAN segment. This address will be the default gateway for endpoints in this LAN segment.</p> <p>For example: 192.0.2.8/24.</p>
<b>DHCP</b>	<p>For directly connected LAN segments, click the toggle button to enable DHCP (default).</p> <p>You can enable DHCP if you want to assign IP addresses by using a DHCP server or disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, additional fields appear on the page.</p>
Additional fields related to DHCP	
<b>Address Range Low</b>	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
<b>Address Range High</b>	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
<b>Maximum Lease Time</b>	<p>Specify the maximum duration (in seconds) for which a client can request for and hold a lease on the DHCP server.</p> <p>Default: 1440</p> <p>Range: 0 through 4,294,967,295 seconds.</p>
<b>Name Server</b>	<p>Specify one or more IPv4 addresses of the DNS server.</p> <p>To enter more than one DNS server address, type the address, press Enter, and then type the next address.</p> <p><b>NOTE:</b> DNS servers are used to resolve hostnames into IP addresses.</p>

Table 31: Fields on the Add LAN Segment page (*continued*)

Field	Description
<b>CPE Ports</b>	<ul style="list-style-type: none"> <li>For sites with LAN capability, click the toggle button to include or exclude the CPE in the LAN segment.</li> <li>When you include the CPE in the LAN segment:             <ul style="list-style-type: none"> <li>CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> <li>The <b>Switch Ports</b> field is disabled. CSO automatically assigns LAN ports on the Switch device and creates the same LAN segment on the Switch.</li> </ul> </li> <li>If you click to exclude the CPE from the LAN segment, you must specify the switch ports that connect with the LAN in the <b>Switch Ports</b> field. CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.</li> </ul> <p><b>NOTE:</b> You can select only one port if the CPE is a physical SRX Series device.</p> <ul style="list-style-type: none"> <li>For sites without LAN capability, the CPE Ports field is disabled and the CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> </ul>
<b>Switch Ports</b>  <b>NOTE:</b> This field is displayed only when LAN capability is selected for the enterprise hub.	<p>If you disable the CPE ports field, select ports on the switch to be part of the LAN segment. The Switch ports and CPE ports are mutually exclusive.</p> <p>Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</p>
<i>BGP Configuration</i>	
<b>NOTE:</b> This section is displayed only for dynamic routed LAN segments with BGP specified as the protocol.	
<b>Authentication</b>	<p>Select the BGP route authentication method to be used:</p> <ul style="list-style-type: none"> <li>None—Indicates that no authentication should be used. This is the default.</li> <li>Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
<b>Peer IP Address</b>	Enter the IP address of the BGP neighbor.
<b>Peer AS Number</b>	Enter the autonomous system (AS) number of the BGP neighbor.
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.



Table 31: Fields on the Add LAN Segment page (*continued*)

Field	Description
<i>OSPF Configuration</i>	
<b>NOTE:</b> This section is displayed only for dynamic routed LAN segments with OSPF specified as the protocol.	
<b>OSPF Area ID</b>	Specify the OSPF area identifier to be used for the dynamic route.
<b>Authentication</b>	<p>Select the OSPF route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• Password—Indicates that password-based authentication should be used. If you choose this option, you must specify the password. (This is the default).</li> <li>• Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> <li>• None—Indicates that no authentication should be used.</li> </ul>
<b>Password</b>	Enter the password to be used to verify the authenticity of OSPF packets.
<b>Confirm Password</b>	Retype the password for confirmation purposes.
<b>MD5 Auth Key ID</b>	<p>If you specified that MD5 should be used for authentication, enter the OSPF MD5 authentication key ID.</p> <p>Range: 1 through 255.</p>
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, enter an MD5 authentication key, which is used to verify the authenticity of OSPF packets.

## RELATED DOCUMENTATION

| [About the Sites Page](#) | 55

## Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities

You can add an on-premise spoke site in CSO by provisioning a CPE and a switch behind the CPE to provide SD-WAN and LAN capabilities to the site. See [“Switch Behind a CPE or Next Generation Firewall Overview” on page 61](#) for details.

To add a site with SD-WAN and LAN capabilities:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke (Manual)**.

The Add Site for *Tenant-Name* page appears.

3. Complete the configuration according to the guidelines provided in [Table 32 on page 123](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Review the configuration from the **Summary** tab.

(Optional) click the Edit links within the summary to go directly to a specific page of the wizard and modify the configured settings.

5. Click **OK** to add the site.

The site activation job is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the CPE and the switch. The CPE is activated first and then the process to activate the switch is initiated.

6. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

- If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

- a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.

- b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

- c. Copy the stage-1 configuration and log in to the console of the EX Series switch.

- d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

**Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities)**

Field	Description
<b>General</b>	
<b>Site Information</b>	
Site Name	Enter a unique name for the site. You can use alphanumeric characters and hyphen (-); the maximum length is 32 characters.
Site Group	Select a site group to which you want to assign the site.
<b>Site Capabilities</b>	
WAN Capabilities	Select <b>SD-WAN</b> to include SD-WAN capabilities in the spoke site.
LAN Capabilities	Select <b>LAN</b> to include SD-LAN capability in the spoke site.
<b>Configuration</b>	
Primary Provider Hub	Select the hub site (or primary hub site in case of multihoming) to which the spoke site must connect.
Secondary Provider Hub	Select the secondary hub site to which this site must connect.  This site connects to the secondary data hub site when the primary data hub is down.

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
Primary Enterprise Hub	Select the primary enterprise hub with which you want to connect the spoke site. If you specify a enterprise hub, then the initial site-to-site traffic as well as the central breakout (backhaul) traffic (if applicable) is sent through the enterprise hub instead of the hub site.
Secondary Enterprise Hub	Select the secondary enterprise hub for this spoke site.  The spoke site connects with secondary enterprise hub when the primary enterprise hub is down.
<b>On-Demand Mesh Threshold</b>	
Threshold for Tunnel Creation	Specify the threshold for the number of sessions (flows) closed (in a two-minute duration) between the on-premise spoke site and a destination site. When the number of sessions closed exceeds the specified threshold, a tunnel is created between the on-premise spoke site and the destination site.  The default value is 5.  For example, if you specify the number of sessions as 5, dynamic mesh tunnels are created if the number of sessions closed between two spoke sites in 2 minutes exceeds 5.
Threshold for Tunnel Deletion	Specify the threshold for the number of sessions closed (in a 15-minute duration) between the on-premise spoke site and a destination site. When the number of sessions closed is lower than the specified threshold, the tunnel between the on-premise spoke site and destination site is deleted.  The default value is 2.  For example, if you specify the number of sessions closed as 2, dynamic mesh tunnels are deleted if the number of sessions closed is lesser than or equal to 2.
<b>Address and Contact Information</b>	
Street Address	Enter the street address of the site.
City	Enter the city where the site is located.
State/Province	Select the state or province where the site is located.
ZIP/Postal Code	Enter the postal code for the site.

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
Country	<p>Select the country where the site is located.</p> <p>Click the <b>Validate</b> button to verify the address.</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address is verified. You can click the <b>View location on a map</b> link to see the address location.</li> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed .</li> </ul>
Contact Name	Enter the name of the contact person for the site.
Email	Enter the e-mail address of the contact person for the site.
Phone	Enter the phone number of the contact person for the site.
<b>Advanced Configuration</b>	
Name Server IP List	<p>Specify one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on..</p> <p>DNS servers are used to resolve hostnames into IP addresses.</p>
NTP Server	<p>Specify the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers.</p> <p>Example: ntp.example.net</p> <p>The site must have DNS reachability to resolve the FQDN during site configuration.</p>
Select Timezone	Select the time zone of the site.
<b>WAN</b>	
<b>Device Template</b>	
Device Series	<p>Select the device series to which the CPE belongs—SRX, NFX 150, and NFX 250.</p> <p>Based on the device series that you select, the supported device templates (containing information for configuring devices) are listed.</p> <p>Select a device template for the selected device series.</p>
<b>Device Information</b>	
Serial Number	Enter the serial number of the CPE device.

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
Auto Activate	<p>Click the toggle button to enable or disable automatic activation of the CPE device.</p> <p>When you enable this field, zero-touch provisioning (ZTP) of the CPE device is automatically triggered after the site is added to CSO.</p> <p>The device template that you select determines whether this option is enabled or disabled by default.</p>
Activation Code	<p>If you disable the Auto Activate field, enter the activation code for the CPE or firewall device.</p> <p>For information about activating a CPE or firewall device, see <a href="#">“Activating a CPE Device” on page 257</a>.</p>
Boot Image	<p>Select the boot image from the drop-down list if you want to upgrade the image for the CPE device.</p> <p>The boot image is the latest build image uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the procedure to upgrade the device image. The boot image is populated based on the device template that you have selected while creating a site. See <i>Uploading a Device Image</i>.</p>
WAN Links	
WAN_0 WAN-Interface-Name	<p>This field is enabled by default.</p> <p>Enter parameters related to WAN_0. Fields marked with an asterisk (*) must be configured to proceed.</p>
Link Type	Select whether the link would be an MPLS link or Internet link.
<b>Access Type</b> (NFX150, NFX250, and SRX300 line of Services Gateways)	<p>If you select Internet as the link type, select the access type for the underlay link—Ethernet, LTE, ADSL, or VDSL.</p> <p>You can select the LTE, ADSL, or VDSL access type only for one WAN link.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>You cannot configure an access type (LTE, ADSL, and VDSL) if you are using the Dual SRX and Dual NFX device templates. By default, Ethernet is configured as the access type for the underlay link.</li> <li>As of Release 5.2.0, CSO supports only LTE, VDSL, and ADSL access types on SRX300 line of Services Gateways. SRX300 does not support ADSL access type.</li> </ul>

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
PPPoE	<p>Point-to-Point Protocol over Ethernet (PPPoE) connects multiple hosts on an Ethernet LAN to a remote site through a single Customer Premises Equipment (CPE) device.</p> <p>PPPoE field is available only if the access type is ADSL, VDSL, or Ethernet for SRX and NFX device series.</p> <p>Click the toggle button to enable PPPoE for an SD-WAN link. By default, PPPoE is disabled.</p> <p>If you have enabled PPPoE, you must specify the PPPoE parameters (username, password, and authentication protocol) while configuring a site. For more information, see <i>PPPoE Settings</i> section in this table.</p> <p><b>NOTE:</b> For on-premise SD-WAN sites with Dual CPE devices, PPPoE is supported when the access type is Ethernet, and not supported when the access type is VDSL or ADSL.</p>
Egress Bandwidth	<p>Enter the maximum bandwidth (in Mbps) that the CPE or firewall allows over the WAN link.</p> <p>Range: 1 through 10,000.</p>
Address Assignment	<p>Select the method of assigning an IP address to the WAN link—DHCP or STATIC.</p> <ul style="list-style-type: none"> <li>• If you select DHCP, the IP address is provided by using the DHCP server of the service provider of the WAN link.</li> <li>• If you select STATIC, you must provide the IP address prefix and the gateway address for the WAN link.</li> </ul>
Static IP Prefix	<p>If you configured the address assignment method as STATIC, enter the IP address prefix of the WAN link.</p>
Gateway IP Address	<p>If you configured the address assignment method as STATIC, enter the IP address of the gateway of the WAN service provider.</p>
<b>Advanced Settings</b>	
Provider	<p>Enter the name of the service provider who is responsible for providing the WAN link.</p>
Cost/Month	<p>Enter the cost per month (in a specified currency) for the WAN link. Specify the currency from the adjacent drop-down list.</p> <p>Range: 1 through 10,000.</p> <p>In bandwidth-optimized SD-WAN, CSO uses this information to identify the least-expensive link to route traffic when multiple WAN links meet SLA profile parameters.</p>

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
Enable Local Breakout	<p>Click the toggle button to enable local breakout on the WAN link. By default, local breakout is disabled.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you enable this option, the WAN link can be used for local breakout. The decision of whether traffic breaks out locally from the site depends on the breakout profile that is referenced in the SD-WAN policy intent.</li> <li>• If you do not enable local breakout on at least one WAN link for a single CPE connection plan and at least two WAN links for a dual CPE connection plan, then local breakout is disabled for the site.</li> </ul>
Breakout Options	Select whether you want to use the WAN link for both breakout and WAN traffic (default) or only for breakout traffic.
Autocreate Source NAT Rule	<p>Click the toggle button to enable or disable the automatic creation of source NAT rules. By default, this field is enabled when local breakout is enabled on the WAN link.</p> <p><a href="#">Table 34 on page 136</a> explains how source NAT rules are automatically created on the WAN link. The automatically-created source NAT rules are implicitly defined and applied to the site and is not visible on the NAT Policies page.</p> <p><b>NOTE:</b> You can manually override automatically created NAT rules, by creating a NAT rule within a particular rule-set. For example, to use a source NAT pool instead of an interface for translation, create a NAT rule within this particular rule-set, that includes the relevant department zone and WAN interface as the source and destination. For example:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-2</pre> <p>The manually created NAT rule is placed at a higher priority than the corresponding automatically created NAT rule.</p> <p>You can also add other fields (such as addresses, ports, protocols, and so on) as part of the source or destination endpoints. For example:</p> <pre>Dept-Zone1, Port 56578 --&gt; W1: Translation=Pool-2</pre>
Translation	<p>Select the type of NAT to use for the traffic on the WAN link:</p> <ul style="list-style-type: none"> <li>• <b>Interface</b>—Use interface-based NAT, which is the default.</li> <li>• <b>Pool</b>—Use pool-based NAT. If you select this option, you must specify the IP addresses that are to be used for the NAT pool.</li> </ul> <p><b>NOTE:</b> No NAT is performed for tenant-owned public IP addresses.</p>



Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
<b>IP Addresses</b>	For pool-based NAT, enter one or more IP addresses, subnets, or an IP address range. Separate multiple IP addresses by using commas and use a hyphen to denote a range; for example, 192.0.2.1-192.0.2.50.
<b>Preferred Breakout Link</b>	Click the toggle button to enable the WAN link as the preferred breakout link.  If you disable this option, then the breakout link is chosen using ECMP from the available breakout links.
<b>BGP Underlay Options</b>	<b>NOTE:</b> This setting can be configured only if the address assignment is static and local breakout is enabled.  Click the toggle button to enable BGP underlay routing.  When you enable BGP underlay routing, route advertisements to the primary PE node and, if configured, the secondary PE node occur as follows: <ul style="list-style-type: none"> <li>• CSO advertises the WAN interface subnet.</li> <li>• If you configured pool-based translation, CSO advertises the NAT address pool.</li> </ul> <b>NOTE:</b> If underlay BGP is enabled for a WAN link, then the routes learnt from BGP are installed for local breakout; CSO does not generate the static default route.
<b>Primary Neighbor</b>	Displays the IP address that you entered for the gateway for the WAN link.
<b>Secondary Neighbor</b>	If you want to provide PE resiliency, you can configure a secondary PE node.  Enter the IP address of the secondary PE node.  <b>NOTE:</b> If the primary PE node goes down, then the secondary PE is used as the next hop. When the primary PE comes back up, the route next hops are changed to the primary PE.
<b>eBGP Peer-AS-Number</b>	Enter the autonomous system (AS) number for the external (EBGP) peer.  <b>NOTE:</b> If the peer AS number is not configured or the peer AS number that is configured is the same as that of the CPE site, then the BGP type is assumed to be internal BGP (IBGP).
<b>Authentication</b>	Select the BGP route authentication method to be used: <ul style="list-style-type: none"> <li>• <b>None</b>—Indicates that no authentication should be used. This is the default.</li> <li>• <b>Use MD5</b>—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
<b>Advertise Public LAN Prefixes</b>	<p>Click the toggle button to enable the advertisement of public LAN prefixes. This field is disabled by default.</p> <p>If the tenant has a public IP address pool configured and you enable the advertisement of public LAN prefixes, then for LAN segments that are created with a subnet that falls under the tenant public IP address pool, CSO advertises the LAN subnet to the BGP underlay.</p> <p><b>NOTE:</b> When public LAN advertisement is enabled for the WAN link, public LAN prefixes are advertised through the BGP underlay towards MPLS or the Internet. If a site has two versions of the route installed for the same LAN prefix in the overlay and underlay, the overlay routes are always preferred over underlay.</p>
Use For Fullmesh	<p>Click the toggle button to specify whether the WAN link can be a part of a full mesh topology.</p> <p>A site can have a maximum of three links enabled for meshing.</p>
Mesh Overlay Link Type	<p>When <b>Use for Fullmesh</b> field is enabled, select the type of mesh overlay link—GRE and GRE_IPSEC:</p> <ul style="list-style-type: none"> <li>• If the link type is Internet, the value for mesh overlay link type is GRE_IPSEC.</li> <li>• If the link type is MPLS, select one of the following options: <ul style="list-style-type: none"> <li>• GRE-IPSEC</li> <li>• GRE</li> </ul> </li> </ul>
Mesh Tag	<p>When the <b>Use for Fullmesh</b> field is enabled, enter the tag to be associated with the WAN link for creating tunnels. You can assign only one tag to the link.</p> <p>Matching mesh tags is one of the criteria used to form tunnels between sites that support meshing.</p> <p>For more information about mesh tags, see <a href="#">“Mesh Tags Overview” on page 245</a>.</p>
Connects to Hubs	<p>Click the toggle button to specify that the WAN link of the site connects to a hub.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• For sites with a single CPE, you must enable at least one WAN link to connect to the hub so that OAM traffic can be transmitted.</li> <li>• For sites with a dual CPE, you must enable at least one WAN link per device to connect to the hub so that OAM traffic can be transmitted.</li> </ul>
Use for OAM Traffic	<p>If you have specified that the WAN link is connected to a hub, click the toggle button to enable sending the OAM traffic over the WAN link.</p> <p>This WAN link is then used to establish the OAM tunnel.</p>

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
Overlay Tunnel Type	<p>Select the mesh overlay tunnel type—GRE and GRE_IPSEC.</p> <p>MPLS links can have both GRE and GRE_IPSEC as the overlay link type where as Internet links can have only GRE_IPSEC as the overlay link type.</p>
Overlay Peer Device	Displays the peer hub device to which the site is connected.
Overlay Peer Interface	Select the interface name of the hub device to which the WAN link of the site is connected.
Backup Link	<p>Select a backup link through which traffic can be routed when the primary (other) links are unavailable. You can select any link other than the default links or links that are configured exclusively for local breakout traffic.</p> <p>When a primary link comes back online, CSO monitors the performance on the primary link and when the primary link meets the SLA requirements, the traffic is switched back to the primary link. However, SLA data is not monitored for the backup link.</p>
Default Link	<p>Select one or more links that will be used for routing traffic in the absence of matching SD-WAN policy intents. A site can have multiple default links to the hub site.</p> <p>Default links are used primarily for overlay traffic but can also be used for local breakout traffic. However, a default link cannot be used exclusively for local breakout traffic. If you do not specify a default link, then equal-cost multipath (ECMP) is used to choose the link on which to route traffic.</p>
Data VLAN ID	<p>Enter a VLAN ID for the WAN link.</p> <p>Range: 0 through 4049 (4050 to 4094 is reserved by CSO).</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you are configuring more than one WAN link on the same physical interface, only one WAN link can be untagged; for the remaining WAN links, you must configure a VLAN ID.</li> <li>• A combination of tagged and untagged on the same physical interface is supported only for single CPE devices.</li> </ul>
WAN_1 WAN-Interface-Name	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 WAN-Interface-Name for an explanation of the fields</p>

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
WAN_2 <i>WAN-Interface-Name</i>	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 <i>WAN-Interface-Name</i> for an explanation of the fields</p>
WAN_3 <i>WAN-Interface-Name</i>	<p>Click the toggle button to enable or disable the WAN link.</p> <p>When you enable the WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed. Refer to the fields described for WAN_0 <i>WAN-Interface-Name</i> for an explanation of the fields</p>
<b>Management Connectivity</b>	
IP Prefix	Enter an IPv4 address prefix for the loopback interface on the CPE device. The IP address prefix must be a /32 IP address prefix and must be unique across the entire management network. If you do not specify an IPv4 address prefix, CSO automatically assigns the IP prefix from the reserved pool 100.124.0.0/14.
<b>PPPoE Settings</b>	
Username	Enter the username for the CPE device. For example, ISP-ANetwork.
Password	Enter the password for the CPE device.
Authentication Protocol	Select Password Authentication Protocol (PAP) or Challenge Handshake Authentication Protocol (CHAP) for authentication.
<b>Additional Configuration</b>	

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (*continued*)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>
<b>LAN</b>	
Switch Devices	<p>Displays the switches that you have added to the site.</p> <ul style="list-style-type: none"> <li>• To add a switch, click the + icon on the top right corner of the Switch Devices table. You can add multiple switches only to an SD-LAN site. The Add New Switch page appears. See <a href="#">Table 23 on page 81</a> for details.</li> <li>• To edit details of a switch, select the switch and click the <b>Edit</b> icon on the top right corner of the Switch Devices table. The Edit Switch Details page appears, displaying the same parameters that you configured while adding a switch. Modify the parameters as needed and Click <b>OK</b>. The changes that you made for the switch are saved and the updated parameters appear on the Switch Devices table.</li> <li>• To delete one or more switches, select the switches and click the <b>Delete</b> icon on the top right corner of the Switch Devices table.</li> <li>• To manage the configuration of one or more switches added to the site, select the switches from the list and click <b>Configuration</b>. The Switch Configuration page appears. See <a href="#">Table 24 on page 84</a> for details.</li> </ul>

Table 32: Fields on the Add Site for Tenant-Name Page(SD-WAN and LAN Capabilities) (continued)

Field	Description
LAN Segments	<p>Displays the VLANs and their IDs that you configured on the switch.</p> <ul style="list-style-type: none"> <li>Optional: To add a VLAN, click the + icon on the top, right corner of the LAN Segments table. The Create LAN Segment page appears. See <a href="#">Table 36 on page 139</a> for details.</li> <li>To edit details of a VLAN, select the LAN segment and click the <b>Edit</b> icon (pencil) on the top right corner of the LAN Segments table. The Edit LAN Segment page appears, displaying the same fields that are presented when you add a VLAN.</li> </ul> <p>Modify the parameters as needed and click <b>OK</b>. The changes that you made for the LAN segment are saved and the updated parameters appear on the LAN Segments table.</p> <ul style="list-style-type: none"> <li>To delete one or more VLANs, select the VLANs and click the <b>Delete</b> icon (trash can) on the top right corner of the LAN Segments table.</li> </ul>

[Table 23 on page 81](#) describes the fields on the Add New Switch Page.

Table 33: Fields on the Add New Switch Page

Field	Description
<b>Device Profile</b>	
Device Name	<p>Enter a unique name for the switch.</p> <p>You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.</p>
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<b>CPE Settings</b>	
Trunk Ports	<p>Select at least two trunk ports on the CPE device to connect with the switch, which are used for the following:</p> <ul style="list-style-type: none"> <li>LAN traffic between the switch and the CPE</li> <li>Management traffic for in-band management of the switch.</li> </ul> <p><b>NOTE:</b> The ae0 LAG interface of the SRX Series devices is used as the trunk port for communication with the switch.</p>

Table 33: Fields on the Add New Switch Page (*continued*)

Field	Description
Switch Management Subnet	<p>Specify the subnet that the DHCP server can use to assign IP addresses. The DHCP server runs on the following ports:</p> <ul style="list-style-type: none"> <li>• Trunk ports to provide DHCP information to all devices connected to the switch and to the in-band management port, switch management port, and LAN ports on the CPE.</li> <li>• Out-of-band management port on the CPE to provide DHCP information to the management port on the switch.</li> <li>• LAN ports on the CPE to provide information to the devices connected to the CPE LAN ports.</li> </ul>
Virtual Chassis	This toggle button is disabled for a site with SD-WAN and LAN capability.
Serial Number	<p>To obtain the serial number, log in to the CLI of the switch in operational mode and enter <b>show chassis hardware</b>. Alternatively, you can view the serial number on the barcode sticker, which is on the rear-panel of the switch.</p> <p>The serial number is a case-sensitive, alphanumeric string.</p>
Zero Touch Provisioning	<p>Click the toggle button to enable or disable zero-touch provisioning (ZTP) of the switch through ZTP.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See Step <a href="#">“Step-by-Step Procedure” on page 122</a> for details.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>• EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the switch.</p> <p>The boot image is the latest device image that is uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p><b>NOTE:</b> This option is not available for a Virtual Chassis.</p> <p>To provision a Virtual Chassis in CSO, you must manually upgrade the image to either JUNOS 18.4R2.7 or 18.4R3.3.</p>

Table 33: Fields on the Add New Switch Page (*continued*)

Field	Description
Auto activate	<p>Click the toggle button to enable or disable automatic activation of the switch when the switch is detected by CSO (that is, management status of the device is Device_Detected).</p> <p>When you enable this toggle button, zero-touch provisioning (ZTP) of the switch is automatically triggered when the device communicates with CSO.</p> <p>By default, auto activation for the switch is enabled, if it is enabled for the CPE and vice-versa.</p> <p><b>NOTE:</b> You must physically connect the switch to the CPE and power it on for the switch to be automatically activated when you enable this option.</p>
Activation code	<p>If you disabled the <b>Auto activate</b> field, enter the activation code to be used for manually activating the switch</p> <p>For information on manually activating a switch, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>

Table 34: Automatic Creation of Source NAT Rules

Autocreate Source NAT Rule	Translation	NAT Rules Creation
Disabled	Not applicable (No NAT)	None.
Enabled	Interface-Based (Default)—CSO creates interface-based NAT rules.	<p>Source NAT rules are automatically created, with each rule from a department zone to the WAN interface, with a translation of type interface. Each pair of [zone - interface] represents a rule-set.</p> <p>For example, the following department zone to (WAN link) W1 interface rule-set might be created:</p> <pre>Dept-Zone1 --&gt; W1: Translation=Interface Dept-Zone2 --&gt; W1: Translation=Interface Dept-Zone3 --&gt; W1: Translation=Interface</pre>
Enabled	Pool-Based—CSO automatically creates pool-based NAT rules	<p>NAT source rules are automatically created, with each rule from a department zone to the WAN NAT pool with a translation of type pool.</p> <p>For example, a source NAT rule from department zone to NAT pool might be created:</p> <pre>Dept-Zone1 --&gt; W1 : Translation=Pool-1 Dept-Zone2 --&gt; W1 : Translation=Pool-1</pre>



[Table 24 on page 84](#)

The Access Profiles tab and Port Profiles tab are available only if you have added a physical switch or a preprovisioned Virtual Chassis, and the selected switches are of the same device type and model. If you have added an autoprovisioned Virtual Chassis, only the Configuration Templates tab is available. The Port Profiles tab is unavailable because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis. The Access Profiles tab is unavailable because the access profile requires a RADIUS authentication server to be added to it. The parameters related to communication between the RADIUS server and the supplicant are defined in the authentication profile , which is, in turn, referenced by the port profile.

**Table 35: Tabs on the Switch Configuration page**

Tab	Description
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>

Table 35: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Port Profiles	<p data-bbox="516 331 1073 363">Displays the list of interfaces (ports) available in CSO.</p> <p data-bbox="516 394 1268 426">You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p data-bbox="516 457 1141 489">Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol data-bbox="516 520 1451 1297" style="list-style-type: none"> <li data-bbox="516 520 1451 636">1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table. The Edit Port Configuration page appears.</li> <li data-bbox="516 688 1451 804">2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li data-bbox="516 867 1451 1056">3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column. If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li data-bbox="516 1119 1451 1182">4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li data-bbox="516 1234 1451 1297">5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

Table 35: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Configuration Templates	<p>Displays the list of configuration templates. This list is filtered based on the device that you select.</p> <p>Configuration templates are predefined stage-2 templates that are added by your OpCo administrators or SP administrators.</p> <p>To add configuration templates and set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates.</li> <li>3. (Optional) View the CLI commands in the Summary tab.</li> <li>4. Click <b>OK</b>. You have added and set the parameters for the configuration templates.</li> </ol>

Table 36: Fields on the Add LAN Segment Page when Adding a Switch along with CPE

Field	Description
<b>Add LAN Segment</b>	
Name	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length is 15 characters.</p>
VLAN ID	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>
Department	<p>Select a department to which the LAN segment is to be assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You group LAN segments as departments for ease of management and for applying policies at the department-level.</p>

Table 36: Fields on the Add LAN Segment Page when Adding a Switch along with CPE (*continued*)

Field	Description
Gateway Address/Mask	Enter a valid gateway IP address and mask for the LAN segment; for example, 192.0.2.8/24.
DHCP	<p>For directly connected LAN segments, click the toggle button to enable DHCP. DHCP is disabled by default.</p> <p>You enable DHCP if you want to assign IP addresses by using a DHCP server. You disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, fields related to DHCP-related parameters appear and must be configured.</p>
<b>[DHCP-Related Fields]</b>	
Address Range Low	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
Address Range High	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
Maximum Lease Time	<p>Specify the maximum duration (in seconds) for which a client can request for and hold a lease on a DHCP server.</p> <p>Range: 0 through 4,294,967,295.</p>
Name Server	Specify or select one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.
CPE Ports	<p>Click the toggle button to include or exclude the CPE in the LAN segment. When you include the CPE in the LAN segment:</p> <ul style="list-style-type: none"> <li>• CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> <li>• The <b>Switch Ports</b> field is disabled. CSO automatically assigns LAN ports on the switch device and creates the same LAN segment on the switch.</li> </ul> <p>If you exclude the CPE from the LAN segment, you must specify the switch ports that connect with the LAN in the <b>Switch Ports</b> field. CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.</p> <p><b>NOTE:</b> You can select only one port if the CPE is an SRX Series device.</p>

Table 36: Fields on the Add LAN Segment Page when Adding a Switch along with CPE (*continued*)

Field	Description
Switch Ports	<p>If you disable the CPE ports field, select ports on the switch that will be part of the LAN segment.</p> <p>Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</p>

## RELATED DOCUMENTATION

[Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)

[Add an On-Premise Spoke Site with LAN Capability | 141](#)

[Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site | 168](#)

[Deleting a Site | 223](#)

## Add an On-Premise Spoke Site with LAN Capability

You can provision and monitor a switch (physical or Virtual Chassis) by adding an on-premise spoke site to CSO. See “[Standalone Switch Overview](#)” on page 60 for details.

To add an on-premise spoke site with one or more switches:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke (Manual)**.

The Add On-Premise Spoke Site page appears.

3. Complete the configuration according to the guidelines provided in [Table 37 on page 142](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Review the configuration from the **Summary** tab.

(Optional) click the Edit links within the summary to go directly to a specific page of the wizard and modify the configured settings.

5. Click **OK** to add the site.

After you click OK, site activation is initiated and the **Site Activation: Site-Name** page appears.

6. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

• If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.

b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

c. Copy the stage-1 configuration and log in to the console of the EX Series switch.

d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

Table 37: Fields on the Add Site for Tenant-Name Page ( LAN Capability)

Field	Description
<b>General</b>	
<b>Site Information</b>	

Table 37: Fields on the Add Site for Tenant-Name Page ( LAN Capability) (continued)

Field	Description
<b>General</b>	
Site Name	Enter a unique name for the site. You can use alphanumeric characters and hyphen (-). The maximum length allowed is 32 characters.
Site Group	Select a site group to which you want to assign the site.
<b>Site Capabilities</b>	
LAN Capabilities	Select <b>LAN</b> to include LAN capabilities in the site.
<b>Address and Contact Information</b>	
Street Address	Enter the street address of the site.
City	Enter the city where the site is located.
State/Province	Enter the state or province where the site is located.
ZIP/Postal Code	Enter the postal code for the site.
Country	<p>From the list, select the country where the site is located. Click the <b>Validate</b> button to verify the address.</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address is verified.</li> </ul> <p>You can click the <b>View location on a map</b> link to see the address location.</p> <ul style="list-style-type: none"> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed.</li> </ul> <p>If you enter the wrong address and click the <b>Validate</b> button to verify the address, the <b>Site address could not be validated message</b> is displayed.</p>
Contact Name	Enter the name of the contact person for the site.
Email	Enter the e-mail address of the contact person for the site.
Phone	Enter the phone number of the contact person for the site.

Table 37: Fields on the Add Site for Tenant-Name Page ( LAN Capability) (continued)

Field	Description
<b>General</b>	
<b>Advanced Configuration</b>	
Domain Name Server (DNS)	Specify one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on.  DNS servers are used to resolve hostnames into IP addresses.
NTP Server	Specify the IP addresses of one or more NTP servers.
Select Timezone	Select the time zone of the site from the list.
<b>LAN</b>	



Table 37: Fields on the Add Site for Tenant-Name Page ( LAN Capability) (continued)

Field	Description
<b>General</b>	
Switch Devices	<p>Displays the switches that you have added to the site.</p> <ul style="list-style-type: none"> <li>To add a switch, click the <b>+</b> icon on the top right corner of the Switch Devices table. You can add multiple switches only to an SD-LAN site.</li> </ul> <p>The Add New Switch page appears. See <a href="#">Table 23 on page 81</a> for details.</p> <ul style="list-style-type: none"> <li>To edit details of a switch, select the switch and click the <b>Edit</b> icon on the top right corner of the Switch Devices table. The Edit Switch Details page appears, displaying the same parameters that you configured while adding a switch.</li> </ul> <p>Modify the parameters as needed and Click <b>OK</b>. The changes that you made for the switch are saved and the updated parameters appear on the Switch Devices table.</p> <ul style="list-style-type: none"> <li>To delete one or more switches, select the switches and click the <b>Delete</b> icon on the top right corner of the Switch Devices table.</li> <li>To manage the configuration of one or more switches added to the site, select the switches from the list and click <b>Configuration</b>.</li> </ul> <p>The Switch Configuration page appears. See <a href="#">Table 24 on page 84</a> for details.</p>

Table 37: Fields on the Add Site for Tenant-Name Page ( LAN Capability) (continued)

Field	Description
<b>General</b>	
LAN Segments	<p>Displays the VLANs and their IDs that you configured on the switch.</p> <ul style="list-style-type: none"> <li>Optional: To add a VLAN, click the + icon on the top, right corner of the LAN Segments table. The Create LAN Segment page appears. See <a href="#">Table 38 on page 146</a> for details.</li> <li>To edit details of a VLAN, select the LAN segment and click the <b>Edit</b> icon (pencil) on the top right corner of the LAN Segments table. The Edit LAN Segment page appears, displaying the same fields that are presented when you add a VLAN.</li> </ul> <p>Modify the parameters as needed and click <b>OK</b>. The changes that you made for the LAN segment are saved and the updated parameters appear on the LAN Segments table.</p> <ul style="list-style-type: none"> <li>To delete one or more VLANs, select the VLANs and click the <b>Delete</b> icon (trash can) on the top right corner of the LAN Segments table.</li> </ul>

Table 38: Fields on the Create LAN Segment Page when Adding a Site With LAN Capability

Field	Description
<b>Create LAN Segment</b>	
Name	<p>Enter a name for the VLAN.</p> <p>The name for a VLAN should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length allowed is 15 characters.</p>
VLAN ID	<p>Enter the VLAN ID for the VLAN.</p> <p>Range: 2 through 4093.</p>

[Table 23 on page 81](#) describes the fields on the Add New Switch page.

Table 39: Fields on the Add New Switch page

Field	Description
<b>Device Profile</b>	
Device Name	<p>Enter a unique name for the switch.</p> <p>You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.</p>
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<b>Switch Details</b>	
Virtual Chassis	<p>Click the toggle button to enable or disable (default) adding the switch as a Virtual Chassis.</p> <p>If you enable this toggle button, you must select the method of provisioning the Virtual Chassis.</p> <ul style="list-style-type: none"> <li>• Before you add a Virtual Chassis in CSO, ensure that the Virtual Chassis is setup. See <a href="#">“Step-by-Step Procedure” on page 153</a> for details about setting up a Virtual Chassis. In addition, click the <b>View Prerequisite Configurations</b> link to view the requirements for adding a Virtual Chassis in CSO.</li> <li>• Currently, you cannot add a new member or change the roles assigned to the members after you onboard a Virtual Chassis. To change the roles, you must delete the Virtual Chassis, form a new Virtual Chassis, and then onboard the new Virtual Chassis.</li> </ul>

Field	Description
Method	<p>Select the method of provisioning the Virtual Chassis:</p> <ul style="list-style-type: none"> <li>• <b>Auto Provisioning:</b> The Virtual Chassis automatically determines the roles (primary, backup, and line card) of the member devices. If you select this option, you must enter only the serial number of the primary device in the Master Serial Number field that appears.</li> <li>• <b>Pre Provisioning:</b> You can determine the roles (primary, backup, and line card) of the member devices in the Virtual Chassis. If you select this option, you must provide the serial number, device type, device model, and role of all the member devices of the Virtual Chassis in the fields that appear.</li> </ul> <p><b>NOTE:</b> In the case of preprovisioning, the primary device must always be designated as Member 0.</p> <p>For both these methods, ensure that:</p> <ul style="list-style-type: none"> <li>• The devices in the Virtual Chassis are fully installed and ready to be configured in the site. In addition, all members must be powered on. This means that the output of the <code>show virtual-chassis status</code> command must display all the member devices of the Virtual Chassis and the devices must be in Present (<b>Prsnt</b>) state. <b>NOTE:</b> If you do not have access to the serial console port for preprovisioning, only the primary device must be powered on first.</li> <li>• The primary and backup member devices have internet access to the Juniper redirect server and CSO.</li> <li>• All members in the Virtual Chassis are running the same firmware (either JUNOS 18.4R2.7 or 18.4R3.3).</li> <li>• For EX3400 and EX4300 devices to act as a Virtual Chassis, all the corresponding member devices are interconnected through Virtual Chassis ports (VCPs). For EX2300, EX4600, and EX4650 devices to act as a Virtual Chassis, the uplink Ethernet ports are configured as VCPs manually and the member devices are interconnected.</li> </ul>
Master Serial Number	<p>If you selected Auto Provisioning, enter the serial number of the primary device (from the fully-formed Virtual Chassis).</p> <p>To obtain the serial number, log in to the CLI of any device that is part of the fully-formed Virtual Chassis, in operational mode, and enter <b>show virtual-chassis</b>.</p> <p>The list of the member devices in the Virtual Chassis, along with the serial number and role appear. The primary device is indicated as <b>Master</b> under <b>Role</b>.</p> <p>Alternatively, you can view the serial number on the barcode sticker, which is on the rear-panel of the switch.</p>

Field	Description
Member <i>&lt;member-number&gt;</i>	<p>If you selected Pre Provisioning, enter the serial numbers of all the devices (from the fully-formed Virtual Chassis or based on what roles you decide to assign each Virtual Chassis member), and also select the member type and model from the list.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• If you enable ZTP, you must enter the serial number of the primary device only in the Member 0 Serial Number field.</li> <li>• If you do not have access to the serial console port of the virtual chassis, the first member that is powered on is considered the primary device. Enter the serial number of this device in the Member 0 field.</li> </ul> <p>Click the Add (+) icon to add a member or the Remove (-) icon to remove the last added member. For information on the number of devices that can be added, see <a href="#">Table 41 on page 152</a>.</p> <p><b>NOTE:</b> The Routing Engine toggle button corresponding to Member 0 is always enabled, indicating that Member 0 always acts as the primary device.</p> <p>To select a member as backup, click to enable the Routing Engine toggle button corresponding to that member; the remaining members act as line cards.</p>
Serial Number	<p>If you disabled the Virtual Chassis toggle button, specify the serial number of the physical switch.</p> <p>To obtain the serial number, log in to the CLI of the switch in operational mode and enter <b>show chassis hardware</b>. Alternatively, you can view the serial number on the barcode sticker, which is on the rear-panel of the switch.</p> <p>The serial number is a case-sensitive, alphanumeric string.</p>
Zero Touch Provisioning	<p>Click the toggle button to enable or disable zero-touch provisioning (ZTP) of the switch through ZTP.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See <a href="#">Step 5</a> for details.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>• EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>

Field	Description
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the switch.</p> <p>The boot image is the latest device image that is uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p><b>NOTE:</b> This option is not available for a Virtual Chassis.</p> <p>To provision a Virtual Chassis in CSO, you must manually upgrade the image to either JUNOS 18.4R2.7 or 18.4R3.3.</p>
Auto activate	<p>Click the toggle button to enable (default) or disable automatic activation of the switch when the switch is detected by CSO (that is, management status of the device is Device_Detected).</p> <p>When you enable this field, zero-touch provisioning (ZTP) of the switch is automatically triggered when the device communicates with CSO.</p> <p><b>NOTE:</b> The switch must be powered on for automatic activation when you enable this option.</p>
Activation code	<p>If you disabled the <b>Auto activate</b> field, enter the activation code to be used for manually activating the switch</p> <p>For information on manually activating a switch, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>

[Table 24 on page 84](#) describes the tabs on the Switch Configuration page.

The Access Profiles tab and Port Profiles tab are available only if you have added a physical switch or a preprovisioned Virtual Chassis, and the selected switches are of the same device type and model. If you have added an autoprovisioned Virtual Chassis, only the Configuration Templates tab is available. The Port Profiles tab is unavailable because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis. The Access Profiles tab is unavailable because the access profile requires a RADIUS authentication server to be added to it. The parameters related to communication between the RADIUS server and the supplicant are defined in the authentication profile, which is, in turn, referenced by the port profile.

Table 40: Tabs on the Switch Configuration page

Tab	Description
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>
Port Profiles	<p>Displays the list of interfaces (ports) available in CSO.</p> <p>You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p>Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol style="list-style-type: none"> <li>1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table. The Edit Port Configuration page appears.</li> <li>2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li>3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column. If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li>4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li>5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

Table 40: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Configuration Templates	<p>Displays the list of configuration templates. This list is filtered based on the device that you select.</p> <p>Configuration templates are predefined stage-2 templates that are added by your OpCo administrators or SP administrators.</p> <p>To add configuration templates and set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates.</li> <li>3. (Optional) View the CLI commands in the Summary tab.</li> <li>4. Click <b>OK</b>. You have added and set the parameters for the configuration templates.</li> </ol>

Table 41 on page 152 lists the supported device types, combinations in the non-mixed mode, and the total number of members, supported by each device type, in a Virtual Chassis.

Table 41: Supported Device Types, Modes, and Number of Members Allowed in a Virtual Chassis

Device Type	Non-mixed Virtual Chassis Support	Number of Members Allowed in the Virtual Chassis
EX2300	Combination of the same or different models of EX2300 switches.	Up to 4 members.
EX3400	Combination of the same or different models of EX3400 switches.	Up to 10 members.
EX4300	Combination of the same or different models of EX4300 switches.	Up to 10 members.
EX4600	Combination of the same or different models of EX4600 switches.	Up to 10 members.



Table 41: Supported Device Types, Modes, and Number of Members Allowed in a Virtual Chassis (*continued*)

Device Type	Non-mixed Virtual Chassis Support	Number of Members Allowed in the Virtual Chassis
EX4650	Combination of the same or different models of EX4650 switches.	Up to 2 members.

Before you autoprovision or preprovision a Virtual Chassis in CSO, ensure that the Virtual Chassis is setup.

- To setup a Virtual Chassis for autoprovisioning:
  1. Decide the number of member devices in the Virtual Chassis.
  2. If you've added EX3400 or EX4300 devices as Virtual Chassis, interconnect all the corresponding member devices through Virtual Chassis ports (VCPs).

If you've added EX2300, EX4600, or EX4650 devices as Virtual Chassis, configure the 10-Gbps Ethernet ports as VCPs manually (through CLI) and interconnect the member devices.

**NOTE:** At this point, do not power on any member devices in the Virtual Chassis.

3. Decide which member device acts as the primary and power on only this device first.

**NOTE:**

- Remember the serial number of the primary device in the Virtual Chassis. This serial number is required during the site activation workflow to add this Virtual Chassis in CSO.
- For ZTP to be successful, the primary device should always be designated as Member 0. You must specify the same serial number in the Member 0 field in CSO.

4. Wait until the primary device completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

5. Power on the remaining member devices one after the other.

6. Wait until all the member devices complete booting.

After booting is complete, you can confirm that the Virtual Chassis is fully formed when all the LEDs on the VCPs are ON.

7. Connect the primary and backup device to the Internet through the management port or uplink port.
  8. Verify the connectivity from the primary device to CSO or to any host on the Internet by using **ping** or **telnet** to Juniper redirect server on port 443.
- To setup a Virtual Chassis for preprovisioning:
    1. Decide the number of member devices in the Virtual Chassis.
    2. If you've added EX3400 or EX4300 devices as Virtual Chassis, interconnect all the corresponding member devices through Virtual Chassis ports (VCPs).

If you've added EX2300, EX4600, or EX4650 devices as Virtual Chassis, configure the uplink Ethernet ports as VCPs manually and interconnect the member devices.

**NOTE:** At this point, do not power on any member devices in the Virtual Chassis.

3. Decide which member device acts as the primary and which member device acts as the backup.
4. Of the two devices, power on the device that you want to select as the primary (Member 0), and wait until it completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

**NOTE:**

- Remember the serial numbers of all the devices in the Virtual Chassis. These serial numbers will be needed in the site activation workflow to add this Virtual Chassis in CSO.
- For ZTP to be successful, the primary should always be designated as Member 0. You must specify the same serial number in the Member 0 field in CSO.

5. Power on the device that you want to select as the backup and wait until it completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

6. Power on the remaining member devices one after the other.
7. Wait until all the member devices complete booting.

After booting is complete, you can confirm that the Virtual Chassis is fully formed when all the LEDs on the VCPs are ON.

8. Connect the primary and backup device to the Internet through the management port or uplink port.
9. Verify the connectivity from the primary device to CSO or to any host on the Internet by using **ping** or **telnet** to Juniper redirect server on port 443

Now that the Virtual Chassis is setup, proceed to add the Virtual Chassis in CSO. See the **Switch Devices** section in [Table 37 on page 142](#) for details.

## RELATED DOCUMENTATION

[Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)

[Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site | 168](#)

[Deleting a Site | 223](#)

## Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities

You can add an on-premise spoke site with both firewall and LAN capabilities.

To add a site with both next generation firewall and LAN capabilities at the same time:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke (Manual)**.

The Add On-Premise Spoke Site for *Tenant-Name* page appears.

3. Complete the configuration settings according to the guidelines provided in [Table 42 on page 157](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **Next**.

A summary page is displayed.

5. Review the configuration and modify the settings, if needed, from the Summary tab.

6. Click **OK** to add the site.

The site activation job is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the firewall device and the switch (when LAN capability is selected). The firewall device is activated first and then the process to activate the switch is initiated.

7. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

• If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.

b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

c. Copy the stage-1 configuration and log in to the console of the EX Series switch.

d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

**NOTE:** You can also add a site with LAN and next generation firewall capabilities using the site templates. For more information, see [“Add On-Premise Spoke Sites by Using a Site Template” on page 228](#).

**Table 42: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Firewall and LAN)**

Field	Description
<b>General</b>	
<b>Site Information</b>	
Site Name	Enter a unique name for the firewall site. You can use alphanumeric characters and hyphen (-); the maximum length is 32 characters.
Site Group	Select a site group to which you want to assign the site.
<b>Site Capabilities</b>	
WAN Capabilities	Select the WAN capabilities as <b>Next Gen Firewall</b> for the site.
LAN Capabilities	Select the LAN capability as <b>LAN</b> for the site.
<b>Address and Contact Information</b>	
Street Address	Enter the street address of the site.
City	Enter the name of the city where the site is located.
State/Province	Select the state or province where the site is located.
ZIP/Postal Code	Enter the postal code for the site.
Country	<p>Select the country where the site is located.</p> <p>You can click the <b>Validate</b> button to verify the address that you specified:</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address can be verified. You can click the <b>View location on a map</b> link to see the address location.</li> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed .</li> </ul>
Contact Name	Enter the name of the contact person for the site.

Table 42: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Firewall and LAN) (continued)

Field	Description
Email	Enter the e-mail address of the contact person for the site.
Phone	Enter the phone number of the contact person for the site.  Click <b>Next</b> to continue.
<b>Advanced Configuration</b>	
Name Server IP List	Enter one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.
NTP Server	Enter the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers. Example: ntp.example.net The site must have DNS reachability to resolve the FQDN during site configuration.
Select Timezone	Select the time zone for the site.
<b>WAN</b>	
<b>Device Information</b>	
Serial Number	Enter the serial number of the firewall device. Note that the serial numbers are case-sensitive.
Auto Activate	Click the toggle button to enable or disable automatic activation of the device. This option is enabled by default.
Activation Code	If the <b>Auto Activate</b> feature is disabled, enter the activation code to manually activate the device. The activation code is provided by the administrator who adds the site.
Zero Touch Provisioning	Click the toggle button to enable or disable Zero Touch Provisioning (ZTP). This option is enabled by default.  If ZTP is enabled, the Boot Image field is displayed and you must select an image that supports the Phone-Home client. During ZTP, the image on the firewall device is upgraded to the image that you select for the Boot Image.  If ZTP is disabled, you must manually copy (by using CLI), the Stage-1 configuration on to the firewall device.

Table 42: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Firewall and LAN) (continued)

Field	Description
Boot Image	<p>When the Zero Touch Provisioning field is enabled, select the boot image from the drop-down list to upgrade the image on the firewall device to a version that supports Phone-Home client.</p> <p>The boot image is the device image that was previously uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process. If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p>By default, the <b>Use Image on Device</b> option is selected.</p>
In-band Management Port	<p>Select the port that you want to configure as management interface and connect it to the management device. You can configure any of the ge-0/0/x ports, where x ranges from 0 to 14, as in-band management interfaces. This field is applicable only when a switch is behind a CPE (SD-WAN or a next generation firewall device).</p>
Firewall Policies	<p>Select the firewall policy that you want to deploy to the standalone firewall site. The firewall policy list is populated from the <b>Configuration &gt; Firewall &gt; Firewall Policy</b> page.</p> <p>Default: Factory_Default_Fw_Policy</p>
NAT Policies	<p>Select the NAT policy that you want to deploy to the standalone firewall site. The NAT policy list is populated from the <b>Configuration &gt; NAT &gt; NAT Policies</b> page.</p> <p>Default: Factory_Default_NAT_Policy</p>
Import Configuration	<p>Click the toggle button to automatically import firewall policies and NAT policies from a next generation firewall device to CSO. By default, this field is disabled.</p> <p><b>NOTE:</b> This field is available only when Zero Touch Provisioning is disabled.</p>
<b>Additional Configuration</b>	

Table 42: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Firewall and LAN) (continued)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>
<b>LAN</b>	



Table 42: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Firewall and LAN) (continued)

Field	Description
Switch Devices	<p>Displays the switches that you have added to the site.</p> <ul style="list-style-type: none"> <li>To add a switch, click the + icon on the top right corner of the Switch Devices table. You can add multiple switches only to an SD-LAN site. The Add New Switch page appears. See <a href="#">Table 23 on page 81</a> for details.</li> <li>To edit details of a switch, select the switch and click the <b>Edit</b> icon on the top right corner of the Switch Devices table. The Edit Switch Details page appears, displaying the same parameters that you configured while adding a switch. Modify the parameters as needed and Click <b>OK</b>. The changes that you made for the switch are saved and the updated parameters appear on the Switch Devices table.</li> <li>To delete one or more switches, select the switches and click the <b>Delete</b> icon on the top right corner of the Switch Devices table.</li> <li>To manage the configuration of one or more switches added to the site, select the switches from the list and click <b>Configuration</b>. The Switch Configuration page appears. See <a href="#">Table 24 on page 84</a> for details.</li> </ul>
LAN Segments	<p>Displays the VLANs and their IDs that you configured on the switch.</p> <ul style="list-style-type: none"> <li>Optional: To add a VLAN, click the + icon on the top, right corner of the LAN Segments table. The Create LAN Segment page appears. See <a href="#">Table 45 on page 165</a> for details. Fields marked * are mandatory.</li> </ul> <p><b>NOTE:</b> The same LAN segment is created on the CPE device (firewall) if the switch is connected to the CPE device (firewall) that is managed by CSO.</p> <ul style="list-style-type: none"> <li>To edit details of a VLAN, select the LAN segment and click the <b>Edit</b> icon (pencil) on the top right corner of the LAN Segments table. The Edit LAN Segment page appears, displaying the same fields that are presented when you add a VLAN. Modify the parameters as needed and click <b>OK</b>. The changes that you made for the LAN segment are saved and the updated parameters appear on the LAN Segments table.</li> <li>To delete one or more VLANs, select the VLANs and click the <b>Delete</b> icon (trash can) on the top right corner of the LAN Segments table.</li> </ul>

[Table 23 on page 81](#) describes the fields on the Add New Switch page.

Table 43: Fields on the Add New Switch Page

Field	Description
Device Profile	

Table 43: Fields on the Add New Switch Page (*continued*)

Field	Description
Device Name	<p>Enter a unique name for the switch.</p> <p>You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.</p>
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<b>CPE Settings</b>	
Trunk Ports	<p>Select at least two trunk ports on the CPE device to connect with the switch. The trunk ports are used for the following:</p> <ul style="list-style-type: none"> <li>• LAN traffic between the switch and the CPE</li> <li>• Management traffic for in-band management of the switch.</li> </ul>
Switch Management Subnet	<p>Specify the subnet that the DHCP can use to assign IP addresses. The DHCP server runs on the following ports:</p> <ul style="list-style-type: none"> <li>• Trunk ports to provide DHCP information to all devices connected to the switch and to the in-band management port, switch management port, and LAN ports on the CPE.</li> <li>• Out-of-band management port on the CPE to provide DHCP information to the management port on the switch.</li> <li>• LAN ports on the CPE to provide information to the devices connected to the CPE LAN ports.</li> </ul> <p>Example: 192.0.2.0/24</p>
<b>Switch Details</b>	
Virtual Chassis	<p>This toggle button is disabled for a site with NGFW and LAN capabilities.</p> <p>You can add a Virtual Chassis only to an SD-LAN site.</p>
Serial Number	<p>Specify the serial number of the switch</p> <p>The serial number is a 12-digit number present on the rear panel of the switch.</p>

Table 43: Fields on the Add New Switch Page (*continued*)

Field	Description
Auto Activate	<p>Click the toggle button to enable or disable automatic activation of the switch. When you enable this field, zero-touch provisioning of the switch is automatically triggered when the device communicates with CSO.</p> <p><b>NOTE:</b> You must physically connect the switch to the CPE device (firewall) and power it on for the switch to be automatically activated when you enable this option.</p>
Activation code	<p>When the <b>Auto activate</b> field is disabled, enter the activation code to be used for manually activating the switch.</p> <p>For information, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>
Zero Touch Provisioning	<p>Click the toggle button to enable or disable zero-touch provisioning (ZTP) of the switch through ZTP.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See <a href="#">“Step-by-Step Procedure” on page 155</a> for details.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>• EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>

[Table 24 on page 84](#) describes the tabs on the Switch Configuration page.

The Access Profiles tab and Port Profiles tab are available only if you have added a physical switch or a preprovisioned Virtual Chassis, and the selected switches are of the same device type and model. If you have added an autoprovisioned Virtual Chassis, only the Configuration Templates tab is available. The Port Profiles tab is unavailable because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis. The Access Profiles tab is unavailable because the access profile requires a RADIUS authentication server to be added to it. The parameters related to communication between the RADIUS server and the supplicant are defined in the authentication profile, which is, in turn, referenced by the port profile.

Table 44: Tabs on the Switch Configuration page

Tab	Description
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>
Port Profiles	<p>Displays the list of interfaces (ports) available in CSO.</p> <p>You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p>Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol style="list-style-type: none"> <li>1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table. The Edit Port Configuration page appears.</li> <li>2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li>3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column. If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li>4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li>5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

Table 44: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Configuration Templates	<p>Displays the list of configuration templates. This list is filtered based on the device that you select.</p> <p>Configuration templates are predefined stage-2 templates that are added by your OpCo administrators or SP administrators.</p> <p>To add configuration templates and set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates.</li> <li>3. (Optional) View the CLI commands in the Summary tab.</li> <li>4. Click <b>OK</b>. You have added and set the parameters for the configuration templates.</li> </ol>

Table 45: Fields on the Add LAN Segment Page when Adding a Switch along with Next-Generation Firewall

Field	Description
<b>Add LAN Segment</b>	
Name	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length is 15 characters.</p>
VLAN ID	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093</p>
Gateway Address/Mask	<p>Enter a valid gateway IP address and mask for the LAN segment; for example, 192.0.2.8/24.</p>

**Table 45: Fields on the Add LAN Segment Page when Adding a Switch along with Next-Generation Firewall (continued)**

Field	Description
DHCP	<p>For directly connected LAN segments, click the toggle button to enable DHCP. DHCP is disabled by default.</p> <p>You enable DHCP if you want to assign IP addresses by using a DHCP server. You disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, fields related to DHCP-related parameters appear and must be configured.</p>
<b>[DHCP-Related Fields]</b>	
Address Range Low	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
Address Range High	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
Maximum Lease Time	<p>Specify the maximum duration (in seconds) for which a client can request for and hold a lease on a DHCP server.</p> <p>Range: 0 through 4,294,967,295.</p>
Name Server	Specify or select one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.

## RELATED DOCUMENTATION

[Adding and Provisioning a Next Generation Firewall Overview](#) | 166

## Adding and Provisioning a Next Generation Firewall Overview

### Overview


You can use Contrail Service Orchestration (CSO) to

- Add a firewall site for the next generation firewall device.
- Configure a CPE device (SRX Series services gateway) as a next generation firewall device.
- Add firewall policies for the standalone firewall site.
- Deploy the firewall policies for the standalone firewall site.

## Topology


The topology to add an on-premise spoke site with next generation firewall capabilities is shown in [Figure 5 on page 167](#).

**Figure 5: On-premise spoke site with next generation firewall**

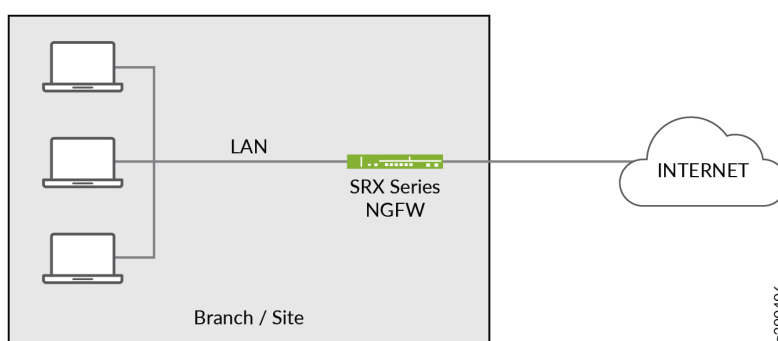

The topology to add an on-premise spoke site with next generation firewall and LAN capabilities is shown in [Figure 6 on page 167](#).

**Figure 6: On-premise spoke site with next generation firewall and LAN**

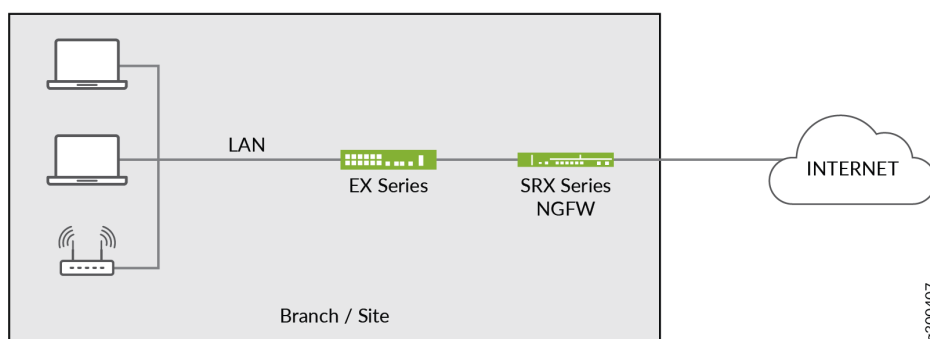

## Workflow

The following workflow describes the steps that are required to set up a firewall site and provision the firewall device associated with the site.

To set up a next generation firewall site and provision the firewall device:

1. Add a standalone next generation firewall site. See [“Adding a Standalone Next Generation Firewall Site” on page 187](#).

To add a site with next generation firewall and switch, see [“Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities” on page 155](#).

**NOTE:** Before proceeding to the next step ensure that the ZTP process is complete and the firewall device status is set to **Provisioned** state.

2. Configure the firewall device. See [“Configuring the Firewall Device” on page 327](#).
3. Add firewall policies for the site. See [“Adding a Firewall Policy” on page 430](#).
4. Add firewall policy intents for the firewall policies that you added. See [“Adding Firewall Policy Intents” on page 433](#).
5. Deploy firewall policies to the site. See [“Deploying Firewall Policies” on page 493](#).

## Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site

You can add one switch to an existing on-premise spoke site that already has a CPE or firewall device provisioned or an enterprise hub site, to provide LAN capability to the site. See [“Switch Behind a CPE or Next Generation Firewall Overview” on page 61](#) for details.

To configure more than one switch with an SD-WAN CPE or Next-Generation firewall, add a separate SD-LAN site and add multiple switches to the site.

You can manage the connectivity and configuration between the switches and the CPE or Next-Generation firewall by creating uplink ports to the CPE device or Next-Generation Firewall, either manually or by using configuration templates. See [“Add Switches to an Existing SD-LAN Site” on page 175](#) to add an SD-LAN site with multiple switches.

To add a switch to an existing site:



1. Select **Resources > Site Management**.

The Sites page appears.

2. Do one of the following:

- a. Select the site to which you want to add the switch.

- b. Click **Add > Add Switch**.

The Add Switch page appears.

- a. Click the *Site-Name* link of the site (to which you want to add the switch) in the Sites column.

The *Site-Name* page appears.

- b. On the Devices tab, click **Add Switch**.

The Add Switch page appears.

3. Complete the configuration according to the guidelines provided in [Table 46 on page 170](#).

**NOTE:** Fields marked with asterisk (\*) are mandatory.

4. Review the configuration from the **Summary** tab.

5. (Optional) Click the Edit links within the summary to go directly to a specific page of the wizard and modify the configured settings.

6. Click **OK** to add the switch to the site.

The site activation process is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the CPE and the switch.

7. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

- If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

- a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.
- b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

- c. Copy the stage-1 configuration and log in to the console of the EX Series switch.
- d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

Table 46 on page 170 provides guidelines on using the fields on the Add Switch page.

Table 46: Fields on the Add Switch Page

Field	Description
<b>Device Profile</b>	
Device Name	Enter a name for the switch.  You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.

Table 46: Fields on the Add Switch Page (*continued*)

Field	Description
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<b>CPE Settings</b>	
Trunk Ports	<p>Select at least two trunk ports on the CPE device to connect with the switch, which are used for the following:.</p> <ul style="list-style-type: none"> <li>• LAN traffic between the switch and the CPE or firewall.</li> <li>• Management traffic for in-band management of the switch.</li> </ul> <p><b>NOTE:</b> The ae0 port of the SRX Series devices is used as the trunk port for communication with the switch.</p>
Switch Management Subnet	<p>Specify the subnet that the DHCP can use to assign IP addresses. The DHCP server runs on the following ports:</p> <ul style="list-style-type: none"> <li>• Trunk ports to provide DHCP information to all devices connected to the switch and to the in-band management port, switch management port, and LAN ports on the CPE or firewall.</li> <li>• Out-of-band management port on the CPE or firewall to provide DHCP information to the management port on the switch.</li> <li>• LAN ports on the CPE or firewall to provide information to the devices connected to the CPE or firewall LAN ports.</li> </ul>
<b>Switch Details</b>	
Virtual Chassis	<p>This toggle button is disabled for an SD-WAN site and Next-Generation Firewall site.</p> <p>You can add a Virtual Chassis only to an SD-LAN site.</p>
Serial Number	<p>Specify the serial number of the physical switch.</p> <p>You can either view the serial number on the label that is present on the rear panel of the switch or log in to the CLI of the switch in operational mode and enter <b>show chassis hardware</b>.</p> <p>The serial number is a case-sensitive, alphanumeric string.</p>

Table 46: Fields on the Add Switch Page (*continued*)

Field	Description
Zero Touch Provisioning	<p>Click to enable or disable ZTP on the switch.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See <a href="#">“Step-by-Step Procedure” on page 169</a> for details</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>• EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the switch.</p> <p>The boot image is the latest device image that is uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p>
Auto activate	<p>Click the toggle button to enable or disable automatic activation of the switch. When you enable this field, zero-touch provisioning of the switch is automatically triggered when the device communicates with CSO.</p> <p><b>NOTE:</b> You must physically connect the switch to the CPE and power it on for the switch to be automatically activated when you enable this option.</p>
Activation code	<p>When the <b>Auto activate</b> field is disabled, enter the activation code to be used for manually activating the switch.</p> <p>For information, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>
Profiles	
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>

Table 46: Fields on the Add Switch Page (*continued*)

Field	Description
Port Profiles	<p>Displays the list of interfaces (ports) available in CSO.</p> <p>You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p>Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol style="list-style-type: none"> <li>1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table.</li> </ol> <p>The Edit Port Configuration page appears.</p> <ol style="list-style-type: none"> <li>2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port.</li> </ol> <p><b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</p> <ol style="list-style-type: none"> <li>3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column.</li> </ol> <p>If the port is configured as an access port in the port profile, you can assign only one VLAN.</p> <ol style="list-style-type: none"> <li>4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li>5. Click <b>OK</b> to complete the configuration. You are returned to the Add Switch page.</li> </ol>

Table 47 on page 173 describes the fields on the Create LAN Segment page.

The values that you configure here are populated on the LAN Segments section of the Add Switch page.

Table 47: Fields on the Create LAN Segment Page when Adding a Switch to an Existing Site

Field	Description
<b>Add LAN Segment</b>	
Name	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length allowed is 15 characters.</p>

Table 47: Fields on the Create LAN Segment Page when Adding a Switch to an Existing Site (*continued*)

Field	Description
Type	<p>Select the type of LAN segment:</p> <p><b>NOTE:</b> This field is available only for SD-WAN sites.</p> <ul style="list-style-type: none"> <li>• Directly Connected (default)—Indicates that the LAN segment is directly connected to the site.</li> <li>• Dynamic Routed—Indicates that the LAN segment is not directly connected to the site and is reachable by using a dynamic route. If you select this option, you must specify the dynamic routing information.</li> </ul>
VLAN ID	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>
Department	<p>Select a department to which the LAN segment is to be assigned.</p> <p><b>NOTE:</b> This field is available only for SD-WAN sites.</p> <p>Alternatively, click the <b>Create Department</b> link to add a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You group LAN segments as departments for ease of management and for applying policies at the department-level. .</p> <p><b>NOTE:</b> This field is not displayed when you add the switch to a site with next-generation firewall capability.</p>
Gateway Address/Mask	Specify a valid gateway IP address and mask for the LAN segment; for example, 192.0.2.8/24.
DHCP	<p>For directly connected LAN segments, click the toggle button to enable or disable DHCP on the LAN segment. DHCP is disabled by default.</p> <p>You enable DHCP if you want to assign IP addresses by using a DHCP server. You disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, fields related to DHCP-related parameters appear and must be configured.</p>
<b>[DHCP-Related Fields]</b>	
Address Range Low	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.

Table 47: Fields on the Create LAN Segment Page when Adding a Switch to an Existing Site *(continued)*

Field	Description
Address Range High	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
Maximum Lease Time	Specify the maximum duration (in seconds) for which a client can request for and hold a lease on a DHCP server.  Range: 0 through 4,294,967,295 seconds.
Name Server	Specify or select one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.
CPE Ports	Select ports on the switch to be part of the LAN segment.  Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.  If you create a LAN segment on a switch when the switch is connected to the CPE device, CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.

## RELATED DOCUMENTATION


[Add Switches to an Existing SD-LAN Site | 175](#)
[Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)
[Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities | 121](#)
[Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities | 155](#)
[Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities | 65](#)
[Add an On-Premise Spoke Site with LAN Capability | 141](#)

## Add Switches to an Existing SD-LAN Site

From CSO Release 5.1.1 onward, you can add one or more EX Series switches to an existing SD-LAN site. Physical, standalone EX Series switches and EX Series Virtual Chassis are supported.

[Figure 7 on page 176](#) shows an SD-LAN site, with multiple EX Series switches, managed by CSO.

Figure 7: SD-LAN Site with Multiple Switches

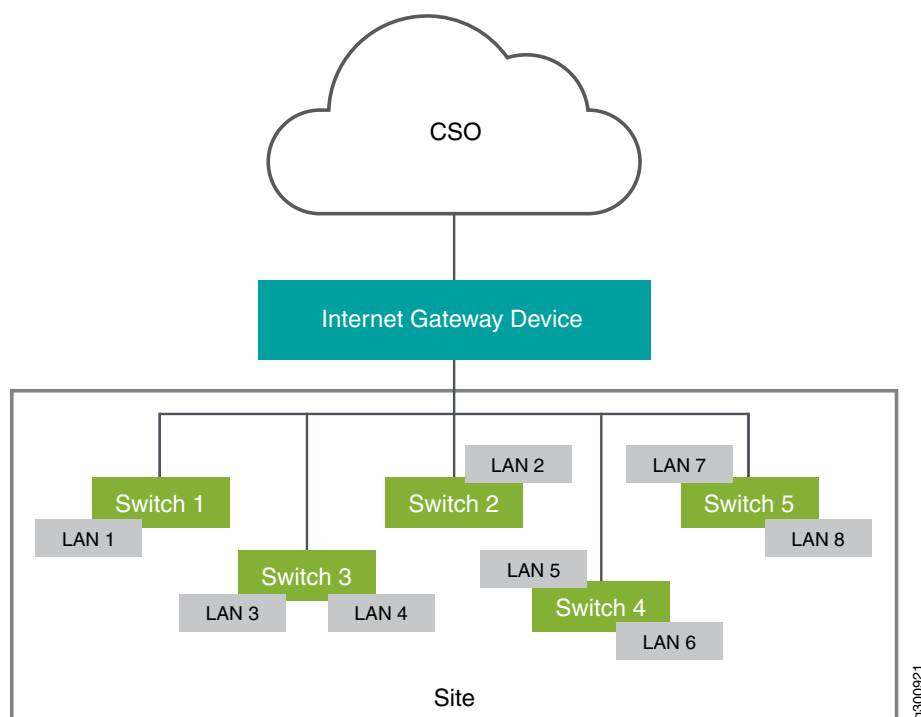

To add a switch to an existing site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Do one of the following:

- a. Select the site to which you want to add the switch.

- b. Click **Add > Add Switch**.

The Add Switch page appears.

- a. Click the *Site-Name* link of the site (to which you want to add the switch) in the Sites column.

The *Site-Name* page appears.

- b. On the Devices tab, click **Add Switch**.

The Add Switch page appears.



1. Complete the configuration according to the guidelines provided in [Table 46 on page 170](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

2. Review the configuration from the **Summary** tab.
3. (Optional) Click the Edit links within the summary to go directly to a specific page of the wizard and modify the configured settings.
4. Click **OK** to add the switch to the site.

The site activation process is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the switch. If you add one or more EX Series switches, the progress of the steps executed for activating each switch is displayed.

5. • If the Zero Touch Provisioning (ZTP) toggle button is enabled (default), CSO pushes the stage-1 and stage-2 configurations and provisions the switch.

This process occurs immediately after the activation process, for which you entered the activation code or selected auto-activation.

**NOTE:** Stage-1 configuration is the initial configuration that allows basic connectivity to a device, which is pushed to the device.

The configuration that is pushed to the device after it has connected to CSO is called stage-2 configuration.

- If you disabled the Zero Touch Provisioning (ZTP) toggle button, you must manually configure the stage-1 configuration (as provided by CSO) on the switch.

To manually configure the stage-1 configuration:

- a. On the **Site Activation: Site-Name** page, the **Click to copy stage-1 configuration** link appears after the Prestage Device step completes successfully.
- b. Click the **Click to copy stage-1 configuration** link.

The stage-1 configuration page appears displaying the stage-1 configuration to be copied to the EX Series device.

- c. Copy the stage-1 configuration and log in to the console of the EX Series switch.
- d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the switch has the outbound SSH configuration to connect with CSO.

CSO then provisions the switch.

[Table 46 on page 170](#) provides guidelines on using the fields on the Add Switch page.

**Table 48: Fields on the Add Switch Page**

Field	Description
<b>Device Profile</b>	
Device Name	<p>Enter a name for the switch.</p> <p>You can use alphanumeric characters and hyphen (-). The maximum length allowed is 15 characters.</p>
Device Type	Select the type of switch—EX2300, EX3400, EX4300, EX4600, and EX4650.
Device Model	<p>Select the model for the switch you specified in the Device Type field.</p> <p>The models vary in the number and type of ports the switch contains. For example, If you selected EX3400, select a model such as EX3400-24P, EX3400-48P, EX3400-24T among others.</p>
<b>Switch Details</b>	
Virtual Chassis	<p>Click the toggle button to enable or disable (default) adding the switch as a Virtual Chassis.</p> <p>If you enable this toggle button, you must select the method of provisioning the Virtual Chassis.</p> <ul style="list-style-type: none"> <li>• Before you add a Virtual Chassis in CSO, ensure that the Virtual Chassis is setup. See <a href="#">“Step-by-Step Procedure” on page 153</a> for details about setting up a Virtual Chassis. In addition, click the <b>View Prerequisite Configurations</b> link to view the requirements for adding a Virtual Chassis in CSO.</li> <li>• Currently, you cannot add a new member or change the roles assigned to the members after you onboard a Virtual Chassis. To change the roles, you must delete the Virtual Chassis, form a new Virtual Chassis, and then onboard the new Virtual Chassis.</li> </ul>

Table 48: Fields on the Add Switch Page (*continued*)

Field	Description
Serial Number	<p>If you disabled the Virtual Chassis toggle button, specify the serial number of the physical switch.</p> <p>You can either view the serial number on the label that is present on the rear panel of the switch or log in to the CLI of the switch in operational mode and enter <b>show chassis hardware</b>.</p> <p>The serial number is a case-sensitive, alphanumeric string.</p>
Method	<p>Select the method of provisioning the Virtual Chassis:</p> <ul style="list-style-type: none"> <li>• <b>Auto Provisioning:</b> The Virtual Chassis automatically determines the roles (primary, backup, and line card) of the member devices. <p>If you select this option, you must enter only the serial number of the primary device in the Master Serial Number field that appears.</p> </li> <li>• <b>Pre Provisioning:</b> You can determine the roles (primary, backup, and line card) of the member devices in the Virtual Chassis. <p>If you select this option, you must provide the serial number, device model, device type, and role of all the member devices of the Virtual Chassis in the fields that appear.</p> <p><b>NOTE:</b> In the case of preprovisioning, the primary device must always be designated as Member 0.</p> </li> </ul> <p>For both these methods, ensure that:</p> <ul style="list-style-type: none"> <li>• The devices in the Virtual Chassis are fully installed and ready to be configured in the site. In addition, all member devices must be powered on. <p>This means that the output of the <code>show virtual-chassis status</code> command must display all the member devices of the Virtual Chassis and the devices must be in Present (<b>Prsnt</b>) state.</p> <p><b>NOTE:</b> If you do not have access to the serial console port for preprovisioning, only the primary device must be powered on first.</p> </li> <li>• The primary and backup member devices have internet access to the Juniper redirect server and CSO.</li> <li>• All member devices in the Virtual Chassis are running the same firmware (either JUNOS 18.4R2.7 or 18.4R3.3).</li> <li>• For EX3400 and EX4300 devices to act as a Virtual Chassis, all the corresponding member devices are interconnected through Virtual Chassis ports (VCPs). <p>For EX2300, EX4600, EX4650 devices to act as a Virtual Chassis, the uplink Ethernet ports are configured as VCPs manually and the member devices are interconnected.</p> </li> </ul>

Table 48: Fields on the Add Switch Page (*continued*)

Field	Description
Master Serial Number	<p>If you selected Auto Provisioning, enter the serial number of the primary device (from the fully-formed Virtual Chassis).</p> <p>To obtain the serial number, log in to the CLI of any device that is part of the fully-formed Virtual Chassis, in operational mode, and enter <b>show virtual-chassis</b>.</p> <p>The list of the member devices in the Virtual Chassis, along with the serial number and role appear. The primary device is indicated as <b>Master</b> under <b>Role</b>. Alternatively, you can view the serial number on the barcode sticker, which is on the rear-panel of the switch.</p>
Member <member-number>	<p>If you selected Pre Provisioning, enter the serial numbers of all the devices (from the fully-formed Virtual Chassis or based on what roles you decide to assign each Virtual Chassis member), and also select the device type and model from the list.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• You must enter the serial number of the primary device only in the Member 0 field.</li> <li>• If you do not have access to the serial console port of the virtual chassis, the first member device that is powered on is considered the primary. Enter the serial number of this device in the Member 0 field.</li> </ul> <p>Click the Add (+) icon to add a member device or the Remove (-) icon to remove a member device. For information on the number of member devices that can be added, see <a href="#">Table 41 on page 152</a>.</p> <p><b>NOTE:</b> The Routing Engine check box corresponding to Member 0 is always selected, indicating that Member 0 always acts as the primary.</p> <p>To select a member device as backup, click the Routing Engine check box corresponding to that member device; the remaining member devices act as line cards.</p>
Zero Touch Provisioning	<p>Click to enable or disable ZTP on the switch.</p> <p>If you disable ZTP, you must manually copy and paste the Stage-1 configuration on the switch during site activation. See <a href="#">“Step-by-Step Procedure” on page 169</a> for details</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Only EX Series switches running 18.4R2.7 or 18.4R3.3 firmware support ZTP.</li> <li>• EX4600 and EX4650 switches do not support Phone-Home client. You must disable ZTP and manually configure the stage-1 configuration on the switches.</li> </ul>

Table 48: Fields on the Add Switch Page (*continued*)

Field	Description
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the switch.</p> <p>The boot image is the latest device image that is uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p><b>NOTE:</b> This option is not available for a Virtual Chassis.</p> <p>To provision a Virtual Chassis in CSO, you must manually upgrade the image to either JUNOS 18.4R2.7 or 18.4R3.3.</p>
Auto activate	<p>Click the toggle button to enable or disable automatic activation of the switch. When you enable this field, zero-touch provisioning of the switch is automatically triggered when the device communicates with CSO.</p>
Activation code	<p>When the <b>Auto activate</b> field is disabled, enter the activation code to be used for manually activating the switch.</p> <p>For information, see <a href="#">“Manually Activating a Switch” on page 260</a>.</p>

### Profiles

You are directed to this page only if you have added a physical switch or a preprovisioned Virtual Chassis. If you have added an autoprovisioned Virtual Chassis; you are automatically directed to the Summary page. This is because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis.

Access Profiles	<p>Displays the access profile configured on the device from the Access Profiles page (Configuration &gt; SD-LAN &gt; Access Profiles).</p> <p>For details of the fields displayed on the Access Profiles List table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>
-----------------	---

Table 48: Fields on the Add Switch Page (*continued*)

Field	Description
Interface List	<p>Displays the list of interfaces (ports) available in CSO.</p> <p>Optional: Click the <b>Search</b> icon to search for a specific port in the list.</p> <p>For more information on the fields displayed in the Interface List table, see <a href="#">Table 49 on page 182</a>.</p> <p>Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol style="list-style-type: none"> <li>1. Click <b>Edit Configuration</b> on the top-right corner of the Interface List table. The Configuration page appears.</li> <li>2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li>3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column.  If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li>4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select Trunk port profile from the Port Profile list.</li> <li>5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

[Table 49 on page 182](#) describes the fields on the Interface List table.

Table 49: Fields on the Interface List Table on the Port Profile Page

Field	Description
Port	Name of the port.
VLAN	<p>ID of the VLAN configured on the port.</p> <p>If the port is a trunk port, all the VLAN IDs configured on the port are displayed.</p>
Native VLAN	ID of the VLAN configured to accept untagged frames.

Table 49: Fields on the Interface List Table on the Port Profile Page (*continued*)

Field	Description
Port Profile	Port profile used for configuring the port.  If the port is configured manually, the column displays <b>Manually Configured</b> .

Table 41 on page 152 lists the supported device types, combinations in the non-mixed mode, and the total number of members, supported by each device type, in a Virtual Chassis.

Table 50: Supported Device Types, Modes, and Number of Members Allowed in a Virtual Chassis

Device Type	Non-mixed Virtual Chassis Support	Number of Members Allowed in the Virtual Chassis
EX2300	Combination of the same or different models of EX2300 switches.	Up to 4 members.
EX3400	Combination of the same or different models of EX3400 switches.	Up to 10 members.
EX4300	Combination of the same or different models of EX4300 switches.	Up to 10 members.
EX4600	Combination of the same or different models of EX4600 switches.	Up to 10 members.
EX4650	Combination of the same or different models of EX4650 switches.	Up to 2 members.

Before you autoprovision or preprovision a Virtual Chassis in CSO, ensure that the Virtual Chassis is setup.

- To setup a Virtual Chassis for autoprovisioning:
  1. Decide the number of member devices in the Virtual Chassis.
  2. If you've added EX3400 or EX4300 devices as Virtual Chassis, interconnect all the corresponding member devices through Virtual Chassis ports (VCPs).

If you've added EX2300, EX4600, or EX4650 devices as Virtual Chassis, configure the 10-Gbps Ethernet ports as VCPs manually (through CLI) and interconnect the member devices.

**NOTE:** At this point, do not power on any member devices in the Virtual Chassis.

3. Decide which member device acts as the primary and power on only this device first.

**NOTE:**

- Remember the serial number of the primary device in the Virtual Chassis. This serial number is required during the site activation workflow to add this Virtual Chassis in CSO.
- For ZTP to be successful, the primary device should always be designated as Member 0. You must specify the same serial number in the Member 0 field in CSO.

4. Wait until the primary device completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

5. Power on the remaining member devices one after the other.

6. Wait until all the member devices complete booting.

After booting is complete, you can confirm that the Virtual Chassis is fully formed when all the LEDs on the VCPs are ON.

7. Connect the primary and backup device to the Internet through the management port or uplink port.

8. Verify the connectivity from the primary device to CSO or to any host on the Internet by using **ping** or **telnet** to Juniper redirect server on port 443.

- To setup a Virtual Chassis for preprovisioning:

1. Decide the number of member devices in the Virtual Chassis.

2. If you've added EX3400 or EX4300 devices as Virtual Chassis, interconnect all the corresponding member devices through Virtual Chassis ports (VCPs).

If you've added EX2300, EX4600, or EX4650 devices as Virtual Chassis, configure the uplink Ethernet ports as VCPs manually and interconnect the member devices.

**NOTE:** At this point, do not power on any member devices in the Virtual Chassis.

3. Decide which member device acts as the primary and which member device acts as the backup.



4. Of the two devices, power on the device that you want to select as the primary (Member 0), and wait until it completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

**NOTE:**

- Remember the serial numbers of all the devices in the Virtual Chassis. These serial numbers will be needed in the site activation workflow to add this Virtual Chassis in CSO.
- For ZTP to be successful, the primary should always be designated as Member 0. You must specify the same serial number in the Member 0 field in CSO.

5. Power on the device that you want to select as the backup and wait until it completes booting.

After booting is complete, the LCD panel on this device displays a menu that includes the JUNOS OS version loaded on the device, status of VCPs, status of power supplies, and so on.

6. Power on the remaining member devices one after the other.

7. Wait until all the member devices complete booting.

After booting is complete, you can confirm that the Virtual Chassis is fully formed when all the LEDs on the VCPs are ON.

8. Connect the primary and backup device to the Internet through the management port or uplink port.

9. Verify the connectivity from the primary device to CSO or to any host on the Internet by using **ping** or **telnet** to Juniper redirect server on port 443

Now that the Virtual Chassis is setup, proceed to add the Virtual Chassis in CSO. See the **Switch Details** section in [Table 46 on page 170](#) for details.

#### Release History Table

Release	Description
<a href="#">5.1.1</a>	From CSO Release 5.1.1 onward, you can add one or more EX Series switches to an existing SD-LAN site. Physical, standalone EX Series switches and EX Series Virtual Chassis are supported.

## RELATED DOCUMENTATION

| [Add a Switch to an Existing SD-WAN Site Or Next-Generation Firewall Site](#) | 168

## Enabling Integration with Mist Access Points

You can enable integration with the Mist access points to easily access and view Mist access points connected to the branch network. When integration with Mist access point is enabled, the connected access points are listed in the **Devices** tab of the **Resources > Site Management > Site Name** page. You can click the access point name to view the Mist access point details from the Mist portal that is integrated with CSO.

To enable integration with the Mist access point:

1. Select **Administration > WiFi Settings**.

The WiFi Settings page appears.

2. Click the Enable toggle button to enable integration with Mist access points.

The Login E-mail and Login Password fields appear.

3. In the Login E-mail page, enter the e-mail address that is the username for your Mist account.

4. In the Login Password page, enter the password for your Mist account.

5. Click **Save**.

After you enable integration and enter the login credentials, CSO adds the access point to the list of devices associated with a site. To view details about the access point, **Devices** tab of the **Resources > Site Management > Site Name** page and click the access point name. The Mist portal page for the selected device appears.

## Discover Mist Access Points

After Contrail Service Orchestration (CSO) is integrated with the Mist portal, you can discover the access points connected to a switch in Customer Portal. This integration enables you to launch the Mist portal from CSO and monitor the access points connected to the switch.

**NOTE:** Before you discover a Mist access point, ensure that the access point is claimed in the Mist portal.

To discover the access points connected to a switch:

1. Click **Resources > Devices**.

The Devices page appears.

2. Select the switch for which you want to discover the connected access points.

3. Click the **Discover Connected APs**.

A job is triggered to discover the access points connected to the switch.

After the job is completed successfully, the access points connected to the switch are listed in the Devices page.

#### WHAT'S NEXT

After you discover the access points, you can start monitoring them in Mist Portal; see *Monitor Mist Access Points* in *Contrail SD-LAN: Manage Branch and Campus Switching*.

## Adding a Standalone Next Generation Firewall Site

You add the standalone firewall site from the **Sites** page.

To add a standalone firewall site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke (Manual)**.

The Add On-Premise Spoke Site for *Tenant-Name* page appears.

3. Complete the configuration settings according to the guidelines provided in [Table 51 on page 189](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **Next**.

A summary page is displayed.

5. Review the configuration and modify the settings, if needed, from the Summary tab.

6. Click **OK** to add the site.

The site activation job is initiated and the Site Activation: *Site-Name* page appears displaying the progress of the steps executed for activating the firewall site.

You can click the view job details link in the pop-up to view the progress of the job.

7. • If you have disabled the Zero Touch Provisioning (ZTP) field for the firewall device, you must manually configure the stage-1 configuration on the firewall device.

To manually configure the stage-1 configuration:

- a. On the Site Activation: *Site-Name* page, after the Prestage Device step completes successfully, the click to copy stage-1 config link appears .

- b. Click the **click to copy stage-1 config** link.

The Stage-1 Configuration page appears displaying the stage-1 configuration.

- c. Copy the stage-1 configuration and log in to the CLI of the firewall device.

- d. Enter the configuration mode, paste, and commit the configuration.

After the stage-1 configuration is committed, the firewall device establishes the outbound SSH connection to connect with CSO. After the firewall device is detected, CSO executes the bootstrap and provisioning processes and completes provisioning the firewall device. The standalone firewall site status is set to **Provisioned** in the Sites page.

- If you have enabled the Zero Touch Provisioning field, CSO pushes the stage-1 and stage-2 configuration and provisions the firewall device. The standalone firewall site status is set to **Provisioned** in the Sites page.

**NOTE:** The firewall device is activated automatically, as you have already provided the activation code while creating the firewall site.

**NOTE:** You can also add a standalone firewall site using the site templates. For more information, see [“Add On-Premise Spoke Sites by Using a Site Template” on page 228](#).

**Table 51: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Standalone Firewall)**

Field	Description
<b>General</b>	
<b>Site Information</b>	
Site Name	Enter a unique name for the firewall site. You can use alphanumeric characters and hyphen (-); the maximum length is 32 characters.
Site Group	Select a site group to which you want to assign the site.
<b>Site Capabilities</b>	
WAN Capabilities	Select the WAN capability as <b>Next Gen Firewall</b> as you are adding a next generation firewall site.
<b>Address and Contact Information</b>	
Street Address	Enter the street address of the site.
City	Enter the name of the city where the site is located.
State/Province	Select the state or province where the site is located.
ZIP/Postal Code	Enter the postal code for the site.
Country	<p>Select the country where the site is located.</p> <p>You can click the <b>Validate</b> button to verify the address that you specified:</p> <ul style="list-style-type: none"> <li>• The <b>site address verification successful</b> message is displayed if the address can be verified. You can click the <b>View location on a map</b> link to see the address location.</li> <li>• If the address cannot be verified, the <b>Site address could not be validated</b> message is displayed .</li> </ul>
Contact Name	Enter the name of the contact person for the site.
Email	Enter the e-mail address of the contact person for the site.

Table 51: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Standalone Firewall) (continued)

Field	Description
Phone	Enter the phone number of the contact person for the site.  Click <b>Next</b> to continue.
<b>Advanced Configuration</b>	
Name Server IP List	Enter one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type address, press Enter, and then type the next address, and so on. DNS servers are used to resolve hostnames into IP addresses.
NTP Server	Enter the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers. Example: ntp.example.net The site must have DNS reachability to resolve the FQDN during site configuration.
Select Timezone	Select the time zone for the site.
<b>WAN</b>	
<b>Device Information</b>	
Serial Number	Enter the serial number of the firewall device. Note that the serial numbers are case-sensitive.
Auto Activate	Click the toggle button to enable or disable automatic activation of the device. This option is enabled by default.
Activation Code	If the automatic activation of the device is disabled, enter the activation code to manually activate the device. The activation code is provided by the administrator who adds the site.
Zero Touch Provisioning	Click the toggle button to enable or disable Zero Touch Provisioning (ZTP). This option is enabled by default.  If ZTP is enabled, the Boot Image field is displayed and you must select an image that supports the Phone-Home client. During ZTP, the image on the firewall device is upgraded to the image that you select for the Boot Image.  If ZTP is disabled, you must manually copy (by using CLI), the Stage-1 configuration on to the firewall device.

Table 51: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Standalone Firewall) (continued)

Field	Description
Boot Image	<p>When the Zero Touch Provisioning field is enabled, select the boot image from the drop-down list to upgrade the image on the firewall device to a version that supports Phone-Home client.</p> <p>The boot image is the device image that was previously uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process. If the boot image is not provided, then the device skips the automatic upgrade procedure. The boot image is populated based on the device template that you have selected while creating a site.</p> <p>By default, the <b>Use Image on Device</b> option is selected.</p>
In-band Management Port	<p>Select the port that you want to configure as management interface and connect it to the management device. You can configure any of the ge-0/0/x ports, where x ranges from 0 to 14, as in-band management interfaces. This field is applicable only when a switch is behind a CPE (SD-WAN or next generation firewall device).</p>
Firewall Policies	<p>Select the firewall policy that you want to deploy to the standalone firewall site. The firewall policy list is populated from the <b>Configuration &gt; Firewall &gt; Firewall Policy</b> page.</p> <p>Default: Factory_Default_Fw_Policy</p>
NAT Policies	<p>Select the NAT policy that you want to deploy to the standalone firewall site. The NAT policy list is populated from the <b>Configuration &gt; NAT &gt; NAT Policies</b> page.</p> <p>Default: Factory_Default_NAT_Policy</p>
Import Configuration	<p>Click the toggle button to automatically import firewall policies and NAT policies from a next generation firewall device to CSO. By default, this field is disabled.</p> <p><b>NOTE:</b> This field is available only when Zero Touch Provisioning is disabled.</p>
Additional Configuration	

Table 51: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Standalone Firewall) (continued)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>
Additional Configuration	



Table 51: Fields on the Add On-Premise Spoke Site for Tenant-Name Page (Standalone Firewall) (continued)

Field	Description
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary</li> <li>2. In the Configure tab fill in the attributes for each of the configuration templates. (Optional) View the CLI commands in the Summary tab.</li> <li>3. Click <b>OK</b>. You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</li> </ol>

## RELATED DOCUMENTATION

| [Adding and Provisioning a Next Generation Firewall Overview](#) | 166

## Managing LAN Segments on a Tenant Site

### IN THIS SECTION

- [Adding LAN Segments](#) | 194
- [Deploying LAN Segments](#) | 198

- Reassigning a Department to a LAN Segment | 199
- Deleting LAN Segments | 200

A network on a tenant site is divided into multiple LAN segments to improve traffic management and security. A LAN segment is a small portion of a LAN that is used by a work group. A grouping of multiple LAN segments form a department. LAN segments are separated by a bridge, router, or a switch.

You can view and manage LAN segments from the LAN tab of the *Site Name* page.

These topics describe how to manage LAN segments on a site.

## Adding LAN Segments

You add LAN segments from the *Site Name* page.

To add a LAN segment:

1. Click **Resources > Site Management**.

The Sites page appears.

2. Click the site for which you want to add the LAN segment.

The *Site-Name* page appears.

3. Click the add icon (+) on the **LAN** tab.

The Add LAN Segment page appears.

4. Complete the configuration settings according to the guidelines provided in [Table 52 on page 195](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

5. Click **OK**.

You are returned to the *Site-Name* page, where the LAN segment that you added is displayed.

Table 52: Add LAN Segment Settings

Field	Description
<b>Name</b>	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length allowed is 15 characters.</p>
<b>Type</b>  <b>NOTE:</b> This field is displayed only for LAN segments associated with enterprise hub sites.	<p>Select the type of LAN segment:</p> <ul style="list-style-type: none"> <li>• <b>Directly Connected (default)</b>—Indicates that the LAN segment is directly connected to the site.</li> <li>• <b>Dynamic Routed</b>—Indicates that the LAN segment is not directly connected to the site and is reachable by using a dynamic route. If you select this option, you must specify the dynamic routing information.</li> </ul>
<b>VLAN ID</b>	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>
<b>Department</b>	<p>Select a department to which the LAN segment is assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You can group LAN segments as departments for ease of management and for applying policies at the department-level. For LAN segments that are dynamically routed, you can assign only a data center department.</p>
<b>Protocol</b>	<p>For dynamically routed LAN segments, select the routing protocol (BGP or OSPF) to be used by the data center department to learn routes from the data center.</p>
<b>Advertise LAN Prefix</b>	<p>For dynamically routed LAN segments, click the toggle button to advertise the LAN prefix of the SD-WAN spoke site to the data center through the data center department associated with the enterprise hub.</p> <p>By default, the Advertise LAN Prefix field is disabled.</p> <p><b>NOTE:</b> You must avoid overlapping IP addresses between the SD-WAN LAN network and the datacenter network.</p>
<b>Gateway Address/Mask</b>	<p>Enter a valid gateway IP address and mask for the LAN segment. This address will be the default gateway for endpoints in this LAN segment.</p> <p>For example: 192.0.2.8/24.</p>

Table 52: Add LAN Segment Settings (*continued*)

Field	Description
<b>DHCP</b>	<p>For directly connected LAN segments, click the toggle button to enable DHCP (default).</p> <p>You can enable DHCP if you want to assign IP addresses by using a DHCP server or disable DHCP if you want to assign a static IP address to the LAN segment.</p> <p><b>NOTE:</b> If you enable DHCP, additional fields appear on the page.</p>
Additional fields related to DHCP	
<b>Address Range Low</b>	Enter the starting IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
<b>Address Range High</b>	Enter the ending IP address in the range of IP addresses that can be allocated by the DHCP server to the LAN segment.
<b>Maximum Lease Time</b>	<p>Specify the maximum duration (in seconds) for which a client can request for and hold a lease on the DHCP server.</p> <p>Default: 1440</p> <p>Range: 0 through 4,294,967,295 seconds.</p>
<b>Name Server</b>	<p>Specify one or more IPv4 addresses of the DNS server.</p> <p>To enter more than one DNS server address, type the address, press Enter, and then type the next address.</p> <p><b>NOTE:</b> DNS servers are used to resolve hostnames into IP addresses.</p>

Table 52: Add LAN Segment Settings (*continued*)

Field	Description
<b>CPE Ports</b>	<ul style="list-style-type: none"> <li>For sites with LAN capability, click the toggle button to include or exclude the CPE in the LAN segment.</li> <li>When you include the CPE in the LAN segment: <ul style="list-style-type: none"> <li>CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> <li>The <b>Switch Ports</b> field is disabled. CSO automatically assigns LAN ports on the Switch device and creates the same LAN segment on the Switch.</li> </ul> </li> <li>If you click to exclude the CPE from the LAN segment, you must specify the switch ports that connect with the LAN in the <b>Switch Ports</b> field. CSO automatically assigns LAN ports on the CPE device and creates the same LAN segment on the CPE device.</li> </ul> <p><b>NOTE:</b> You can select only one port if the CPE is a physical SRX Series device.</p> <ul style="list-style-type: none"> <li>For sites without LAN capability, the CPE Ports field is disabled and the CPE ports that you can include in the LAN segment are listed. Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</li> </ul>
<b>Switch Ports</b>  <b>NOTE:</b> This field is displayed only when LAN capability is selected for the enterprise hub.	<p>If you disable the CPE ports field, select ports on the switch to be part of the LAN segment. The Switch ports and CPE ports are mutually exclusive.</p> <p>Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</p>
<i>BGP Configuration</i>	
<b>NOTE:</b> This section is displayed only for dynamic routed LAN segments with BGP specified as the protocol.	
<b>Authentication</b>	<p>Select the BGP route authentication method to be used:</p> <ul style="list-style-type: none"> <li>None—Indicates that no authentication should be used. This is the default.</li> <li>Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> </ul>
<b>Peer IP Address</b>	Enter the IP address of the BGP neighbor.
<b>Peer AS Number</b>	Enter the autonomous system (AS) number of the BGP neighbor.
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, specify an MD5 authentication key (password), which is used to verify the authenticity of BGP packets.

Table 52: Add LAN Segment Settings (*continued*)

Field	Description
<i>OSPF Configuration</i>	
<b>NOTE:</b> This section is displayed only for dynamic routed LAN segments with OSPF specified as the protocol.	
<b>OSPF Area ID</b>	Specify the OSPF area identifier to be used for the dynamic route.
<b>Authentication</b>	<p>Select the OSPF route authentication method to be used:</p> <ul style="list-style-type: none"> <li>• Password—Indicates that password-based authentication should be used. If you choose this option, you must specify the password. (This is the default).</li> <li>• Use MD5—Indicates that MD5 is to be used for authentication. If you choose this option, you must specify an authentication key.</li> <li>• None—Indicates that no authentication should be used.</li> </ul>
<b>Password</b>	Enter the password to be used to verify the authenticity of OSPF packets.
<b>Confirm Password</b>	Retype the password for confirmation purposes.
<b>MD5 Auth Key ID</b>	<p>If you specified that MD5 should be used for authentication, enter the OSPF MD5 authentication key ID.</p> <p>Range: 1 through 255.</p>
<b>Auth Key</b>	If you specified that MD5 should be used for authentication, enter an MD5 authentication key, which is used to verify the authenticity of OSPF packets.

## Deploying LAN Segments

After you create a LAN segment and assign it to a department, you must deploy the LAN segment. You can deploy LAN segments from the *Site Name* page.

To deploy one or more LAN segments:

1. Click the **LAN** tab.
2. Select one or more LAN segments that you want to deploy and click **Deploy**.

A Deploy LAN Segment job is created.

**NOTE:** If a Deploy LAN Segment job is in progress for a site, wait for the job to finish before triggering another Deploy LAN Segment job.

If you attempt to trigger a Deploy LAN segment job when another one is running, the job fails with a message indicating that the previous LAN segment deployment job is in progress.

3. Click **More > Deploy History** to view job status and deployment history of the LAN segment.

The **Deploy LAN Segment History** page displayed.

Alternatively, you can verify the status of the job from the **Monitor > Jobs** page.

### Reassigning a Department to a LAN Segment

You can reassign the department assigned to a LAN segment from the *Site Name* page. .

**NOTE:** Departments are not applicable for SD-LAN sites.

To reassign a department:

1. Click the **LAN** tab.
2. Select a LAN segment and click **Re-assign Department**.

The Re-assign Department page appears.

**NOTE:** You cannot reassign a LAN segment that is already assigned to a department and is deployed.

3. Select the department to which the LAN segment is to be assigned.
4. Click **Deploy**.

The success message **Re-assign department succeeded.** is displayed.

5. Click **OK**.

The LAN segment with the newly assigned department is displayed on the tenant site page.

## Deleting LAN Segments

You can delete a LAN segments from the *Site Name* page.

To delete a LAN segment:

1. Select a LAN segment and click the delete icon (X) icon on the **LAN** tab.

The Delete LAN Segment page appears.

2. Click **OK** to confirm deletion.

The LAN segment is deleted.

## Managing a Single Site

You can use the **Sites** page to view the site details and to manage the site configurations for a single site. To access the page, click **Resources > Site Management** and then click the site that you want to manage.

You can perform the following tasks from this page:

- On the **Overview** tab, view detailed information about the tenant site, such as geographical location, connection details, device details, alarms, and alerts.
- On the **WAN** tab, view detailed information about the WAN links, such as topology of the hub-site WAN links, total number of hub and spoke links, total number of applications, link utilization details, link metrics based on throughput, and the maximum bandwidth capacity of a WAN link in a site. Hover over the WAN link to view bandwidth capacity.

You can add or delete a mesh tunnel between a source site and destination site. For more information about creating and deleting mesh tunnels between a source site and destination site, see [“Adding On-Demand Mesh Tunnels” on page 250](#) and [“Deleting On-Demand Mesh Tunnels” on page 251](#).

For sites owned by a tenant in a full mesh topology, you can view all the WAN link connections between WAN interfaces in all the sites. Click a site to see all connections between its WAN interfaces.

**NOTE:** This tab is available only for SD-WAN sites.

- On the **Services** tab, view services, deploy network services, start a service, and disable services for a tenant site. You can also view the topology of the site.



To deploy a network service to a site, select the service, and then select an attachment point in the topology graphic. Alternatively, drag and drop the network service to an attachment point in the topology graphic.

**NOTE:** This tab is available only for SD-WAN sites.

- On the **Policies** tab, view the following details:

**NOTE:** This tab is available only for SD-WAN sites.

- List of all policies applicable to a tenant site. Click the policy name to view the rules that are applicable for the tenant site. Click the edit icon at the end of the row to edit a policy. You are taken to the **Configuration > Policy** page, where you can edit the policies.
- Details about the tenant user who last updated the policy.
- Time when the policy was last updated.
- Deployment status of the policy—deployed or not deployed.
- Number of rules applicable to the site compared to the total number of rules applicable to the tenant.
- On the **LAN** tab, view, create, deploy, and delete a LAN segment. In addition, you can use this tab to reassign a LAN segment to a different department. See [“Managing LAN Segments on a Tenant Site” on page 193](#). You can also view all the devices in a LAN segment for an SD-LAN site and deploy one or more of these devices.

**NOTE:** Departments are not applicable for SD-LAN sites.

- On the **Devices** tab, view and manage the devices in a site. See [“About the Devices Page” on page 296](#).

**NOTE:** If you have added only one Virtual Chassis to an SD-LAN site and want to delete the Virtual Chassis, delete the site from the Site Management page.

If you have more than one Virtual Chassis in your site, you can delete the Virtual Chassis from the Devices tab.

To delete one or more EX Series switches from an SD-LAN site or to delete an EX Series switch from an SD-WAN site or Next-Generation Firewall site that has LAN capability:

- a. Select the devices that you want to delete and click the Delete icon.

The Delete Switch Options page appears.

- b. (Default) Select the Load Recovery Configuration option

The base configuration of the switches is restored.

- c. Click **OK**.

A job is initiated to delete the switches.

If the job is successful, the switches are deleted from the site.

## RELATED DOCUMENTATION

[About the Sites Page | 55](#)

[Dynamic Mesh Tunnels Overview | 249](#)

## Viewing the Sites History

### IN THIS SECTION

- [Viewing Jobs Initiated to Add and Configure Sites | 202](#)
- [Viewing Jobs Initiated to Delete Sites | 203](#)

### Viewing Jobs Initiated to Add and Configure Sites

You can view the jobs initiated to add and configure all the sites in a tenant from the Sites page.

To view the jobs executed to add and configure sites:

1. Click **Resources > Site Management**.

The Sites page appears.

2. On the Sites page, click **More > View Add Site History**.

The Add/Configure Site History page appears. The Add/Configure Site History pane lists the jobs executed for adding and configuring all the sites in a tenant.

[Table 53 on page 203](#) describes the fields displayed on the Add/Configure Site History page.

**Table 53: Fields on the Add/Configure Site History Page**

Field	Description
In Progress	Number of jobs in progress.
Success	Number of jobs that were successfully executed.
Failure	Number of jobs that failed during execution.
Name	<p>Name of the job executed to add a site.</p> <p>Click the hyperlinked name to open the Site History Tasks page, where the tasks executed to complete the job are listed. Click the task link to open the Job Status page, where you can view the date and time when various tasks were executed to complete the job.</p>
Start Date	Date and time that the job was initiated.
End Date	<p>Date and time that the job finished executing.</p> <p>If the job is in-progress or failed, no date is displayed.</p>
Status	Indicates whether the job completed successfully (Success) or not (Failed).
Log	<p>Link to the log generated for the job.</p> <p>Click the link to view the logs on the Job Status page. The Job Status page displays the date and time when the job and various tasks associated with the job were executed in chronological order.</p>

### Viewing Jobs Initiated to Delete Sites

To view jobs initiated to delete sites from a tenant:

1. Click **Resources > Site Management**.

The Sites page appears.

2. On the Sites page, click **More > View Delete History**.

The Delete History page appears. The Delete History page lists the all the jobs executed for deleting sites from a tenant.

Table 54 on page 204 details the fields displayed on the Delete Site History page.

Table 54: Fields on the Site Delete History Page

Field	Description
In Progress	Number of jobs in progress.
Success	Number of jobs that were successfully executed.
Failure	Number of jobs that failed during execution.
Name	<p>Name of the job executed to delete a site.</p> <p>Click the hyperlinked name to open the Site History Tasks page, where the tasks executed to complete the job are listed. Click the task link to open the Job Status page, where you can view the date and time when various tasks were executed to complete the job.</p>
Start Date	Date and time that the job was initiated.
End Date	<p>Date and time that the job finished executing.</p> <p>If the job is in-progress or failed, no date is displayed.</p>
Status	Indicates whether the job completed successfully (Success) or not (Failed).
Log	<p>Link to the log generated for the job.</p> <p>Click the link to view the logs on the Job Status page. The Job Status page displays the date and time when the job and various tasks associated with the job were executed in chronological order.</p>

SEE ALSO

About the Sites Page	55
Deleting a Site	223

## Edit Site Overview

### IN THIS SECTION

- [Benefits of Editing Site Parameters | 207](#)

Tenant Administrator users can edit the parameters configured for an on-premise spoke site or an enterprise hub site with the following site status:

- Configuration-Failed
- Partially-Provisioned
- Provisioned

#### NOTE:

- To edit a provisioned or a partially-provisioned provider hub site, the Operational Status of the site must be UP.
- Tenant Administrators can only edit the parameters of provider hub sites that they added.

You can add or delete WAN links, or modify the site parameters without affecting the connectivity to Contrail Service Orchestration (CSO).

For more information about how you can edit on-premise spoke sites and enterprise hub sites parameters, see [“Edit On-Premise Spoke and Enterprise Hub Site Parameters” on page 207](#).

**NOTE:** You cannot edit on-premise spoke sites with SD-LAN capability and cloud spoke sites.

You can modify:

- Site properties: Address and Contact Information, Timezone, and so on.
- Network topology by:
  - Adding or deleting a WAN link
  - Modifying the properties of existing WAN links
  - Modifying the dynamic VPN (DVPN) thresholds of a site
  - Adding or deleting mesh tags on spoke sites or enterprise hub sites

### What happens after you add a WAN link?

When you add WAN links to an on-premise spoke site or enterprise hub site:

- Secure Operations, Administration, and Maintenance (OAM) tunnels are added between the spoke and hub sites if the **Use for OAM Traffic** option is enabled.
- Data links to provider hubs are established based on the overlay tunnel parameters configured for the WAN links.
- Data links to enterprise hubs are established based on the mesh tags configured on the spoke and enterprise hub sites.
- Monitoring of the new WAN link is enabled.

### What happens to the existing DVPN and static tunnels when you modify the site parameters?

When you modify the DVPN thresholds configured for a WAN link, the changes you made do not reflect immediately. After the threshold for deleting tunnels is reached, the existing DVPN tunnels are deleted and new DVPN tunnels are added based on the modified DVPN parameters. If you want to see the changes you made immediately, manually delete the DVPN tunnels and add them again. For more information, see [“Adding On-Demand Mesh Tunnels” on page 250](#) and [“Deleting On-Demand Mesh Tunnels” on page 251](#).

When you modify the mesh tags for a WAN link, the changes you made do not automatically reflect in the static tunnels (existing between the spoke and an enterprise hub site, or between two enterprise hub sites) as this can cause data connectivity loss. To delete the existing static tunnels and add static new tunnels based on your modified parameters, you must reconfigure the static tunnels to apply the changes to the existing WAN link. To reconfigure the static tunnels, select **Reconfigure (Resources > Site Management > Site Name > WAN tab)** in Customer Portal. For more information, see [“Reconfigure Static Tunnels” on page 212](#).

### What happens after you delete a WAN link?

When you delete a WAN link from a site, all the associated tunnels (secure OAM, data links to hub sites, and DVPN tunnels) are also deleted.

**NOTE:** Before deleting WAN links on:

- Spoke devices, ensure that at least one OAM WAN link is present is enabled for the site.
- NFX 250 dual CPE devices, ensure that atleast one OAM WAN link is present on both the CPE devices.
- Enterprise hubs, ensure that there are no static tunnels connected between the spoke sites and the enterprise hub using the WAN link.

### What should you do if adding or deleting a WAN link fails?

If the addition or deletion of a WAN link fails, **PARTIALLY DEPLOYED** is displayed next to the WAN link name.

You can do one of the following:

- Retry the specific edit site job to execute the failed tasks from the Jobs page (**Monitor > Jobs**). For more information, see [“Retrying a Failed Job on Devices” on page 836](#).
- Redeploy the WAN link by clicking the **Re-Deploy WAN Link** toggle button and updating the WAN link parameters, which first deletes the WAN link and then adds it again.

**NOTE:** Redeploying a partially deployed WAN link can take several minutes based on the number of sites connected in a network.

- Leave the WAN link as is and redeploy the WAN link later.

### Benefits of Editing Site Parameters

- Improves the user experience by enabling reconfiguration of the site by simply editing the site parameters without having to delete and add the site back.
- Simplifies the onboarding of a site. Initially, you can onboard a site by enabling only one OAM WAN link. You can later modify the site parameters to configure the site as per your business needs.

### RELATED DOCUMENTATION

| [About the Sites Page | 55](#)

## Edit On-Premise Spoke and Enterprise Hub Site Parameters

Tenant administrator users can modify the parameters configured for an on-premise spoke site or an enterprise hub site from the Site Management page (**Resources > Site Management**).

**NOTE:** You cannot edit on-premise spoke sites with SD-LAN capability and cloud spoke sites.

To edit the parameters configured for an on-premise spoke site or an enterprise hub site:

1. Select **Resources > Site Management**.

The Site Management page appears.

2. Select the site whose parameters you want to modify and click the **Edit** icon (pencil).

The Edit Site page appears, displaying the same fields that are presented when you add a site.

**NOTE:** You can edit the parameters of a site in any one of the following states:

- Configuration-Failed
- Partially-Provisioned
- Provisioned

3. Modify the site parameters as described in:

- [Table 55 on page 209](#) for on-premise spoke and enterprise hub sites.
- [Table 56 on page 212](#) for on-premise spoke sites with next-generation firewall (NGFW) capability.

For more information on each parameter, see [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103](#).

4. (Optional) Review the configuration in the **Summary** tab and modify the parameters, if required.

5. Do one of the following:

- Click **Finish** to save the changes that you made to the provider hub site.
- Click **Previous** to make changes in the previous page.
- Click **Cancel** to discard the changes. A dialog box appears asking for your confirmation. Click **Yes**. The changes you made are lost and you are returned to the Site Management page.

If you click **Finish**, an Edit Site job is triggered and a job link appears on the Site Management page.

You can click the job link to view details of the job (including job status, start date and time, and end date and time). Alternatively, you can view the status of the job on the Jobs (**Monitor > Jobs**) page.

After the Edit Site job is completed successfully, a confirmation message indicating that the site is updated, appears on top of the Site Management page.



**NOTE:** The following operations take several minutes (greater than 15 minutes) based on the number of sites connected in the network:

- Deleting a WAN link
- Editing the following parameters of a WAN link:
  - Link Type
  - PPPoE
  - Address Assignment
  - Use for OAM Traffic
  - Backup Link
  - VLAN ID
- Redeploying a partially deployed WAN link

**Table 55: Editable fields for an on-premise spoke site and enterprise hub site**

Editable Parameters	Description
<b>General</b>	
<b>NOTE:</b>	
<ul style="list-style-type: none"> <li>• To edit the WAN parameters of an on-premise spoke site or an enterprise hub site, ensure that the site version is 5.3.0 or higher. If the site version is of an earlier release, you must upgrade the site. For more information, see <a href="#">“Upgrading Sites” on page 221</a>.</li> <li>• For on-premise spoke site or an enterprise hub site with 5.2.0 or earlier site versions, only advanced configuration fields are editable. You can find the version of a site in the Version column on the Site Management page.</li> <li>• For sites with both SD-WAN and SD-LAN capabilities, you can edit only the address and contact information, and advanced configuration fields.</li> </ul>	
On-Demand VPN Threshold	Edit the number of sessions specified for the Threshold for Tunnel Creation or Threshold for Tunnel Deletion.
Address and Contact Information	Edit the Street Address, City, State/Province, ZIP/Postal Code, Country, Contact Name, Email, or Phone Number.
Advanced Configuration	Edit the Domain Name Server (DNS) IP address, Network Address Translation (NTP) Server IP address, or the selected Timezone.

Table 55: Editable fields for an on-premise spoke site and enterprise hub site (*continued*)

Editable Parameters	Description
<b>WAN</b>	
You can do one of the following:	
<ul style="list-style-type: none"> <li>• Edit the WAN parameters (specified below) of an existing WAN link.</li> <li>• Add a new WAN link by clicking the toggle button next to the WAN link name and specifying the WAN parameters.</li> <li>• Delete an existing WAN link by clicking the enabled toggle button next to the WAN link name.</li> </ul>	
<b>NOTE:</b> You cannot edit the device series (for example, NFX Series to SRX Series devices) as this change requires the site to be deleted and added again.	
<b>WAN Links</b>	
Re-Deploy WAN Link	Click the toggle button to enable editing the WAN parameters of the partially deployed WAN link.
Link Type	<p>Select MPLS or an Internet link.</p> <p>If you select Internet as the link type, you can also edit Point-to-Point Protocol over Ethernet (<b>PPPoE</b>). Click the toggle button to enable PPPoE). Once enabled, in the <b>PPPoE Settings</b>, you can modify the username, password, and the authentication protocol.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• PPPoE is supported on SRX and NFX-250 on-premise spoke sites.</li> <li>• You cannot edit the <b>Access Type</b> field because you cannot add the same WAN link with different access types as it depends on the slots configured on the device. If needed, you can delete the WAN link and add a new WAN link.</li> </ul>
Egress Bandwidth	Edit the maximum bandwidth (in Mbps) allowed for the WAN link.
Address Assignment	<p>Select DHCP or STATIC.</p> <p><b>NOTE:</b> For enterprise hubs, only STATIC assignment is supported.</p> <p>If you select STATIC as the method of assigning an IP address to the WAN link, you can also edit the <b>Static IP Prefix</b> and <b>Gateway IP</b> address of the device.</p>
Public IP Address (Only for enterprise hub sites)	Edit the public IPv4 address configured for the WAN link.
<b>Advanced Settings</b>	
Provider	Edit the Internet Service Provider (ISP) name.

Table 55: Editable fields for an on-premise spoke site and enterprise hub site (*continued*)

Editable Parameters	Description
Cost/Month	Edit the cost of using the WAN link per month (range is 1 through 10000). You can select the currency of the cost from the adjacent list.
Enable Local Breakout	<p>Click the toggle button to enable or disable the local breakout on the site.</p> <p>If you enabled local breakout, you can:</p> <ul style="list-style-type: none"> <li>• Edit the <b>Breakout Options</b> to use the WAN link for both breakout and WAN traffic (default) or only for breakout traffic.</li> <li>• Click the <b>Autocreate Source NAT Rule</b> toggle button to enable or disable the automatic creation of source Network address translation (NAT) rules. If enabled, from the <b>Translation</b> list, you can edit the type of NAT to be used for the traffic (interface or pool). For pool-based NAT, you can edit one or more <b>IP Addresses</b>.</li> <li>• Click the <b>BGP Underlay Options</b> toggle button to enable or disable the BGP underlay routing. If enabled, you can edit Secondary Neighbor IP address, eBGP Peer-AS-Number, Local AS Number, Authentication for BGP route (none or MD5), whether you want to Advertise Public LAN Prefixes.</li> </ul>
Use For Fullmesh	<p>Click the toggle button to specify whether the WAN link can be a part of a full mesh topology. If enabled, you can edit:</p> <ul style="list-style-type: none"> <li>• Mesh overlay link type: If the link type is MPLS, select GRE-IPSEC or GRE as the mesh overlay link. If the link type is Internet, the value for mesh overlay link type is GRE_IPSEC.</li> <li>• Mesh tags: Select the associated mesh tags for on-demand tunnel creation.</li> </ul> <p><b>NOTE:</b> For on-premise spoke sites, you can select only one mesh tag for each WAN link. For enterprise hubs, you can select one or more mesh tags for each WAN link.</p>
Use for OAM Traffic	Click the toggle button to enable or disable sending the OAM traffic over the WAN link.
Connects to Hubs	<p>Click the toggle button to specify whether or not the WAN link of the site connects to a hub. If enabled, you can edit:</p> <ul style="list-style-type: none"> <li>• Overlay Tunnel Type: If the link type is MPLS, select GRE-IPSEC or GRE as the overlay tunnel type. If the link type is Internet, the value for tunnel overlay link type is GRE_IPSEC.</li> <li>• Overlay Peer Interface: Modify the interface name of the hub device to which the WAN link of the site is connected.</li> </ul>
Backup Link	Click the toggle button to enable or disable the backup link through which traffic can be routed when the primary link is unavailable.

Table 55: Editable fields for an on-premise spoke site and enterprise hub site (*continued*)

Editable Parameters	Description
Default Link	Click the toggle button to enable or disable the default link through which traffic can be routed when matching SD-WAN policy intents are unavailable.
Data VLAN ID	Edit the VLAN ID.  Range: 0 through 4049 (4050 to 4094 is reserved by CSO).

Table 56: Editable fields for on-premise spoke sites with NGFW capability

<b>General</b>	
Address and Contact Information	Edit the Street Address, City, State/Province, ZIP/Postal Code, Country, Contact Name, Email, or Phone Number.
Advanced Configuration	Edit the Domain Name Server (DNS) IP address, Network Address Translation (NTP) Server IP address, or the selected Timezone.
<b>Device Information</b>	
In-band Management Port	Edit the port configured as the management interface to connect to a management device. You can configure any of the ge-0/0/x ports (x ranging from 0 to 14) as in-band management interfaces.

## RELATED DOCUMENTATION

[Manually Adding On-Premise Spoke Sites | 103](#)

[Add an On-Premise Spoke Site with SD-WAN Capability | 103](#)

## Reconfigure Static Tunnels

Contrail Service Orchestration (CSO) creates static overlay tunnels between an on-premise spoke site and an enterprise hub site or between two enterprise hub sites, based on matching mesh tags associated with the WAN link.

If you modify the mesh tags for a WAN link while editing an on-premise spoke or an enterprise hub site, the existing static tunnels are not updated. To apply the changes that you made to the WAN link, you must manually reconfigure the static tunnels.

**NOTE:**

- To reconfigure the static tunnels associated with a provider hub site, you must edit the site and update the overlay tunnel information in the **Connects to Hubs** (Overlay Tunnel Type and Overlay Peer Interface) fields.
- We recommend that you reconfigure the static tunnels during a downtime or when traffic between the sites is not expected because reconfiguring the existing static tunnels can result in connectivity loss between the sites in the tenant.

A Tenant Administrator user can reconfigure static tunnels between an on-premise spoke site and an enterprise hub site or between two enterprise hub sites in Customer Portal.

To reconfigure static tunnels for a site:

1. Click **Resources > Site Management**.

The Site Management page appears.

2. Click the *Site-Name* link of the site for which you want to reconfigure the static tunnels.

The *Site-Name* page appears.

3. On the **WAN** tab, click **Reconfigure**.

The Reconfigure Static Tunnel page appears.

4. In the **Destination Name** list, enter or select the names of one or more destination sites for which you want to reconfigure the static tunnels.

5. Click **OK** to save the changes.

A Reconfigure Static Tunnel job is triggered and you are returned to the *Site-Name* page. You can click the job link to view details of the job (including job status, start date and time, and end date and time). Alternatively, you can view the status of the job on the Jobs (**Monitor > Jobs**) page.

After the job completes successfully, the static tunnels are reconfigured between the source and the destination sites that you selected. On the **WAN** tab of *Site-Name* page, the overlay topology graphic is updated with the reconfigured static tunnels.

If the Reconfigure Static Tunnel job fails, you can retry the failed job from the Jobs page or attempt to reconfigure the static links again.

## RELATED DOCUMENTATION

## Edit Site Examples

This topic provides examples on how you can use the edit site feature to configure a site for different real-time deployment scenarios. Once you have onboarded a site, you can easily configure a site by modifying the required site parameters without disrupting traffic through the site.

We start with an SD-WAN site connected to CSO through an OAM WAN link. You require only one OAM WAN link to onboard a site using ZTP.

Figure 8: A Simple SD-WAN Site

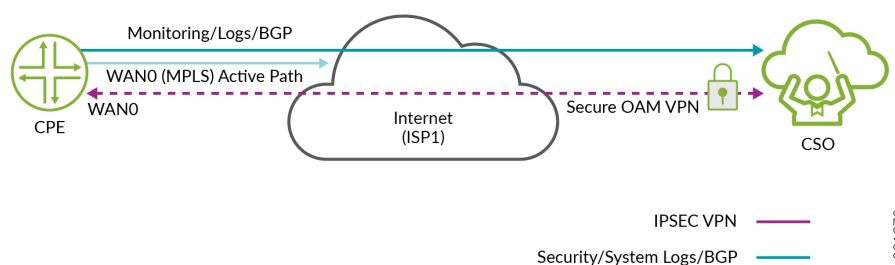


Figure 8 on page 214 shows a simple site onboarding topology with a single WAN link (WAN0). The WAN0 link has secure OAM tunnels and iBGP peering with vRR configured on it. Stage-2 configurations can be applied to the device.

You can now edit the site properties to deploy services such as SD-WAN or NGFW on this site.

To edit the WAN properties of the site in Customer Portal:

1. Click **Resources > Site Management**.

The Site Management Page appears.

2. Select the site you want to edit and click the **Edit** icon (pencil).

The Edit Site page appears.

**NOTE:** You can edit the parameters of a site in Configuration-Failed, Provisioned, or Partially-Provisioned state.

### 3. Click **Next**.

The **WAN** tab appears displaying all the WAN links and its link parameters. For more information on each parameter, see [“Edit On-Premise Spoke and Enterprise Hub Site Parameters” on page 207](#).

You can now follow the examples in this topic to know how you can edit the WAN properties for different deployments. An SD-WAN Customer Premise Equipment (CPE) is used as a branch router in the following examples.

## Example 1: Configure a Site with a LAN segment, WAN link, and Local Breakout Enabled

Figure 9: A CPE with a LAN segment, a WAN Link with Local Breakout

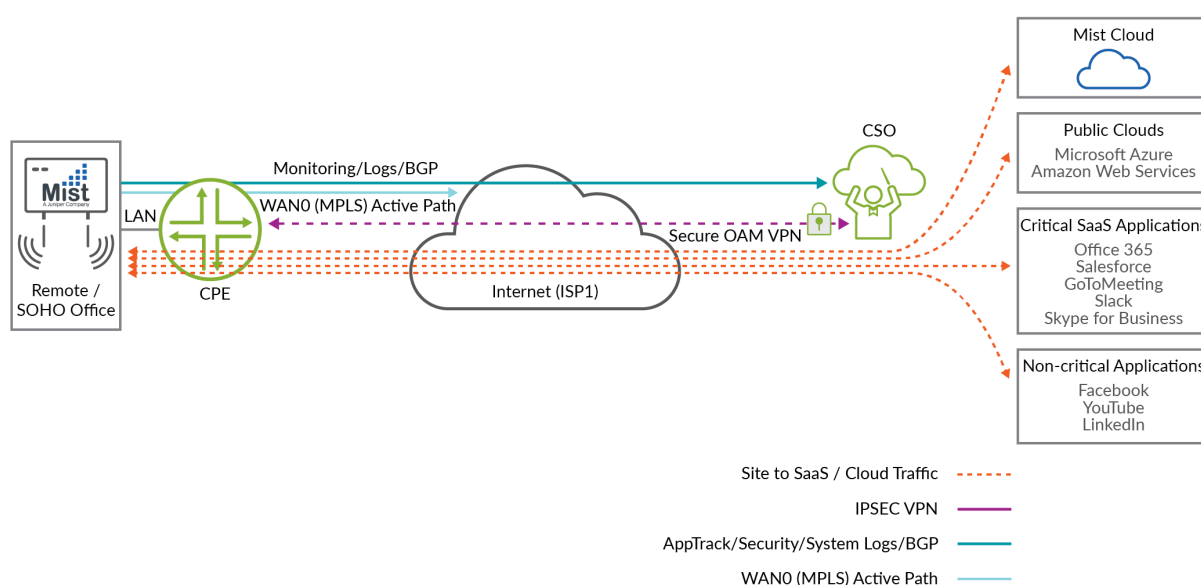


Figure 9 on page 215 shows a remote site with a LAN segment, and an active WAN link (WAN0) with local breakout and automatic NAT rule creation enabled. For information on adding LAN segments, see [“Managing LAN Segments on a Tenant Site” on page 193](#).

Traffic passes through the WAN0 link to the internet or cloud applications.

To enable local breakout and autocreate NAT rules on the WAN0 link, on the **WAN** tab of the Edit Site page, in the **Advanced Settings**, click **Enable Local Breakout** and **Autocreate Source NAT Rule** toggle buttons. Post activation of the site, basic firewall policy is auto-deployed on the WAN0 link.

## Example 2: Configure a Site with a LAN Segment, Active WAN Link, Backup WAN Link, and Local Breakout Enabled

Figure 10: A CPE Site with a LAN Segment, Active WAN link, and Backup WAN Link

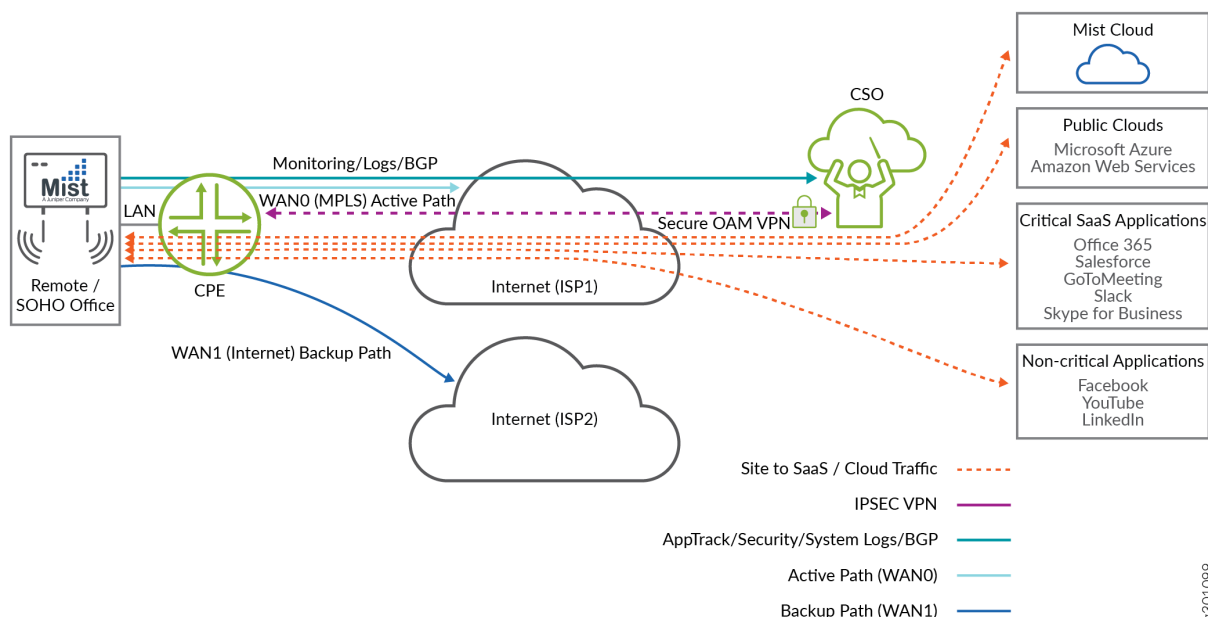


Figure 10 on page 216 shows an alternative deployment scenario to “[Example 1: Configure a Site with a LAN segment, WAN link, and Local Breakout Enabled](#)” on page 215 by adding a backup WAN link (WAN 1).

To add the WAN1 backup link, on the **WAN** tab of the Edit Site page:

1. Enable an additional WAN link by clicking the toggle button on the right of the WAN link.
2. In the **Advanced Settings** of the newly enabled WAN link, click the **Backup Link** toggle button.

The site now has local breakout with automatic NAT rule creation enabled on both the WAN links (WAN0 and WAN1). By default, the traffic goes through the WAN0 link. If there is a failure on WAN0 link, the traffic is directed to the WAN1 link.



### Example 3: Configure a Site with a LAN Segment and Two Active WAN Links

Figure 11: A CPE Site with a LAN Segment and Two Active WAN Links

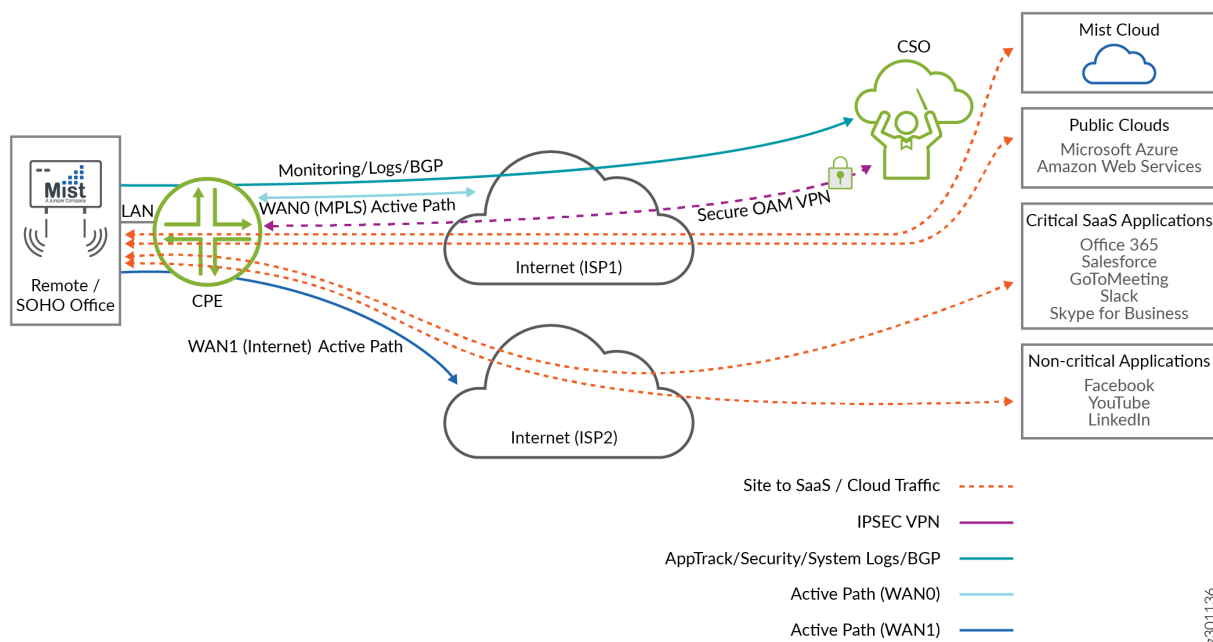


Figure 11 on page 217 shows an alternative deployment scenario to [Example 2: Configure a Site with a LAN Segment, Active WAN Link, Backup WAN Link, and Local Breakout Enabled](#) on page 216. You can configure the SDWAN policy such that some applications use MPLS link and others use Internet links. In this example, the site is configured with two active WAN links: WAN0 as an MPLS link and WAN1 as an Internet link.

To edit the link type of a WAN link, on the **WAN** tab of the Edit Site page, select **MPLS** or **Internet** from the **Link Type** list.

You can add two active WAN links or change the backup link to an active link.

To change the backup link to an active link, in the **Advanced Settings** of the selected WAN link, disable the **Backup Link** toggle button.

The application traffic passes through both the active links based on the type of traffic from different applications. In this example, for traffic from non-critical applications like YouTube, an Internet link is used.

### Example 4: Configure a Site integrated with Zscaler

Figure 12: A CPE with a LAN Segment, Two Active WAN Links, and Integrated with Zscaler

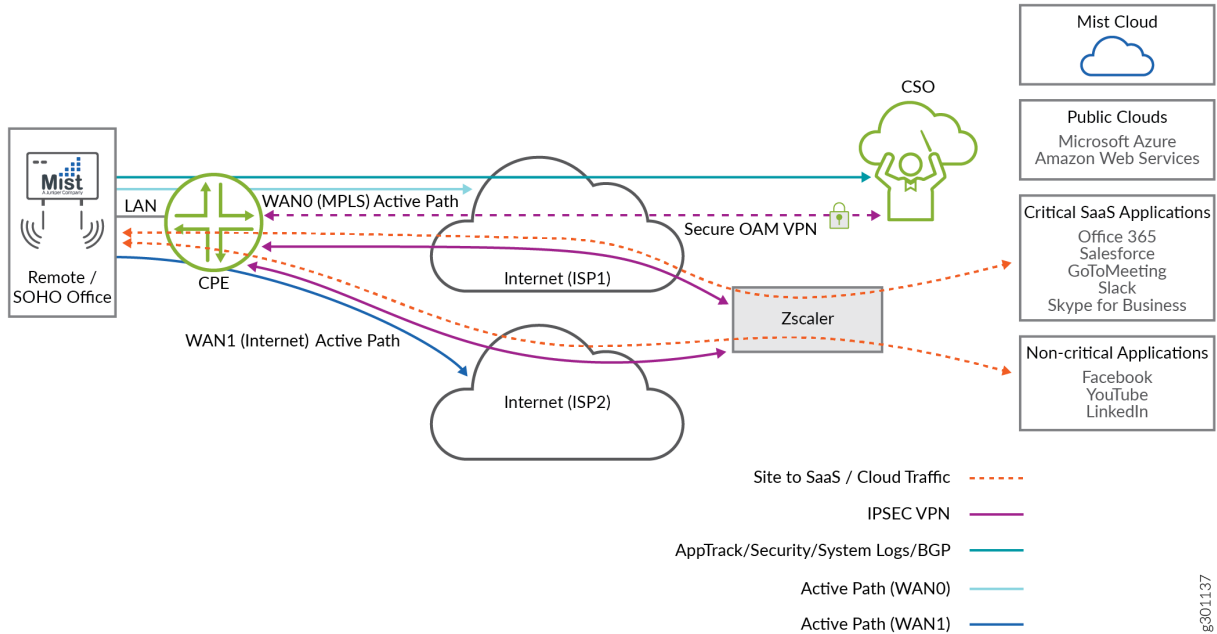


Figure 12 on page 218 shows Zscaler, a cloud-based security platform, integrated to the active WAN1 link. If you select the cloud breakout option, GRE or IPsec tunnels are formed between the CPE device to the Zscaler device and all internet traffic breaks through this tunnel. For more information, see [“Adding Cloud Breakout Settings” on page 597](#).

## Example 5: Configure Site-to-Site Traffic Through DVPN Tunnels

Figure 13: Two CPEs Connected Through DVPN Tunnels Without Hub

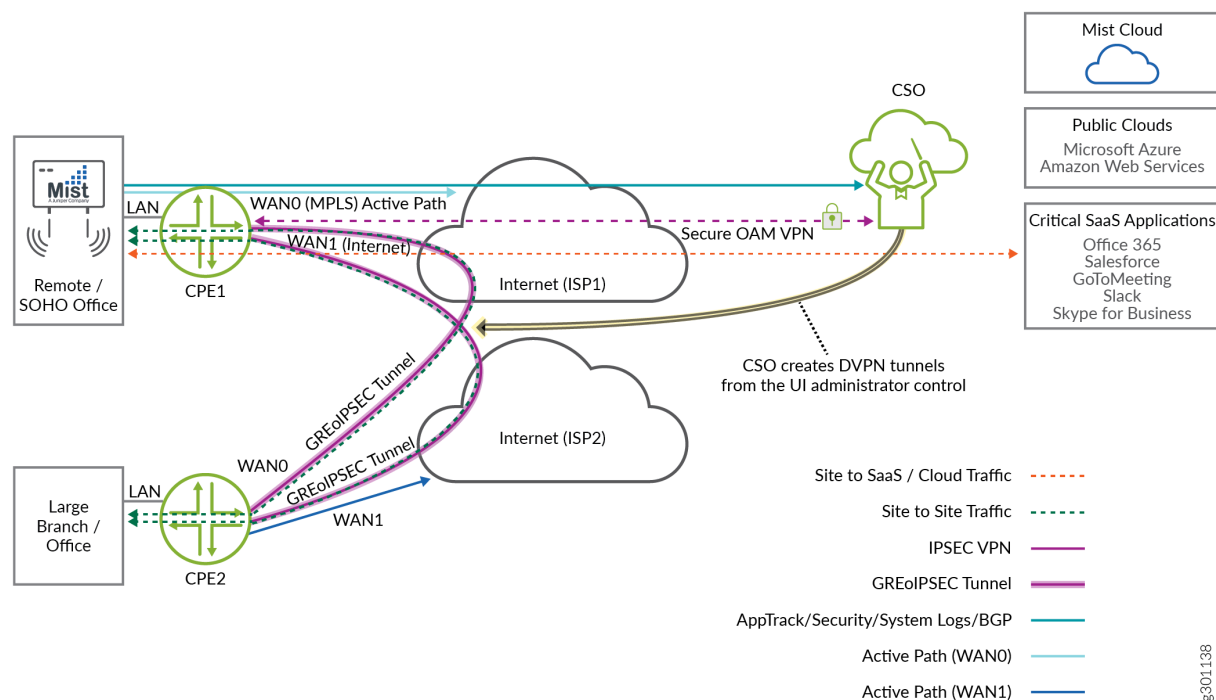


Figure 13 on page 219 shows a deployment scenario with two SD-WAN CPEs connected through Dynamic VPN (DVPN) tunnels, without connecting to any hubs.

To enable the DVPN tunnels between the two CPEs:

- Enable full mesh on the WAN links
- Add matching mesh tags on the WAN links

To enable full mesh a WAN link and select the required mesh tag, on the **WAN** tab of the Edit Site page, in the **Advanced Settings**:

1. Click **Use For Fullmesh** toggle button
2. Select the required **Mesh tag** from the list.

## Example 6: Configure a Fully Functional Site with Enterprise and Provider Hubs

Figure 14: An SD-WAN Site Connected to Enterprise and Provider Hubs

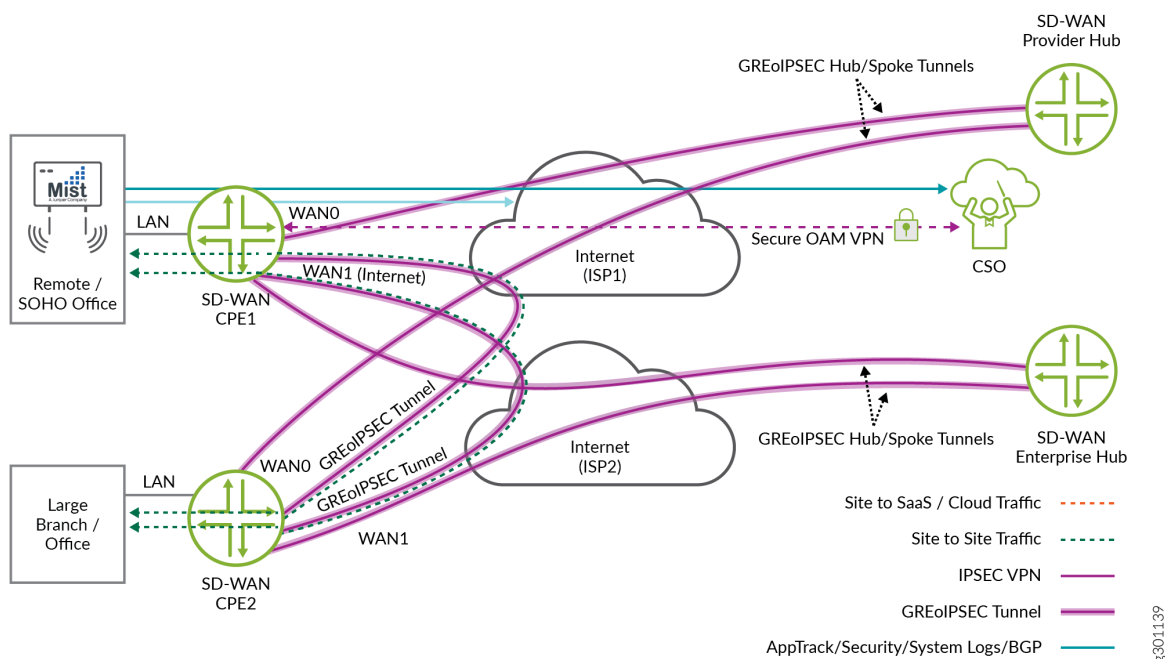


Figure 14 on page 220 shows how SD-WAN CPE1 and SD-WAN CPE2 are connected to a provider hub and an enterprise hub in all network topologies: hub-and-spoke, partial mesh using DVPN, and full mesh. You can enable AppQoE, central breakout, and other functions on the WAN links to create a fully functional SD-WAN CPE.

To connect CPEs to hubs, on **WAN** tab on the Edit Site page, in the **Advanced Settings**, click **Connects to Hubs** and select the **Overlay Peer Interface** and **Overlay Tunnel Type**.

## RELATED DOCUMENTATION

[Edit On-Premise Spoke and Enterprise Hub Site Parameters](#) | 207

## Upgrading Sites

### IN THIS SECTION

- [Upgrading a Site | 221](#)
- [Upgrading Sites in Bulk | 222](#)

You can upgrade one or more sites from the Customer Portal > Sites page.

### Upgrading a Site

#### NOTE:

- When you request Request Material Authorization (RMA) on a site that is associated with a single-CPE device and has a version earlier than the CSO version, the site version is upgraded to the CSO version. The site version is upgraded as part of the device activation and zero touch provisioning (ZTP) process of the replacement device that is performed after the RMA.
- On a site associated with an NFX dual-CPE device, if the site version is lower than that of the CSO version, you can perform RMA only at the cluster level. After RMA of the cluster, the version of the site is upgraded to that of CSO as part of the device activation and ZTP process of the replacement devices in the cluster.

To upgrade a site:

1. In Customer Portal, select **Resources > Site Management**.

The Sites page appears.

2. View the list of sites, and based on the Site Status column identify whether the site requires an upgrade.

If the site status is configured or provisioned, the upgrade is optional. If the site status is UPGRADE-REQUIRED, the site upgrade is mandatory.

You cannot upgrade a site if the site status is Created, Provision Failed, Configured, and Activation Failed.

3. Select a site and click **More > Upgrade**. The Upgrade Site:SiteName page appears.

This page displays the following information:

- Prerequisites for upgrading a site.
  - Impact of upgrading the site.
  - Time required for upgrading a site.
  - Post-upgrade tasks.
4. Choose the upgrade time.
    - Select **Run** if you want to upgrade the site immediately.
    - Select **Schedule at a later time** if you want to schedule the upgrade for a later date and time.
  5. Click **Upgrade**.

A job is created. Click the job ID to go to the Jobs page and view the status of the site upgrade.

## Upgrading Sites in Bulk

To upgrade sites in bulk:

1. In the Customer Portal, select **Resources > Site Management**.

The Sites page appears.

2. View the list of sites, and based on the Site Status column identify whether the site requires an upgrade.

If the site status is configured or provisioned, the upgrade is optional. If the site status is UPGRADE-REQUIRED, the site upgrade is mandatory.

You cannot upgrade a site if the site status is Created, Provision Failed, and Activation Failed.

3. Select one or more sites, and click **More > Upgrade**.

The Upgrade Site page appears. This page displays the following information:

- Prerequisites for upgrading sites.
- Impact of upgrading sites.
- Time required for upgrading all sites.
- Post-upgrade tasks.

You can view the upgrade summary of all sites or a specific site.

4. Choose the upgrade time.
  - Select **Run now** if you want to upgrade the site immediately.

- Select **Schedule at a later time** if you want to schedule the upgrade for a later date and time.

5. Click **Upgrade**.

A job is created. Click the job ID to go to the Jobs page and view the status of the upgrade.

## RELATED DOCUMENTATION

[Upgrading Sites Overview](#) | 64

## Deleting a Site

You can delete a site from the Sites page (**Resources > Site Management**) in the Customer Portal.

The following are applicable when you want to delete a site:

- You can delete only one site at a time.
- You cannot delete a gateway or hub site when spoke sites are connected to it. You must first delete the spoke sites associated with a gateway site or hub site and then delete the gateway or hub site.
- You cannot delete a site that is associated with site-specific policies. You must first delete the intents in the policy that are associated with the site, redeploy the policy, and then delete the site.
- You must delete service instances before attempting to delete the site.

To delete a site:

1. Click **Resources > Site Management**.

The Sites page appears.

2. Select the site that you want to delete and click the delete (trash can) icon.

The Remove Site Options dialog box appears.

3. Select one of the following options:

- **Load Recovery Configuration**—Use this option to back up any custom configuration on the device. CSO restores the custom configuration when you reinstall the device.
- **Zeorize the device**—Use this option to reset the device to the factory default configuration.

4. Click **OK**.

A job to remove the site is created. After the job completes successfully, a message appears on top of the Sites page indicating that the site is deleted.

If the delete site operation is successful, configurations associated with the site are deleted from the hub, a peer site, and virtual Route Reflectors (VRRs).

**NOTE:**

- The time taken to delete a site is dependant on the device template attached to the site.
- If the delete site operation is unsuccessful, you cannot add a new site using the same site name.

**RELATED DOCUMENTATION**

[About the Sites Page | 55](#)

[Contrail Service Orchestration Monitoring and Troubleshooting Guide](#)



# Managing Site Groups

IN THIS CHAPTER

- About the Site Groups Page | 225
- Creating Site Groups | 226

## About the Site Groups Page

To access this page, click **Resources > Site Groups**.

You can use the **Site Groups** page to view, create, and delete site groups for a tenant. Site groups enable you to group sites logically, thereby easing site management. You can use site groups to apply policies at the site group level.

You must be a Tenant Administrator user to access the **Site Groups** page.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details of existing site groups. Click the details icon that appears when you hover over the name of a site group or select **More > Detailed View**.
- Create site groups. See [“Creating Site Groups” on page 226](#).
- Edit site groups. Select a site group and click the edit icon.
- Delete site groups. To delete a site group, select it on the Site Groups page and click the delete (X) icon.

### Field Descriptions

[Table 57 on page 226](#) shows the descriptions of the fields on the **Site Groups** page.

Table 57: Fields on the Site Groups Page

Field	Description
Name	Displays the name of the site group.
Sites	Displays the names of the sites that are members of a site group.

RELATED DOCUMENTATION

| [Creating Site Groups](#) | 226

## Creating Site Groups

You can use the **Create Site Group** page to create a new site group for a tenant and add sites to it.

To create a site group:

1. Click **Resources > Site Groups**.  
The Site Groups page appears.
2. Click the add icon (+).  
The **Create Site Group** page appears.
3. Enter a unique name for the site group.
4. From the list of sites in the **Available** column, select the sites that you want to include in the new group and click the greater-than icon (>).  
The selected sites are moved to the **Selected** column.
5. Click **OK**. If you want to discard your changes, click **Cancel** instead.  
The new site group is displayed on the **Site Groups** page.

RELATED DOCUMENTATION

| [About the Site Groups Page](#) | 225

# Managing Site Templates

## IN THIS CHAPTER

- [About the Site Templates Page | 227](#)
- [Add On-Premise Spoke Sites by Using a Site Template | 228](#)
- [Cloning, Editing, and Deleting Site Templates | 230](#)
- [Adding a Site Template | 232](#)
- [Adding and Configuring Sites by Importing a JSON File | 243](#)

## About the Site Templates Page

To access this page, click **Resources > Templates > Site Templates**.

You can use the Site Templates page to add site templates, edit, clone, delete, and view existing site templates.

A site template enables you to specify values for many of the attributes used to add a site. You can then use the site template to add multiple sites that share the same set of values (for attributes already specified in the site template) and only specify values for site-specific attributes.

Site templates are available only for on-premise spoke sites.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a site template. See [“Adding a Site Template” on page 232](#)
- Edit, clone, or delete site templates. See [“Cloning, Editing, and Deleting Site Templates” on page 230](#).
- View site template details. The site templates are displayed in card format. For each site template you can view the following details:
  - Template name
  - Published by
  - Capability type

- Number of devices attached
- Number of WAN links, if applicable
- Number of sites that the device template is attached to
- Date and time that the template was last updated

## Add On-Premise Spoke Sites by Using a Site Template

Using a site template, you can add on-premise spoke sites in bulk either manually or by importing the JavaScript Object Notation (JSON) file that contains on-premise site attributes.

To add on-premise spoke sites by using a site template:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click **Add** and select **Add On-Premise Spoke Site (Using Site Template)**.

The Add Spoke Site page appears listing the existing site templates.

3. Select the site template and click **Continue**.

The Add Spoke Site page appears.

4. The **Site Template** field displays the name of the site template that you have selected. If you want to change the site template, click the **Change** link and select another site template of your preference from the Add Spoke Site page.

5. Do one of the following to add on-premise spoke sites:

- To add on-premise spoke sites in bulk by importing the JSON file:
  - a. Select **Import from file** in the Site Data field.
  - b. (Optional) Click **Download sample JSON file** to download a sample JSON template and use it to specify site data that you can later import.
  - c. Click **Browse** to upload the JSON file.
  - d. Navigate to the folder and select the JSON file.
  - e. Click **Open**.
- To manually add on-premise spoke sites in bulk, select **Add Manually** in the Site Data field.

The Site 0 tab appears listing the fields based on the capabilities that were selected for the site template. For example, if the site template that you selected has only LAN capability, only general information fields and fields related to LAN capability are displayed.

6. Complete the configuration for Site0.

For more information on the fields for adding an on-premise spoke site with the following capabilities:

- WAN capability as SD-WAN, see [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103.](#)
- WAN capability as Next Gen Firewall, see [“Adding a Standalone Next Generation Firewall Site” on page 187.](#)
- WAN capability as SD-WAN and LAN capability, see [“Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities” on page 121.](#)
- WAN capability as Next Gen Firewall and LAN capability, see [“Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities” on page 155.](#)
- Only LAN capability, see [“Add an On-Premise Spoke Site with LAN Capability” on page 141.](#)

7. Click the plus icon (+) to add more sites and complete the configuration for each site.

8. Review the sites.

If there are validation errors, an error icon appears in the left pane (next to the site name ). You must ensure that all errors are resolved before proceeding.

9. (Optional) You can remove a site by clicking the **X** icon when you hover over the site name in the left pane.

10. Click **Save**.

A confirmation message is displayed indicating that the job is created for adding sites in bulk.

## RELATED DOCUMENTATION

[Adding a Site Template | 232](#)

[About the Site Templates Page | 227](#)

[Cloning, Editing, and Deleting Site Templates | 230](#)

## Cloning, Editing, and Deleting Site Templates

### IN THIS SECTION

- [Cloning Site Templates | 230](#)
- [Editing Site Templates | 231](#)
- [Deleting Site Templates | 231](#)

You can clone, edit, or delete a site template.

### Cloning Site Templates

You can clone a site template when you want to quickly create a copy of an existing site template.

To clone a site template:

1. Select **Resources > Templates > Site Templates**.

The Site Template page appears.

2. Select the site template that you want to clone.

3. Click **Clone**.

The Clone Site Template page appears.

4. Specify a unique name for the site template that can contain alphanumeric characters and hyphens (-); the maximum length is 32 characters.

5. Click **OK** to save your changes.

A confirmation message appears, indicating the status of the clone operation.

The site template that you have cloned is displayed on the Site Templates page. You can modify the cloned site template as needed by clicking the edit icon.

## Editing Site Templates



**WARNING:** You cannot edit a site template if you have associated the site template with a site.

To edit a site template:

1. Select **Resources > Templates > Site Templates**.

The Site Template page appears.

2. Select the site template that you want to edit.
3. Click the edit icon (pencil) to modify the parameters.

The Edit Site Template page appears.

4. Edit the fields, as needed. Modify the fields according to the guidelines provided in [“Adding a Site Template” on page 232](#).

**NOTE:** You cannot edit the site template name.

5. Click **OK** to save your changes.

A confirmation message appears, indicating the status of the edit operation. You can use the modified site template for creating multiple on-premise spoke sites.

## Deleting Site Templates



**WARNING:** You cannot delete a site template if you have associated the site template with a site.

To delete a site template:

1. Select **Resources > Templates > Site Templates**.

The Site Template page appears.

2. Click the site template that you want to delete and click the delete icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the site template.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

[About the Site Templates Page | 227](#)

[Adding a Site Template | 232](#)

[Add On-Premise Spoke Sites by Using a Site Template | 228](#)

## Adding a Site Template

You can add a site template for an on-premise spoke site. A site template can be added with one WAN capability (SD-WAN or Next Gen Firewall), LAN capability, or both WAN and LAN capabilities.

To add a site template:

1. Select **Resources > Templates > Site Templates**.

The Site Templates page appears.

2. Click the **+** icon.

The Add Site Template page appears.

3. Complete the configuration according to the guidelines in [Table 58 on page 233](#).

The fields that are displayed in the Add Site Template page are based on the LAN and WAN capabilities that you choose. The last column of [Table 58 on page 233](#) indicates the capabilities for which a field is applicable.

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.

The site template is added and listed in the Site Templates page. You can use the site template to add multiple on-premise spoke sites.



Table 58: Fields on the Add Site Template Page

Field	Description	Applicable To
<b>General Tab</b>		
Template Name	Specify a unique name for the site template that can contain alphanumeric characters and hyphens (-); the maximum length is 32 characters.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
Description	Enter a description for the site template; the maximum length is 512 characters.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
<b>Site Information</b>		
Site Group	Select a site group to which you want to assign the template. Example: sdwan-spoke	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
<b>Site Capabilities</b>		
WAN Capabilities	<p>Select one of the following WAN capabilities to include LAN capabilities for the site template:</p> <ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• You must select at least one WAN capability or a LAN capability.</li> <li>• The WAN capabilities that are displayed here are filtered based on the service type that are assigned to the tenant.</li> </ul>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul>
LAN Capabilities	Select <b>LAN</b> to include LAN capabilities for the site template.	LAN
<b>Configuration</b>		
Primary Provider Hub	Select the provide hub site (or primary provider hub site in case of multihoming) to which the spoke site must connect.	SD-WAN
Secondary Provider Hub	<p>Select the secondary provider hub site to which this site must connect.</p> <p>This site connects to the secondary provider hub site when the primary provider hub is down.</p>	SD-WAN

Table 58: Fields on the Add Site Template Page (*continued*)

Field	Description	Applicable To
Primary Enterprise Hub	Select the primary enterprise hub with which you want to connect the spoke site. If you specify a enterprise hub, then the initial site-to-site traffic as well as the central breakout (backhaul) traffic (if applicable) is sent through the enterprise hub instead of the hub site.	SD-WAN
Secondary Enterprise Hub	Select the secondary enterprise hub for this spoke site.  The spoke site connects with secondary enterprise hub when the primary enterprise hub is down.	SD-WAN
Create Threshold	Enter the maximum number of sessions closed between the connected sites in a duration of two minutes at which full mesh is created between the two sites.  The default value is 5.  For example, if you specify the number of sessions as 5, dynamic mesh tunnels are created if the number of sessions closed between two spoke sites in 2 minutes exceeds 5.	SD-WAN
Delete Threshold	Enter the number of sessions closed between the connected sites in a duration of 15 minutes below which full mesh is deleted between the two sites.  The default value is 2.  For example, if you specify the number of sessions closed as 2, dynamic mesh tunnels are deleted if the number of sessions closed is lesser than or equal to 2.	SD-WAN

**Address and Contact Information**

Street Address	Enter the street address of the site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
City	Enter the city where the site is located.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
State/Province	Select the state or province where the site is located.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>

Table 58: Fields on the Add Site Template Page (continued)

Field	Description	Applicable To
ZIP/Postal Code	Enter the postal code for the site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
Country	<p>Select the country where the site is located. Click the <b>Validate</b> button to verify the address. The <b>site address verification successful</b> message is displayed if the address is correct. You can click the <b>View location on a map</b> link to see the address location.</p> <p>If you enter the wrong address and click the <b>Validate</b> button to verify the address, the <b>Site address could not be validated message</b> is displayed.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
Contact Name	Enter the name of the contact person at the site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
Email	Enter the e-mail address of the contact person at the site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
Phone	Enter the phone number for the site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
<b>Advanced Configuration</b>		
Domain Name Server (DNS)	<p>Specify one or more IPv4 addresses of the DNS server. To enter more than one DNS server address, type the address, press Enter, and then type the next address, and so on..</p> <p>DNS servers are used to resolve hostnames into IP addresses.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
NTP Server	<p>Specify the fully qualified domain names (FQDNs) or IP addresses of one or more NTP servers.</p> <p>Example: ntp.example.net</p> <p>The site must have DNS reachability to resolve the FQDN during site configuration.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>

Table 58: Fields on the Add Site Template Page (*continued*)

Field	Description	Applicable To
Select Timezone	Select the time zone in which the site is located from the drop-down list.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> <li>• LAN</li> </ul>
<b>WAN Tab</b>		
<b>Device Template</b>		
Device Series	<p>Select the device series to which the CPE belongs (SRX, NFX150, or NFX250) and select a device template for the selected device series.</p> <p>The device template contains information for configuring a device.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> </ul>
Device Model	For NFX150 devices, select a device model from the list. Device models are listed based on the connection plan that you select.	<ul style="list-style-type: none"> <li>• SD-WAN</li> </ul>
Auto Activate	<p>Click the toggle button to enable or disable automatic activation of the CPE when the CPE is detected by CSO ( management status of the device is Device_Detected).</p> <p>When you enable this field, zero-touch provisioning of the device is automatically triggered after the site with the CPE is added to CSO.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul>
Pre Staged	<p>Click the toggle button to use the preconfigured settings for the firewall device. The preconfigured settings are as follows:</p> <ul style="list-style-type: none"> <li>• Device Template—NGSRXZTP</li> <li>• In-band Management Port—ge-0/0/0 port</li> <li>• Firewall Policies—Factory_Default_Fw_Policy</li> <li>• NAT Policies—Factory_Default_NAT_Policy</li> </ul>	Next Gen Firewall
Boot Image	<p>Select the boot image from the drop-down list if you want to upgrade the image for the CPE device.</p> <p>The boot image is the latest build image uploaded to the image management system. The boot image is used to upgrade the device when the CSO starts the ZTP process.</p> <p>If the boot image is not provided, then the device skips the procedure to upgrade the device image. The boot image (NFX or SRX) is populated based on the device template that you have selected while adding a site. See <i>Uploading a Device Image</i>.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul>

Table 58: Fields on the Add Site Template Page (continued)

Field	Description	Applicable To
In-band Management Port	Select the port that you want to configure as management interface and connect it to the management device. You can configure any of the ge-0/0/x ports, where x ranges from 0 to 14, as in-band management interfaces.	Next Gen Firewall
Firewall Policies	Select the firewall policy that you want to deploy. The firewall policy list is populated from the <b>Configuration &gt; Firewall &gt; Firewall Policy</b> page.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul>
NAT Policies	Select the NAT policy that you want to deploy to the standalone firewall site. The NAT policy list is populated from the <b>Configuration &gt; NAT &gt; NAT Policies</b> page.	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• Next Gen Firewall</li> </ul>
WAN 0	<p>Click the toggle button to enable or disable this WAN link. By default, the WAN_0 link is enabled.</p> <p>When you enable a WAN link, fields related to the WAN link appear. Fields marked with an asterisk (*) must be configured to proceed.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> </ul>
Link Type	Select the underlay network type (MPLS or Internet) of the WAN link that is connected to the on-premise spoke site.	<ul style="list-style-type: none"> <li>• SD-WAN</li> </ul>
Egress Bandwidth	Enter the maximum bandwidth (in mega bits per second [Mbps]) to be allowed for the WAN link. Range: 1 through 10,000	SD-WAN
Address Assignment	<p>Select the method for IP address assignment. The options available are:</p> <ul style="list-style-type: none"> <li>• DHCP—Select DHCP to assign IP address by using a DHCP server.</li> <li>• STATIC—Select STATIC to assign a static IP address.</li> </ul>	SD-WAN
<b>Advanced Settings</b>		
Provider	Enter the name of the service provider who is responsible for providing the WAN link.	SD-WAN
Cost/Month	<p>Enter the cost per month (in the specified currency) of the subscribed bandwidth.</p> <p>Range: 1 through 10,000</p>	SD-WAN
Enable Local Breakout	Click the toggle button to enable local breakout on the WAN link. By default, local breakout is disabled.	SD-WAN

Table 58: Fields on the Add Site Template Page (*continued*)

Field	Description	Applicable To
Use For Fullmesh	Click the toggle button to specify that the WAN link is part of a fullmesh topology.	SD-WAN
Connects To Hubs	Click the toggle button to specify that the WAN link of the site connects to a hub.  <b>NOTE:</b> <ul style="list-style-type: none"> <li>For sites with a single CPE, you must enable at least one WAN link to connect to the hub so that OAM traffic can be transmitted.</li> <li>For sites with a dual CPE, you must enable at least one WAN link per device to connect to the hub so that OAM traffic can be transmitted.</li> </ul>	SD-WAN
Backup Link	Select a backup link through which traffic can be routed when the primary (other) links are unavailable.	SD-WAN
Default Link	Select one or more links to be used for routing traffic in the absence of matching SD-WAN policy intents.	SD-WAN
Data VLAN Id	Enter the VLAN ID that is associated with the data link. A data VLAN identifier is an integer.  Range: 0 through 65,535	SD-WAN
WAN 1	Click the toggle button to enable or disable this WAN link. By default, the WAN 1 link is disabled.  Refer to the fields described for WAN 0 for an explanation of the fields.	<ul style="list-style-type: none"> <li>SD-WAN</li> </ul>
WAN 2	Click the toggle button to enable or disable this WAN link. By default, the WAN 2 link is disabled.  Refer to the fields described for WAN 0 for an explanation of the fields	SD-WAN
WAN 3	Click the toggle button to enable or disable this WAN link. By default, the WAN 3 link is disabled.  Refer to the fields described for WAN 0 for an explanation of the fields	SD-WAN
<b>Additional Configuration</b>		

Table 58: Fields on the Add Site Template Page (*continued*)

Field	Description	Applicable To
Configuration Templates List	<p>Select one or more configuration templates from the list. This list is filtered based on the device that you select.</p> <p>Configuration templates are stage-2 templates that are added by your OpCo administrators or SP administrators or Tenant administrators.</p> <p><b>NOTE:</b> You must set the parameters of the configuration templates that you have selected before you move to the LAN section.</p> <p>To set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>.</li> </ol> <p>The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary.</p> <ol style="list-style-type: none"> <li>2. In the Configure tab, enter values for the parameters in each configuration templates.</li> </ol> <p>(Optional) View the CLI commands in the Summary tab.</p> <ol style="list-style-type: none"> <li>3. Click <b>OK</b>.</li> </ol> <p>You have added and set the parameters for the configuration templates that are part of the site template that you are creating.</p>	<ul style="list-style-type: none"> <li>• SD-WAN</li> <li>• LAN</li> <li>• Next Gen Firewall</li> </ul>
LAN Tab		

Table 58: Fields on the Add Site Template Page (*continued*)

Field	Description	Applicable To
Switch Devices	<p>Displays the list of switches that you have added to the site.</p> <ul style="list-style-type: none"> <li>To add a switch, click the + icon on the top, right corner of the Switch Devices table. The Add New Switch page appears. You can add multiple switches only to an SD-LAN site.</li> </ul> <p>See <a href="#">“Fields on the Add New Switch page” on page 81</a> in the <b>Add an On-Premise Spoke Site with LAN Capability</b> topic for details.</p> <p><b>NOTE:</b> You cannot specify the serial numbers of member devices (for a Virtual Chassis) when creating a site template. You can specify the serial numbers when you use this template to create an on-premise spoke site.</p> <ul style="list-style-type: none"> <li>To edit details of a switch, select the switch and click the <b>Edit</b> icon on the top right corner of the Switch Devices table. The Edit Switch Details page appears, displaying the same parameters that you configured while adding a switch.</li> </ul> <p>Modify the parameters as needed and Click <b>OK</b>. The changes that you made for the switch are saved and the updated parameters appear on the Switch Devices table.</p> <ul style="list-style-type: none"> <li>To delete one or more switches, select the switches and click the <b>Delete</b> icon on the top right corner of the Switch Devices table.</li> <li>To manage the configuration of one or more switches added to the site, select the switches from the list and click <b>Configuration</b>.</li> </ul> <p>The Switch Configuration page appears. See <a href="#">Table 60 on page 242</a> for details.</p>	LAN
LAN Segments	<p>Displays the VLANs and their IDs that you configure on the switch.</p> <ul style="list-style-type: none"> <li>Optional: To add a VLAN, click the + icon on the top, right corner of the LAN Segments table. The Create LAN Segment page appears. See <a href="#">Table 59 on page 241</a> to complete the configuration.</li> <li>To edit details of a VLAN, select the VLAN and click the <b>Edit</b> icon (pencil) on the top right corner of the LAN Segments table. The Edit LAN Segment page appears, displaying the same fields that are presented when you add a VLAN.</li> </ul> <p>Modify the parameters as needed and click <b>OK</b>. The changes that you made for the LAN segment are saved and the updated parameters appear on the LAN Segments table.</p> <ul style="list-style-type: none"> <li>To delete one or more VLANs, select the VLANs and click the <b>Delete</b> icon) on the top right corner of the LAN Segments table.</li> </ul>	LAN



Table 59: Fields on the Create LAN Segment Page

Field	Description
<b>Create LAN Segment</b>	
Name	<p>Enter a name for the LAN segment.</p> <p>The name for a LAN segment should be a unique string of alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length is 15 characters.</p>
VLAN ID	<p>Enter the VLAN ID for the LAN segment.</p> <p>Range: 2 through 4093.</p>
Department	<p>Select a department to which the LAN segment is to be assigned.</p> <p>Alternatively, click the <b>Create Department</b> link to create a new department and assign the LAN segment to it. See <a href="#">“Adding a Department” on page 816</a> for details.</p> <p>You group LAN segments as departments for ease of management and for applying policies at the department-level.</p>
Gateway Address/Mask	Enter a valid gateway IP address and mask for the LAN segment; for example, 192.0.2.8/24.
DHCP	<p>For directly connected LAN segments, click the toggle button to enable DHCP. DHCP is disabled by default.</p> <p>You enable DHCP if you want to assign IP addresses by using a DHCP server. You disable DHCP if you want to assign a static IP address to the LAN segment.</p>
CPE Ports	<p>Click the toggle button to include or exclude the CPE in the LAN segment. When you include the CPE in the LAN segment:</p> <ul style="list-style-type: none"> <li>• CPE ports that you can include in the LAN segment are listed.</li> </ul> <p>Select the ports from the <b>Available</b> column and click the right-arrow to move the ports to the <b>Selected</b> column.</p>

[Table 60 on page 242](#) describes the tabs on the Switch Configuration page.

The Access Profiles tab and Port Profiles tab are available only if you have added a physical switch or a preprovisioned Virtual Chassis, and the selected switches are of the same device type and model. If you have added an autoprovisioned Virtual Chassis, only the Configuration Templates tab is available. The Port Profiles tab is unavailable because, in the case of autoprovisioning, port profiles can be configured only after provisioning the Virtual Chassis. The Access Profiles tab is unavailable because the access profile requires a RADIUS authentication server to be added to it. The parameters related to communication

between the RADIUS server and the supplicant are defined in the authentication profile , which is, in turn, referenced by the port profile.

**Table 60: Tabs on the Switch Configuration page**

Tab	Description
Access Profiles	<p>Displays the list of access profiles available in CSO. The list is populated from the Access Profiles page (<b>Configuration &gt; SD-LAN &gt; Access Profiles</b>).</p> <p>You can also click the <b>Search</b> icon to search for a specific access profile in the list.</p> <p>For details of the fields displayed on the Access Profiles table, see <a href="#">“About the Access Profiles Page” on page 749</a>.</p> <p>Optional: You can select an access profile from the list to assign it to the switch.</p>
Port Profiles	<p>Displays the list of interfaces (ports) available in CSO.</p> <p>You can also click the <b>Search</b> icon to search for a specific port in the list.</p> <p>Optional: To assign port profiles and VLAN IDs to the ports:</p> <ol style="list-style-type: none"> <li>1. Select one or more ports and click <b>Edit Configuration</b> on the top right corner, above the Interface List table. The Edit Port Configuration page appears.</li> <li>2. From the <b>Port Profile</b> list, select a port profile to be assigned to the port. <b>NOTE:</b> The port profile must already be created from the Port Profiles page (<b>Configuration &gt; SD-LAN &gt; Port Profiles</b>) for it to be listed here.</li> <li>3. In the <b>VLAN</b> field, if the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the <b>Available</b> column and clicking the right-arrow to move them to the <b>Selected</b> column. If the port is configured as an access port in the port profile, you can assign only one VLAN.</li> <li>4. From the <b>Native VLAN</b> list, select a VLAN that you want to configure as native. This option appears only if you select a Trunk port profile from the Port Profile list.</li> <li>5. Click <b>OK</b> to complete the configuration. You are returned to the Add On-Premise Spoke Site page.</li> </ol>

Table 60: Tabs on the Switch Configuration page (*continued*)

Tab	Description
Configuration Templates	<p>Displays the list of configuration templates. This list is filtered based on the device that you select.</p> <p>Configuration templates are predefined stage-2 templates that are added by your OpCo administrators or SP administrators.</p> <p>To add configuration templates and set the parameters for the selected configuration templates:</p> <ol style="list-style-type: none"> <li>1. After you select one or more configuration templates, click <b>Set Parameters</b>. The <b>Device Configurations</b> page appears. This page consists of two tabs—Configure and Summary.</li> <li>2. In the Configure tab, enter values for the parameters in each configuration templates.</li> <li>3. (Optional) View the CLI commands in the Summary tab.</li> <li>4. Click <b>OK</b>.</li> </ol> <p>You have added and set the parameters for the configuration templates.</p>

## RELATED DOCUMENTATION

[About the Site Templates Page | 227](#)
[Cloning, Editing, and Deleting Site Templates | 230](#)
[Add On-Premise Spoke Sites by Using a Site Template | 228](#)

## Adding and Configuring Sites by Importing a JSON File

You can add and configure one or more sites in CSO by uploading a JavaScript Object Notation (JSON) file that contains the parameters for adding and configuring the sites.

Before you begin, ensure that the JSON file contains all the parameters required for each site that you want to add or configure.

**NOTE:** We recommend that you create the JSON file by referring to the sample JSON file provided by CSO. Refer to Step 3 of the procedure for downloading and modifying the sample JSON file..

To add and configure multiple sites by uploading a JSON file:

1. Click **Resources > Site Managemnet**.

The Sites page appears.

2. Click **Add** and select **Import Sites**.

The **Import Sites** page appears.

3. (Optional) Download a sample JSON file by clicking the **Download Sample JSON** link. Edit the parameters based on your requirements and save the file.

4. Click **Browse** and navigate to the directory that contains the JSON file.

5. Select the file and click **Open**.

6. Click **Import**.

A message is displayed indicating that the file is imported to CSO. After the file is imported to CSO successfully, you are returned to the Sites page, where you can view the newly added sites:

- If you enabled automatic activation for the sites, CSO activates and provisions the sites and sets the status of the sites to PROVISIONED.
- If you did not enable automatic activation, CSO sets the status of the sites to CONFIGURED. You must manually activate the sites after which CSO provisions the sites. See [“Activating a CPE Device” on page 257](#) or [“Activating Dual CPE Devices \(Device Redundancy\)” on page 282](#).

After the sites are activated and provisioned, you can install certificates and create policies for the sites. See the *Managing Policies, Profiles, and Proxies* section in this guide for details.

## RELATED DOCUMENTATION

[About the Sites Page | 55](#)

[Manually Adding On-Premise Spoke Sites | 103](#)

# Managing Mesh Tags

## IN THIS CHAPTER

- [Mesh Tags Overview | 245](#)
- [About the Mesh Tags Page | 246](#)
- [Creating User-defined Mesh Tags | 247](#)

## Mesh Tags Overview

A mesh tag is a label that you associate with a WAN link of a spoke site. Mesh tags provide you the flexibility to establish overlay tunnels between WAN links of two different spoke sites. If WAN links are associated with same mesh tags, CSO creates a VPN tunnel between WAN links of spoke sites (enterprise hub to enterprise hub, on-premise spoke site to enterprise hub, on-premise spoke site to on-premise spoke site).

**NOTE:** Mesh tags are applicable only for SD-WAN sites in the Real-time optimized mode (Full mesh).

Mesh tags can be predefined (MPLS and Internet) or user-defined. You can create user-defined mesh tags on the **Administration > Mesh Tags** page.

**NOTE:** With mesh tags, you can connect two WAN links even if the link types (MPLS and Internet) are different.

For example, consider that a tenant has two sites—Site A and Site B. Site A has four WAN links (WAN\_A0 through WAN\_A3) and Site B has three WAN links (WAN\_B0 through WAN\_B2). WAN\_A0 and WAN\_B0 are associated with MPLS (predefined mesh tag), and WAN\_A1 and WAN\_B1 are associated with Internet (predefined mesh tag).

A tunnel is established between WAN-A0 and WAN-B0 because they are associated with the same predefined mesh tags.

**NOTE:** You can associate mesh tags for up to three WAN links.

RELATED DOCUMENTATION

[About the Mesh Tags Page | 246](#)

[Creating User-defined Mesh Tags | 247](#)

About the Mesh Tags Page

To access this page, select **Resources > Mesh Tags** in Customer Portal.

Use this page to view predefined mesh tags and create user-defined mesh tags. Mesh tags connect WAN links of different sites. CSO creates a tunnel between WAN links if they are associated with the same mesh tag (user-defined or predefined).

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a mesh tag—See [“Creating User-defined Mesh Tags” on page 247](#).
- Delete a mesh tag. Select a mesh tag and click the delete icon.

Field Descriptions

[Table 61 on page 246](#) describes the fields on the Mesh Tags page.

Table 61: Fields on the Mesh Tag Page

Field	Description
Name	Displays the name of the mesh tag.
Tenant	Displays the tenant name to which the site is associated.
Type	Displays whether the mesh tag is a predefined or a user-defined.

RELATED DOCUMENTATION

| [Mesh Tags Overview](#) | 245

## Creating User-defined Mesh Tags

CSO creates a tunnel between WAN links of two different sites if they are associated with the same mesh tag (user-defined or predefined).

To create a user-defined mesh tag:

1. Select **Resources > Mesh Tags**.

The Mesh Tags page appears.

2. Click the add icon (+) to create a mesh tag.

The Create New Mesh Tag page appears.

3. Complete the configuration according to the guidelines provided in [Table 62 on page 247](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the changes.

The user-defined mesh tag is created.

If you want to discard your changes, click **Cancel** instead.

Table 62: Fields on the Create New Mesh Tag Page

Field	Description
Name	Enter a unique name for the mesh tag.
Description	Enter a description for the mesh tag.

RELATED DOCUMENTATION

| [About the Mesh Tags Page](#) | 246

# Managing Dynamic Mesh

## IN THIS CHAPTER

- [Dynamic Mesh Tunnels Overview | 249](#)
- [Adding On-Demand Mesh Tunnels | 250](#)
- [Deleting On-Demand Mesh Tunnels | 251](#)



## Dynamic Mesh Tunnels Overview

In releases earlier than CSO 4.1.0, all static tunnels are established between spoke sites during the Zero Touch Provisioning (ZTP) process.

However starting with Release 4.1.0, during ZTP, only the following static tunnels are established:

- Between an on-premise spoke site and the corresponding enterprise hub (primary enterprise hub or secondary enterprise hub)
- Between an on-premise spoke site and the provider hub (primary provider hub or secondary provider hub)
- Between two enterprise hubs

Therefore, the communication between two on-premise spoke sites is established only through the enterprise hub or the provider hub.

CSO dynamically creates or deletes a mesh tunnel (without passing through an enterprise hub or a provider hub) between two spoke sites, if:

- The number of sessions closed between two spoke sites crosses the configured threshold value, and
- The WAN links of spoke sites have matching mesh tags. For more information, see [“Mesh Tags Overview” on page 245](#).

**NOTE:** The dynamic mesh feature is applicable only for SD-WAN sites in Real Time-Optimized mode (Full mesh).

The tenant administrator can modify the default threshold value on the following pages:

- The **Administration > Tenant Settings** page (Dynamic Mesh section) of Customer Portal (global level)
- The Add On-Premise Spoke Site page (site-level)
- The Add Enterprise Hub page (site-level)

The threshold value that you specify at site-level takes precedence over the global-level threshold values.

That is, the threshold value that you specify on the Add Site page (on-premise or enterprise hub) overrides the threshold value that you specified on the Tenant Settings page of Customer Portal.

CSO allows you to manually create or delete dynamic mesh tunnels between a source site and a destination site by using the Add On-Demand Mesh Tunnel or Delete On-Demand Mesh Tunnel pages in Customer Portal.

RELATED DOCUMENTATION

| [View and Edit Tenant Settings](#) | [22](#)

## Adding On-Demand Mesh Tunnels

An OpCo administrator or the Tenant administrator can create a mesh tunnel between a source site and destination site by using the CSO GUI in Customer Portal.

To create a mesh tunnel between the source site and a destination site:

1. Select **Resources > Site Management**.  
The Sites page appears.
2. Click the site to which you want to add mesh tunnels.  
The *Site Name* page appears.
3. On the WAN tab, click **+**.  
The Add On-Demand Mesh Tunnel page appears.
4. Complete the configuration according to the guidelines [Table 63 on page 250](#).
5. Click **Ok** to save the changes. If you want to discard the changes, click **Cancel** instead.  
A tunnel is created between the source site and a destination site.

Table 63: Fields on On-demand VPN Tunnel page

Field	Description
Add Tunnel Threshold	
Source Site	Displays the name of the source site.
Destination Site	Select the destination site from the list.
Delete Tunnel	
Displays the threshold value (sessions closed) below which a tunnel is deleted between two sites.	

Table 63: Fields on On-demand VPN Tunnel page (*continued*)

Field	Description
Enable Threshold	By default, this toggle button is disabled. That is, even if the threshold value (sessions closed) is met, CSO does not delete mesh tunnels. You have to manually delete the mesh tunnel that you created.
Sessions Closed	Displays the number of sessions closed for 15 minutes.

## RELATED DOCUMENTATION

[Dynamic Mesh Tunnels Overview](#) | 249

## Deleting On-Demand Mesh Tunnels

A user with either OpCo administrator or Tenant administrator roles can delete a VPN tunnel between a source site and destination site by using the CSO GUI in Customer Portal.

To delete a mesh tunnel between a source site and a specific destination site:

1. Select **Resources > Site Management**.

The Sites page appears.

2. Click the site from which you want to delete mesh tunnels.

The *Site Name* page appears.

3. On the WAN tab, click +.

The Delete On-Demand Mesh Tunnel page appears.

4. Complete the configuration according to the guidelines [Table 64 on page 252](#).

5. Click **Ok** to save the changes. If you want to discard the changes, click **Cancel** instead.

A VPN tunnel is deleted between the source site and a specific destination site.

Table 64: Fields on the Delete On-Demand Mesh Tunnel page

Field	Description
Delete Tunnel Threshold	
Source Site	Displays the name of the source site.
Destination Site	Select the destination site from the list.
Delete Tunnel	
Displays the threshold value (sessions closed) below which a tunnel is deleted between two spokes.	
Enable Threshold	By default, this toggle button is disabled. That is, even if the threshold value (sessions closed) is met, CSO does not create mesh tunnels. You have to manually create the mesh tunnel that you deleted.
Sessions Closed	Displays the number of sessions closed for 2 minutes. .

RELATED DOCUMENTATION

| [Dynamic Mesh Tunnels Overview](#) | 249

# 3

PART

## Managing Devices and Resources

---

Managing Devices | **254**

Managing Device Images | **291**

Managing Resources | **294**

Managing Device Templates | **345**

Managing Configuration Templates | **365**

Managing Licenses | **396**

Managing Signature Database and Certificates | **400**

Managing Juniper Identity Management Service | **415**

---

# Managing Devices

## IN THIS CHAPTER

- [Device Redundancy Support Overview | 255](#)
- [Activating a CPE Device | 257](#)
- [Manually Activating a Switch | 260](#)
- [Manage an EX Series Switch | 262](#)
- [Managing Ports on an EX Series Switch | 273](#)
- [Activating Dual CPE Devices \(Device Redundancy\) | 282](#)
- [Viewing the History of Tenant Device Activation Logs | 285](#)
- [Zero Touch Provisioning Overview | 287](#)
- [Workflow for Onboarding a Device Using ZTP | 288](#)

## Device Redundancy Support Overview

Contrail Service Orchestration (CSO) provides support for spoke device redundancy for large enterprise SD-WAN on-premise spoke sites. You can configure an SD-WAN site with two CPE devices to act as primary and secondary devices and protect the site against device and link failures. If the primary device fails, the secondary device takes over the traffic processing.

**NOTE:** You must use the same device model for both primary and secondary devices and the devices must have the same version of Junos OS installed.

The following SD-WAN features are not supported for device redundancy:

- LTE WAN backup link
- Service chain support

**NOTE:** Device redundancy is supported only on SD-WAN deployments.

### Prerequisites for SRX Series Devices

The prerequisites to configure an SD-WAN site with dual CPE SRX Series devices are as follows:

- For SRX Series, you need to form the cluster manually by connecting two SRX Series devices together using a pair of the same type of Ethernet connections. To create an SRX cluster, see [Chassis Cluster Feature Guide for SRX Series Devices](#).
- Log in to any one of the SRX Series devices, copy the **Stage-1** configuration from the **Sites** page and paste it into the console screen and commit the configuration.

### Supported Connection Plans

The following connection plans are supported for device redundancy:

- Dual NFX250 as SD-WAN CPEs—Supports dual CPE NFX Series devices on an SD-WAN site.
- Dual SRX as SD-WAN CPEs—Supports dual CPE SRX Series devices on an SD-WAN site.
- Dual SRX4x00 as SD-WAN CPEs—Supports SRX 4100 and SRX4200 devices as dual CPE devices in an SD-WAN site.


## Create and Configure an SD-WAN Site

You can create and configure an SD-WAN site with dual CPE devices and the two devices back up each other, with one node acting as the primary device and the other as the secondary device. The workflow to add and configure a site with dual CPE devices is similar to the single CPE device. For more information about creating and configuring a site with dual CPE devices, see [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103](#).

## Dual CPE Devices Logical Topology for NFX Network Services Platform

Figure 15 on page 256 shows the logical topology of the NFX Series dual CPE devices.

Figure 15: Dual CPE Device Topology - NFX Network Services Platform

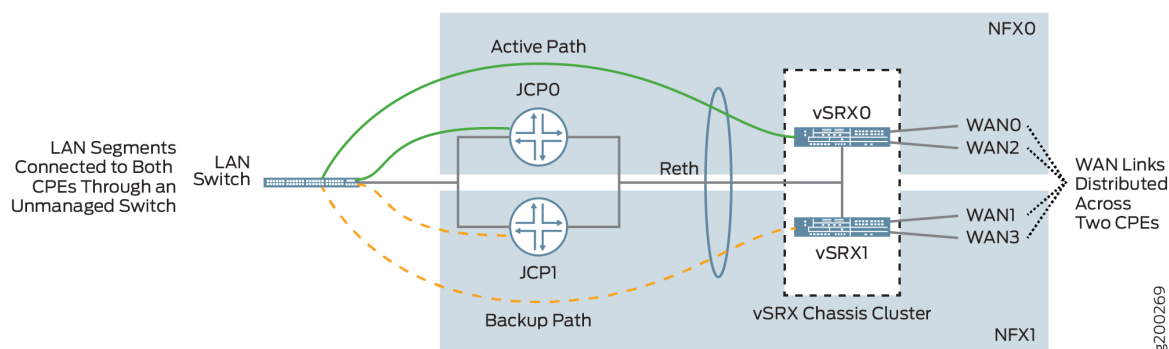

You can form a cluster using two NFX Series devices. The front panel ports of the NFX Series devices are used to interconnect two NFX Series devices and to carry the control and fabric interconnect traffic between the two NFX250 devices.


The Junos Control Plane (JCP) component acts as a switch, controls the front panel ports, and sends the traffic which arrives from the LAN or WAN to the NFX Series devices. On the LAN, the active/backup mechanism is used and if the primary device fails, the secondary device takes over processing of traffic. On the WAN, the active/active mechanism is used and all four WAN links are active and distributed across two NFX Series devices.

## Dual CPE Devices Logical Topology for SRX Series Gateway Devices

Figure 16 on page 257 shows the logical topology of the SRX Series dual CPE devices.



Figure 16: Dual CPE Device Topology - SRX Series Devices

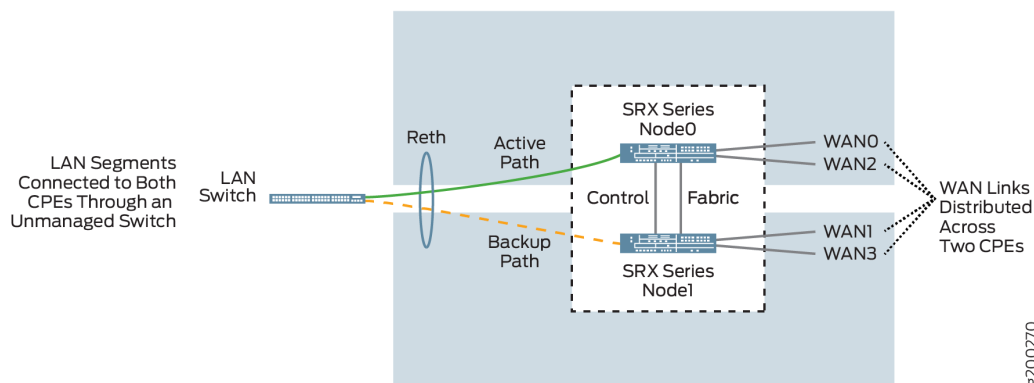

You can form a cluster using two SRX devices. A chassis cluster is formed between these nodes and performs as a single logical router. On the LAN, the active/backup mechanism is used and if the primary device fails, the secondary device takes over traffic processing. On the WAN, the active/active mechanism is used and all four WAN links are active and distributed across two SRX Series devices.

**NOTE:** On SRX 4100 and SRX4200 devices, out of the eight 1-Gigabit Ethernet/10-Gigabit Ethernet, a maximum of two ports are used for WAN links, and the remaining ports are used for LAN connectivity. The HA ports are used only for forming the cluster.

## RELATED DOCUMENTATION

[Add an On-Premise Spoke Site with SD-WAN Capability | 103](#)

[Activating Dual CPE Devices \(Device Redundancy\) | 282](#)

## Activating a CPE Device

You can activate SRX300 Services Gateway and NFX250 Network Services Platform devices in the following ways:

- By connecting a computer to the LAN port of the device and entering the activation code through your browser
- By specifying the activation code in Customer Portal

You can activate a vSRX Services Gateway device by copying the configuration available in Customer Portal and pasting the configuration into the SRX Series device console. To copy the configuration in

Customer Portal, select the device and click **More > View Stage-1 Config** on the Devices page (**Resources > Devices**).

To activate a device through your web browser:

1. Connect a computer to the LAN port of the CPE device and power on the device.

Refer to the documentation for the CPE device for more information.

2. Open a Web browser in your computer.

Because the CPE device is preconfigured with a management address, the browser displays the login page.

3. Enter the activation code that you have received during the shipping process.

4. Click **OK**.

On successful authentication, the Phone-Home server pushes the initial configuration to the CPE device.

To activate a device through Customer Portal:

**NOTE:** If you activate the CPE device through Customer Portal, you do not need to activate it through a browser.

1. Log in to Customer Portal.

2. Click the Sites page in Customer Portal.

After you use Customer Portal to add a site that uses a CPE device, the CPE device icon on the Sites page is gray if the device is inactive. When you hover over the CPE device icon on the Monitor page, you should see the message **Device Status: Expected**, which indicates that the device is ready to be activated. If you see the message **Device Status: Undefined**, contact your service provider for assistance.

3. On the Device Status column, click **Activate Device**.

The Activate Device page appears. The Activate Device page consists of Device Information and Device Activation.

4. On Device Information page, view the site details, device details, and recipient details, and specify the activation code. For more information see, [Table 65 on page 260](#).

5. Click **Next**.

On Device Activation page, the device is activated through the following steps:

- Detecting the device
- Applying stage-one configuration to the device
- Bootstrapping of device
- Activating the device

After each successful step, you can see a green check mark. If any of these steps fail, a red exclamation mark appears.

6. After the activation process is complete, click **OK**.

The Sites page appears. To see the device activation status, hover over the device icon on the Sites page. You see one of the following statuses:

- **EXPECTED**—Device is ready for activation.
- **ACTIVE**—Device is authenticated but not yet operational.
- **ACTIVATION\_FAILED**—Device is not authenticated.
- **GWR\_SPAWNED**—Device gateway component spawning is successful.
- **GWR\_SPAWN\_FAILED**—Device gateway component spawning fails.
- **PROVISIONED**—Device is operational.
- **PROVISION\_FAILED**—Device failed to become operational. Contact your service provider for assistance.

**NOTE:** When a device is provisioned successfully, a job to install the default trusted certificates, which are packaged with Junos OS, on the device is triggered. You can view the details of the job (of type **default trustedcertificate**) on the Jobs page (**Monitor > Jobs**).

We recommend that you check the job status to verify that the default trusted certificates were successfully installed. If, however, the job failed and if you want to use the SSL proxy feature, manually install the trusted certificates on the device by using the following procedure:

- a. Log in to the device and access the Junos OS CLI (operational mode).
- b. Execute the **request security pki ca-certificate ca-profile-group load ca-group-name DEFAULT\_CSO filename default** command.

The installation takes between 2–5 minutes to complete, so wait until it is done.

- c. Exit the Junos OS CLI and log out of the device.

Table 65: Fields on the Activate Device Page

Field	Description
Site Name & Type	Name of the site on which the CPE device is activated.
Connected Hub	Name of the hub to which the CPE device is connected.
Device Model	Device model of the CPE device.
Serial Number	Serial number of the CPE device.
Activation Code	Specify the activation code that your service provider supplied for the CPE device.
Expiry Duration	Specify how long you must wait to activate the device after it boots up. You can set a duration in the range 1 through 600 seconds. The default is 120 seconds.
Recipient	Recipient details.

## RELATED DOCUMENTATION

[About the Sites Page | 55](#)
[Add an On-Premise Spoke Site with SD-WAN Capability | 103](#)
[About the Certificates Page | 404](#)

## Manually Activating a Switch

You can manually activate a switch if you have disabled automatic activation while onboarding the switch to CSO.

**NOTE:** Before activating, ensure that the switch is powered on and connected to the CPE or firewall (if the switch is behind a CPE or firewall).

To manually activate the switch:

1. Select **Resources > Site Management**.

The Sites page appears.

2. On the Sites page, click on the site that you want to activate.

The detailed view of the site appears.

**NOTE:** You can activate a site that is in the CONFIGURED state.

3. Click the **Devices** tab.

4. Select the switch that you added to the site and click **Activate Device** to activate the switch.

The Activate Device page appears.

5. On the Activate Device page, enter the activation code for the switch. The activation code must match the activation code that you provided during the site addition workflow.

6. Click **Next**.

The progress of switch activation is displayed.

7. After the switch is activated, click **OK**.

The Sites page appears. The status of the switch is set to PROVISIONED if the switch is successfully activated. After the switch is activated, you can manage the switch by using CSO.

## RELATED DOCUMENTATION

[Activating a CPE Device | 257](#)

[Zero Touch Provisioning Overview | 287](#)

## Manage an EX Series Switch

### IN THIS SECTION

- [View the Chassis Information of an EX Series Switch | 263](#)
- [View Information about an EX Series Switch | 266](#)
- [View Information about Ports on an EX Series Switch | 268](#)
- [Deploying an Access Profile on a Switch | 271](#)
- [Dissociating an Access Profile | 272](#)

You can use the *Device-Name* page to view and manage an EX Series switch (physical and Virtual Chassis).

To view the chassis information of a member device in an EX Series Virtual Chassis, click the member device. The chassis view displays the ports and the status of the ports on the member device.

To access this page, do one of the following:

- To access the *Device-Name* page from the **Resources > Site Management** menu:

1. Click **Resources > Site Management**.

The Sites page appears with a list of sites displayed under the Site Name column.

2. Click a *site* from this list.

The Site Management page appears with a list of devices displayed under the Device Name column of the Devices tab.

3. Select an *EX Series switch* from the list.

The *Device-Name* page appears.

- To access the *Device-Name* page from the **Resources > Devices** menu:

1. Click **Resources > Devices**.

The Devices page appears.

2. Select an EX Series switch in the Device Name column of the Devices List.

The *Device-Name* page appears.

You can perform the following actions from this page:

**View the Chassis Information of an EX Series Switch**

The chassis view displays the device model and all the ports on an EX Series switch.

You can perform the following actions from the chassis view dashlet that appears on this page:

**NOTE:** The chassis view is refreshed after every 60 seconds.

- View information about ports—Hover over a port on the chassis view to view general information (such as administrative status, link status, and link mode) about the port.

See [Table 66 on page 263](#) for more details.

**NOTE:** The ports on the chassis view are color coded depending on the admin and link statuses:

- Green—If the admin status and link status are up.
- Red—If the admin status is up and the link status is down.
- Dark Gray—If the admin status and link status are down.
- Light Gray—If the port is not configured as part of any LAN segment.

- View additional details of a port—Click a port to view additional details of the port.

The Port Overview tab appears. [Table 71 on page 271](#) describes the fields on the Port Overview tab.

- View details of system meters—Hover over a system meter to view more information from the trays that appear. See [Table 67 on page 265](#) for more details.
- Perform various actions on an EX Series switch—Click **Actions** on the chassis view dashlet.

A list of all actions that you can perform on the switch is displayed. See [Table 68 on page 265](#) for more details.

[Table 66 on page 263](#) describes the fields on the port view pane.

**Table 66: Fields on the Port View Pane**

Field	Description
Admin Status	Administrative status of the port: <ul style="list-style-type: none"><li>• Green—Indicates that the admin status is up (enabled).</li><li>• Gray—Indicates that the admin status is down (disabled).</li></ul>

Table 66: Fields on the Port View Pane (*continued*)

Field	Description
Link Status	Operational status of the link or connection to the port: <ul style="list-style-type: none"> <li>• Green—Indicates that the connection to the port is up.</li> <li>• Red—Indicates that the connection to the port is down.</li> </ul>
Port Mode	Indicates the mode in which the port operates: <ul style="list-style-type: none"> <li>• Access (default)—Only one VLAN is configured on the port.</li> <li>• Trunk—One or more VLANs are configured on the port. (Optional) A native VLAN may also be configured.</li> </ul>
Link Mode	Mode in which the link to the port operates—Half-duplex or Full-duplex.
Power Consumption	Power consumed by the port, in watts (W).
PoE Status	Indicates whether the port is configured to transmit electrical power through an Ethernet cable (ON) or not (OFF).
Negotiated Speed	Current negotiated speed (in Kbps, Mbps, and Gbps) of the port.
VLAN	ID of the VLAN configured on the port.  Range: 1 through 4094.
Input Bandwidth Utilization	Bandwidth (in %) consumed by the incoming packets on the port.
Output Bandwidth Utilization	Bandwidth (in %) consumed by the outgoing packets on the port.
Input Drops	Number of incoming packets dropped by the port due to congestion.
Output Drops	Number of outgoing packets dropped by the port due to congestion.
Input Errors	Number of errors in the incoming packets.
Output Errors	Number of errors in the outgoing packets.

[Table 67 on page 265](#) describes the system meters available on the chassis view dashlet. The system meters display current data.



**NOTE:** The UI polls the CSO database every 30 seconds and the database polls the devices every five minutes.

**Table 67: System Meters on the Chassis View Dashlet**

System Meter	Description
CPU	CPU utilization (in %) in the switch.
Memory	Memory (in %) utilized in the switch.
Storage	Storage space (in %) allocated to the logical partitions of the switch.
Fan	Details of the fan used on the switch.
Temperature	Temperature details of the components in the available FPC.
LEDs	Severity level of the Alarms, System, and Primary LEDs.
Power	Details of the power supplies for the switch.

[Table 68 on page 265](#) describes the actions that you can perform on an EX Series switch.

**Table 68: Options on the Actions List**

Action	Description
Ping	<p>Select this option to ping a remote host to verify the connectivity between the EX Series switch and the remote host.</p> <p>See <a href="#">“Identifying Connectivity Issues by Using Ping” on page 320</a> for more information.</p>
Traceroute	<p>Select this option to execute the traceroute command from the EX Series switch, to view the path a packet travels to reach the remote host.</p> <p>See <a href="#">“Identifying Connectivity Issues by Using Traceroute” on page 324</a> for more information.</p>
Reboot Device	<p>Select this option to reboot the switch.</p> <p>See <a href="#">“Rebooting a CPE Device” on page 316</a> for more information.</p> <p><b>NOTE:</b> This option is available only for a physical EX Series switch.</p>

Table 68: Options on the Actions List (*continued*)

Action	Description
Reboot Member	<p>Select a member device in the Virtual Chassis that you want to reboot and click <b>Reboot Member</b>.</p> <p>A reboot job is triggered to reboot the selected member.</p> <p>(Optional) You can view the status of the job on the Jobs (<b>Monitor &gt; Jobs</b>) page.</p> <p><b>NOTE:</b> This option is available only for an EX Series Virtual Chassis.</p>
Reboot All	<p>Select this option to reboot all member devices in the Virtual Chassis.</p> <p>A reboot job is triggered to reboot all the members.</p> <p>(Optional) You can view the status of the job on the Jobs (<b>Monitor &gt; Jobs</b>) page.</p> <p>This option is available only for an EX Series Virtual Chassis.</p>
View ARP Table	<p>The switch uses the ARP table to map MAC addresses to IP addresses of the ports on the switch.</p> <p>If you select this option, the View ARP Details page appears with details, such as MAC addresses, IP addresses, Interface names, and flags associated with the switch.</p>
View MAC Table	<p>The switch uses the MAC table to map MAC addresses to specific ports on the switch.</p> <p>If you select this option, the View MAC Details page appears with details, such as MAC addresses, Interface names, and flags associated with the switch.</p>

## View Information about an EX Series Switch

Click the **Overview** tab to view information about an EX Series switch.

You can select one of the following options as the time span to view details about the recent alarms, PoE, resource utilization, and physical box storage:

- Past 1 hour
- Past 8 hours
- Past 1 day
- Past 1 week
- Past 1 month

Table 69 on page 267 describes the dashlets on the Overview tab. The graphical representations on this tab display trends based on historical data.

Table 69: Dashlets on the Overview Tab

Dashlet	Description
Port Link Status	<p>Graphical representation (Donut chart) of the link status.</p> <p>Hover over the chart to view the number and percentage of links that are up and down. You can click the chart to view all the ports on the switch, on the Port Details page.</p> <p>You can also search for a port or filter the list based on port name and link status (up or down).</p>
Recent Alarms	<p>Recent alarms (Critical, Major, and Minor) generated on the switch.</p> <p>Click the <i>View All Alarms</i> link to view information about all the alarms, on the Alarms page.</p> <p>See <i>About the Alarms Page</i> for more information.</p>
Details	<p>Details (such as serial number, management IP address, OS version, and device template) of the switch.</p>
Resource Utilization	<p>Graphical representation of memory and CPU utilized in the switch, for the selected time span.</p>
Current System Users	<p>Details (such as name, duration, and login time) of the system users who are currently logged in to the switch.</p> <p>Click the <i>More Details</i> link on this dashlet to view additional information (such as username and session type) about the current users, on the View Details page.</p> <p>You can search and sort the information on this page as per your requirement, by using the Search and Filter icons, respectively.</p>
PoE	<p>Graphical representation of the power consumed by each PoE interface, in Watts (W).</p> <p><b>NOTE:</b> This graph is displayed only for P models of EX Series switches.</p>
Top Ports by Input Bandwidth	<p>Graphical representation of the top 10 ports on which the incoming packets consume the maximum bandwidth.</p>
Top Ports by Output Bandwidth	<p>Graphical representation of the top 10 ports on which the outgoing packets consume the maximum bandwidth.</p>
Top Ports with Input Errors	<p>Graphical representation of the top 10 ports with the highest number of errors in incoming packets.</p>

Table 69: Dashlets on the Overview Tab (*continued*)

Dashlet	Description
Top Ports with Input Errors	Graphical representation of the top 10 ports with the highest number of errors in outgoing packets.
Top Ports with Input Packet Loss	Graphical representation of the top 10 ports that drop the highest number of incoming packets.
Top Ports with Output Packet Loss	Graphical representation of the top 10 ports that drop the highest number of outgoing packets.
Licenses	<p>Details of licenses (such as license name and description) installed on the switch.</p> <p>Click the <i>More Details</i> link on this dashlet to view additional information about the licenses, on the Device License Files page. .</p> <p>See <i>About the Device License Files Page</i> for more information.</p>
Physical Box Storage	Graphical representation of the storage space (in %) allocated to the logical partitions of the switch.

## View Information about Ports on an EX Series Switch

Click the **Ports** tab to view information about each port on an EX Series switch.

[Table 70 on page 269](#) describes the fields on the Ports tab.

You can perform the following tasks on this tab:

- Search for a specific port by using keywords—Click the Search icon to search for a port by entering partial or full text of the keyword in the text box.  
The search results are displayed on the same tab.
- Filter the data displayed on the tab—Click the Filter icon to apply a quick filter. The filtered results are displayed on the same tab.
- Show or hide columns that contain information about the ports—Click the Show or Hide Columns icon to select or clear columns that you want to display or hide on the tab.
- View additional details of a port—Click a port in the Port column to view additional details of the port, on the Port Overview tab that appears.

[Table 71 on page 271](#) describes the fields on the Port Overview tab.

Table 70: Fields on the Ports Tab

Field	Description
Interface List	
Port	<p>Name of the port.</p> <p>Click each port to view additional information about the port, on the Port Overview page.</p> <p>See <a href="#">Table 71 on page 271</a> for details of dashlets that appear on the Port Overview page.</p>
Admin Status	<p>Indicates the administrative status of the port:</p> <ul style="list-style-type: none"> <li>• Up—if the port is enabled.</li> <li>• Down—If the port is disabled.</li> </ul>
Link Status	<p>Indicates the status of the link or connection to the port:</p> <ul style="list-style-type: none"> <li>• Up—If the connection to the port is up.</li> <li>• Down—If the connection to the port is down.</li> </ul>
MTU	<p>Maximum transmission unit (MTU) size (in bytes) on the ports.</p> <p>Default: 1500 bytes.</p>
Negotiated Speed	Current negotiated speed (in Kbps, Mbps, and Gbps) of the port.
Port Mode	<p>Operating mode of the port:</p> <ul style="list-style-type: none"> <li>• Trunk</li> <li>• Access</li> </ul>
Link Mode	Mode in which the port operates—Half-duplex or Full-duplex.
Media Type	Type of transmission medium—Copper or Fiber.
Power Consumption	Power consumed by the port, in Watts (W).
PoE (Power Over Ethernet)	Indicates whether the port is configured to transmit electrical power through an Ethernet cable (ON) or not (OFF).
Input Bandwidth Utilization	Bandwidth (in %) consumed by the incoming packets on the port.
Output Bandwidth Utilization	Bandwidth (in %) consumed by the outgoing packets on the port.

Table 70: Fields on the Ports Tab (*continued*)

Field	Description
Interface List	
Input Drops	Number of incoming packets dropped by the port due to congestion.
Output Drops	Number of outgoing packets dropped by the port due to congestion.
Input Errors	Number of errors in the incoming packets.
Output Errors	Number of errors in the outgoing packets.
VLAN ID	ID of the VLAN configured on the port.  Range: 1 through 4094.
Auto Negotiation	Indicates whether the interface speed is auto-negotiated (Enabled) or is fixed based on an explicitly configured value (Disabled).
Port Profile	Port profile used for configuring the port.
Deployment Status	Deployment Status of the port profile.  <ul style="list-style-type: none"> <li>• Success—The port profile is successfully deployed on the port.</li> <li>• Pending—The port profile is in the process of being deployed on the port.</li> <li>• Failed—The port profile failed to deploy on the port.</li> </ul>

Table 71 on page 271 describes the dashlets available on the Port Overview tab.

You can select one of the following options as the time span for which you want to view the graph for these dashlets:

- Past 1 hour
- Past 8 hours
- Past 1 day
- Past 1 week
- Past 1 month

**NOTE:** The dashlets on the Port Overview tab are refreshed after every 30 seconds. The date and time of the last refresh appear at the bottom-left corner on each dashlet.

Table 71: Dashlets on the Port Overview Tab

Dashlet	Description
Details	Details (such as port number, admin status, and link mode) of the port that you selected.
Utilization	Graphical representation of CPU utilized by the selected port (in terms of input and output) for the selected time span.
Errors	<p>Graphical representation of the number of errors in the incoming (input) and outgoing (output) packets for the selected time span.</p> <p>You can select either the past 1 hour, 8 hours, 1 day, 1 week, or 1 month as the time span for which you want to view the graph.</p>
Packet Loss	<p>Graphical representation of packet loss in incoming (input) and outgoing (output) packets for the selected time span.</p> <p>You can select either the past 1 hour, 8 hours, 1 day, 1 week, or 1 month as the time span for which you want to view the graph.</p>
Bytes	<p>Graphical representation of the MTU (in bytes) for incoming (input) and outgoing (output) packets for the selected time span.</p> <p>You can select either the past 1 hour, 8 hours, 1 day, 1 week, or 1 month as the time span for which you want to view the graph.</p>
Packets	<p>Graphical representation of the number of incoming (input) and outgoing (output) packets for the selected time span.</p> <p>You can select either the past 1 hour, 8 hours, 1 day, 1 week, or 1 month as the time span for which you want to view the graph.</p>

## Deploying an Access Profile on a Switch

An access profile defines the list of RADIUS servers to be used for authentication and accounting. You can deploy only one access profile on a switch.

To deploy an access profile on a switch:

1. Select **Resources > Devices** and click the switch on which you want to deploy the access profile.

The *Devices* page appears.

2. Click the **Device Settings** tab.

The access profiles configured are listed in a tabular format.

3. Select the access profile that you want to deploy on the switch.
  4. In the **Type** field:
    - Click **Run now** to deploy the access profile immediately.
    - Click **Schedule at a later time** to schedule a time for deploying the access profile.

If you select the Schedule at a later time option, enter the date and time when you want to deploy, in the Date and Time fields that appear when you select the option.
  5. Click **Deploy**.
- If you select the Run now option, a job is created to deploy the profile immediately; otherwise, the job to deploy is created on the date and at the time that you schedule.

### Dissociating an Access Profile

To dissociate an access profile from a switch:

1. Select **Resources > Devices** and click the switch on which you want to deploy the access profile.
- The *Devices* page appears.
2. Click the **Device Settings** tab.
- The access profiles configured are listed in a tabular format and the access profile that is deployed on the switch is selected.
3. Do one of the following:
    - Select another profile, if you want to deploy another profile on the switch.
    - Click on the selected profile to clear the selection, if you don't want to deploy any access profile on the switch.
  4. In the **Type** field:
    - Click **Run now** to either deploy another access profile or dissociate the access profile immediately.
    - Click **Schedule at a later time** to schedule a time for the deployment.

If you select the Schedule at a later time option, enter the date and time when you want to deploy, in the Date and Time fields that appear when you select the option.
  5. Click **Deploy**.
- If you select the Run now option, a job is created for the deployment immediately; otherwise, the deployment job is created on the date and at the time that you schedule.



After the access profile is deployed successfully, a message indicating that the switch is deployed successfully appears on top of the page. A link, View Logs, to view the job logs is also displayed.

6. (Optional) Click the **View Logs** link to view the details of the job to deploy the access profile.

The Deploy Access Profile Details page appears. You can view the date and time the access profile was deployed and the status of the deployment job on this page.

## RELATED DOCUMENTATION

[Manage a Single CPE Device | 313](#)

[Managing Ports on an EX Series Switch | 273](#)

## Managing Ports on an EX Series Switch

### IN THIS SECTION

- [View Port Details | 273](#)
- [Enable Ports | 274](#)
- [Disable Ports | 275](#)
- [Deploy or Redeploy a Port Profile | 275](#)
- [Configure EX Series Switch Ports Overview | 276](#)
- [Edit Configuration of Ports | 279](#)
- [Dissociate a Profile from a Port | 281](#)

You can manage an EX Series switch port from the Ports tab of the *Devices* page.

### View Port Details

You can view the following details of a port on the Ports page:

- General information: Admin status, link status, port mode, and VLAN IDs configured on the port.
- Link Settings: Auto negotiation, flow control, MTU, Speed, and link mode.

To view the details of a port:

1. Do one of the following:

- To view the general information and the link configuration of the port, select the port and click **More > Details**. Alternatively, right-click the port and click **Details**.

A panel, Detail for *port name*, displaying the port details, appears on the right side of the ports grid.

- To view statistics of the port, click the port link.

The Port Overview pane appears displaying the following statistics of the port in graphical format for the past 1 hr, 8 hrs, 1 day, 1 week, and 1 month duration:

- Port utilization—CPU utilized by the selected port (in terms of input and output) for the selected time span.
- Packet transmitted through the port—Number of incoming (input) and outgoing (output) packets for the selected time span.
- Number of Bytes transmitted through the port—MTU (in bytes) for incoming (input) and outgoing (output) packets for the selected time span.
- Packet loss at the port—Packet loss in incoming (input) and outgoing (output) packets for the selected time span.
- Errors on the port—Number of errors in the incoming (input) and outgoing (output) packets for the selected time span.

Click the **Back to Device** link to view to the Ports tab.

## Enable Ports

You enable a port to allow traffic through the port. When you enable a port, the Admin status of the port is changed to Up.

**NOTE:** You can enable one or more ports at the same time.

To enable one or more ports:

1. Select the ports and click **More > Enable Port(s)**. Alternatively, right-click the ports and click **Disable Port(s)**.

A job to enable the ports is initiated.

After a port is enabled, the Admin Status is changed to Up.

**NOTE:** The device is monitored once every five minutes. Therefore, it takes upto five minutes for the change in the Admin Status to reflect on the CSO GUI.

## Disable Ports

You disable a port to block traffic through the port. When you disable a port, the Admin status and Link status of the port are changed to Down.

**NOTE:** You can disable one or more ports at the same time.

To disable one or more ports:

1. Select the ports and click **More > Disable Port(s)**. Alternatively, right-click the port and click **Disable Port(s)**

A job to disable the ports is initiated.

After a port is disabled, the Admin and Link statuses for the port are set to Down.

**NOTE:** The device is monitored once every five minutes. Therefore, it takes upto five minutes for the change in the Admin Status and Link Status to reflect on the GUI.

## Deploy or Redeploy a Port Profile

A port profile defines the authentication settings for the port and other port parameters such as flow control, link mode, storm control, MAC limit, and so on. The behavior of the port is defined by the values for parameters defined in the port profile. You can deploy a port profile on one or more ports at the same time.

You must redeploy a port profile when:

- the port profile that is assigned to a port is modified.
- the authentication profile or firewall filter that is assigned to the port profile is modified.

When a port profile or a profile associated with the port profile is modified, the deployment status of the port is changed to Pending Deployment.

The changes made to the port profile or the associated authentication profile or firewall filter are applied on the ports only when you redeploy the modified port profile.

To deploy or redeploy a port profile on one or more switch ports:

1. Select the port and click **More > Deploy**.

The Deploy page appears.

2. For the **Type** field, do one of the following:

- Click **Run now** to deploy the port profile immediately.
- Click **Schedule at a later time** to deploy the port profile later.

If you select this option, enter the date and time when you want to deploy in the Date and Time fields that appear.

3. Click **OK**.

If you select the Run now option, a job is created to deploy the profile immediately; otherwise, the job to deploy is created on the date and at the time that you scheduled.

When you deploy a port profile, the deployment status of the ports is set to Pending Deployment indicating that the profile is associated with the port. When the profile is in the process of being committed on the ports, the deployment status changes to In progress. If the deployment job completes successfully, the deployment status of the ports is set to Success and if the job fails, the deployment status is set to Failed.

## Configure EX Series Switch Ports Overview

Starting from Release 5.1.0, you can use CSO to configure and monitor the ports of the following EX Series switches: EX2300, EX3400, EX4300, EX4600, and EX4650

**NOTE:** You can configure and monitor ports on both a physical device and members of a virtual chassis. You cannot configure and monitor EX4600 and EX4650 Series switches, if the switches are configured as a virtual chassis.

You can add the following profiles to CSO and deploy them on the switch to configure the switch and the switch ports:

- Port profiles to define the behavior of a port. Port profiles allow you to provision multiple ports on a switch with the same set of attributes at the same time. A port profile includes the following:
  - Authentication profile (optional)
  - Firewall filters (Optional)

- Link settings
- Storm control settings
- Power over Ethernet (PoE) settings
- Port security settings
- Authentication profiles to implement network access control (NAC).

An authentication profile defines the authentication method, fallback options, and other settings such as number of retries, maximum number of authentication requests that can be allowed for a supplicant, authentication server timeout, and so on related to the communication between the switch and the supplicant (a user or device such as printer).

An authentication profile may or may not be referenced in a port profile. However, you can assign the authentication profile to a port when you configure the port manually.

- Firewall filters to deny or permit network access to supplicants based on the filter terms.

Firewall filters may or may not be referenced in a port profile. However, you can assign the firewall filters to a port when you configure the port manually.

- Access profiles to define the list of RADIUS servers to be used for authentication.

An access profile is deployed on a switch and is referenced by an authentication profile when dot1x authentication is configured on the switch port.

- RADIUS server profiles to define the RADIUS server for authentication and accounting. You define the RADIUS server IP address, password, authorization ports, accounting ports, retry counts, and server timeout in this profile.

A RADIUS server profile is referenced by an access profile and deployed on the switch through the access profile.

### **Configure Switch Ports**

You can configure the ports either by using a port profile or manually.

By using a port profile, you can configure multiple ports of the switch at the same time.

To configure the ports by using a port profile:

1. (Optional) Create an authentication profile. See [“Add Authentication Profiles” on page 741](#) for details.
2. (Optional) Create a firewall filter. See [“Add Firewall Filters” on page 764](#) for details.
3. Create a port profile. See [“Add Port Profiles” on page 731](#) for details.

4. Assign and deploy the port profile on one or more switch ports. See [“Edit Configuration of Ports” on page 279](#) for details.
5. Deploy the port profile on the switch ports. See [“Deploy or Redeploy a Port Profile” on page 275](#) for details.

To configure a port manually:

**NOTE:** If you want to configure 802.1x authentication or apply firewall filters on a port while configuring the port manually, ensure that the authentication profile and the firewall filters are already configured.

1. In the customer portal, select **Resources > Devices**.  
The Devices page appears.
2. Click the switch for which you want to configure ports.  
The *switch* page appears.
3. On the Ports tab, select the ports that you want to configure and click **More > Edit Configuration**.  
The Edit Port Configuration page appears.
4. Edit the port parameters and deploy the configuration on the port. Refer to the instructions in the [“Edit Configuration of Ports” on page 279](#) topic for completing and deploying the port configuration.

When you deploy a port profile, the deployment status of the ports is set to Pending Deployment indicating that the profile is assigned to the ports. When the profile is in the process of being committed on the ports, the deployment status changes to In Progress. If the deployment job completes successfully, the deployment status of the ports is set to Success and if the job fails, the deployment status is set to Failed.

## WHAT'S NEXT

After you configure a switch port, you can allow traffic through the switch ports and start monitoring the port.

### ***Life Cycle of a Port Profile***

The life cycle of a port profile is as follows:

1. Add a port profile to CSO.

2. Assign the port profile to a port.

When you assign the port profile, the deployment status of the port is set to Pending Deployment indicating that the profile is assigned to the port.

3. Deploy the port profile on a port.

During the deployment, that is when the configuration is committed on the port, the deployment status is changed to In Progress. If the deployment job completes successfully, the deployment status of the port is set to Success; otherwise, the deployment status is set to Failed.

4. Edit the port profile.

When you edit the port profile or any profile associated with the port profile, the deployment status of the port profile is set to Pending Deployment.

5. Redeploy the port profile for the changes to reflected in the port configuration.

During the redeployment, the deployment status of the port is changed to In Progress. If the deployment job completes successfully, the deployment status of the port is set to Success; otherwise, the deployment status is set to Failed.

6. Dissociate the port profile.

7. Delete the port profile.

SEE ALSO

| [Configure a Firewall Filter for an EX Series Switch](#) | 763

## Edit Configuration of Ports

You can edit the configuration of a port either by using a port profile or manually.

If a profile is already deployed, edit the profile, and then redeploy for the changes to take effect.

When using a port profile to edit ports, you can:

- assign a port profile or modify the profile assigned to the port
- modify the VLANs assigned to the port

To edit the configuration of one or more ports:

1. Select one or more ports and click **More > Edit Configuration**. Alternatively, right-click the ports and click **Edit Configuration**.

The Edit Port(s) page appears.

2. Do one of the following:

For **Options**, select one of the following:

- To edit the port configuration by using a port profile:

- a. Click **Use Port Profile**.

The Port Profile drop down list and an option to select VLAN appears.

- b. Select a port profile that you want to assign to the port from the **Port Profile** drop down list.

- c. In the VLAN field:

- If the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the Available column and clicking the right-arrow to move them to the Selected column.
- If the port is configured as an access port in the port profile, assign a single VLAN by selecting the VLAN in the Available column and clicking the right-arrow to move it to the Selected column.

- To edit the port configuration manually:

- a. Click **Manually edit port configurations**.

The port parameters such as port mode, link mode, flow control appear.

- b. Edit the parameters by referring to [Table 250 on page 731](#).

3. Click **Next**.

Deployment options appear.

4. (Optional) Select the **Do not deploy** option if you want to only save the edited configuration in CSO, but not push and commit the configuration to the switch.

5. For the **Type** field, do one of the following:

- Click **Run now** to save the edited configuration in CSO and commit the edited configuration on the switch.
- Click **Schedule at a later time** to schedule a time to commit the edited configuration on the switch.



If you select the Schedule at later time option, enter the date and time when you want to deploy, in the fields that appear when you select the option.

6. Click **Next**.

A summary of all the port profile parameter appears.

7. (Optional) Click **Edit** to revisit the settings and make further changes.

8. Click **OK**.

If you select the Run now option, a job is created to deploy the profile at once; otherwise, the job to deploy is created on the date and at the time that you scheduled.

During the deployment (that is when the deploy is executing), the Deployment status of the port is set to Pending Deployment, on the Ports tab of the *Devices* page.

If the deployment job completes successfully:

- A message appears on the top of the Ports page indicating that the deployment is successful.
- Deployment Status of the port is set to Deployed.
- The Port Profile column displays:
  - the profile name when a port profile is used for editing.
  - Manually Configured when the configuration is manually edited.

## Dissociate a Profile from a Port

You can dissociate a profile from a port when you want to delete the profile or assign another profile to the port. The dissociate action removes the association between the port profile and one or more ports in CSO. You must perform the Deploy action on the ports from which the port profile was dissociated to remove the configuration deployed on the port and move the ports back to the default state.

To dissociate a profile from a port:

1. Select the ports and click **More > Dissociate Profile**. Alternatively, right-click the port and click **Dissociate Profile**.

The Dissociate Port Configuration dialog box appears.

2. Click **OK** to dissociate the port profile.

After the port profile is dissociated successfully, the Deployment Status on the Ports tab of the Devices page changes to Pending Deployment.

3. Select the port and click **More > Deploy** to commit the configuration on the switch.

The port profile is dissociated from the port and the port is returned to the factory default settings.

## RELATED DOCUMENTATION

[Adding and Provisioning Switches to Provide LAN Capability to a Site Overview | 59](#)

[Configure EX Series Switch Ports Overview | 276](#)

[Configure a Firewall Filter for an EX Series Switch | 763](#)

[Manage an EX Series Switch | 262](#)

## Activating Dual CPE Devices (Device Redundancy)

You can activate a device after the device status is changed to **EXPECTED** in the Sites page. When you see the device status is **EXPECTED**, it indicates that the device is ready to be activated. If you see the device status as **Undefined**, contact your service provider for assistance.

**NOTE:** You must activate both the primary and the secondary devices simultaneously.

You must use the same device model for both primary and secondary devices and the devices must have the same version of Junos OS installed.

To activate dual CPE devices used as a cluster:

1. Log in to Customer Portal.

2. Select **Sites**.

The Sites page appears.

3. Click on the *Site Name*.

The *Site Name* page appears.

4. On **Devices** tab, select the cluster device and click **Activate Device**.

The Activate Device page appears. The Activate Device page consists of Device Information and Device Activation tabs.

**NOTE:** You can also activate the device through **Resource > Devices** page.

- On **Device Information** page, complete the configuration according to the guidelines provided in [Table 72 on page 283](#).

**Table 72: Fields on the Activate Device Page**

Field	Description
Site Name & Type	View the name of the site on which the CPE device is activated.
Connected Region	View the name of the region to which the CPE device is connected.
Primary Device Serial Number	View the serial number of the primary CPE device.
Primary Device Activation Code	<p>Enter the activation code of the primary device that your service provider supplied for the device.</p> <p><b>NOTE:</b> If you do not want to specify an activation code, on the <b>Resources &gt; Edit Template &gt; Template Settings</b> page, disable the ACTIVATION_CODE_ENABLED field and save the changes.</p>
Secondary Device Serial Number	View the serial number of the secondary CPE device.
Secondary Device Activation Code	<p>Enter the activation code of the secondary device that your service provider supplied for the device.</p> <p><b>NOTE:</b> If you do not want to specify an activation code, on the <b>Resources &gt; Edit Template &gt; Template Settings</b> page, disable the ACTIVATION_CODE_ENABLED field and save the changes.</p>

- Click **Next**.

The Activate Device page appears.

- On **Activate Device** page, the cluster device (both primary and secondary) is activated through the following steps:
  - Device is detected
  - Stage-one configuration apply on device is successful
  - Bootstrap of device success
  - Activation of device is successful

- Device is modelled and is expected to be activated
- Device is active
- Device gateway component is spawned
- Device gateway router is put into cluster mode.
- Device is successful provisioned

After each successful step, you can see a green check mark. If any of these steps fail, a red exclamation mark appears.

8. After the activation process is complete, click **OK**.

The *Site Name* page appears. If the device activation is successful, the management status of the cluster device is changed to **PROVISIONED**. You can also see the following device states:

- **EXPECTED**—Device is ready for activation.
- **ACTIVE**—Device is authenticated but not yet operational.
- **ACTIVATION\_FAILED**—Device is not authenticated.
- **GWR\_SPAWNED**—Device gateway component spawning is successful.
- **GWR\_SPAWN\_FAILED** —Device gateway component spawning fails.
- **PROVISIONED**—Device is operational.
- **PROVISION\_FAILED**—Device failed to become operational. Contact your service provider for assistance.

**NOTE:** The **GWR\_SPAWNED** and **GWR\_SPAWN\_FAILED** statuses are not applicable for dual CPE SRX Series Services Gateway devices.

## RELATED DOCUMENTATION

[Device Redundancy Support Overview | 255](#)

[Activating a CPE Device | 257](#)

[About the Sites Page | 55](#)

[Add an On-Premise Spoke Site with SD-WAN Capability | 103](#)

[About the Certificates Page | 404](#)

# Viewing the History of Tenant Device Activation Logs

You can use the Activation Logs page to view the history of device activation logs. You can also view the details of the activation logs and their status.

To view the tenant device activation logs:

1. Click **Resources > Tenant Devices**.

The Tenant Devices page appears, which list all devices.

2. Select a device and click **More > Activation Logs**.

The Activation Logs page is displayed. [Table 73 on page 285](#) describes the fields on the Activation Logs page.

3. Click a task name.

The ZTP Logs page appears. [Table 74 on page 286](#) describes the fields on the ZTP Logs page.

4. Click the Task Name.

The Job Status page appears. [Table 75 on page 286](#) describes the fields on the Job Status page.

5. Click **OK** to return to the previous page.

**Table 73: Fields on the ZTP History Page**

Field	Description
In progress	View the number of activated tasks that are in progress.
Success	View the number of activated tasks that are successful.
Failure	View the number of activated tasks that have failed.
Name	View the name of the task.  Example: csp.tssm_ztp-Juniper-site-17-NFX-250-8052cc9451914be28c7c98fb64fd0db3
Start Date	View the start date and time of the task.
End Date	View the end date and time of the task.

Table 73: Fields on the ZTP History Page (*continued*)

Field	Description
Status	View the status of the task to know whether the task succeeded or failed.
Log	View the import logs. Click a log to access more detailed information about the imported log.

Table 74: Fields on the ZTP Logs Page

Field	Description
Task Name	View the ID created for the task.  Example: install-license-to-device
Status	View the status of the task to know whether the task succeeded or failed.

Table 75: Fields on the Job Status Page

Field	Description
Name	View the name of the task.
Actual Start Time	View the start date and time of the task.
User	View the name of the user who activated the task.
End Time	View the end date and time of the task.
State	View the status of the task to know whether the task succeeded or failed.

## RELATED DOCUMENTATION

| *About the Tenant Devices Page*

## Zero Touch Provisioning Overview

Zero Touch Provisioning (ZTP) enables you to configure and provision devices automatically, and thus reduces the manual intervention required for adding devices to a network.

In Contrail Service Orchestration (CSO), the ZTP of a device involves the following high-level steps:

1. Activate the device that is associated with the site.
2. The device contacts CSO through the Redirect Server or Phone Home Client (PHC) and the stage-1 (initial) configuration is automatically applied to the device, allowing CSO to establish a secure management connection with the device. The process of applying the stage-1 configuration to the device is called as bootstrapping.
3. CSO automatically applies the provisioning configuration on the device after the completion of the bootstrapping process.

The provisioning configuration is generated by CSO and is applied on a device to make it functional and ready for the intended functionality. For example, provisioning configuration can include IPsec or GRE tunnel configurations, virtual route reflector (vRR) configuration, routing configuration, and so on.

For additional functionality, you can create the stage-2 configuration and apply the configuration to the device by using the CSO GUI. For example, the stage-2 configuration can include LAN configuration, firewall policies, and so on.

After the ZTP process is complete, the device is provisioned.

### Devices Supported

In CSO, you can provision the following devices (including dual CPE devices, if applicable), by using ZTP:

- NFX150 and NFX250 Series
- SRX300, SRX320, SRX340, SRX345, SRX550 High Memory (SRX550M), and SRX1500
- vSRX on an x86 server
- EX2300, EX3400, EX4300, EX4600, and EX4650 Series switches

### Benefits

Using ZTP offers the following benefits:

- Simplified, faster, and automated deployment of configurations.
- Auto-generated configurations that are more accurate.
- Faster scaling of the network because you need not manually apply configuration on each device in the network.

## RELATED DOCUMENTATION

| [Workflow for Onboarding a Device Using ZTP](#) | 288

## Workflow for Onboarding a Device Using ZTP

Zero Touch Provisioning (ZTP) enables you to configure and provision devices automatically, minimizing the manual intervention required for adding devices to a network.

This topic provides a sequential list of tasks that you need to perform for successfully onboarding a device to the network by using ZTP:

1. From Customer Portal, add an on-premise spoke site or an enterprise site, and associate a device.

For more information on adding an on-premise spoke site with the following capabilities:

- WAN capability as SD-WAN, see [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103](#).
- WAN capability as Next Gen Firewall, see [“Adding a Standalone Next Generation Firewall Site” on page 187](#).
- WAN capability as SD-WAN and LAN capability, see [“Add an On-Premise Spoke Site with SD-WAN and LAN Capabilities” on page 121](#).
- WAN capability as Next Gen Firewall and LAN capability, see [“Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities” on page 155](#).
- Only LAN capability, see [“Add an On-Premise Spoke Site with LAN Capability” on page 141](#).

For more information on adding an enterprise hub, see [“Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities” on page 65](#).

2. Activate the device:

- If you have enabled the **Auto Activate** field while adding an on-premise site or an enterprise hub, ZTP of the device is automatically triggered after the site is added to CSO.
- If you have disabled the **Auto Activate** field while adding an on-premise site or an enterprise hub, you must manually activate the device.

To manually activate the device:

- a. Select **Resources > Site Management**.

The **Sites-Name** page appears.

- b. On the Sites page, click the site that you want to activate.



The detailed view of the site appears.

**NOTE:** You can activate a site that is in the CONFIGURED state.

- c. Click the **Devices** tab.
- d. Select the device that you added to the site and click **Activate Device** to activate the device.

The Activate Device page appears.

- e. On the Activate Device page, enter the activation code for the device. The activation code must match the activation code that you provided during the site addition workflow.
- f. Click **Next**.

The progress of device activation is displayed.

- g. After the device is activated, click **OK**.

The Sites page appears.

- If you have to activate a vSRX or SRX4X00 Services Gateway devices:

- 1. Select **Resources > Site Management**.

The Sites page appears.

- 2. Click on the site that you want to activate.

The *Site-Name* page appears.

- 3. On the Devices tab, select the device that you want to activate and click **Stage1 Config**.

A new page appears displaying the stage-1 configuration of the device.

- 4. Click **Copy to Clipboard** to copy the stage-1 configuration of the device.
- 5. Log in to the CLI of the device and enter the configuration mode.
- 6. Paste the stage-1 configuration and commit.

The Phone-Home client or the Redirect Server authenticates the device and establishes a communication between the device and CSO.

After the device activation is complete, CSO applies the stage-1 configuration. The status of the device is changed from Expected to Active, which indicates the device is authenticated but not yet operational.

3. After authenticating the device, CSO automatically triggers a job to push the provisioning and stage-2 (optional) configurations.

You can use the Activation Logs page (**Resources > Tenant Devices > More > Activation Logs**) to view bootstrap logs (stage-1 configuration and device activation) and ZTP logs (provisioning and stage-2 configurations) and their status.

After the job is completed successfully:

- The provisioning configuration and stage-2 configuration (optional) are applied.
- The device state changes from Active to Provisioned, which indicates that the device is fully functional.

The newly-added device is provisioned and is onboarded to the network. You can apply SD-WAN and security policies, if applicable.

## RELATED DOCUMENTATION

| [Zero Touch Provisioning Overview](#) | 287

# Managing Device Images

## IN THIS CHAPTER

- [Device Images Overview | 291](#)
- [About the Device Images Page | 291](#)
- [Deleting Device Images | 292](#)

## Device Images Overview

An image management system provides full lifecycle management of images for all network devices, including CPE device and virtualized network function (VNF) images. A *device image* is a software installation package for the CPE device or an image for a virtual application that runs on the device. For example, for a NFX Series device platform, you require an NFX software image and a software image for the vSRX application that provides security functions and routing on the device.

## RELATED DOCUMENTATION

[About the Device Images Page | 291](#)

## About the Device Images Page

To access this page, click **Resources > Images**.

You can use the Images page to view the list of device images that are available in tenant's network.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about a device image. Click the details icon that appears when you hover over the name of an image or click **More > Details**.

- Show or hide columns about the device image. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a device image. Click the Search icon in the top right corner of the page to search for a device image.

Field Descriptions

Table 76 on page 292 shows the fields on the Images page.

Table 76: Fields on the Device Images Page

Field	Description
Image Name	View the name of the device image.  Example: juniper_srx_v1.tgz
Type	View the type of the device image.  Example: VNF Image
Version	View the version number of the device image.  Example: 1.1
Vendor	View the vendor name of the device.  Example: Juniper
Size	View the size of the device image.  Example: 14 KB

RELATED DOCUMENTATION

| [Device Images Overview](#) | 291

Deleting Device Images

You can delete one or more device images from the Device Images page.

To delete a device image:

1. Select **Resources > Images**.

The Images page appears with a list of device images.

2. Select the device image that you want to delete and then click the delete icon (X).

The Confirm Delete page appears.

3. Click **Yes** to confirm.

**The Delete Success messages is displayed.**

The device image is deleted.

#### RELATED DOCUMENTATION

| [About the Device Images Page](#) | 291

# Managing Resources

## IN THIS CHAPTER

- Multidepartment CPE Device Support | 295
- About the Devices Page | 296
- Perform Return Material Authorization (RMA) for a Device | 299
- Grant Return Material Authorization (RMA) for a Device | 307
- Manage a Single CPE Device | 313
- Rebooting a CPE Device | 316
- Configuring APN Settings on CPE Devices | 317
- Identifying Connectivity Issues by Using Ping | 320
- Identifying Connectivity Issues by Using Traceroute | 324
- Remotely Accessing a Device CLI | 326
- Configuring the Firewall Device | 327
- About the Physical Interfaces Page | 329
- About the Logical Interfaces Page | 330
- Adding a Logical Interface | 331
- Editing, Deleting, and Deploying Logical Interfaces | 334
- Adding a Security Zone | 335
- Adding a Routing Instance | 338
- About the Static Routes Page | 339
- Adding a Static Route | 340
- Editing, Deleting, and Deploying Static Routes | 343

## Multidepartment CPE Device Support

Multitenancy enables a single NFX Series device to be mapped to serve across multiple departments within a single tenant. Each department has its own Layer 3 VPN and all Layer 3 VPNs are carried over to the hub using a shared overlay. The traffic is segregated to each department. A single overlay of IPsec or generic routing encapsulation (GRE) tunnels is used to carry all department traffic from the site through MPLS-based traffic separation.

Multitenancy is a cost-effective approach where the cost of a device and its maintenance is shared among multiple departments across a tenant. With multitenant device support, a dedicated share of the device is allocated to each department, and the data is kept private from the other tenants that access the same device.

**NOTE:** Only users with the Tenant Administrator role have access to the Customer Portal GUI.

The tenant administrator can perform the following tasks:

- Manage and monitor all policies and dashboards for all departments.
- Manage applications in the dashboard for each tenant.
- Create SD-WAN and security policies for each tenant and monitor the dashboard at the site level or at the department level.
- View or select SD-WAN or security services on the shared CPE device through the management portal.
- View the shared CPE device and its services and networks even though the WAN links might be shared by multiple departments.

The service provider administrator can see all departments within the CPE device and activate the device.

### RELATED DOCUMENTATION

[About the SLA Performance of a Single Tenant Page | 895](#)

[Viewing the SLA Performance of a Site | 898](#)

## About the Devices Page

To access this page, click **Resources > Devices**.

You can use the Devices page to view the list of all devices managed by Contrail Service Orchestration (CSO). You can also view information about each device in the network.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Manage a CPE. See [“Manage a Single CPE Device” on page 313](#).
- Reboot a CPE device. See [“Rebooting a CPE Device” on page 316](#).
- Download the cloud formation template. Click **Cloud Info Template** to download the template in JSON format. See [“Download the Cloud Formation Template” on page 100](#) and [“Provision the Device on AWS Server” on page 101](#).
- Discover MIST access points (AP). Click **Discover Connected APs** to view the connected APs for the device in the integrated MIST portal. See [“Discover Mist Access Points” on page 186](#).
- Activate a device. See [“Manually Activating a Switch” on page 260](#) or [“Activating a CPE Device” on page 257](#). You can also view detailed information about the device activation logs at **More > Activation Logs**. See [“Viewing the History of Tenant Device Activation Logs” on page 285](#).
- Push licenses to devices. Select the device and click **Push License**. See *Pushing a License to Devices*.
- View stage-1 configuration. Click **Stage-1 Config** and copy or save the configuration and deploy it to a device. See Step [“2” on page 288](#) in *Workflow for Onboarding a Device Using ZTP*.
- Perform Return Material Authorization (RMA) to replace a device that is faulty or not reachable. You can perform RMA for a single-CPE, dual-CPE, provider hub, enterprise hub, EX Series device, and next-generation firewall devices.
  - For information on performing RMA on a single-CPE, enterprise hub, EX Series device, and next-generation firewall devices, see [“Perform Return Material Authorization \(RMA\) for a Device” on page 299](#)
  - For information on performing RMA on dual-CPE devices, see *Perform Return Material Authorization (RMA) for a Dual-CPE Device*
- View details about a device. Click the Detail icon that appears when you hover over the row for a device or select a device and click **More > Detail**.
- Install certificates on the site. See [“Installing and Uninstalling Certificates” on page 408](#).
- Ping a remote host from a device to identify connectivity issues. See [“Identifying Connectivity Issues by Using Ping” on page 320](#).



- Access the CLI of a device remotely. See [“Remotely Accessing a Device CLI” on page 326](#).
- Traceroute a remote host from a device to identify connectivity issues. See [“Identifying Connectivity Issues by Using Traceroute” on page 324](#).
- Show or hide columns about a device. Click the **Show/Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Filter and sort the devices. Click a column name to sort the devices based on the column name.

Click the filter icon and select whether you want to show or hide column filters or apply a quick filter.

**NOTE:** Sorting and filtering is applicable only to some fields.

- Search for a device. Click the Search icon in the top right corner of the page to search for a specific device.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

## Field Descriptions

[Table 77 on page 297](#) describes the fields on the Devices page.

**Table 77: Fields on the Devices Page**

Field	Description
Device Name	Displays the name of the device.  Example: sunny-NFX-250
Tenant	Displays the name of the tenant.  Example: tenant-blue
Site Name	Displays the name of the tenant site.  Example: site-blue-white

Table 77: Fields on the Devices Page *(continued)*

Field	Description
Management Status	<p>Displays the management status of the CPE devices deployed in the cloud.</p> <ul style="list-style-type: none"> <li>• EXPECTED—Regional server has the activation details for the CPE device, but CPE device has not yet established a connection with the server.</li> <li>• DEVICE DETECTED—Device is configured and is reachable by CSO. After the user enters the activation code for the device, the activation code is validated and device is authenticated.</li> <li>• RMA—CPE device has been tagged for RMA as a result of the user applying the <b>Initiate RMA</b> action on the device.</li> <li>• ACTIVE—ZTP is initiated, CPE device has downloaded images, but not yet configured, and stage-1 configuration is pushed to the device.</li> <li>• PROVISIONED—ZTP is complete, and IPsec tunnel is established and operational on the device.</li> <li>• PROVISION_FAILED—Multiple factors lead to failure in provisioning a device. If any of the steps in ZTP fails or if any process fails as a part of device activation, then provision fails. For example, CPE device provisioning fails when the vSRX is not instantiated properly.</li> </ul>
Model	<p>Displays the name of the device model.</p> <p>Example: NFX</p>
Active Services	<p>Displays the number of services that are activated for the device.</p> <p>Example: 3</p>
Operational Status	<p>Displays whether the device is up or down.</p>
Location	<p>Displays the name of the location.</p> <p>Example: San Jose, CA</p>
Status Message	<p>Displays the latest status message.</p> <p>Example: IPsec provision success</p>
WAN Links	<p>Displays the number of WAN links.</p> <p>Example: 2</p>
POP Name	<p>Displays the name of the POP.</p> <p>Example: pop_blue</p>

Table 77: Fields on the Devices Page *(continued)*

Field	Description
Image Name	Displays the name of the device image file.  Example: install_nfx_fmfm_agent_1_0.sh
OS Version	Displays the Junos OS Release version.  Example: 15.1X49-D40
Serial Number	Displays the serial number of the device.  Example: XXXXXXXXXXXXX
UUID	Displays the universally unique identifier (UUID) of the device.  Example: xxxxxxxx-xxxx-xxxx-xxx-xxxxxxxxxxxx

## RELATED DOCUMENTATION

[Manage a Single CPE Device](#) | 313

## Perform Return Material Authorization (RMA) for a Device

### IN THIS SECTION

- [Perform Return Material Authorization \(RMA\) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device](#) | 300
- [Perform Return Material Authorization \(RMA\) for a Dual-CPE Device](#) | 302

Sometimes, due to hardware failure, a device managed by Contrail Service Orchestration (CSO) needs to be returned to the vendor for repair or replacement. In such situations, you, as the tenant administrator, can perform Return Material Authorization (RMA) for the faulty device.

From Customer Portal, you can perform RMA for single-CPE, dual-CPE, EX Series, enterprise hub, and Next-Generation Firewall devices.

The RMA process includes actions to:

1. Back up the configuration of the faulty device.
2. Recall the faulty device and replace it with a new or restored device.
3. Push the required configuration to the new or restored device.
4. Activate the new or restored device in order for CSO to recognize and manage the device.

### Perform Return Material Authorization (RMA) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device

When you request RMA for a non-SRX device (NFX single-CPE device or an EX Series switch) associated with a site that has a version earlier than the CSO version, the site version is upgraded to the CSO version. The site version is upgraded as part of the device activation and zero touch provisioning (ZTP) process of the replacement device that is performed after RMA.

When you request RMA for an SRX single-CPE device, enterprise hub device, or next-generation firewall device associated with a site that has a version earlier than the CSO version, the site version is not upgraded to the CSO version as part of the device activation and zero touch provisioning (ZTP) process of the replacement device that is performed after RMA.

To perform RMA for a single-CPE, enterprise hub, next-generation firewall, and EX Series device:

1. Select **Resources > Devices**.

The **Devices** page appears.

2. Select the faulty device and click **More > Initiate RMA**.

A confirmation page appears requesting for confirmation to initiate the RMA process for the device.

#### NOTE:

- The **Initiate RMA** option is enabled only for a device with the management status **PROVISIONED**.
- For an EX Series switch, you can initiate RMA only when the switch is behind an SRX Series device or an Internet gateway.
- For an EX Series virtual chassis, click the Expand icon and select the member device for which you want to initiate RMA.

3. Click **Yes** to confirm RMA for the device.

You are returned to the Devices page where a confirmation message appears, indicating that the RMA process is initiated.

4. After the management status of the device changes to **RMA**, raise a device replacement request. This action is performed outside of CSO.
5. After you receive the new device, click **More > Grant RMA**.

The Grant RMA for Device page appears. Provide details of the new device on this page. See [“Grant Return Material Authorization \(RMA\) for a Device” on page 307](#) for details.

**NOTE:**

- The **Grant RMA** option is enabled only for a device with the management status **RMA**.
- Before you grant RMA, ensure that you have uploaded the required license for the new device.

6. To complete the RMA process and start using the new device, the device must be activated.
  - If you enabled the Auto-activate toggle button on the Grant RMA for Device page, the device is activated automatically and its **Management Status** changes to **PROVISIONED**.
  - If you disabled the Auto-activate toggle button on the Grant RMA for Device page, you must activate the new device manually after the grant RMA job completes successfully.

To activate the new device manually:

- a. On the Devices page, select the new device and click **Activate Device**.

The Activate Device page appears.

- b. Enter the activation code for the device and click **Next**.

The progress of device activation is displayed.

After the device is activated, its **Management Status** changes to **PROVISIONED**.

7.
  - If the device for which you performed RMA is an SRX Series single-CPE device, enterprise hub device, next-generation firewall device, or an EX Series device, the RMA process is now complete. You can start using the new device.
  - If the device for which you performed RMA is an NFX150 or NFX250 device, an **RMA** tag is also displayed beside the management status indicating that the RMA process is not yet complete. Hover over the RMA tag to see the additional steps that you need to perform to complete the RMA process.

Push the following configuration to the newly provisioned device manually:

- Licenses—Generate a new license and upload it to CSO. See [“About the Device Licenses Page” on page 396](#).
- Application Signatures—Push the application signatures to the new device. See [“About the Application Signatures Page” on page 803](#).
- Certificates—Import and install the required certificates on the new device. See [“Importing a Certificate” on page 406](#) and [“Installing and Uninstalling Certificates” on page 408](#).
- Policies—Push the defined firewall and NAT policies to the new device. See [“About the Firewall Policy Name Page” on page 429](#) and [“About the NAT Policies Page” on page 613](#).

To complete the RMA process, you must remove the RMA tag manually. To remove the RMA tag, hover over the **PROVISIONED (RMA)** tag, select the check box indicating that you have completed all the steps for RMA, and click **OK**.

The RMA process is now complete. You can start using the new device.

## Perform Return Material Authorization (RMA) for a Dual-CPE Device

### IN THIS SECTION

- [Perform RMA for an NFX Cluster | 302](#)
- [Perform RMA for an SRX Cluster | 305](#)

You can perform RMA for devices in an NFX or SRX cluster when the devices fail or need to be replaced with new devices.

### *Perform RMA for an NFX Cluster*

From CSO Release 4.1.0 onward, when an NFX250 device in a dual CPE cluster fails, you can perform RMA for only the failed device. In releases before CSO Release 4.1.0, RMA must be performed for both the devices in the cluster.

To perform RMA for an NFX cluster:

1. Select **Resources > Devices**.

The **Devices** page appears displaying all the devices and clusters.

Alternatively,

- a. Select **Resources > Site Management**.

The Sites page appears.

- b. Click a site that contains the NFX cluster for which you want to perform RMA.

The *Site-Name* page appears.

- c. Click the **Devices** tab to view the devices and clusters installed at the site.

**NOTE:** On a site associated with an NFX dual-CPE device, if the site version is earlier than that of the CSO version, you can perform RMA only at the cluster level. After RMA of the cluster, the version of the site is upgraded to that of CSO as part of the device activation and ZTP process of the replacement devices in the cluster.

2. Do one of the following:

- To perform RMA at the cluster level, select the cluster and click **More > Initiate RMA**.
- To perform RMA for a single device in the cluster, select the device and click **More > Initiate RMA**.

A confirmation page appears requesting for confirmation to initiate the RMA process.

3. Click **Yes** to confirm RMA for the selected NFX cluster or device.

You are returned to the Devices page where a confirmation message appears indicating that the RMA process is initiated for the selected NFX cluster or device.

**NOTE:**

- The **Initiate RMA** option is enabled only for an NFX cluster or device with the management status **PROVISIONED**.
- On the Sites page (**Resources > Site Management**), the status of the site, where the NFX cluster or the device for which you initiated RMA is installed, remains as **PROVISIONED**. However, a red-colored **RMA** tag appears beside the **Site Status** to indicate that RMA is initiated for a cluster or device at the site.

4. After the NFX cluster or device is in the **RMA** state, you can raise a device replacement request for one or more faulty devices in the NFX cluster. This action is performed outside of CSO.
5. After you receive the new device or devices, click **More > Grant RMA**.

The Grant RMA for Device page appears. Provide details of the new device or devices. See [“Grant Return Material Authorization \(RMA\) for a Device” on page 307](#) for details.

**NOTE:**

- The **Grant RMA** option is enabled only for a device with the management status **RMA**.
- Before you grant RMA, ensure that you have uploaded the required license for the new device.

6. To complete the RMA process and start using the new device or devices, the device or devices must be activated.

- If you enabled the Auto-activate toggle button on the Grant RMA for Device page, the device or devices are activated automatically and the **Management Status** changes to **PROVISIONED**.
- If you disabled the Auto-activate toggle button on the Grant RMA for Device page, you must activate the new device or devices manually.

To activate the device or devices in the NFX cluster manually:

a. On the Devices page, do one of the following:

- To activate both the devices in the cluster, select the cluster (if the entire cluster is RMAed) and click **Activate Device**.
- To activate a single device in the cluster, select the device (if a single device is RMAed) and click **Activate Device**.

The Activate Device page appears.

b. Enter the activation code for the device and click **Next**.

The progress of device activation is displayed.

After the device is activated, its **Management Status** changes to **PROVISIONED**.

An RMA tag is displayed beside the management status indicating that the RMA process is not yet complete. Hover over the RMA tag to see the additional steps that you need to perform to complete the RMA process.

7. Push the following configuration to the newly provisioned devices manually:



**NOTE:**

- In SD-WAN deployments, once the new devices are in the **PROVISIONED** state, you can proceed to configure the devices by pushing application signatures, certificates, and policies manually.
- When you perform RMA on a single device, CSO restores certificates on the new device. However, application signatures and policies need to be pushed manually.

- Application Signatures—Push the application signatures to the replaced device. See [“About the Application Signatures Page” on page 803](#).
- Certificates—Import and install the required certificates on the replaced devices. See [“Importing a Certificate” on page 406](#) and [“Installing and Uninstalling Certificates” on page 408](#).
- Policies—Push the defined firewall and NAT policies to the replaced devices. See [“About the Firewall Policy Name Page” on page 429](#) and [“About the NAT Policies Page” on page 613](#).

8. To complete the RMA process, you must remove the RMA tag manually. To remove the RMA tag, hover over the **PROVISIONED (RMA)** tag, select the check box indicating that you have completed all the steps for RMA, and click **OK**.

The RMA process is now complete. You can start using the new device.

### ***Perform RMA for an SRX Cluster***

For an SRX cluster, you can perform RMA on a member device of the cluster. That is, you can select the faulty device from the SRX cluster and perform RMA on it individually. You cannot perform RMA for an SRX cluster at the cluster level.

To return a faulty device in an SRX cluster and replace it with a new or restored device by using RMA:

1. Select **Resources > Devices**.

The **Devices** page appears displaying all the devices and clusters.

Alternatively,

- a. Select **Resources > Site Management**.

The Sites page appears.

- b. Click a site that contains the SRX cluster for which you want to perform RMA.

The *Site-Name* page appears.

- c. Click the **Devices** tab to view the devices and clusters installed at the site.

2. Select the faulty device in the SRX cluster and click **More > Initiate RMA**.

A confirmation page appears requesting for confirmation to initiate the RMA process for the device.

3. Click **Yes** to confirm RMA for the device.

You are returned to the Devices page where a confirmation message appears, indicating that the RMA process is initiated.

**NOTE:**

- The **Initiate RMA** option is enabled only for a device with the management status **PROVISIONED**.
- On the Sites page (**Resources > Site Management**), the status of the site, where the device for which you initiated RMA is installed, remains **PROVISIONED**. However, a red-colored **RMA** tag appears beside the current site status to indicate that RMA is initiated for a cluster or device at the site.

4. After the management status of the device changes to RMA, you must raise a replacement request for the faulty device in the SRX cluster. This process is performed outside of CSO.
5. After you receive the new device, perform the following actions on the new device through CLI.

**NOTE:**

- At this point, the new device is not onboarded to CSO.
- Before performing the following actions through CLI, ensure that the new device is connected to the Internet.

- Download licenses on the new device.
- Install application signatures on the new device.

If you do not install application signatures on the new device, configuration between the devices will not be synchronized when you pair the devices to form the cluster. Therefore, the cluster will be in Disabled state.

See [Application Security User Guide for Security Devices](#) for details.

6. Pair the existing device with the new device to form the cluster. See [SRX Series Chassis Cluster Configuration Overview](#) for details on the tasks you must perform on the new device.

After the cluster is formed, configuration is automatically synchronized between the devices in the cluster.

7. Click **More** > **Grant RMA** to provide details of the new device. See [“Grant Return Material Authorization \(RMA\) for a Device” on page 307](#) for details.

**NOTE:** The **Grant RMA** option is enabled only for a device with the management status **RMA**.

8. To complete the RMA process, you must remove the RMA tag manually. To remove the RMA tag, hover over the **PROVISIONED (RMA)** tag, select the check box indicating that you have completed all the steps for RMA, and click **OK**.

The RMA process is now complete. You can start using the new device.

## RELATED DOCUMENTATION

[About the Devices Page | 296](#)

[Grant Return Material Authorization \(RMA\) for a Device | 307](#)

## Grant Return Material Authorization (RMA) for a Device

### IN THIS SECTION

- [Grant Return Material Authorization \(RMA\) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device | 308](#)
- [Grant RMA for a Dual-CPE Device | 309](#)
- [Grant RMA for an SRX Device within an SRX Cluster | 311](#)

As a Tenant Administrator with the RMA privilege, you can grant RMA for a single CPE, dual CPE, EX Series, enterprise hub, and next-generation firewall devices from the Customer Portal. When you grant RMA, the device-related configuration is backed up to the CSO database, the existing device is recalled, and the new device is added to the network.

Before you grant RMA for a device, ensure that:

- You have received a new device for replacing the faulty device.
- You have the serial number and activation code for the new device.

- You have uploaded the required license for the new device.

## Grant Return Material Authorization (RMA) for a Single-CPE, Enterprise Hub, Next-Generation Firewall, and EX Series Device

To grant RMA for a single CPE, enterprise hub, next-generation firewall, or EX Series device:

1. Select **Resources > Devices**.

The **Devices** page appears.

Alternatively,

- a. Select **Resources > Site Management**.

The Sites page appears.

- b. Click a site that contains the device for which you want to perform RMA.

The **Site-Name** page appears.

- c. Click the **Devices** tab to view the devices and clusters installed at the site.

2. Select the faulty device for which you initiated RMA and click **More > Grant RMA**.

The Grant RMA for Device page appears.

**NOTE:** The **Grant RMA** option is enabled only for devices with the management status **RMA**.

3. Complete the configuration according to the guidelines provided in [Table 78 on page 309](#).

4. Click **OK** to perform the grant RMA process.

You are returned to the Devices page where a confirmation message appears indicating that a Grant RMA job is created.

5. (Optional) Click the job link in the message to view the progress of the job. Alternatively, view the progress of this job on the Jobs (**Monitor > Jobs**) page. This job might take around 15 minutes to complete.

After the job completes successfully, the management status of the device on the Devices page changes to **Expected**. In addition, the status of the site on the Sites page (**Resources > Site Management**), where the device for which you performed Grant RMA is installed, changes to **Expected**.

To complete the RMA process and start using the new device, you must activate the device. See step 6 in [“Perform Return Material Authorization \(RMA\) for a Device” on page 299](#) for details.

[Table 78 on page 309](#) provides guidelines on using the fields on the Grant RMA for Device page.

**Table 78: Fields on the Grant RMA for Device Page**

Field	Description
Customer Name	Displays the name of the tenant who is performing RMA.
Site Name	Displays the name of site in which the faulty device is present.
Device Name	Displays the name of the faulty device that will be replaced with a new device through the <b>Grant RMA</b> process.
Auto Activate	Click the toggle button to enable (default) or disable automatic activation of the new device.
Activation Code	If you disable automatic activation, enter the activation code for the new device. You receive the activation code (Example: 545454) from the service provider, outside of CSO.
Serial Number	Enter the serial number of the new device. The serial number is case-sensitive. Example: DD2316AF0177
Boot Image	<p>Select the boot image from the list if you want to upgrade the image for the device.</p> <p>The boot image is the latest build image uploaded to the image management system. The boot image is used to upgrade the device when CSO starts the ZTP process.</p> <p><b>NOTE:</b> For SRX devices, select the same boot image as the faulty device. If you select a different boot image for the new device, the grant RMA process may not complete successfully.</p>

## Grant RMA for a Dual-CPE Device

To grant RMA for a dual-CPE device (cluster):

1. Select **Resources > Devices**.

The **Devices** page appears displaying all the devices and clusters.

Alternatively,

- a. Select **Resources > Site Management**.

The Sites page appears.

- b. Click a site that contains the dual-CPE device for which you initiated RMA.

The *Site-Name* page appears

- c. Click the **Devices** tab to view the devices and clusters installed at the site.

2. Select the cluster or the device in the cluster for which you initiated RMA and click **More > Grant RMA**.

The **Grant RMA for Device** page appears.

**NOTE:** The **Grant RMA** option is enabled only for devices with the Management Status **RMA**.

3. Complete the configuration according to the guidelines provided in [Table 79 on page 310](#).

4. Click **OK** to perform the grant RMA process.

You are returned to the Devices page where a confirmation message appears indicating that a Grant RMA job is created.

When you grant RMA, the following actions are performed:

- The cluster-related configuration is backed-up to the CSO database, and the devices in the cluster are recalled and the new or restored devices are added to the network.
- The management status of the cluster changes to **EXPECTED** on the **Devices** page. An **RMA** tag is also displayed beside the management status indicating that the RMA process is not yet complete. Hover over the RMA tag to see the additional steps that you must perform to complete the RMA process.

On the Sites page (**Resources > Site Management**), the status of the site, where the cluster or device for which you performed **Grant RMA** is installed, changes to **Expected**.

5. (Optional) View the progress of this job on the Jobs (**Monitor > Jobs**) page. This job might take around 15 minutes to complete.

[Table 79 on page 310](#) provides guidelines on using the fields on the **Grant RMA for Device** page.

**Table 79: Fields on the Grant RMA for Dual-CPE Device Page**

Field	Description
Customer Name	Displays the name of the tenant performing RMA.
Site Name	Displays the name of site in which the faulty device is present.

Table 79: Fields on the Grant RMA for Dual-CPE Device Page (*continued*)

Field	Description
Device Name	Displays the name of the faulty device that will be replaced with new or restored devices through the <b>Grant RMA</b> process.
Primary Serial Number	Enter the serial number of the new primary device. The serial number is case-sensitive. Example: DD2316AF0177
Primary Activation Code	Enter the activation code for the new primary device. You will receive the activation code from the service provider, outside of CSO. Example: 545454
Secondary Serial Number	Enter the serial number of the new secondary device. The serial number is case-sensitive. Example: DD2316AF0145
Secondary Activation Code	Enter the activation code for the new secondary device. You receive the activation code from your service provider, outside of CSO. Example: 545476

### Grant RMA for an SRX Device within an SRX Cluster

To grant RMA for an SRX Series device within an SRX cluster:

1. Select **Resources > Devices**.

The **Devices** page appears displaying all the devices and clusters.

Alternatively,

a. Select **Resources > Site Management**.

The **Sites** page appears.

b. Click the site that contains the SRX device for which you initiated RMA.

The *Site-Name* page appears

c. Click the **Devices** tab to view the devices and clusters installed at the site.

2. Select the defective device for which you initiated RMA and click **More > Grant RMA**.

The **Grant RMA for Device** page appears.

**NOTE:** The **Grant RMA** option is enabled only for devices with the Management Status **RMA**.

3. Complete the configuration according to the guidelines provided in [Table 80 on page 312](#).
4. Click **OK** to perform the grant RMA process.

You are returned to the Devices page where a confirmation message appears indicating that a Grant RMA job is created.

When you perform Grant RMA for a device, a job is created to update the device object in CSO with the serial number and activation code of the new device. On the Sites page (**Resources > Site Management**), the status of the site, where the device for which you performed Grant RMA is installed, changes to **PROVISIONED**.

5. View the progress of this job on the Jobs (**Monitor > Jobs**) page. This job might take around 15 minutes to complete.

[Table 80 on page 312](#) provides guidelines on using the fields on the **Grant RMA for Device** page.

**Table 80: Fields on the Grant RMA for Device Page (for SRX Device in an SRX Cluster)**

Field	Description
Customer Name	Displays the name of the tenant who is performing RMA.
Site Name	Displays the name of site in which the faulty device is present.
Device Name	Displays the name of the faulty device that will be replaced with a new one through the <b>Grant RMA</b> process.
Serial Number	Enter the serial number of the new device. The serial number is case-sensitive. Example: DD2316AF0177
Activation Code	Enter the activation code for the new device. You receive the activation code (Example: 545454) from the service provider, outside of CSO.

## RELATED DOCUMENTATION

[About the Devices Page | 296](#)

[Perform Return Material Authorization \(RMA\) for a Device | 299](#)



## Manage a Single CPE Device

Users with the Tenant Administrator role can use the **Device-Name** page (**Resources > Devices > Device-Name**) to view details of and manage a customer premises equipment (CPE) device and an EX Series switch.

This topic provides information about managing a CPE device. For information about managing an EX Series switch, see [“Manage an EX Series Switch” on page 262](#).

To manage a CPE device:

- Click the **Overview** tab to perform the following operations:
  - View the geographical location of the device at the tenant site.
  - View the aggregate throughput of the device.
  - View recent alerts for the device.
  - View recent Alarms for the device.
  - View license details of the device.
  - View details of the device, such as serial number, management IP address, OS version, device template, tenant name, site name, and site location.
- Click the **Policies** tab to perform the following operations:
  - View the list of all policies applicable to a CPE device.
    - Click a policy name to view the rules that are applicable for the CPE device.
    - Click the edit icon at the end of the row to edit a policy. You are taken to the **Configuration > Policy** page, where you can edit the policies.
  - View details about the tenant user who last updated the policy.
  - View the time when the policy was last updated.
  - View the deployment status of the policy.
  - View the number of rules applicable to the device compared to the total number of rules applicable to the tenant.
- Click the **Configuration Template** tab to perform the following operations:

**NOTE:** The **Configuration** tab that was available in earlier releases for stage-2 template-based configuration is renamed as **Configuration Template**.

- Complete the configuration according to the guidelines provided in [Table 81 on page 314](#), [Table 82 on page 315](#), and [Table 83 on page 315](#).

- Click **Deploy** to deploy a configuration.

- Click **Undeploy** to undeploy a configuration template from a device.

Undeploying a configuration template removes the configuration pushed to the device when the configuration template was deployed.

- Click **Dissociate** to dissociate a configuration template from a device.

Dissociating a configuration template removes only the references to the configuration template from the device but does not remove the configuration pushed to the device.

- Click **Rollback** to roll back to previous working configuration.

- Click **Deployment History** to view the deployment history.

- Click **View Changes** to view the changes between current and previous configuration.

- Click **Render Template** to render a configuration in CLI format.

- Click **Save** to save the changes.

- Click the **Configuration** tab to perform the following operations (applicable only for Next-Generation Firewall devices):

- Click **Physical Interfaces** tab to view and manage the physical interfaces for the device.

- Click **Security Zone** tab to view and manage the security zones for the device.

- Click **Routing Instance** tab to view and manage the routing instances for the device.

**Table 81: Fields on the SRX Root Password Tab**

Field	Description
<b>Edit Settings for SRX root password</b>	
Password	Enter your new password.  The password that you set must be between 6 and 21 characters long, and it must include at least one lowercase letter, one uppercase letter, one special character, and one number.
Confirm Password	Reenter the password for confirmation.

Table 82: Fields on the NFX Root Password Tab

Field	Description
<b>Edit Settings for NFX root password</b>	
Password	<p>Enter your new password.</p> <p>The password that you set must be between 6 and 21 characters long, and it must include at least one lowercase letter, one uppercase letter, one special character, and one number.</p>
Confirm Password	Reenter the password for confirmation.

Table 83: Fields on the APN Configuration Tab

Field	Description
<b>Edit Settings for APN Configuration</b>	
Use default APN settings	<p>Click the toggle button to change the default APN settings.</p> <ul style="list-style-type: none"> <li>• Enabled(Default)—Select this option to use the default APN setting that is shipped along with the CPE device.</li> <li>• Disabled—Select this option to configure the APN settings.</li> </ul>
<b>APN Settings</b>	
APN Name	Enter the access point name (APN) of the gateway router. The name can contain alphanumeric characters and special characters.
SIM Change Required	<p>Click the toggle button to change the SIM card.</p> <ul style="list-style-type: none"> <li>• Enabled(Default)—Select this option to change the APN settings and to use a new SIM card.</li> <li>• Disabled—Select this option to change the APN settings without changing the SIM card.</li> </ul>
Authentication Method	<p>Select the authentication method for the APN configuration.</p> <ul style="list-style-type: none"> <li>• PAP— Select to use Password Authentication Protocol (PAP) authentication. This is the default option.</li> <li>• CHAP— Select to use Challenge Handshake Authentication Protocol (CHAP) authentication.</li> <li>• None—Select to indicate that there is no authentication method.</li> </ul>

Table 83: Fields on the APN Configuration Tab (*continued*)

Field	Description
<b>Authentication Info</b>	
SIP User ID	Enter the Session Initiation Protocol (SIP) user ID for authentication if you have selected the APN authentication method as either <b>PAP</b> or <b>CHAP</b> .
SIP Password	Enter the SIP password for authentication if you have selected the APN authentication method as either <b>PAP</b> or <b>CHAP</b> .

## RELATED DOCUMENTATION

[About the Devices Page](#) | 296

## Rebooting a CPE Device

You need to reboot a CPE device if the device is down, or if all troubleshooting options fail.

To reboot a CPE device:

1. Select **Resources > Devices**.
2. Select the CPE device that you want to reboot and select **More > Reboot**.

A Device Reboot job link is created and the Status Message column displays the status as **Reboot in-progress**.

**NOTE:** If you reboot a tenant device, deployments that are in progress are stopped.

3. (Optional) Click the **Device Reboot** link to view the device reboot logs.
4. (Optional) You can view the job status on the **Monitor > Jobs** page.

You can view the status of reboot in the Status Message column.

On successful reboot of the CPE device, the Status Message column displays the status as **Reboot Succeeded**.

If a CPE device is not reachable or if the reboot time exceeds the timeout value, the reboot fails and the Status Message column displays the status as **Reboot Failed**.

**NOTE:** The timeout value for rebooting a CPE device is 14 minutes.

## RELATED DOCUMENTATION

[About the Devices Page | 296](#)

## Configuring APN Settings on CPE Devices

### IN THIS SECTION

- [Configuring APN Settings with SIM Change on CPE Devices | 318](#)
- [Configuring APN Settings without SIM Change on CPE Devices | 319](#)

You can configure Access Point Name (APN) settings on the following devices, with or without SIM change. You can change the APN settings either to use a private APN with the current LTE service provider or to use a different LTE service provider.

**NOTE:** You can only insert a SIM card in the SIM1 slot of the LTE Mini-Physical Interface Module (Mini-PIM).

Following is the list of devices on which you can configure APN settings:

- NFX Series—NFX150 and NFX250 CPE devices

- SRX Series—SRX320, SRX340, and SRX345 CPE devices

**Configuring APN Settings with SIM Change on CPE Devices**

To configure APN settings with SIM change:

1. Select **Resources > Devices**.  
The Devices page appears.
2. Click the device that you want to configure.  
The *Device-Name* page appears.
3. Click the **Configuration Template** tab and change the APN settings according to the guidelines provided in [Table 84 on page 318](#).
4. Click **Save**.  
The new settings are applied after one minute.
5. Remove the USB dongle from the CPE device, change the SIM card, and re-insert the USB dongle.  
The system checks for the new APN settings every minute.
  - If the applied APN settings are compatible with the new SIM card—The LTE WAN link and its tunnels go down after one minute and remain down till the new SIM card is inserted. The LTE dongle LED indicates that the connection is down during this period. Maximum one minute after the new SIM is inserted, the LTE dongle LED indicates that the connection is up. The LTE WAN link and its tunnels come up automatically.
  - If the applied APN settings are not compatible with the new SIM card—The LTE WAN link and its tunnels go down after one minute and remain down even after the new SIM card is inserted. The LTE dongle LED indicates that the connection is down even after the new SIM is inserted.
6. To revert to the old SIM, remove the USB dongle, replace the current SIM with the previous SIM, and re-insert the dongle.  
The system checks for the new APN settings every minute. Maximum one minute after the old SIM is inserted, the LTE dongle LED indicates that the connection is up (using the old SIM and old APN). The LTE WAN link and its tunnels come up automatically

Table 84: Fields for the APN Configuration Settings on the Configuration Template Tab

Field	Description
<b>Edit Settings for APN Configuration</b>	

Table 84: Fields for the APN Configuration Settings on the Configuration Template Tab (*continued*)

Field	Description
Use default APN settings	<p>Click the toggle button to enable (default) or disable the default APN settings.</p> <ul style="list-style-type: none"> <li>• If you enable this option, the default APN settings that are shipped along with the CPE device are used for configuring the APN.</li> <li>• If you disable this option, you must configure the APN settings manually.</li> </ul>
<b>APN Settings</b>	
APN Name	Enter the access point name (APN) of the gateway router.
SIM Change Required	<p>Click the toggle button to enable or disable changing the SIM card:</p> <p><b>NOTE:</b> You can change the SIM card either to use a different LTE service provider or to use a private APN with the current LTE service provider.</p> <ul style="list-style-type: none"> <li>• (Default) Enable this option to change the APN settings and to use a new SIM card.</li> <li>• Disable this option to change the APN settings without changing the SIM card.</li> </ul>
Authentication Method	<p>From the list, select one of the following authentication methods for the APN configuration as configured by the service provider:</p> <ul style="list-style-type: none"> <li>• (Default) PAP—Select this option to use Password Authentication Protocol (PAP) as the authentication method.</li> <li>• CHAP—Select this option to use Challenge Handshake Authentication Protocol (CHAP) authentication as the authentication method.</li> <li>• None—Select this option if you do not want to use any authentication method.</li> </ul>
<b>Authentication Information</b>	
SIP User ID	Enter the Session Initiation Protocol (SIP) user ID for authentication.
SIP Password	Enter the SIP password for authentication.

## Configuring APN Settings without SIM Change on CPE Devices

To configure APN settings without SIM change:

1. Select **Resources > Devices**.

The Devices page appears.

2. Click the device that you want to configure.

The *Device-Name* page appears.

3. Click the **Configuration Template** tab and change the APN settings according to the guidelines provided in [Table 84 on page 318](#).
4. Click **Save**.

The new settings will be applied after one minute.

- If the applied APN settings are valid—In CSO, the LTE WAN link and its associated tunnels go down momentarily and then, get re-established automatically.
- If the applied APN settings are invalid—After one minute, the LTE dongle LED indicates that the connection is down. In CSO, the LTE WAN link and its associated tunnels go down.

After two minutes, the LTE dongle LED indicates that the connection is up (using old APN). In CSO, the LTE WAN link and its tunnels come up automatically.

## RELATED DOCUMENTATION

[About the Devices Page](#) | 296

## Identifying Connectivity Issues by Using Ping

You can use Contrail Service Orchestration (CSO) to perform a ping operation from a device (provider hub, tenant device, CPE device, EX switch, enterprise hubs, or next-generation firewall device) to a remote host for identifying issues in connectivity with the remote host.

When you ping a remote host from a device, an Internet Control Message Protocol (ICMP) packet is sent to the remote host. By analyzing the results of the ping operation, you can identify the possible device connectivity issues between the remote host and the device.

**NOTE:** In Contrail Service Orchestration (CSO) Release 5.0, the following devices support ping:

- EX Series: EX2300, EX3400, EX4300, EX4600, and EX4650
- NFX Series: NFX150, NFX250
- SRX Series: SRX300, SRX320, SRX340, SRX345, SRX1500, SRX4100, SRX4200, SRX4600
- vSRX



To perform the ping operation:

1. Select **Resources > Devices**.

The Devices page appears.

2. Select a device from the list of devices displayed and click **More > Ping**.

The Ping page appears.

**NOTE:** You can ping from a device only when its operational status is Up in CSO.

3. Complete the configuration according to the guidelines provided in [Table 85 on page 321](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **Ping** to initiate the ping request.

A job is created and the Ping Progress page appears. After the device sends the ping packets, the Ping Result page appears. . If the ping operation is successful, the Ping Result page displays the parameters specified in [Table 86 on page 323](#).

If the ping operation fails, the Ping Result page displays an appropriate error message (such as **No response** or **No route to host**), indicating that there is an issue in the connectivity to the remote host.

**Table 85: Fields on the Ping page**

Field	Description
Remote Host	Enter the IPv4 address or hostname of the remote host.
Ping Request Packets	Enter the number of ping request packets to be sent to the remote host.  Default: 5.  Range: 1 through 300.
<b>Advanced</b>	
Source Interface	Select the source interface on the device through which you want to send the ping request to the remote host. If you do not select a source interface, ping requests are sent on all interfaces.  To clear the selected interface, click <b>Clear All</b> and select another interface.

Table 85: Fields on the Ping page (*continued*)

Field	Description
Hostname Resolution	Click the toggle button to enable or disable (default) the display of hostname of the hops along the path to the remote host.
Rapid Ping	<p>Click the toggle button to enable or disable (default) sending ping requests rapidly.</p> <p>If you enable this option, the source device sends a minimum of 100 ping request packets per second or sends a packet as soon as a response to the previous packet is received, whichever is greater.</p> <ul style="list-style-type: none"> <li>• If the source device does not receive a response for 500 ms, timeout is considered.</li> <li>• If the source device receives a response within 500 ms, the next ping request packet is sent immediately.</li> </ul> <p><b>NOTE:</b> The ping results are displayed in a single consolidated message instead of individual messages for each ping request packet sent.</p>
Packet Fragmentation	<p>Click the toggle button to enable or disable (default) the fragmenting of ping request packets.</p> <p>If packet fragmentation is disabled, ping packets with the maximum transmission unit (MTU) greater than 1500 bytes are dropped.</p>
Packet Size (bytes)	<p>Enter the size (in bytes) of the ping request packet.</p> <p>Default: 56 bytes.</p> <p>Range:</p> <ul style="list-style-type: none"> <li>• 1 through 1,472 bytes, if packet fragmentation is disabled.</li> <li>• 1 through 65,468 bytes, if packet fragmentation is enabled.</li> </ul>
Wait Time (seconds)	<p>Enter the time (in seconds) for which the source device waits for a response to the ping request packet. The source device considers the remote host as not reachable after the wait time elapses.</p> <p>Default: 10 seconds.</p> <p>Range: 0 through 600 seconds.</p>
Incoming Interface	Click the toggle button to include or exclude (default) information (on the Ping Result page) about the interface on the source device that receives the ping responses..

Table 85: Fields on the Ping page (*continued*)

Field	Description
Routing Instance	<p>Select a specific routing instance that the ping request packets can use to reach the remote host.</p> <p>The ping result displays the information about the connectivity between the source device and the remote host based on the selected routing instance.</p> <p>To clear the selected routing instance, click <b>Clear All</b> and select another routing instance.</p>

Table 86: Fields on the Ping Result page

Field	Description
Packet Loss	Displays the percentage of ping packets sent for which the source device did not receive a response.
Round Trip Time Taken (in $\mu$ s)	<p>Displays the following information about the duration (in microseconds) between the time when the source device sends the ping request and the time when the source device receives a response from the remote host.</p> <p>Displays the following:</p> <ul style="list-style-type: none"> <li>• Minimum: The minimum time taken to receive a response for a ping request packet.</li> <li>• Maximum: The maximum time taken to receive a response for a ping request packet.</li> <li>• Average: The average time taken to receive a response for all the ping request packets sent in a ping operation.</li> <li>• Standard Deviation: The variation of the round trip time from the mean round trip time.</li> </ul>

**Details**

Sequence	Sequence number of all the ping request packets.
Result	Result of the ping request packets—Success or Failure.
Incoming Interface	<p>Interface on the source device on which the responses are received for the ping requests.</p> <p>This data appears if you have enabled the Incoming Interface option on the Ping page.</p>
Time Taken	Time taken (in microseconds) to receive response to a ping request packet.

# Identifying Connectivity Issues by Using Traceroute

You can use Contrail Service Orchestration (CSO) to perform a traceroute operation from a device (provider hub, tenant device, CPE device, EX switch, enterprise hubs, or next-generation firewall device) to the remote host. Traceroute helps you view the path that a packet travels to reach the remote host. The result is useful in identifying the point of network failure in the path between the source device and remote host.

**NOTE:** In Contrail Service Orchestration (CSO) Release 5.0, the following devices support traceroute:

- EX Series: EX2300, EX3400, EX4300, EX4600, and EX4650
- NFX Series: NFX150, NFX250
- SRX Series: SRX300, SRX320, SRX340, SRX345, SRX1500, SRX4100, SRX4200, SRX4600
- vSRX

To perform traceroute operation:

1. Select **Resources > Devices**.

The Devices page appears.

2. Select a device from the list of devices displayed and Click **More > Traceroute**.

The Traceroute page appears.

3. Complete the configuration according to the guidelines provided in [Table 87 on page 324](#).

Fields marked with an asterisk (\*) are mandatory.

4. Click **Traceroute** to initiate the traceroute operation.

.A job is created and a Traceroute Progress page appears. If the traceroute operation is successful, the Traceroute Result page displays the traceroute parameters specified in [Table 88 on page 325](#).

If the traceroute operation fails, the Traceroute Result page displays an appropriate error message (such as **No response** or **No route to host**).

**Table 87: Fields on the Traceroute page**

Field	Description
Remote Host	Enter the IPv4 address or hostname of the remote host.

Table 87: Fields on the Traceroute page (*continued*)

Field	Description
Maximum Hops	<p>Specify the maximum number of network devices that a packet can pass through to reach the remote host.</p> <p>Default: 30.</p> <p>Range: 1 through 255.</p> <p>If the number of hops to reach the remote host exceeds the set value, the traceroute packet is dropped.</p>
<b>Advanced</b>	
Source Interface	<p>Select a source interface on the source device from which you want to send the packets to the remote host.</p> <p>Click <b>Clear All</b> to remove the selected interface and select another interface.</p>
Hostname Resolution	<p>Click the toggle button to enable or disable (default) the display of hostname of the hops in the path to the remote host.</p>
Wait Time (seconds)	<p>Enter the time until which the device waits for a response from the remote host to a packet sent before considering timeout.</p> <p>Default: 10 seconds.</p> <p>Range: 0 through 86,399 seconds.</p>
Routing Instance	<p>Select a routing instance that the traceroute request packets can use to reach the remote host.</p> <p>The trace result displays the route information based on the configured routing instance type.</p> <p>To clear the selected routing instance, click <b>Clear All</b> and select another routing instance.</p>

Table 88 on page 325 lists the parameters on the Traceroute Result page when the traceroute operation is successful.

Table 88: Fields on the Traceroute Result page

Field	Description
Hop	<p>Hostname or IPv4 address of the network devices that the packet passed through to reach the remote host.</p>

Table 88: Fields on the Traceroute Result page (*continued*)

Field	Description
Time Taken by Packet 1	Duration (in microseconds) between the time from when the source device sends a packet, and the time it received a response from the hops and the remote host.
Time Taken by Packet 2	
Time Taken by Packet 3	

## Remotely Accessing a Device CLI

You can use the Devices page to remotely access the CLI of CPE devices and EX Series switches, and run **show** operational commands.

You can use the **Show** operational commands to monitor a device, verify system operation, view details of specific components on a device, and so on.

To access the Devices page:

1. Select **Resources > Devices**.

The Devices page appears.

2. Select a device from the Devices List.

**NOTE:** You can only select a device whose operational status is marked **Up**.

3. Click **More**.

A list of actions that you can perform on the device appears.

**NOTE:** For dual CPE devices, the **Remote Console** option is disabled for a parent cluster device. Only member devices can select this option to access the device CLI.

4. Select the **Remote Console** option to access the device CLI.

The Remote Terminal browser window appears, displaying the **CONNECTING TO DEVICE. PLEASE WAIT FOR PROMPT** message.

**NOTE:** You can automatically log in to the device through the Remote Terminal browser window, without entering a username and password. If you access the device CLI through the remote terminal, root user log in is disabled.

- If the connection is successfully established, the CLI prompt appears on the browser window. Proceed to Step 1.
  - If the connection is not established, the **Remote console connection was closed. Please close this window and open the remote console again** message appears on the browser window.
5. Enter a **show** operational command to view information about current system configuration, log files, routing tables, and so on.

The output for the show command that you entered, appears on the same browser window.

6. Close the Remote Terminal browser window to disconnect from the device.

The Devices page appears.

**NOTE:** The session times out if the session remains idle for more than two minutes (default) and you are automatically logged out of the device. The **Remote console connection was closed. Please close this window and open the remote console again** message appears on the browser window.

## Configuring the Firewall Device

Zones, physical interfaces, and routing instances are the basic building blocks of firewall policy and NAT policy. You can configure them from the **Resources > Devices > Device-Name > Configuration** page.

**NOTE:** The **Configuration** tab that was available in earlier releases for stage-2 template-based configuration is renamed as **Configuration Template**.

To configure the firewall device:

1. Select **Resources > Devices**.

The Devices page appears.

2. Click the device name that you want to configure.

The *Device-Name* page appears

3. Click the **Configuration** tab.

The physical interfaces, routing instances, and zones tabs appear.

4. Complete the configuration settings according to the guidelines provided in [Table 89 on page 328](#).

5. Click **OK** to save the changes.

The newly created physical interfaces, routing instances, and zones are displayed in the relevant tabs in the Configurations page.

**Table 89: Fields on the Device Configuration Page**

Field	Description
<b>Physical Interfaces</b>	
Interface Name	Name of the physical interface on the device.
Logical Interfaces	Click <b>View/Configure</b> to view or configure the logical interfaces associated with the physical interface on the device.  To view and add logical interfaces for a physical interface, see <a href="#">“About the Logical Interfaces Page” on page 330</a> and <a href="#">“Adding a Logical Interface” on page 331</a> .
<b>Zones</b>	
Name	Name of the zone that you use for firewall policies and NAT policies.  To add a new security zone, see <a href="#">“Adding a Security Zone” on page 335</a> .
Interfaces	Interfaces associated with the zone.
Screen	Screen name for the security zone.
Description	Description for the zone.



Table 89: Fields on the Device Configuration Page (*continued*)

Field	Description
<b>Routing Instances</b>	
Name	Name of the routing instances for security configuration. A routing instance is a collection of routing tables, interfaces, and routing protocol parameters.
Static Route	Click <b>View/Configure</b> to view or configure the static routes associated with a routing instance on the device.
Interfaces	Name of the interface over which the traffic flows.
Instance Type	Type of routing instance.
Description	Description of the routing instance.

## About the Physical Interfaces Page

To access this page, click **Resources > Devices > Device-Name > Configuration**.

Use this page to view or edit the physical interfaces on the device. You can also view and configure the logical interfaces associated with the physical interfaces.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about the physical interfaces. Click the **View/Configure** button to view or configure the logical interfaces for the physical interface. See [“About the Logical Interfaces Page” on page 330](#).
- Show or hide columns about the physical interface. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a physical interface. Click the Search icon in the top right corner of the page to search for an interface.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

## Field Descriptions

Table 90 on page 330 shows the fields on the Physical Interface page.

Table 90: Fields on the Physical Interface Page

Field	Description
Interface Name	Name of the physical interface on the device.
Logical Interfaces	Click View/Configure to view or configure the logical interfaces associated with the physical interface on the device.  To view and add logical interface for a physical interface, see <a href="#">“About the Logical Interfaces Page” on page 330</a> and <a href="#">“Adding a Logical Interface” on page 331</a> .
MTU	Maximum transmission unit (MTU) size (in bytes) on the physical interface.
Speed	Speed in gigabytes per second (Gbps), at which data is transferred for the physical interface.
Description	Description of the physical interface.

## About the Logical Interfaces Page

To access this page, click **Resources > Devices > *Device-Name* > Configuration > Physical Interfaces > View/Configure**.

Use this page to view, create, edit, or delete logical interfaces associated with a physical interface on the device.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about the logical interfaces. See [Table 91 on page 331](#) for descriptions of the fields on the logical interfaces page.
- Add a logical Interface. See [“Adding a Logical Interface” on page 331](#).
- Edit, delete, or deploy logical interfaces. See [“Editing, Deleting, and Deploying Logical Interfaces” on page 334](#).

- Clear all selected logical interfaces. Select the logical interface and then right-click or click **More > Clear All Selections**.
- Show or hide columns that contain information about the logical interface. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for logical interfaces using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

## Field Descriptions

[Table 91 on page 331](#) shows the fields on the Logical Interfaces page.

**Table 91: Fields on the Logical Interfaces Page**

Field	Description
Interface Name	Displays the name of the logical interface associated with a physical interface on the device.
IPv4 Address	Displays the IPv4 address for the logical interface..
IPv6 Address	Displays the IPv6 address for the logical interface.
VLAN ID	Displays the VLAN ID for the 802.1q VLAN tags.
Description	Displays the description of the logical interface.

## Adding a Logical Interface

For a physical interface to function, you must configure at least one logical interface on that device. . You can also configure other logical interface properties.

The logical properties of an interface are the characteristics that do not apply to the physical interface. Logical properties include:

- IP address or addresses associated with the interface. A logical interface can be configured with an IPv6 address, IPv4 address, or both. The IP specification requires a unique address on every interface of each system attached to an IP network, so that traffic can be correctly routed. Individual hosts such as home computers must have a single IP address assigned. Devices must have a unique IP address for every interface.
- Virtual LAN (VLAN) tagging

To create logical interface for a physical interface:

1. Select **Resources > Devices** .

The Devices page appears.

2. Click the device name that you want to configure.

The *Device-Name* page appears

3. Click the **Configuration** tab.

The Physical Interfaces, Routing Instances, and Zones tab appears.

4. Click **Physical Interfaces** tab.

The Physical Interfaces page appears.

5. Select a physical interface and click **View/Configure**.

The Logical Interfaces page appears.

6. Click the plus icon (+) .

The Create Logical Interface page appears.

7. Complete the configuration settings according to the guidelines provided in [Table 92 on page 332](#).

8. Click **OK** to save the changes.

**Table 92: Fields on the Logical Interfaces Page**

Field	Description
<b>Basic Information</b>	
Unit	Enter the number of the logical interface.  Range: 0 through 2,147,483,647.
Description	Enter a description for the logical interface. The maximum number of characters is 255.
VLAN ID	Enter the VLAN ID for the 802.1q VLAN tags.
<b>IPv4 Address</b>	Click the plus icon (+) .  The Add - Address(IPv4) page appears.

Table 92: Fields on the Logical Interfaces Page (*continued*)

Field	Description
IPv4 Address	Enter an IPv4 address for the logical interface.
Subnet	Enter the subnet for the IPv4 address.  Range: 0 through 32
Primary	Select this check box to mark the IPv4 address as the primary address of the protocol on the logical interface. If the logical unit has more than one IP address, the primary IP address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet.
Preferred	Select this check box to specify that the IPv4 address is the preferred address for the logical interface. If you configure more than one IP address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet.
<b>IPv6 Address</b>	Click the plus icon (+) .  The Add - Address(IPv6) page appears.
IPv6 Address	Enter an IPv6 address for the logical interface.
Subnet	Enter the subnet for the IPv6 address.  Range: 0 through 32
Primary	Select this check box to specify that the IPv6 address is the primary address of the protocol on the logical interface. If the logical unit has more than one IP address, the primary IP address is used by default as the source address when packet transfer originates from the interface and the destination address does not indicate the subnet.
Preferred	Select this check box to specify that the IPv6 address is the preferred address for the logical interface. If you configure more than one IP address on the same subnet, the preferred source address is chosen by default as the source address when you initiate frame transfers to destinations on the subnet.

## Editing, Deleting, and Deploying Logical Interfaces

### IN THIS SECTION

- [Editing Logical Interfaces | 334](#)
- [Deleting Logical Interfaces | 335](#)
- [Deploying Logical Interfaces | 335](#)

You can edit, delete, and deploy logical interfaces from the **Logical Interfaces** page.

### Editing Logical Interfaces

To modify the parameters configured for a logical interface:

1. Select **Resources > Devices > Device-Name > Configuration > Physical Interface > View/Configure**.

The **Logical Interfaces** page appears.

2. Select the logical interface that you want to edit, and then click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit**.

The **Edit Logical Interface** page appears.

3. Modify the parameters according to the guidelines provided in [“Adding a Logical Interface” on page 331](#).

**NOTE:** You can modify only some fields when you are editing a logical interface.

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the modified values appear on the **Logical Interfaces** page.

## Deleting Logical Interfaces

To delete a logical interface:

**NOTE:** You cannot delete a logical interfaces that is associated with a physical interface on the device.

1. Select **Resources > Devices > Device-Name > Configuration > Physical Interface > View/Configure**.  
The **Logical Interfaces** page appears.
2. Select one or more logical interfaces that you want to delete and then click the delete icon.  
A page requesting confirmation for the deletion appears.
3. Click **Yes** to delete the selection. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected logical interface is deleted from the **Logical Interfaces** page.

## Deploying Logical Interfaces

To deploy a logical interface:

1. Select **Resources > Devices > Device-Name > Configuration > Physical Interface > View/Configure**.  
The **Logical Interfaces** page appears.
2. Select one or more logical interfaces that you want to deploy and then click **Deploy**.  
A job is created. Click the job link or go to the Jobs page and view the status of the deployment.

### RELATED DOCUMENTATION

| [Adding a Logical Interface](#) | 331

## Adding a Security Zone

A security zone is a collection of one or more network segments requiring the regulation of inbound and outbound traffic through policies. Security zones are logical entities to which one or more interfaces are

bound. You can define multiple security zones, the exact number of which you determine based on your network needs.

An interface for a security zone can be thought of as a doorway through which TCP/IP traffic can pass between that zone and any other zone. Through the policies you define, you can permit traffic between zones to flow in one direction or in both. With the routes that you define, you specify the interfaces that traffic from one zone to another must use. Because you can bind multiple interfaces to a zone, the routes you chart are important for directing traffic to the interfaces of your choice. An interface can be configured with an IPv4 address, IPv6 address, or both.

Security zones have the following properties:

- **Policies**—Active security policies that enforce rules for the transit traffic, in terms of what traffic can pass through the firewall, and the actions that need to take place on the traffic as it passes through the firewall.
- **Screens**—A Juniper Networks stateful firewall secures a network by inspecting, and then allowing or denying, all connection attempts that require passage from one security zone to another. For every security zone, you can enable a set of predefined screen options that detect and block various kinds of traffic that the device determines as potentially harmful.
- **TCP-RST**—When this feature is enabled, the system sends a TCP segment with the RESET flag set when traffic arrives that does not match an existing session and does not have the SYNchronize flag set.
- **Interfaces**—List of interfaces in the zone.

Use this page to configure zones and assign interfaces to them.

To create a security zone:

1. Select **Resources > Devices**.

The *Devices* page appears.

2. Click the device name that you want to configure.

The *Device-Name* page appears.

3. Click the **Configuration** tab.

The *Physical Interfaces, Routing Instances, and Zones* tab appears.

4. Click **Zones** tab.

The *Zones* page appears.

5. Click the plus icon (+).

The *Add New Zone* page appears.



6. Complete the configuration settings according to the guidelines provided in [Table 93 on page 337](#).
7. Click **OK** to save the changes.

**Table 93: Fields on the Add New Zone Page**

Field	Description
<b>General Information</b>	
Name	Enter a unique string of alphanumeric characters, and some special characters, such as dashes, and underscores. The maximum length is 31 characters.
Description	Enter a description for the zone; the maximum length is 900 characters.
Application Tracking	Select the checkbox to maintain application usage statistics on a device.
<b>Interfaces</b>	From the list of interfaces in the Available column, select the interfaces that you want to include in the new zone and click the greater-than icon (>). The selected interfaces are moved to the Selected column.
<b>System Services</b>	From the list of system services in the Available column, select the system services that you want to include in the new zone and click the greater-than icon (>). The selected system services are moved to the Selected column.
Is Except	Select the checkbox to disable specific incoming system service traffic, only when <b>all</b> system services option is defined.
<b>Protocols</b>	From the list of protocols in the Available column, select the protocols that you want to include in the new zone and click the greater-than icon (>). The selected protocols are moved to the Selected column.
Is Except	Select this option to disable specific incoming protocol traffic, only when <b>all</b> protocols option is defined.
<b>Traffic Control Options</b>	
TCP RST	Select the checkbox to enable sending TCP packets with the RST (reset) flag set to 1 in response to TCP packets with any flag other than SYN set and that do not belong to an existing session.
Screen	Enter a predefined security screen for a security zone to detect and block various kinds of traffic that the device determines as potentially harmful.

Table 93: Fields on the Add New Zone Page (*continued*)

Field	Description
<b>Interface Services and Protocols</b>	View the summary of interface, services and protocols for your device.

## Adding a Routing Instance

A routing instance is a collection of routing tables, interfaces, and routing protocol parameters. The set of interfaces belongs to the routing tables, and the routing protocol parameters control the information in the routing tables. There can be multiple routing tables for a single routing instance—for example, unicast IPv4, unicast IPv6, and multicast IPv4 routing tables can exist in a single routing instance. Routing protocol parameters and options control the information in the routing tables.

Each routing instance consists of sets of the following:

- Routing tables
- Interfaces that belong to these routing tables (optional, depending upon the routing instance type)
- Routing option configurations

You can configure the following routing instances:

- Forwarding—Use this routing instance type for filter-based forwarding applications. For this instance type, there is no one-to-one mapping between an interface and a routing instance. All interfaces belong to the default instance `inet.0`.
- Virtual router—Use this for non-VPN-related applications. There are no virtual routing and forwarding (VRF) import, VRF export, VRF target, or route distinguisher requirements for this instance type.

To create a routing instance:

1. Select **Resources > Devices**.

The Devices page appears.

2. Click the device name that you want to configure.

The *Device-Name* page appears

3. Click the **Configuration** tab.

The Physical Interfaces, Routing Instances, and Zones tab appears.

4. Click **Routing Instances** tab.

The Routing Instances page appears.

5. Click the plus icon (+) .

The Create Routing Instance page appears.

6. Complete the configuration settings according to the guidelines provided in [Table 94 on page 339](#).

7. Click **OK** to save the changes.

**Table 94: Fields on the Create Routing Instance Page**

Field	Description
<b>General Settings</b>	
Name	Enter a unique string of alphanumeric characters, dashes, and underscores. The maximum length is 31 characters.
Description	Enter a description for the zone; the maximum length is 900 characters.
Instance Type	Select the routing instance type from the list. Select virtual-router for non-VPN-related application. Select forwarding for filter-based forwarding applications where interfaces are not associated with instances.
<b>Interfaces</b>	From the list of interfaces in the Available column, select the interfaces that you want to include in the new routing instance and click the greater-than icon (>). The selected interfaces are moved to the Selected column.

## About the Static Routes Page

To access this page, click **Resources > Devices > Device-Name > Configuration > Routing Instances > View/Configure**.

Use this page to view, create, edit, or delete static routes for the routing instance.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about the static route. See [Table 95 on page 340](#) for descriptions of the fields on the static routes page.
- Add a static route. See [“Adding a Static Route” on page 340](#).
- Edit, delete, or deploy static routes. See [“Editing, Deleting, and Deploying Static Routes” on page 343](#).
- Clear all selected static routes. Select the static route and then right-click or click **More > Clear All Selections**.
- Show or hide columns that contain information about the static route. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for static routes using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

## Field Descriptions

[Table 95 on page 340](#) shows the fields on the Static Routes page.

**Table 95: Fields on the Static Routes Page**

Field	Description
IP Address	View the IP address of the static route.
Next Hop	View the Ipv4 or IPv6 address for the next hop.
Next Table	View the name of the next routing table to the destination.
Metric	View the metric value that signifies the cost for an access route, for the next hop
Status	View the status of the static route.

## Adding a Static Route

Routes that are permanent fixtures in the routing and forwarding tables are often configured as static routes. These routes generally do not change, and often include only one or very few paths to the destination.

To create a static route in the routing table, you must, at minimum, define the route as static and associate a next-hop address with it. The static route in the routing table is inserted into the forwarding table when

the next-hop address is reachable. All traffic destined for the static route is transmitted to the next-hop address for transit.

You can specify options that define additional information about static routes that is included with the route when it is installed in the routing table. All static options are optional.

To create a static route for a routing instance:

1. Select **Resources > Devices** .

The Devices page appears.

2. Click the device name that you want to configure.

The *Device-Name* page appears

3. Click the **Configuration** tab.

The Physical Interfaces, Routing Instances, and Zones tab appears.

4. Click **Routing Instances** tab.

The Routing Instances page appears.

5. Select a routing instance and click **View/Configure** link in the **Static Route** column.

The Static Routes page appears.

6. Click the plus icon (+) .

The Create Static Route page appears.

7. Complete the configuration settings according to the guidelines provided in [Table 96 on page 341](#).

8. Click **OK** to save the changes.

**Table 96: Fields on the Create Static Route Page**

Field	Description
<b>Basic Information</b>	
IP Address	Enter the IPv4 or IPv6 address depending on the type of IP address specified.
Subnet	Enter the subnet for the IPv4 address or the prefix for the IPv6 address.
<b>Next Hop</b>	

Table 96: Fields on the Create Static Route Page (*continued*)

Field	Description
IP Address	Enter an IPv4 or IPv6 address for the next hop depending on the type of IP address specified for the static route.
Interface	Select the interface name to be used as the next hop.
<b>Qualified Next Hop</b>	
IP Address	Enter an IPv4 or IPv6 address for the qualified next hop depending on the type of IP address specified for the static route.
Interface	Select the interface name to be used as the qualified next hop.
Preference	Enter the preference for the qualified next hop; the lower the number, the higher the route preference.
Metric	Enter a metric value to signify the cost for an access route for the qualified next hop.
<b>Next Table</b>	
Next Table	Select the name of the next routing table to the destination.
<b>Advanced Options</b>	
Preference	Enter the preference for the next hop; the lower the number, the higher the route preference.  Range: 0 through 2147483647
Metric	Enter a metric value which signifies the cost for an access route, for the next hop  Range: 0 through 2147483647
Discard	Specify whether to drop packets to destination; send no ICMP unreachable
Resolve Choices	Select whether indirectly connected next hops must be resolved (Resolve) or not (Do not resolve). Select None if no action is required.
Retain Choices	Select whether the route must be retained (Retain) or deleted from the forwarding table (Do not retain) when the routing protocol process shuts down normally. Select None if no action is required.

Table 96: Fields on the Create Static Route Page (*continued*)

Field	Description
Install Choices	Select whether the route must be installed in the forwarding table (Install) or not (Do not install). Select None if no action is required.
Re-advertise Choices	Select whether the route must be re-advertised by routing protocols (Re-advertise) or not (Do not re-advertise). Select None if no action is required.

## Editing, Deleting, and Deploying Static Routes

### IN THIS SECTION

- [Editing Static Routes | 343](#)
- [Deleting Static Routes | 344](#)
- [Deploying Static Routes | 344](#)

You can edit, delete, and deploy static routes from the **Static Routes** page.

### Editing Static Routes

To modify the parameters configured for a static route:

1. Select **Resources > Devices > Device-Name > Configuration > Routing Instances > View/Configure**.

The **Static Routes** page appears.

2. Select the static route that you want to edit, and then click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit**.

The **Edit static route** page appears.

3. Modify the parameters according to the guidelines provided in [“Adding a Static Route” on page 340](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the modified values appear on the **Static Routes** page.

## Deleting Static Routes

To delete a static route:

1. Select **Resources > Devices > *Device-Name* > Configuration > Routing Instances > View/Configure**.

The **Static Routes** page appears.

2. Select one or more static routes that you want to delete and then click the delete icon.

A page requesting confirmation for the deletion appears.

3. Click **Yes** to delete the selection. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected static route is deleted from the **Static Routes** page.

## Deploying Static Routes

To deploy a static route:

1. Select **Resources > Devices > *Device-Name* > Configuration > Routing Instances > View/Configure**.

The **Static Routes** page appears.

2. Select one or more static routes that you want to deploy and then click **Deploy**.

A job is created. Click the job link or go to the Jobs page and view the status of the deployment.

## RELATED DOCUMENTATION

| [Adding a Static Route](#) | 340



# Managing Device Templates

## IN THIS CHAPTER

- [Device Template Overview | 345](#)
- [About the Device Template Page | 350](#)
- [Cloning a Device Template | 354](#)
- [Importing a Device Template | 355](#)
- [Updating Stage-2 Configuration Template in a Device Template | 357](#)
- [Configuring Stage-2 Initial Configuration in a Device Template | 361](#)

## Device Template Overview

## IN THIS SECTION

- [SD-WAN CPE | 346](#)
- [Secure Internet CPE | 348](#)
- [Managed Internet CPE | 349](#)

A device template contains configuration and provision settings for a physical device, such as a CPE device or a router, which you manage through Contrail Service Orchestration (CSO). The CSO installation includes several default device templates for CPE devices and other physical devices. You can either use a default CPE device template as is if the template suits your specific topology requirements or customize the default CPE device template to meet your specific requirements. You can also create your own device templates and upload that to CSO. The CPE device templates are specific to the type of device and topology of the solution. The device templates for non-CPE devices are fixed and you cannot customize them. You must assign a device template to each CPE device at the site. You assign a device template to a device in CSO when you add a point of presence (POP). In some cases, you might want all CPE devices to use the same values, through device templates, you have the options to provide the values.

**NOTE:** In CSO Release 5.0, device templates are owned and managed by the Juniper Networks team that manages the cloud installation of CSO. If you need to modify device templates, talk to your Juniper Networks representative.

The CPE device templates contain three types of information:

- **Template settings information**—It prepares the device for remote activation, connects the device to the peer router, and establishes an IPsec tunnel with the router.
- **Stage-2 configuration template information**—It specifies the additional settings that you or your customer can configure for the device. For example, you can enable configuration of LAN and firewall policies. You create these configuration templates in Configuration Designer and provide implementation details in the device template.
- **Stage-2 initial configuration information**—It provides the actual values for the stage-2 configuration templates. In general, your customers perform this configuration through the Customer Portal.

The CPE device templates support three deployment models: SD-WAN CPE, Secure Internet CPE, and Managed Internet CPE.

## SD-WAN CPE

You can use the **NFX 150 as SDWAN CPE**, **NFX 250 as SDWAN CPE**, **Dual NFX 250 as SDWAN CPE**, **SRX as SDWAN CPE**, **SRX-1500 as SDWAN CPE**, **SRX-4x00 as SDWAN CPE**, **Dual SRX as SDWAN CPE**, **Dual SRX 1500 as SDWAN CPE**, or **Dual SRX 4x00 as SDWAN CPE** device template for a CPE device in an SD-WAN deployment.

[Figure 17 on page 347](#) shows the topology for an SD-WAN CPE deployment model.

Figure 17: SD-WAN CPE

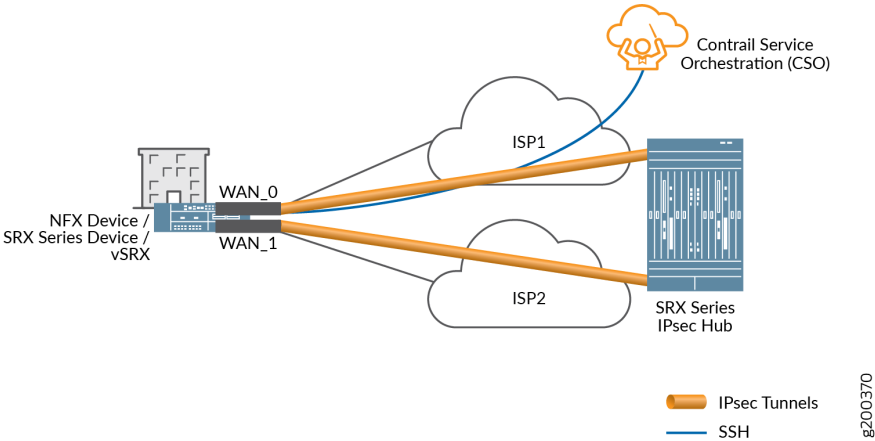


Table 97 on page 347 lists the connectivity details for an SD-WAN CPE.

Table 97: Connectivity Details for SD-WAN CPE

Link Name	Type	Default Interface	IP Assignment	Overlay	Traffic
WAN_0	MPLS, Internet	ge-1/0/1 (NFX150) ge-0/0/10 (NFX250) ge-0/0/0 (SRX) xe-0/0/0 (SRX4x00)	Static, DHCP	IPsec	Data, OAM
WAN_1	MPLS, Internet	ge-1/0/2 (NFX150) ge-0/0/11 (NFX250) ge-0/0/1 (SRX) xe-0/0/0 (SRX4x00)	Static, DHCP	IPsec	Data, OAM
WAN_2	MPLS, Internet	ge-1/0/3 (NFX150) (NFX1250) ge-0/0/2 (SRX) xe-0/0/0 (SRX4x00)	Static, DHCP	IPsec	Data, OAM

Table 97: Connectivity Details for SD-WAN CPE (continued)

Link Name	Type	Default Interface	IP Assignment	Overlay	Traffic
WAN_3	MPLS, Internet	ge-1/0/4 (NFX150) (NFX250)  ge-0/0/3 (SRX)  xe-0/0/0 (SRX4x00)	Static, DHCP	IPsec	Data, OAM

### Secure Internet CPE

You can use the **NFX 150 as Secure Internet CPE** or **NFX 250 as Secure Internet CPE** device template to provide a secure Internet connection through the CPE device.

Figure 18 on page 348 shows the topology for a secure Internet CPE deployment model.

Figure 18: Secure Internet CPE

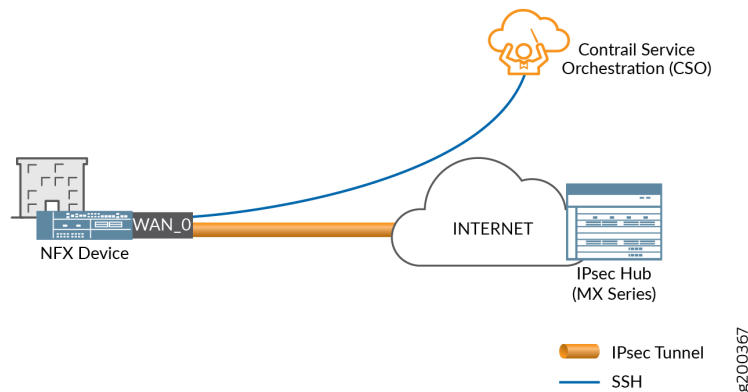


Table 98 on page 348 lists the connectivity details for secure Internet CPE.

Table 98: Connectivity Details for Secure Internet CPE


Link Name	Type	Default Interface	IP Assignment	Overlay	Traffic
WAN_0	Internet	ge-1/0/1 (NFX150)  ge-0/0/8 (NFX250)	DHCP	IPsec	Data, OAM

Managed Internet CPE

You can use the **NFX Managed Internet CPE** or **SRX Managed Internet CPE** device template to provide a managed Internet connection through the CPE device.

[Figure 19 on page 349](#) shows the topology for a managed Internet CPE deployment model.

Figure 19: Managed Internet CPE

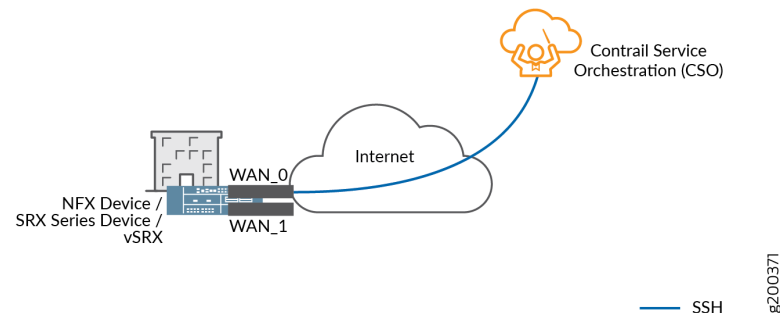

[Table 99 on page 349](#) lists the connectivity details for a managed Internet CPE deployment model.

Table 99: Connectivity details for Managed Internet CPE

Link Name	Type	Default Interface	IP Assignment	Overlay	Traffic
WAN_0	Internet	ge-1/0/1 (NFX150) ge-0/0/8 (NFX250)	DHCP	—	Data, OAM

RELATED DOCUMENTATION

| [About the Device Template Page](#) | [350](#)

# About the Device Template Page

IN THIS SECTION

- [Tasks You Can Perform | 350](#)
- [Field Descriptions | 350](#)
- [Supported Device Templates | 351](#)

To access this page, click **Resources > Templates > Device Templates**.

Use this page to view and manage device templates.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Clone a device template. See *Cloning a Device Template*.
- Import a device template from a file. See *Importing a Device Template*.
- Update stage-2 configuration template. See *Updating Stage-2 Configuration Template in a Device Template*.
- Configure stage-2 initial configuration. See *Configuring Stage-2 Initial Configuration in a Device Template*.
- View details of a device template—Hover over the device template name and Click the Detailed View icon or click **More > Detail View**.

The detailed view pane for the selected device template appears on the right side of the Device Templates page, displaying details such as the target family and tenants.

Click the close icon (X) to close the pane.

- Show or hide columns displayed on the page—Click the **Show Hide columns** icon in the top right corner of the table and select the columns that you want to view on the page.
- Search for a specific device template—Click the Search icon in the top right corner of the table and enter the search text in the text box, and press Enter. The search results are displayed on the same page.

## Field Descriptions

[Table 100 on page 351](#) describes the fields on the Device Templates page.

Table 100: Fields on the Device Templates Page

Field	Description
Name	Name of the device template
Description	Description of the device template.  Example: NFX250 device deployed as a CPE device with SD-WAN capability.
Version	CSO version of the device template.
Build	CSO build name of the device template.
Assigned to	Number of tenant sites using the device template.  Example: 2 Tenants (2 Sites)
Workflows	Number of workflows used in the device template.  Example: 7
Target Family	Name of the device family for which the device template is created.  Example: juniper-srx
Owner	Name of the owner ( <i>OpCo Name</i> or default-project) who created the device template.
Last Updated	Date and time when the device template was last updated.  Example: 05/23/2017 06:22

## Supported Device Templates

[Table 101 on page 351](#) describes the list of supported device templates.

Table 101: List of Supported Device Templates

No.	Device Template Name	Device Template Description
1	MX as SD-WAN Hub	Device template for an MX Series router acting as a hub device in an SD-WAN deployment(in hub-and-spoke topology).

Table 101: List of Supported Device Templates (*continued*)

No.	Device Template Name	Device Template Description
4	NFX250 as Secure Internet CPE	<p>Device template for an NFX250 device acting as a CPE device in a distributed deployment. This template supports outbound SSH, which is device-initiated connection, with port-forwarding capability.</p> <p>This device template supports the NFX250 device as CPE with one Internet WAN link that has IPsec encryption(DHCP IP address configuration).</p>
5	NFX250 as Managed Internet CPE	<p>Device template for an NFX250 device acting as a CPE for a managed Internet service.</p> <p>This device template supports managed Internet Service with one Gigabit Ethernet WAN link.</p>
6	NFX250 as SD-WAN CPE	<p>Device template for an NFX250 device acting as a CPE in an SD-WAN deployment with hub-and-spoke topology.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
7	Dual NFX250 as SD-WAN CPEs	<p>Device template for NFX250 devices in device redundancy mode in an SD-WAN deployment.</p> <p>This device template supports device redundancy in SD-WAN deployment with up to four WAN links.</p>
8	NFX150 as Managed Internet CPE	Device template for an NFX150 device as CPE for managed Internet service. This device template supports managed Internet Service with one Gigabit Ethernet WAN link.
10	NFX150 as Secure Internet CPE	Device template for an NFX150 device as CPE in a distributed deployment. This device template supports port-forwarding with device-initiated connection, one Internet WAN link with IPsec encryption (DHCP IP address configuration) and outbound SSH.
11	NFX150 as SD-WAN CPE	Device template for an NFX150 device as CPE in an SD-WAN deployment with hub-and-spoke topology. This device template supports up to four WAN links.



Table 101: List of Supported Device Templates (*continued*)

No.	Device Template Name	Device Template Description
13	SRX as SD-WAN CPE	<p>Device template for an SRX Series Services Gateway acting as a CPE device in an SD-WAN deployment with hub-and-spoke topology.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
14	SRX as SDWAN Hub	<p>Device template for an SRX Series Services Gateway acting as a hub device in an SD-WAN deployment with hub-and-spoke topology.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
15	Dual SRX as SD-WAN CPEs	<p>Device template for SRX Series Services Gateways acting as CPE devices in device redundancy mode in an SD-WAN deployment.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
16	vSRX as SD-WAN spoke in AWS	<p>Device template for a vSRX instance acting as spoke in AWS for SD-WAN deployment.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
17	SRX-4x00 as SD-WAN CPE	<p>Device template for an SRX 4000 line Services Gateways acting as a CPE device in an SD-WAN deployment with hub-and-spoke topology.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
18	Dual SRX4x00 as SD-WAN CPEs	<p>Device template for SRX 4000 line Services Gateways acting as CPE devices in device redundancy mode in an SD-WAN deployment.</p> <p>This device template supports SD-WAN deployment with up to four WAN links.</p>
19	SRX_Standalone_Pre_Staged_NonZTP	Device template for pre-staged SRX Services Gateways acting as a Standalone CPE device without ZTP.

Table 101: List of Supported Device Templates (*continued*)

No.	Device Template Name	Device Template Description
20	SRX_Standalone_Pre_Staged_ZTP	Device template for pre-staged SRX Services Gateways acting as a Standalone CPE device with ZTP.
21	EX_Single_ZTP	Device template for EX devices acting as a single switch with ZTP.
22	EX_VC_Pre_Staged_NonZTP	Device template for pre-staged EX device acting as a virtual chassis system without ZTP.
23	EX_VC_ZTP	Device template for pre-staged EX device acting as a virtual chassis system with ZTP.

## Cloning a Device Template

Cloning a device template is useful when you want to create a device template that is similar to an existing one but with small differences. You can clone a device template by using either of the methods mentioned below:

To clone a device template:

1. Select **Resources > Templates > Device Templates**.

The Device Template page appears.

2. Select the device template that you want to clone, and click **Clone**.

The Clone Template page appears.

3. Specify an appropriate name for your new device template. For example, SRX as SD-WAN CPE.

4. Click **Ok**.

The cloned device template appears on the Device Template page. You can now edit the new device template and customize the configurations as needed.

You can also clone the device template by performing the following procedure:

1. Select **Resources > Templates > Device Templates**.

The Device Template page appears.

2. Select the device template that you want to clone, and then select **Edit Device Template > Template Settings**.

The Template Settings page appears.

3. Modify the configurations as required and click **Save As**.

The Create Device template page appears.

4. Specify an appropriate name for your new device template. For example, SRX as SD-WAN CPE.

5. Click **Ok**.

The cloned device template appears on the Device Template page. You can now edit the new device template and customize the configurations as needed.

#### RELATED DOCUMENTATION

| [Importing a Device Template | 355](#)

## Importing a Device Template

#### IN THIS SECTION

- [Creating a Device Template File | 356](#)
- [Importing a Device Template File | 356](#)

Use the Device Templates page (**Resources > Templates > Device Templates**) to import a device template in JSON format for the customer.

**NOTE:** You must create a device template file before you can import a device template

## Creating a Device Template File

To create a file of device information:

1. Select **Resources > Templates > Device Templates > Import Device Template**.

The Import Device Template page appears.

2. Click the **Download Sample JSON** link to open and save the sample JSON data file.

The sample file opens at the bottom of the page.

3. Save the template file with an appropriate name to your computer.

**NOTE:** You must retain the file format as .json to successfully upload the device template details to the Administration Portal.

4. Customize the sample JSON file according to the deployment.

5. Save the customized file.

## Importing a Device Template File

Device templates are used to configure cloud CPE devices on a tenant site and these templates must be assigned to the device before you activate the device.

**NOTE:** A device template data file is required before your import device templates.

To import device template configuration:

1. Select **Resources > Templates > Device Templates > Import Device Template**.

The Import Device Template page appears.

2. Click **Browse** and navigate to the directory containing the device template configuration JSON file.

3. Select the file and click **Open**.
4. Click **Import Device Templates**. If you want to discard the import process, click **Cancel** instead.  
The Device Templates Import Completed page appears with the details of the successful import.
5. Click **OK** to complete the import process.  
The imported device template is displayed on the Device Template page.

## Updating Stage-2 Configuration Template in a Device Template

Each device template has a set of configuration templates that can be used to deploy additional configuration on to the CPE device after it is activated. These templates are known as stage-2 configuration templates. You can add or remove stage-2 configuration templates from a device template.

**NOTE:** By default, the CPE device configuration is not supported on the CPE device. If you need the CPE device configuration, then you must configure it through stage-2 configuration in the device templates.

To add a stage-2 configuration template:

1. Select **Resources > Templates > Device Template**.  
The Device Templates page appears.
2. Select a device template for which you want to add the stage-2 configuration and select **Edit Device Template > Stage-2 Config Templates**.  
The Stage-2 Configuration Templates page appears. [Table 102 on page 358](#) lists the fields (and their descriptions) on the Stage-2 Configuration Templates page.
3. Click the add icon (+) and complete the configuration settings according to the guidelines provided in [Table 103 on page 359](#).
4. Click **Save**.  
The new stage-2 configuration template is included in the device template.

Table 102: Fields on the Stage-2 Configuration Templates Page

Name	Description
Name	<p>View the name of the stage-2 configuration template.</p> <p>Example: LAN side config</p>
Component Name	<p>View the name of the component through which the settings are configured. The components that are currently supported are:</p> <ul style="list-style-type: none"> <li>• JUNOS—Supported only on SRX Series Services Gateway.</li> <li>• Juniper Device Manager (JDM)—Supported on NFX250 device. JDM is a Linux container that manages software components.</li> <li>• Juniper Control Plane (JCP)—Supported on NFX250 device. JCP is the Junos VM running on the hypervisor. Administrators can use JCP to configure the network ports of the NFX250 device. JCP is used to configure the switching and routing function on the NFX250 device.</li> <li>• Gateway Router (GWR)—Supported on NFX250 device. vSRX as a gateway provides the same capabilities as Juniper Networks SRX Series Services Gateways in a virtual form factor, providing perimeter security, IPsec connectivity, and filtering for malicious traffic without sacrificing reliability, visibility, or policy control. This virtual security and routing appliance ensures reliability and high availability for each application.</li> </ul> <p>Example: JUNOS</p>
Hide	<p>Displays whether the template is hidden on Customer Portal.</p> <ul style="list-style-type: none"> <li>• true—Template is not visible on Customer Portal.</li> <li>• false—Template is visible on Customer Portal.</li> </ul> <p>Example: false</p>
Copy input from	Displays the template from which you copied the settings.
Auto Deploy	Displays whether the stage-2 configuration is automatically pushed to the device during ZTP process.
Enable for	Displays whether the stage-2 configuration template is enabled for all tenants, no tenants, or specific tenants.

Table 103: Fields on the Add New Template Page

Name	Description
Template	<p>Select the configuration template from the drop-down list. The configuration templates are designed in the Configuration Designer tool.</p> <p>Example: srx-basic-sdwan-cpe-config</p>
Display Name	<p>Specify the name of the template that you want to display on the configuration interface.</p> <p>Example: SDWAN Config</p>
Component Name	<p>Specify the component name through which the settings are configured. The components that are currently supported are:</p> <ul style="list-style-type: none"> <li>• JUNOS—Supported on SRX Series Services Gateway.</li> <li>• Juniper Device Manager (JDM)— Supported on NFX250 device. JDM is a Linux container that manages software components.</li> <li>• Juniper Control Plane (JCP)—Supported on NFX250 device. JCP is the Junos VM running on the hypervisor. Administrators can use JCP to configure the network ports of the NFX250 device. JCP is used to configure the switching and routing function on the NFX250 device.</li> <li>• Gateway Router (GWR)—Supported on NFX250 device. vSRX as a gateway provides the same capabilities as Juniper Networks SRX Series Services Gateways in a virtual form factor, providing perimeter security, IPsec connectivity, and filtering for malicious traffic without sacrificing reliability, visibility, or policy control. This virtual security and routing appliance ensures reliability and high availability for each application.</li> </ul> <p>Example: JUNOS</p>
Hide	<p>Specify whether you want to hide the configuration template on Customer Portal. You might want to choose to hide the template if you are reusing the template for multiple components.</p> <ul style="list-style-type: none"> <li>• hide—White dot on right with blue background.</li> <li>• show—White dot on left with gray background.</li> </ul> <p>Example: hide</p>
Copy From Template	<p>If you have chosen to hide the configuration template on the user interface, then specify the template from which you want to copy the settings.</p> <p>Example: srx-mis-lan-to-wan-config</p>

Table 103: Fields on the Add New Template Page (*continued*)

Name	Description
Auto Deploy	<p>Specify whether the stage-2 configuration must be automatically pushed to the device during ZTP process. The available options are</p> <ul style="list-style-type: none"> <li>• Same as global settings</li> <li>• Yes</li> <li>• No</li> </ul>
Enabled for	<p>You can enable the stage-2 configuration template for all tenants, specific tenants, an SP administrator or an OpCo administrator.</p> <p><b>NOTE:</b> Only users with SP administrator or OpCo administrator role can enable stage-2 configuration templates.</p> <p>The available options are:</p> <ul style="list-style-type: none"> <li>• <b>All Tenants</b>—Select this option to enable stage-2 configuration template for all tenants. Both SP and OpCo administrators can view templates for all tenants by switching the scope to the specific tenant. By default, stage-2 configuration templates assigned to all tenants are automatically applied to any new tenant.</li> <li>• <b>No Tenants</b>—Select this option to enable stage-2 configuration template for an SP administrator or an OpCo administrator. An SP administrator can modify the stage-2 configuration template. An OpCo administrator cannot modify the stage-2 configuration template. However, an OpCo administrator can clone the stage-2 configuration template and then modify the template.</li> <li>• <b>Selective Tenants</b>—Select this option to enable stage-2 configuration template for specific tenants. A tenant administrator can view and manage stage-2 template for a specific tenant.</li> </ul> <p>When you select the <b>Selective Tenants</b> option, the <b>Tenants</b> section is displayed.</p> <p>Select one or more tenants. Click the greater-than icon (&gt;) to move the selected tenant or tenants from the <b>Available</b> column to the <b>Selected</b> column. You can use the search icon on the top right of each column to search for tenant names.</p> <p>The default option is All Tenants.</p>

To remove a stage-2 configuration template:

1. Select **Resources > Templates > Device Templates**.

The Device Templates page appears.

2. Select the device template for which you want to remove the stage-2 configuration and then select **Edit Device Template > Stage-2 Config Templates**.

The Stage-2 Config Templates page appears.



3. Select a configuration template and click the delete icon (X).

A page requesting confirmation for the deletion appears.

4. Click **Yes** to confirm that you want to delete the stage-2 configuration template.

The configuration template is deleted.

## RELATED DOCUMENTATION

| [About the Device Template Page](#) | 350

## Configuring Stage-2 Initial Configuration in a Device Template

In general, the tenant administrators initiate stage-2 configuration through Customer Portal. However, in certain cases, the same stage-2 configuration needs to be deployed to CPE devices in all sites that are activated using a specific device template. In such cases, you can attach an initial configuration to a stage-2 configuration template of a device template. When a new CPE device in the site is activated using the device template, the initial configuration is automatically deployed to the CPE device.

The list of initial configurations that are supported are:

- Policies configuration
- LAN configuration
- SD-WAN configuration
- Routing configuration
- APN configuration

To update an initial configuration for stage-2 configuration template:

1. Select **Resources > Templates > Device Templates**.

The Device Templates page appears.

2. Select the device template for which you want to configure the stage-2 configuration and then select **Edit Device Template > Stage-2 Initial Config**.

The Stage-2 Initial Configuration page appears, listing the existing settings.

3. Complete the configuration settings according to the guidelines provided in [Table 104 on page 362](#), [Table 105 on page 362](#), and [Table 106 on page 362](#) and [Table 107 on page 363](#).
4. Click **Ok**.

**Table 104: Fields for the VLAN Settings on the Stage-2 Initial Configuration Page**

Field	Description
VLAN ID	Specify the identifier for the Layer 2 VLAN for the CPE device.  Example: 230
IRB IP Prefix	Specify the IP address, including the subnet prefix, and the integrated routing and bridging (IRB) interface on the CPE device.  Example: 192.0.2.15/24
LAN Ports	Specify the LAN ports on the CPE device.  Example: ge-0/0/0

**Table 105: Fields for the LAN Settings on the Stage-2 Initial Configuration Page**

Field	Description
LAN port	Specify the LAN ports on the CPE device.  Example: ge-0/0/0
IP Address	Specify the IP address on the CPE device.  Example: 192.0.2.255

**Table 106: Fields for the SRX Basic SD-WAN Settings on the Stage-2 Initial Configuration Page**

Field	Description
Manage App Group	Click to manage the application groups. The application group is predefined in the system for all SRX Series and vSRX configuration settings. The settings are preloaded and displayed on the portal. You can also create new application groups.
Manage App SLA Profile	Click to manage the application service-level agreements (SLA) profiles.

Table 106: Fields for the SRX Basic SD-WAN Settings on the Stage-2 Initial Configuration Page (*continued*)

Field	Description
Rule Name	Specify the rule name.  Example: critical-apps
Application/Groups	Specify the applications or application groups for the rule.  Example: Oracle, SAP
Application SLA Profile	Specify the application SLA profile for the rule.  Example: critical-apps

Table 107: Fields for the APN Configuration Settings on the Stage-2 Initial Configuration Page

Field	Description
Use default APN settings	Click the toggle button to change the default APN settings. <ul style="list-style-type: none"> <li>• Enabled—Select this option to use the default APN setting that is shipped along with the CPE device. This is the default option.</li> <li>• Disabled—Select this option to configure the APN settings.</li> </ul>
<b>APN Settings</b>	
APN Name	Enter the access point name (APN) of the gateway router.
SIM Change Required	Click the toggle button to change the SIM card. You change the SIM card either to use a different LTE service provider or to use a private APN with the current LTE service provider. <ul style="list-style-type: none"> <li>• Enabled—Select this option to change the APN settings and to use a new SIM card. This is the default option.</li> <li>• Disabled—Select this option to change the APN settings without changing the SIM card.</li> </ul>
Authentication Method	Select the authentication method for the APN configuration. <ul style="list-style-type: none"> <li>• PAP— Select to use Password Authentication Protocol (PAP) authentication. This is the default option.</li> <li>• CHAP— Select to use Challenge Handshake Authentication Protocol (CHAP) authentication.</li> <li>• None—Select to indicate that there is no authentication method.</li> </ul>
<b>Authentication Information</b>	

Table 107: Fields for the APN Configuration Settings on the Stage-2 Initial Configuration Page *(continued)*

Field	Description
SIP User ID	Enter the Session Initiation Protocol (SIP) user ID for authentication.
SIP Password	Enter the SIP password for authentication.

RELATED DOCUMENTATION

| [About the Device Template Page](#) | 350

# Managing Configuration Templates

## IN THIS CHAPTER

- [About the Configuration Templates Page | 365](#)
- [Edit, Clone, and Delete Configuration Templates | 368](#)
- [Deploy Configuration Templates to Devices | 371](#)
- [Undeploy a Configuration Template from a Device | 376](#)
- [Dissociate a Configuration Template from a Device | 378](#)
- [Preview and Render Configuration Templates | 379](#)
- [Import Configuration Templates | 380](#)
- [Export a Configuration Template | 382](#)
- [Assign Configuration Templates to Device Templates | 383](#)
- [Add Configuration Templates | 385](#)
- [View the Configuration Deployed on Devices | 394](#)

## About the Configuration Templates Page

### IN THIS SECTION

- [Tasks You Can Perform | 366](#)
- [Field Descriptions | 367](#)

To access this page, click **Resources > Templates > Configuration Templates** in Customer Portal.

You can use the Configuration Templates page to view and manage configuration templates.

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

## Tasks You Can Perform

In Customer Portal, users with the Tenant Administrator role can perform the following tasks from this page, while users with operator roles only have read capabilities.

- Clone a configuration template—[“Edit, Clone, and Delete Configuration Templates” on page 368.](#)
- Deploy a configuration template on one or more devices—See [“Deploy Configuration Templates to Devices” on page 371.](#)
- Preview and render a configuration template—See [“Preview and Render Configuration Templates” on page 379.](#)
- View the details a configuration template—Select a configuration template and click **More > Template Details** or mouse over the configuration template click the Detailed View icon. The Detail for *Template-Name* pane appears on the right side of the page. See [Table 109 on page 367](#) for an explanation of the fields.
- Import a configuration template—See [“Import Configuration Templates” on page 380.](#)
- Export a configuration template—[“Export a Configuration Template” on page 382.](#)
- Assign a configuration template to a device template—See [“Assign Configuration Templates to Device Templates” on page 383.](#)
- Add a configuration template—See [“Add Configuration Templates” on page 385.](#)
- Edit or delete configuration templates—See [“Edit, Clone, and Delete Configuration Templates” on page 368.](#)
- View the configuration deployed on one or more devices—See [“View the Configuration Deployed on Devices” on page 394.](#)
- Search for configuration templates by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Sort configuration templates—Click a column name to sort the configuration templates based on the column name.

**NOTE:** Sorting and filtering is applicable only to some fields.

- Show or hide columns—Click the **Show Hide Columns** icon at the top right corner of the page and select the columns that you want displayed on the Configuration Templates page.

## Field Descriptions

[Table 108 on page 367](#) displays the description of the fields on the Configuration Templates page and [Table 109 on page 367](#) displays the description of the fields on the Detail for *Template-Name* Pane.

**Table 108: Fields on the Configuration Templates Page**

Field	Description
Name	Name of the configuration template.
Family	Device family to which the configuration template belongs.
Description	Description of the configuration template.
Deployed Devices	<p>Number of devices on which the configuration template was deployed. If the configuration template is not yet deployed on any devices then a blank cell is displayed.</p> <p>Click the <b><i>number-of-devices</i></b> link to view the configuration (for that configuration template) deployed on devices. See <a href="#">“View the Configuration Deployed on Devices” on page 394</a>.</p>
Last Updated	Date and time on which the template was last updated.
Owner	<p>Depending on who added the configuration template, displays the following</p> <ul style="list-style-type: none"> <li>• <b>System</b>—If the template is predefined or added by the Service Provider administrator</li> <li>• <b>Tenant-Name</b>—Name of the tenant if the template was added by an tenant administrator.</li> </ul>

**Table 109: Fields on the Detail for <Template-Name> Pane**

Field	Description
<i>General</i> tab	
Name	See <a href="#">Table 108 on page 367</a> .
Description	See <a href="#">Table 108 on page 367</a> .
Family	See <a href="#">Table 108 on page 367</a> .
Format	<p>Format used by the configuration template:</p> <ul style="list-style-type: none"> <li>• CLI</li> <li>• XML (Extensible Markup Language)</li> </ul>

Table 109: Fields on the Detail for <Template-Name> Pane (continued)

Field	Description
Details tab	<b>NOTE:</b> If you want to add a new configuration template based on an existing one, you can copy the three files from the Details tab, modify the files as needed, and use the Import Configuration Template page to import a new template.
Jinja Template	Displays the configuration in Jinja Template language syntax.
Data Model	Displays the Yang data model (configuration schema).
View Def	Displays the View Def (GUI configuration).

#### RELATED DOCUMENTATION

| [About the Devices Page](#) | 296

## Edit, Clone, and Delete Configuration Templates

### IN THIS SECTION

- [Edit a Configuration Template](#) | 369
- [Clone a Configuration Template](#) | 369
- [Delete a Configuration Template](#) | 370

Users with the Tenant Administrator role can modify the parameters of existing configuration templates, clone existing configuration templates, and delete configuration templates that are no longer being used.



**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

## Edit a Configuration Template

Users with the Tenant Administrator role can edit only the templates that they added (created).

To modify a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select the configuration template that you want to modify and click the edit (pencil) icon.

The Edit Configuration Template page appears. The fields on this page are same as the fields that you configure in the Add Configuration Template workflow.

3. Modify the fields as needed.

Refer to [“Add Configuration Templates” on page 385](#) for an explanation of the fields.

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

The modifications are saved and you are returned to the Configuration Templates page, where a confirmation message is displayed. If the configuration template was previously deployed on a device or assigned to a device template, then you must redeploy the configuration template for the changes to take effect.

## Clone a Configuration Template

To clone a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select the configuration template that you want to clone and click **Clone**.

- If you select a configuration template that was added in CSO Release 5.3.0, the Clone Configuration Template page appears. Proceed to Step 3.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to the current CSO release version. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Configuration Templates page appears.

- b. Select the template again and click **Clone**.

The Clone Configuration Template page appears.

3. In the **Template Name** field, enter a unique template name that can only contain alphanumeric characters and hyphens up to a maximum of 64 characters.
4. Click **OK**.

You are returned to the Configuration Templates page and a confirmation message appears at the top of the page indicating the status of the clone operation.

After a template is cloned successfully, you can modify the template if needed. See the preceding section for details.

## Delete a Configuration Template

To delete a configuration template:

### NOTE:

- You cannot delete predefined configuration templates.
- You can delete a configuration template only if the following conditions hold good:
  - You added (created) the template.
  - The template is not assigned to a device template.
  - The template is not deployed on a device.

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select the configuration template that you want to delete and click the **X** (delete) icon.

You are asked to confirm the delete operation.

3. Click **Yes**.

You are returned to the Configuration Templates page and a popup appears indicating whether the deletion was successful or not.

## RELATED DOCUMENTATION

| [Preview and Render Configuration Templates | 379](#)

## Deploy Configuration Templates to Devices

### IN THIS SECTION

- [Deploy from the Configuration Templates Page | 372](#)
- [Deploy from the Devices Page | 375](#)

In Customer Portal, users with the Tenant Administrator role can deploy a configuration template directly on one or more devices that were previously activated. This enables you to deploy configuration templates added after a device was activated or to deploy additional configuration to devices.

You can deploy configuration templates to devices from the Configuration Templates or the Devices pages.

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

Deploy from the Configuration Templates Page

To deploy a configuration template to one or more devices:

- 1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

- 2. Select the configuration template that you want deploy and click **Deploy to Devices**.

- If you select a configuration template that was added in CSO Release 5.3.0, the Deploy Template *Template-Name* To Devices page appears. Proceed to Step 3.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to the current CSO release version. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Configuration Templates page appears.

- b. Select the template again and click **Deploy to Devices**.

The Deploy Template *Template-Name* To Devices page appears.

- 3. Complete the configuration according to the guidelines provided in [Table 110 on page 372](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

- 4. Click **OK**.

The settings that you entered are saved and you are returned to the Configuration Templates page. A confirmation message appears indicating that a job was created. For each device, a separate job is triggered to deploy the configuration.

You can view the status of the jobs from the Jobs page (**Monitor > Jobs**).

Table 110: Deploy Template <Template-Name> To Devices Settings

Setting	Guideline
Select Devices	

Table 110: Deploy Template <Template-Name> To Devices Settings (*continued*)

Setting	Guideline
Configuration Template	Displays the name of the configuration template that you are deploying; you cannot modify this field.
Component Name	<p>This field is displayed only for NFX250 devices.</p> <p>Select the component of the NFX250 device on which to deploy the template:</p> <ul style="list-style-type: none"> <li>• JCP—Junos Control Plane</li> <li>• JDM—Junos Device Manager</li> <li>• GWR-Gateway Router</li> </ul>
Devices	<p>You can specify the devices on which you want to deploy the configuration template in the following ways:</p> <ul style="list-style-type: none"> <li>• By adding the devices manually: <ol style="list-style-type: none"> <li>1. From the list of devices displayed, select one or more devices by clicking the check box next to each device name.</li> </ol> <p><b>NOTE:</b> You can search for devices or filter the list of devices displayed.</p> </li> <li>• By uploading a comma-separated values (CSV) file containing the device information: <p><b>NOTE:</b> You must ensure that the CSV file is in the format that CSO can read and that the number of device records is 200 or lower. You can download a sample file by clicking the <b>Download Sample CSV File</b> button.</p> <ol style="list-style-type: none"> <li>1. Click <b>Upload CSV File</b>.</li> </ol> <p>The Upload CSV File page appears.</p> <ol style="list-style-type: none"> <li>2. Click <b>Browse</b> to open the file selection dialog, select a file, and click <b>Open</b>.</li> </ol> <p>The name of the file that you selected is displayed in the CSV File field.</p> <ol style="list-style-type: none"> <li>3. Click <b>OK</b>.</li> </ol> <p>You are returned to the previous page where the devices that you imported are selected and displayed in the table.</p> <p>Click <b>Next</b>.</p> <p>You are taken to the Configure Global Parameters or the Configure Device Parameters tab.</p> </li> </ul>

Table 110: Deploy Template <Template-Name> To Devices Settings (*continued*)

Setting	Guideline
<i>Configure Global Parameters</i>	<p><b>NOTE:</b> This tab is displayed only if the configuration template contains parameters that are global in scope.</p> <p>Specify the global parameters that are common to all the devices that you selected in the preceding step. After you are done, click <b>Next</b>.</p> <p>You are taken to the Configure Device Parameters tab.</p>
<i>Configure Device Parameters</i>	
Devices	<p>The devices that you selected in the preceding step are displayed in the Devices table, and the first device is selected by default.</p> <p>For each device, the device name, device family, operational status, and the configuration status are displayed. When you first arrive on this tab, the configuration status for each device is <i>Not configured</i>.</p> <p>The <i>Device-Name</i> Parameters pane on the right displays the input parameters (from the configuration template) that you can specify for each device.</p> <p>After you specify the values for one device, you can select a different device and enter the configuration values.</p> <ul style="list-style-type: none"> <li>• If the configuration template contains validations for the parameters, CSO validates the values you entered for the device and changes the configuration status to Valid and displays a green check mark (✓).</li> <li>• If the configuration template does not contain any validations, CSO changes the configuration status to Valid and displays a green check mark (✓).</li> <li>• If the values that you entered do not match the validation, the configuration status displays Invalid.</li> </ul> <p><b>NOTE:</b> You can optionally delete a device by selecting the device and clicking the delete (trash can) icon.</p> <p>After you specify the input parameter values for all the devices and ensure that the configuration status of all devices is Valid, click <b>Next</b>.</p> <p>You are taken to the Summary tab.</p>
<i>Summary</i>	

Table 110: Deploy Template <Template-Name> To Devices Settings (*continued*)

Setting	Guideline
Devices	<p>The devices that you selected in the preceding step are displayed in the Devices table, and the first device is selected by default.</p> <p>For each device, the device name, device family, and operational status are displayed.</p> <p>For each device, the <i>Device-Name</i> Configuration pane on the right displays the actual configuration that will be deployed on the device.</p> <p>After you review the configuration for all the devices, click <b>Next</b>.</p> <p>You are taken to the Deploy tab.</p>
<i>Deploy</i>	
<b>Deployment Schedule</b>	<p>Specify whether the configuration should be deployed on devices immediately(<b>Deploy now</b>) or deployed later (<b>Deploy later</b>).</p> <p>If you choose to deploy the configuration later, you must enter the date (in MM/DD/YYYY format) and time (in HH:MM:SS 24-hour or AM/PM format) that you want the deployment to occur.</p>

## Deploy from the Devices Page

To deploy a configuration template to one or more devices:

1. Select **Resources > Devices**.

The Devices page appears.

2. Select the device on which you want deploy and click **More > Deploy Configuration Template**.

**NOTE:** The devices that you select must belong to the same device family. If you select devices from different device families, CSO displays an error message.

The Deploy Template to Device *Device-Name* page appears.

3. From the **Configuration Templates** table, select the configuration template that you want to deploy and click **Next**.

The configuration templates displayed are filtered based on the device family of the devices that you selected.

- If you select a configuration template that was added in CSO Release 5.3.0, proceed to Step 4.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to the current CSO release version. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Devices page appears.

- b. Select the device again and click **More > Deploy Configuration Template**.

The Deploy Template to Device *Device-Name* page appears.

4. The rest of the deploy workflow is the same as you encounter if you initiate the deployment from the Configuration Templates page. Complete the configuration according to the guidelines provided in [Table 110 on page 372](#)

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

5. Click **OK**.

The settings that you entered are saved and you are returned to the Devices page. A confirmation message appears indicating that a job was created. For each device, a separate job is triggered to deploy the configuration.

You can view the status of the jobs from the Jobs page (**Monitor > Jobs**).

## RELATED DOCUMENTATION

[Assign Configuration Templates to Device Templates](#) | 383

## Undeploy a Configuration Template from a Device

As a tenant administrator, you can undeploy a configuration template when you no longer need the configuration deployed on the device.

Undeploying a configuration template removes the configuration pushed to the device when the configuration template was deployed.



To remove only the references to the configuration template without removing the configuration pushed to the device, you must dissociate the configuration template. See [“Dissociate a Configuration Template from a Device” on page 378](#) for details.

**NOTE:** You can undeploy configuration templates only from devices with Management Status **Provisioned**. In addition, the configuration templates must have been previously deployed (Deployment Status **Deployed**) on the device.

To undeploy a configuration template:

1. Select **Resources > Devices**.

The Devices page appears.

2. Click the *Device-name* link for the device.

The *Device-Name* page appears.

3. From the **Configuration Template** tab, select the configuration template that you want to undeploy and click **Undeploy**.

- If you select a configuration template that was added in CSO Release 5.3.0, an alert message appears, asking you to confirm the undeploy operation. Proceed to Step 4.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to CSO Release 5.3.0. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Configuration Templates page appears.

- b. Select the template again and click **Undeploy**.

An alert message appears, asking you to confirm the undeploy operation.

4. Click **Yes**.

A message indicating that the undeploy configuration template job was triggered is displayed.

You can click the link in the message to view the progress of the job or view the progress on the Jobs page:

- If the job completes successfully, a confirmation message appears, indicating that the configuration template was undeployed from the device.
- If the job fails, an error message appears. You can repeat the procedure to undeploy the configuration template.

## RELATED DOCUMENTATION

[Deploy Configuration Templates to Devices | 371](#)

[Dissociate a Configuration Template from a Device | 378](#)

## Dissociate a Configuration Template from a Device

As a tenant administrator, you can dissociate a configuration template when you no longer want the template to be associated with your device. Dissociating a configuration template removes references to the configuration template from the device but does not remove the configuration pushed to the device.

To remove the configuration pushed to the device, you must undeploy the configuration template. See [“Undeploy a Configuration Template from a Device” on page 376](#) for details.

To dissociate a configuration template:

1. Select **Resources > Devices**.

The Devices page appears.

2. Click the **Device-Name** link for the device from which you want to dissociate the configuration template.

The **Device-Name** page appears.

3. From the **Configuration Template** tab, select the configuration template that you want to dissociate from the device and click **Dissociate**.

An alert message appears, asking you to confirm the dissociate operation.

4. Click **Yes**.

If the dissociation is successful, a confirmation message appears, indicating that the references to the configuration template were removed from the device.

If the dissociation fails, repeat the procedure to dissociate the configuration template.

## Preview and Render Configuration Templates

In Customer Portal, users with the Tenant Administrator role can use the Preview workflow to validate a configuration template by entering values for the configuration template and then rendering the template to view the configuration.

Although this is not mandatory, we recommend that you use this workflow to validate a configuration template before attaching it to a device template or deploying it on a device.

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

To preview and render a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select the configuration template that you want to check and click **Render Configuration**.

- If you select a configuration template that was added in CSO Release 5.3.0, the Preview Configuration page appears displaying the parameters configured for the template. Proceed to Step 3.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to the current CSO release version. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Configuration Templates page appears.

- b. Select the template again and click **Render Configuration**.

The Preview Configuration page appears displaying the parameters configured for the template.

3. Specify values for the parameters as needed.

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. After you have entered the necessary parameters, click **Render**.

The Rendered Config page appears displaying the configuration rendered based on the configuration template and the values that you specified.

5. Check if the configuration was rendered correctly.

If the configuration was not rendered correctly, you can modify the configuration template as needed. See [“Edit, Clone, and Delete Configuration Templates” on page 368](#).

6. Click **OK**.

You are returned to the Preview Configuration Template page.

7. Click **Cancel** to exit the Preview Configuration Template page.

You are returned to the Configuration Templates page. You can assign the configuration template to one or more device templates.

## RELATED DOCUMENTATION

[Assign Configuration Templates to Device Templates](#) | 383

## Import Configuration Templates

In Customer Portal, users with the Tenant Administrator role can import a configuration template by specifying the parameters using a configuration template file (Jinja template language), Yang model file (schema for the configuration), and the Viewdef file (configuration of the UI).

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

To import a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select **More > Import**.

The Import Configuration Template page appears.

3. Complete the configuration according to the guidelines provided in [Table 111 on page 381](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the Configuration Templates page and a popup appears displaying the status of the import operation.

5. Click **OK** to close the popup.

You are returned to the Configuration Templates page.

If the configuration template is imported successfully, you can validate the configuration template by using the Preview workflow and then assign the configuration template to a device template or deploy it on a device.

**Table 111: Import Configuration Template Settings**

Setting	Guideline
<b>Template Name</b>	Enter a unique name that can only contain alphanumeric characters and hyphens; 64-character maximum.
<b>Description</b>	Enter a description for the configuration template.
<b>Output Config Format</b>	Select the output configuration format for the template: <ul style="list-style-type: none"> <li>• CLI (default)</li> <li>• XML</li> </ul>
<b>Device Family</b>	Select the device family for which you are adding the template; for example, juniper-nfx.
<b>Configuration Template File</b>	Specify the file containing the configuration (in Jinja Template language syntax) by clicking the <b>Browse</b> button to navigate to the directory where the configuration template file is located and selecting the file.
<b>Yang Model File</b>	Specify the Yang data model (configuration schema) file by clicking the <b>Browse</b> button to navigate to the directory where the Yang model file is located and selecting the file.

Table 111: Import Configuration Template Settings (*continued*)

Setting	Guideline
<b>Viewdef File</b>	Specify the Viewdef file, which contains the configuration for the UI, by clicking the <b>Browse</b> button to navigate to the directory where the Viewdef file is located and selecting the file.

## RELATED DOCUMENTATION

[Preview and Render Configuration Templates | 379](#)
[Deploy Configuration Templates to Devices | 371](#)

## Export a Configuration Template

As a tenant administrator, you can export a configuration template as a ZIP file if you want to modify the template offline and then import it as a new template.

The ZIP file contains the configuration template file (Jinja template language), Yang model file (schema for the configuration), and the Viewdef file (configuration of the UI).

To export a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select a configuration template from the list and click **More > Export**.

- If you select a configuration template that was added in CSO Release 5.3.0, the configuration template is automatically downloaded as a ZIP file to your local file system.
- If you select a configuration template that was added in a release before CSO Release 5.3.0, an alert message appears asking you to confirm whether you want to edit the template to automatically upgrade the template to the current CSO release version. You must go through the Edit workflow to upgrade the version.
  - a. On the Edit Configuration Template page that appears, proceed to the Summary tab and click **OK**.

The template is automatically upgraded to CSO Release 5.3.0 and the Configuration Templates page appears.

- b. Select the template again and click **Export**.

The configuration template is automatically downloaded as a ZIP file to your local file system.

You can modify the configuration template files as needed and import the files back into Customer Portal.

## RELATED DOCUMENTATION

[About the Configuration Templates Page | 365](#)

[Import Configuration Templates | 380](#)

## Assign Configuration Templates to Device Templates

In Customer Portal, users with the Tenant Administrator role can assign a configuration template to one or more device templates. Associating a configuration template with a device template enables you to deploy additional configuration on the device during ZTP and after the device is activated.

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

To assign a configuration template to one or more device templates:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Select the configuration template that you want to assign and select **More > Assign to Device Template**.

The Assign Configuration Template to Device Templates page appears.

3. Complete the configuration according to the guidelines provided in [Table 112 on page 384](#)

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the Configuration Templates page and a popup appears indicating whether the assignment is successful or has failed. If the assignment failed, you can retry the assignment or contact Juniper Networks support.

If the assignment is successful, the configuration parameters are displayed in the *Device-Name* page and you can enter values for the configuration and deploy the changes on the device.

**Table 112: Assign Configuration Template to Device Template Settings**

Setting	Guideline
<b>Template Settings</b>	
Template	Displays the name of the configuration template that you are assigning; you cannot modify this field.
<b>Display Name</b>	Enter the name that you want displayed on the <i>Device-Name</i> page.
<b>Component Name</b>	<p>For NFX250 devices, select the component name to which the configuration should be deployed. The components that are currently supported are:</p> <ul style="list-style-type: none"> <li>• Juniper Device Manager (JDM)—JDM is a Linux container that manages software components.</li> <li>• Juniper Control Plane (JCP)—JCP is the Junos VM running on the hypervisor. Administrators can use JCP to configure the network ports of the NFX250 device. JCP is used to configure the switching and routing function on the NFX250 device.</li> <li>• Gateway Router (GWR)—vSRX as a gateway provides the same capabilities as Juniper Networks SRX Series Services Gateways in a virtual form factor.</li> </ul>
<b>Auto Deploy</b>	<p>Specify whether the configuration should be deployed automatically on the device during the zero touch provisioning (ZTP) process. The options are:</p> <ul style="list-style-type: none"> <li>• <b>Yes</b>—Deploy the configuration automatically on the device during ZTP.</li> <li>• <b>No (Default)</b>—Don't deploy the configuration is not deployed automatically on the device during ZTP.</li> <li>• <b>Same as global settings</b>—Use the same settings as the one configured in the device template.</li> </ul>
<i>Device Templates</i>	
<b>Select Device Templates</b>	<p>The list of device templates to which you can assign the configuration template are displayed in a grid along with some information about the template. CSO displays only those device templates whose device family matches the device family of the configuration template.</p> <p>Select one or more device templates to which you want to assign the configuration template.</p>



## RELATED DOCUMENTATION

Deploy Configuration Templates to Devices | 371

## Add Configuration Templates

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

In Customer Portal, users with the Tenant Administrator role can add a configuration template by providing the device configuration in the Jinja template language syntax.

**NOTE:**

- Before you add the configuration template, ensure that you have the device configuration ready.
- We recommend that you use a working device configuration to add the configuration template.

To add a configuration template:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Click the + (add) icon.

The Add Configuration Template page (wizard) appears.

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

3. Configure the fields on the Basic Information tab according to the guidelines provided in [Table 113 on page 386](#).

Click **Next** to go to the Templatize Config tab.

4. Add the configuration on the Templatize Config tab. Refer to [Table 114 on page 386](#) for an explanation of the actions on this tab.

Click **Next** to go to the Generated UI tab, where the UI for the parameters that you entered is generated and displayed.

5. Perform one or more actions on this tab, as explained in [Table 115 on page 387](#).

6. Click **Save**.

The configuration template is added and you are returned to the Configuration Templates page, where a confirmation message is displayed. You can assign the configuration template to device templates or deploy the template on devices.

**Table 113: Basic Information Settings (Add Configuration Template Page)**

Setting	Guideline
<b>Template Name</b>	Enter a unique name that can only contain alphanumeric characters and hyphens; 64-character maximum.
<b>Description</b>	Enter a description for the configuration template.
<b>Output Config Format</b>	Select the output configuration format for the template: <ul style="list-style-type: none"> <li>• CLI (default)</li> <li>• XML</li> </ul>
<b>Device Family</b>	Select the device family for which you are adding the template; for example, juniper-nfx.
	Click <b>Next</b> to continue.

**Table 114: Templatize Config Actions (Add Configuration Template Page)**

Action	Description
View a sample configuration	You can view a sample configuration by clicking the <b>Sample Configuration</b> link near the top of the tab. The sample configuration appears in a new tab in your browser.
Add the device configuration	In the inline editor, copy and paste the device configuration ensuring that the syntax follows the Jinja Template language.  CSO detects the template parameters corresponding to the configuration that you entered and displays them in the Parameters pane.

Table 114: Templatize Config Actions (Add Configuration Template Page) (continued)

Action	Description
Advanced Mode	<ul style="list-style-type: none"> <li>When advanced mode is disabled, which is the default, CSO converts the configuration that you entered in Jinja Template language to a Junos OS configuration that uses Junos OS configuration groups. (Configuration groups make it easier to configure and maintain Junos OS configurations; see <a href="#">Understanding Junos OS Configuration Groups</a>.) CSO also automatically includes the commands to delete the configuration groups in the configuration template. If you trigger an undeploy configuration template workflow, CSO uses these commands to delete the configuration. Therefore, to avoid conflict with the commands that CSO automatically includes, ensure that you do not manually include commands related to configuration groups (as part of the device configuration).</li> <li>When advanced mode is enabled, CSO converts the configuration that you entered in Jinja Template language but does not use Junos OS configuration groups and does not include commands to delete the configuration. Therefore, if you plan to undeploy the configuration template later, you must ensure that you manually enter the commands to delete the configuration as part of the device configuration so that CSO can use these commands to delete the configuration.</li> </ul>
[Detected Parameters]	<p>Check that the parameters detected match the configuration that you added to the template:</p> <ul style="list-style-type: none"> <li>If the parameters detected do not match, check the Jinja syntax that you used for the template configuration and make any changes needed in the inline editor.</li> <li>If the parameters detected match the configuration that you added to the template, click <b>Next</b> to continue.</li> </ul> <p>CSO validates the Jinja template syntax and displays an error message if there are any errors.</p>

Table 115: Generated UI Actions (Add Configuration Template Page)

Action	Description
Reorder the UI	Drag and drop individual fields, grids, or sections to change the order in which the parameters appear on the UI.

Table 115: Generated UI Actions (Add Configuration Template Page) (continued)

Action	Description
Modify the settings for a field, section, or grid	<p>To modify the settings for a field, section, or grid:</p> <ol style="list-style-type: none"> <li>1. Click the settings (gear) icon next to the field, section, or grid. The Form Settings pane appears on the right side of the page, displaying the Basic Settings and Advanced Settings tabs.</li> <li>2. Modify the fields on these tabs, as needed. See <a href="#">Table 116 on page 388</a> for an explanation of the fields on these tabs.</li> <li>3. Click <b>Save Settings</b> for each field to save your changes. The modifications that you made are displayed on the UI.</li> </ol>
Reset the generated UI	Click <b>Undo all Edits</b> to discard the changes that you made and undo the changes made on the UI.
Preview configuration	<p>Previewing the configuration enables you to check the configuration template that you added.</p> <p>To preview a configuration template:</p> <ol style="list-style-type: none"> <li>1. Click <b>Preview Configuration</b>. The Preview Configuration page appears, displaying the configuration that was rendered based on the values that you entered.</li> <li>2. Check if the configuration was rendered correctly. <ul style="list-style-type: none"> <li>• If the configuration was not rendered correctly, click the close (X) icon to go back and make modifications as needed.</li> <li>• If the configuration was rendered correctly, click <b>OK</b>.</li> </ul> <p>You are returned to the Generated UI page.</p> </li> </ol>

Table 116: Form Settings (Add Configuration Template Page)

Setting	Guideline
<i>Basic Settings Tab</i>	Fields populated in this tab are based on the input type that you select.

Table 116: Form Settings (Add Configuration Template Page) (continued)

Setting	Guideline
Input Type	<p>Select the input type for the parameter in the configuration template:</p> <ul style="list-style-type: none"> <li>• TEXT (default): If the input value for the parameter is a string of characters.</li> <li>• NUMBER: If the input value for the parameter is a number.</li> <li>• EMAIL: If the input value for the parameter is an e-mail address.</li> <li>• IP_V4: If the input value for the parameter is an IPv4 address.</li> <li>• IP_V4_PREFIX: If the input value for the parameter is an IPv4 prefix.</li> <li>• IP_V6: If the input value for the parameter is an IPv6 address.</li> <li>• IP_V6_PREFIX: If the input value for the parameter is an IPv6 prefix.</li> <li>• TOGGLE_BUTTON FOR BOOLEAN: If the input value for the parameter is a boolean value (true or false).</li> <li>• DROPDOWN: If the input value for the parameter is selected from a list.</li> <li>• PASSWORD: If the input value for the parameter is a password. The value that you enter is masked (default). (Optional) Click the <b>Show Password</b> (eye) icon to unmask the password.</li> <li>• CONFIRM PASSWORD: If the input value for the parameter is to confirm the password. If you select this option, a Confirm Password field appears on the UI. The value that you enter is masked (default). (Optional) Click the <b>Show Password</b> (eye) icon to unmask the password.</li> </ul>
Label	Enter the label that you want displayed (on the UI) for the parameter.
Default Value	Specify a default value for the parameter.
Validate	<p>For Text input type, select one or more validation criteria against which the input value will be checked.</p> <p>If the value that you entered for the parameter on the UI does not meet the selected validation criteria, an error message appears.</p>
Description	Enter an explanation for the parameter, which will appear when you hover over the Help (?) icon for the parameter; the maximum length allowed is 256 characters.
Global Scope	Click the toggle button to make the parameter common across all devices to which the configuration template is being deployed to. If you disable the toggle button, which is default, the parameter must be specified for each device.

**Table 116: Form Settings (Add Configuration Template Page) (continued)**

Setting	Guideline
Hidden	<p>Click the toggle button to hide the parameter on the UI when you preview and deploy the template.</p> <p>Typically, this option is used to hide a parameter and display it in the template only when an event is triggered. By default, the toggle button is disabled, which means that the parameter is displayed.</p>
Required	Click the toggle button to make the parameter mandatory; parameters that are mandatory are marked with an asterisk (*) on the UI.
Max	For parameters that are numbers, enter the maximum value (up to 16 digits) for the input.
Min	For parameters that are numbers, enter the minimum value (up to 16 digits) for the input.
Visibility for Disabled	For Boolean parameters, select one or more parameters that must appear on the UI when the toggle button is disabled (boolean value is FALSE).
Visibility for Enabled	For Boolean parameters, select one or more parameters that must appear on the UI when the toggle button is enabled (boolean value is TRUE).

Table 116: Form Settings (Add Configuration Template Page) (continued)

Resource Type	<p>For Dropdown input type, select the type of resource from which you want to retrieve data:</p> <ul style="list-style-type: none"> <li>• Static Resource—Resources in the list on the UI are mapped to the values that you specify. <ul style="list-style-type: none"> <li>• To add a static resource: <ol style="list-style-type: none"> <li>1. Click the + (add) icon.</li> </ol> <p>Cells appear in the List Values table.</p> <ol style="list-style-type: none"> <li>2. Click inside the cells to specify values for the Label (name for the option in the list), Value (value for the option in the list), and Visibility (conditional visibility based on the option selected from the list) fields.</li> <li>3. click ✓ (check mark) to save your changes.</li> </ol> <p>The values that you specified are displayed in the List Values table.</p> <ul style="list-style-type: none"> <li>• To edit a static resource, select the resource and click the edit (pencil) icon.</li> <li>• To delete a static resource, select the resource and click the X (delete) icon.</li> </ul> </li> <li>• Dynamic Resource—Resources in the list on the UI are mapped to the predefined services in CSO.</li> </ul> <p>Click the <i>Resource Management</i> link to view add, edit, and delete dynamic resources. The Manage Resources page appears displaying the existing resources.</p> <ul style="list-style-type: none"> <li>• To add a dynamic resource: <ol style="list-style-type: none"> <li>1. Click the + (add) icon.</li> </ol> <p>The Add Resource page appears.</p> <ol style="list-style-type: none"> <li>2. Complete the configuration according to the guidelines specified in <a href="#">Table 117 on page 392</a>. Fields marked with an asterisk (*) are mandatory.</li> <li>3. Click <b>OK</b> to save the resource.</li> </ol> <p>You are returned to the Manage Resources page, where the resource that you added appears.</p> <ol style="list-style-type: none"> <li>4. Click <b>OK</b>.</li> </ol> <p>You are returned to the Add Configuration Template page. The resource or resources that you added are available in the <b>Resource</b> list on the Form Settings pane.</p> <ul style="list-style-type: none"> <li>• To edit a dynamic resource, select the resource and click the edit (pencil) icon.</li> <li>• To delete a dynamic resource, select the resource and click the X (delete) icon.</li> </ul> </li> </ul> </li></ul>
---------------	---

Table 116: Form Settings (Add Configuration Template Page) (continued)

Key	<p>For data in a table, select a column from the dropdown list that is to be used as a key.</p> <p>The column that you select is marked as unique (<b>Unique Key</b>), indicating that the entries in this column must be unique.</p> <p>Keys are unique identifiers used in defining entries (in a table) in the Yang data hierarchy. They help distinguish entries in a column.</p>
<i>Advanced Settings Tab</i>	
Regex	<p>Enter a regular expression (regex pattern) to validate the input value.</p> <p>A regular expression defines a search pattern that is used to match characters in a string.</p> <p>For example, the regular expression [A-Z] matches the input with the characters A through Z.</p> <p>If the input consists of characters other than A through Z, an error message (as specified in the Invalid Message field) appears.</p>
Invalid Message	Enter an error message that you want displayed on the UI when the input value does not match the specified regular expression.
Remote Validation	Enter a JavaScript function to validate the input value.
<i>Event List</i>	
Event Name	Select an event from the list based on which the parameter is conditionally displayed.
Event Handler	Enter a JavaScript function that specifies the actions that the event handler takes in response to an event.

Table 117: Fields on the Add Resource Page

Field	Guideline
<i>Data Source</i>	
Name	Enter a unique name for the resource.
Source Type	<p>Select the source from which you want to retrieve data:</p> <ul style="list-style-type: none"> <li>• Service based, which uses predefined services to retrieve data.</li> <li>• URL based, which uses a URL of the API to retrieve data.</li> </ul>



Table 117: Fields on the Add Resource Page (*continued*)

Field	Guideline
Service	For service-based source type, select a predefined service from which you want to retrieve data.
Entity	For service-based source type, select an entity for which you want to retrieve data.
URL	For URL-based source type, enter the URL of the API to be used for the request.
Method	For the URL-based source type, select the type of HTTPS method (GET or POST) to be used for the resource.
POST Body	For POST method, enter the format of the payload (in JavaScript Object Notation [JSON] format) of the API method, which is sent to the server.
Mock Result	Specify a mock result (in JSON format) if the API request is unable to retrieve data.
<i>Result Mapping</i>	
Result Mapping	<p>Select the type of processing to be done on the output of the remote request:</p> <ul style="list-style-type: none"> <li>• Script—Use this option if you want to use a script (in JSON format) to process the output.</li> <li>• Mapping—Use this option if you want to map the output using a base path.</li> </ul>
Mapping Script	To process the output by using a script, enter a mapping script in JSON format.
Select Path	To process the output by using a base path, enter the base path (JSONPath expression) of the variable in the output from which you want to extract the data; for example, interface.
Label Field	Select whether you want the names, UUIDs, or management status (for the selected entity) displayed as options in the list on the UI.
Value Field	<p>Select a value (such as names, management status, and so on) that you want to associate with the labels (options) in the list on the UI.</p> <p>When you select an option from the list and save the configuration template, CSO processes its associated value (in the backend).</p>

Table 117: Fields on the Add Resource Page *(continued)*

Field	Guideline
Extra Fields	<p>Specify the additional values that you want to associate with the labels (options) in the list on the UI. When you select an option from the list on the UI, its associated additional value can be used to trigger an event, when a condition is met, by using a JavaScript function. You specify the JavaScript function in the Event Handler field.</p> <p>For example, let's say that the list contains device UUIDs (universally unique IDs) and that you specify device type as an additional value. You can enter a JavaScript function in the Event Handler field to display a parameter (such as the Virtual Chassis toggle button) on the UI only when the device is an EX Series switch. So, the Virtual Chassis toggle button is displayed only if you select an EX Series switch from the list.</p>

RELATED DOCUMENTATION

[Preview and Render Configuration Templates](#) | 379

## View the Configuration Deployed on Devices

In Customer Portal, for any configuration template, users with administrator or operator roles can view the configuration deployed on one more devices.

**NOTE:** In CSO releases before Release 5.1.0, configuration templates are called stage-2 configuration templates.

To view the configuration deployed on one or more devices:

1. Select **Resources > Templates > Configuration Templates**.

The Configuration Templates page appears.

2. Navigate to the Devices column of the configuration template for which you want to view the deployed configuration, and click the **Number-of-devices** link.

The Device Configuration page appears.

[Table 118 on page 395](#) explains the fields on this page.

3. After you have viewed the deployed configurations, click **OK**.

You are returned to the Configuration Templates page.

**Table 118: Device Configuration Page Fields**

Setting	Guideline
Devices	<p>The devices on which the configuration was deployed are displayed in a table. For each device, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• Device Name</li> <li>• Device Family</li> <li>• Operational Status, indicating whether the device is up or down.</li> <li>• Configuration State: <ul style="list-style-type: none"> <li>• CREATED, indicating that the deployment hasn't started.</li> <li>• DEPLOYED, indicating that the configuration was successfully deployed.</li> <li>• DEPLOYING, indicating that the deployment of the configuration is in progress.</li> <li>• DEPLOY_FAILED, indicating that the deployment of the configuration failed.</li> </ul> </li> <li>• Deployment Date, indicating the date and time on which the deployment was triggered.</li> <li>• Job—Click the <b>View logs</b> link for a device to view the deployment history for that device. The Deployment History page appears displaying the number of jobs in progress, number of successful jobs, and number of failed jobs in addition to a table listing some details of the job. You can drill down further by clicking the <b>Regional Log</b> and <b>Log</b> links.</li> </ul>
Device-Name Configuration	<p>Select a device by clicking the check box corresponding to the row:</p> <ul style="list-style-type: none"> <li>• For each device on which the configuration deployed successfully, table, this pane displays the configuration that is deployed on the device.</li> <li>• For each device on which the configuration deployment is in progress, DEPLOYING is displayed.</li> </ul>

**RELATED DOCUMENTATION**

| [About the Configuration Templates Page](#) | 365

# Managing Licenses

## IN THIS CHAPTER

- [About the Device Licenses Page | 396](#)
- [About the CSO Licenses Page | 397](#)

## About the Device Licenses Page

To access this page, click **Administration > Licenses > Device Licenses**.

You can use the Licenses page to view information about uploaded device licenses for virtual network services from your local file system. The license key is required to enable application-based routing, application monitoring, and other vSRX security features.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about a device license. Click the details icon that appears when you hover over the name of an image or click **More > Details**.
- Show or hide columns about the device license. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a device license. Click the Search icon in the top right corner of the page to search for a device license.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

### Field Descriptions

[Table 119 on page 397](#) describes the fields on the Device License Files page.

Table 119: Fields on the Device License Files Page

Field	Description
File Name	View the filename of the license. Example: license_Image_v1
Build	View the build name of the license. Example: 1
Version	View the version number of the license. Example: 1.1
Vendor	View the vendor name of the license. Example: Juniper Networks
Family	Select the device family of the license. Example: SRX
Model	View the model number of the license. Example: 1
Description	View the description of the license. Example: The license is applicable for SRX340 device.
Uploaded By	View the administrator who uploaded the license. Example: test_admin
Last Uploaded	View the date and time when the license was uploaded. Example: 11/18/2016 19:15

## About the CSO Licenses Page

To access this page, click **Administration > Licenses > CSO Licenses** in Customer Portal.

You can use the CSO Licenses page to view information about the existing CSO licenses assigned to a tenant.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Group CSO licenses by sales order or SKUs:
  - Click **Group By** and select **Sales Order** to group CSO licenses by sales orders. By default, CSO licenses are grouped by sales order.
  - Click **Group By** and select **SKU** to group CSO licenses by SKUs.
- Search for CSO licenses by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

You can search using license SKU, sales order, type, tier, or device class.

- Sort CSO licenses—Click a column name to sort based on the column name.

**NOTE:** Sorting is applicable only to some fields.

- Show or hide columns—Click the **Show Hide Columns** icon at the top right corner of the page and select the columns that you want displayed on the CSO Licenses page.

### Field Descriptions

[Table 120 on page 398](#) describes the fields on the CSO Licenses page.

**Table 120: Fields on the CSO Licenses page**

Field	Description
License SKU	Displays the CSO license SKU name; for example, S-CSO-C-S1-A-3.
Sales Order	Sales order number; for example, 15563238.
Type	Displays whether the license is for an on-premise installation or for a cloud-hosted CSO installation.
Tier	Support tier associated with the license; for example, Standard.
Device Class	Class of the Juniper device associated with the license; for example, B-class.

Table 120: Fields on the CSO Licenses page (*continued*)

Field	Description
SSRN	Software support reference number (SSRN), which is necessary to identify your purchase order when you contact Juniper Networks for support
Start Date	Date (in MMM DD , YYYY format) from which the license is valid; for example, Aug 29, 2019.
End Date	Date (in MMM DD , YYYY format) up to which the license is valid. CSO calculates the end date based on the validity of the license SKU.
Device Quantity	Total number of on-premise devices that the tenant is authorized to use.
Available	Available number of devices that the tenant can add for the license.
Assigned	This field is not applicable to Customer Portal.

## RELATED DOCUMENTATION

[About the Device Licenses Page](#) | 396

# Managing Signature Database and Certificates

## IN THIS CHAPTER

- [Signature Database Overview | 400](#)
- [About the Signature Database Page | 401](#)
- [Installing Signatures | 402](#)
- [Certificates Overview | 403](#)
- [About the Certificates Page | 404](#)
- [Importing a Certificate | 406](#)
- [Installing and Uninstalling Certificates | 408](#)
- [About the VPN Authentication Page | 409](#)

## Signature Database Overview

The signature database that Juniper provides contains application and intrusion prevention system (IPS) signatures:

- Application signatures are definitions of predefined attacks and applications, and can be used to identify applications for tracking firewall policies and quality-of-service (QoS) prioritization.
- IPS signatures are definitions of predefined attack object and attack object groups that you can use in IDP policies to match traffic against known attacks.

Users with the tenant administrator role can install the active signature database on one or more devices.

## RELATED DOCUMENTATION

[About the Signature Database Page | 401](#)

[Installing Signatures | 402](#)



## About the Signature Database Page

To access this page, select **Administration > Signature Database**.

Use the Signature Database page to install the active signature database, which contains intrusion prevention system (IPS) and application signatures, on one or more devices. The signature database contains definitions of attacks and application, which are used in defining IPS profile rules and application firewall rules. These attack objects and groups are designed to detect known attack patterns and protocol anomalies within the network traffic.

### Tasks You Can Perform

You can perform the following task from this page:

- Install signatures on one or more devices. See [“Installing Signatures” on page 402](#).
- Show or hide columns—Click the **Show Hide Columns** icon at the top right corner of the page and select the columns that you want displayed on the Signature Database page.

### Field Descriptions

[Table 121 on page 401](#) describes the fields on this page.

**Table 121: Fields on the Signature Database Page**

Field	Description
<b>Active Database</b>	
Database Version	Version of signature database.
Publish Date	Date and time (YYYY-MM-DD HH:MM:SS 24-hour format) when the signature database was published.
Installed Device Count	Number of devices on which the signature database was successfully installed.
Detectors	Version numbers of the detector engines associated with the signature database.  Click the <i>detector-versions</i> link to view the detector details. The Detector Details for <i>Signature-Database-Version</i> page appears displaying (in a table) the platform, OS version, and version of the detectors for the signature database. Click <b>Close</b> to return to the Signature Database page.

Table 121: Fields on the Signature Database Page (*continued*)

Field	Description
Action	<p>Click the <b>Install on device</b> link to install the signatures on one or more devices.</p> <p>The Install Signatures page appears. See <a href="#">“Installing Signatures” on page 402</a>.</p> <p><b>NOTE:</b> This field appears only for users with the Tenant Administrator role.</p>

## RELATED DOCUMENTATION

[Signature Database Overview](#) | 400

## Installing Signatures

Users with the tenant administrator role can install the active signature database on one or more devices. Signatures must be present on the device for application firewall or intrusion prevention system (IPS) features to be used. If you do not install the signature database on a device, the deployment of IPS profiles or application firewall will fail.

**NOTE:**

- Before you install the signature database on the device, ensure that the IPS license is installed on the device. If the IPS license is not installed, only the application signatures will be installed when the signature database installation is triggered.
- You can install the signature database on the following devices: NFX150, NFX250, SRX Series, and vSRX.

To install the active signature database:

1. Select **Administration > Signature Database**.

The Signature Database page appears.

2. Click **Install Signatures**.

The **Install Signatures** page appears displaying the signature database version and the devices on which you can install the signature database.

3. Select the check boxes corresponding to the devices on which you want to install the signature database.

You can also search for, filter, or sort the devices displayed in the table.

4. From the **Type** field:

- Select **Run now** to immediately trigger the installation of the signature database on the devices that you selected.
- Select **Schedule at a later time** to install the signature database later and specify a date and time at which you want the installation to be triggered.

5. Click **OK**.

- If you specified that the database must be installed immediately, a job is triggered and in the Job Tasks page that appears, the tasks associated with the signature database installation are displayed. Click **OK** to exit and return to the Signature Database page.
- If you specified that the database must be installed later, a job is created and you are returned to the Signature Database page. A confirmation message (with the job ID) is displayed at the top of the page.

After the signature database is installed successfully, you can deploy the firewall policy (that references IPS profiles or application signatures) on the device.

## RELATED DOCUMENTATION

[Signature Database Overview | 400](#)

[About the Signature Database Page | 401](#)

## Certificates Overview

SSL uses public-private key technology that requires a private key paired with an authentication certificate for the SSL service. An SSL certificate includes identifying information such as a public key and a signature issued by a certificate authority (CA).

CAs are entities that validate identities and issue certificates. A CA can issue multiple certificates in the form of a tree structure. A root certificate is the topmost certificate of the tree, the private key of which is used to sign other certificates. All certificates immediately below the root certificate inherit the signature or trustworthiness of the root certificate. This is somewhat like the notarizing of an identity. You can configure a root CA certificate by first obtaining a root CA certificate (by either generating a self-signed one or importing one) and then applying it to an SSL proxy profile.

**NOTE:** SSL certificates are used for the SSL forward proxy feature in CSO.

## RELATED DOCUMENTATION

[SSL Forward Proxy Overview | 691](#)

[About the SSL Proxy Profiles Page | 708](#)

## About the Certificates Page

To access this page, select **Administration > Certificates** in Customer Portal.

Use this page to view and manage SSL certificates. You can import a root certificate or a trusted certificate (directly from a file or by pasting the content) and install a certificate on a site.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View information about the existing certificates; see [Table 122 on page 405](#).
- Import a certificate—Select **More > Import Certificate**. See [“Importing a Certificate” on page 406](#).
- View the sites on which a certificate is installed—Select a certificate and then select **More > View Installed Sites**.

The View Installed Sites page appears, displaying the list of sites on which the selected certificate is installed. Click **OK** to close the page and return to the Certificates page.

- Install a certificate on a site—Select a certificate and then select **More > Install Certificate**. See [“Installing and Uninstalling Certificates” on page 408](#).
- Uninstall a certificate from a site—Select a certificate and then select **More > Uninstall Certificate**. See [“Installing and Uninstalling Certificates” on page 408](#).
- View details about a certificate—Select a certificate and then select **More > Detailed View**. The Detailed View page appears. See [Table 123 on page 405](#) for an explanation of fields on this page.

### Field Descriptions

[Table 122 on page 405](#) displays the fields on the Certificates page.

Table 122: Fields on the Certificates Page

Field	Description
Certificate Name	Name of the certificate.
Type	Type of the certificate: <ul style="list-style-type: none"> <li>• Root certificate</li> <li>• Trusted certificate</li> </ul>
Description	Description of the certificate.

Table 123: Fields on the Detailed View Page

Field	Description
Certificate Name	See <a href="#">Table 122 on page 405</a> .
Type	See <a href="#">Table 122 on page 405</a> .
Valid From	Date and time (UTC) from which the certificate is valid.
Valid Upto	Date and time (UTC) until which the certificate is valid.
Serial Number	Serial number of the certificate.
Signature Algorithm	Algorithm used to sign the certificate.
Issuer Details	Details of the authority that issued the certificate, including details such as name, country, organization, and so on.
Version	X.509 version of the certificate.

## RELATED DOCUMENTATION

[About the SSL Proxy Profiles Page](#) | 708

# Importing a Certificate

You can import an SSL certificate (directly from a file or by pasting the content) from the Import Certificate page.

**NOTE:** If you want to use the SSL proxy feature, you must import at least one root certificate for a tenant; the certificate can be used in one or more sites.

To import a certificate:

1. Select **Administration > Certificates** in Customer Portal.

The Certificates page appears.

2. Select **More > Import Certificate**.

The Import Certificate page appears.

3. Complete the configuration according to the guidelines provided in [Table 124 on page 406](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to import the certificate.

You are taken to the Certificates page. If the certificate content that you imported is validated successfully, a confirmation message is displayed; if not, an error message is displayed.

After importing a certificate, you can use it when you create an SSL proxy profile.

**Table 124: Import Certificate Settings**

Setting	Guideline
<b>Certificate Name</b>	Enter the certificate name, which must be a unique string of alphanumeric characters and some special characters ( _ -). No spaces are allowed and the maximum length is 32 characters.
<b>Certificate Type</b>	Select an option to specify whether the certificate that you are importing is a root certificate ( <b>Root CA</b> ) or a trusted certificate ( <b>Trusted CA</b> ).



```
DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456A
DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456DefQrs456A
-----END CERTIFICATE-----
```

## RELATED DOCUMENTATION

[Installing and Uninstalling Certificates | 408](#)

[Creating SSL Forward Proxy Profiles | 710](#)

## Installing and Uninstalling Certificates

### IN THIS SECTION

- [Installing a Certificate | 408](#)
- [Uninstalling a Certificate | 409](#)

You can install and uninstall certificates from the Certificates page. This topic has the following sections:

### Installing a Certificate

Use the Install Certificate page to install certificates on one or more sites.

To install a certificate on one or more sites:

1. Select **Administration > Certificates** in Customer Portal.

The Certificates page appears, displaying the existing certificates.

2. Select the certificate that you want to install, and then select **More > Install Certificate**. Alternatively, right-click a certificate and select **Install Certificate**.

The Install Certificate page appears, displaying a list of sites.

3. Select the sites on which you want to install the certificate.
4. Click **Install** to install the certificate on the selected sites.



You are taken to the Certificates page. A job is created and a confirmation message appears with the ID of the job. Click the job ID to go to the Jobs page, where you can view the status of the job.

## Uninstalling a Certificate

If a certificate's validity has expired or if you want to remove a certificate from a site, you can uninstall the certificate from that site.

To uninstall a certificate from one or more sites:

1. Select **Administration > Certificates** in Customer Portal.

The Certificates page appears, displaying the existing certificates.

2. Select the certificate that you want to uninstall, and then select **More > Uninstall Certificate**.  
Alternatively, right-click a certificate and select **Uninstall Certificate**.

The Uninstall Certificate page appears, displaying only those sites on which the certificate was previously installed.

3. Select the sites from which you want to uninstall the certificate.

4. Click **Uninstall** to uninstall the certificate from the site.

You are taken to the Certificates page. A job is created and a confirmation message appears with the ID of the job. Click the job ID to go to the Jobs page, where you can view the status of the job.

## RELATED DOCUMENTATION

| [Importing a Certificate](#) | 406

## About the VPN Authentication Page

### IN THIS SECTION

- [Tasks You Can Perform](#) | 410

To access this page, click **Administration > Certificate Management > VPN Authentication**.

**NOTE:** The VPN Authentication page is displayed only for tenants with SD-WAN sites that are configured with PKI as the authentication type.

## Tasks You Can Perform

- View information about the existing certificates. See [Table 126 on page 413](#).
- Change the method of renewing PKI certificates for a tenant. See [“Changing the Method of Renewing PKI Certificates for a Tenant” on page 410](#).
- Change the method of renewing PKI certificates for sites. See [“Changing the Method of Renewing PKI Certificates for Sites” on page 411](#).
- Update the CRL URL of certificates. See [“Updating the CRL URL of Certificates” on page 412](#).
- Change the CA Server URL and Password. See [“Change the CA Server URL and Password” on page 412](#).
- Manually renew certificates for sites. See [“Manually Renewing Certificates for Sites” on page 412](#).

### *Changing the Method of Renewing PKI Certificates for a Tenant*

In Customer Portal, the method of renewing PKI certificates for a tenant is configured when the tenant is onboarded.

You, as a tenant administrator, can change the method of renewing PKI certificates for an onboarded tenant from the VPN Authentication page.

To change the method of renewing PKI certificates for a tenant:

1. On the VPN Authentication page, click the **Change** link.

The Tenant Certificate Renewal Method page appears.

**NOTE:** Certificates will not be renewed for sites that are down or do not have connectivity to CSO at the current time.

2. By default, the **Auto Renew Certificate** toggle button is disabled. Click the toggle button to enable the automatic renewal of certificates.

If you do not enable the automatic renewal of certificates, they must be manually renewed. See [“Manually Renewing Certificates for Sites” on page 412](#) for more information.

3. If you enabled the automatic renewal of certificates, in the **Renew Before Expiry** field, select the period before the expiry date on which the certificates should be automatically renewed:

- 3 Days
- 1 Week
- 2 Weeks (default)
- 1 Month

4. Click **OK** to save your changes.

The Confirm Renew Certificate page appears.

5. Click **Yes** to confirm your changes.

A job is created to check the expiration date of certificates for all sites of the tenant. If a certificate is nearing the configured expiry date, the certificate is automatically renewed.

You are returned to the VPN Authentication page where a confirmation message appears.

### ***Changing the Method of Renewing PKI Certificates for Sites***

**NOTE:** If the certificate renewal method for a tenant is manual, the renewal method for certificates used by sites belonging to that tenant cannot be changed to automatic. You can change the renewal method of a PKI certificate belonging to a site only if the certificate renewal method for the tenant is automatic.

To change the renewal method of certificates for one or more sites:

1. On the VPN Authentication page, select one or more sites from the list of available sites and click **Change Renewal Method**.

A drop-down list appears.

2. From the list, choose the renewal method (**Set Auto Renew** or **Set Manual Renew**).

The **Edit Certificate Renew Method** page appears.

3. Click **Yes** to change the renewal method.

- If you set the renewal method as automatic, a job is created to check the expiration date of certificates for the selected sites. If a certificate is nearing the configured expiry date, the certificate is automatically renewed.
- If you set the renewal method as manual, certificates must be manually renewed. See [“Manually Renewing Certificates for Sites” on page 412](#) for more information.

You are returned to the VPN Authentication page, where a confirmation message appears.

### ***Updating the CRL URL of Certificates***

CSO obtains the latest list of certificates revoked by the Certificate Authority (CA), from the CRL (Certificate Revocation List) server, when you update the CRL URL of certificates.

To update the CRL URL of certificates:

1. On the VPN Authentication page, click **Update CRL URL**.

The **Edit Tenant Certificate CRL** page appears.

2. In the **CRL Server** field, update the CRL URL.

3. Click **OK**.

A job is created to download the latest CRL.

You are returned to the VPN Authentication page, where a confirmation message appears.

### ***Change the CA Server URL and Password***

You, as an SP administrator or OpCo administrator, specify the CA Server URL and password on the Administration Portal during tenant onboarding.

To change the CA Server URL and password for the tenant from the Customer Portal:

1. On the VPN Authentication page, click the **Change** link.

The Tenant Certificate Renewal Method page appears.

2. Specify the updated CA Server URL and Password in the **CA Server URL** and **Password** fields, respectively.

3. Click **OK** to save your changes.

The Confirm Renew Certificate page appears.

4. Click **Yes** to confirm your changes.

A confirmation message appears on the VPN Authentication page and the CA server URL and password are updated for all sites of the tenant.

### ***Manually Renewing Certificates for Sites***

To manually renew certificates for one or more sites:

1. On the VPN Authentication page, select one or more sites from the list of available sites and click **Renew Certificate**.

The **Confirm Renew Certificate** page appears.

2. Click **Yes** to manually renew the certificates.

A certificate renewal job is triggered and a confirmation message appears on the VPN Authentication page.

### Field Descriptions

Table 125 on page 413 provides information about tenant-level settings for a PKI certificate, on the VPN Authentication page.

**Table 125: Tenant-level settings on the VPN Authentication page**

Field	Description
<b>Certificate Renewal</b>	
Current Tenant Setting	Renewal method currently configured for PKI certificates of the tenant.
Next Renew Check Time	<ul style="list-style-type: none"> <li>• If the <b>Auto Renew Certificate</b> toggle button on the VPN Authentication page is enabled, displays the date and time at which the next renewal check is scheduled.</li> <li>CSO updates the date and time for renewal every 24 hours.</li> <li>• If the <b>Auto Renew Certificate</b> toggle button on the VPN Authentication page is disabled, displays N/A (not applicable).</li> </ul>
Next CRL check time	Date and time at which the next CRL check is scheduled.
Last CRL update time	Date and time at which the CRL was last updated.

Table 126 on page 413 displays details of the certificates on the VPN Authentication page.

**Table 126: Details of certificates on the VPN Authentication page**

Field	Description
Certificate ID	ID of the PKI certificate.
Used In	Name of the site with which the PKI certificate is associated.
Device	Name of the device with which the PKI certificate is associated.

Table 126: Details of certificates on the VPN Authentication page (*continued*)

Field	Description
Status	<p>Displays the expiration status of the PKI certificate.</p> <ul style="list-style-type: none"> <li>• If the Auto Renew Certificate toggle button on the VPN Authentication page is enabled, the value in the Status field depends on the renewal period that you selected.</li> <li>• If the Auto Renew Certificate toggle button on the VPN Authentication page is disabled, the value in the Status field depends on the default expiration notification time for the certificate.</li> <li>• If the expiration date of the certificate does not meet the expiration notification time yet, the Status field displays –.</li> <li>• If the certificate has expired, the Status field displays <b>Expired</b>.</li> </ul>
Expires On	Date and time at which the PKI certificate expires.
Renewal Method	<p>Renewal method of the PKI certificate:</p> <ul style="list-style-type: none"> <li>• Auto</li> <li>• Manual</li> </ul>

# Managing Juniper Identity Management Service

## IN THIS CHAPTER

- [Juniper Identity Management Service Overview | 415](#)
- [About the Identity Management Page | 418](#)
- [Configuring CSO and JIMS Connection | 419](#)
- [Configuring JIMS for an SRX Device | 421](#)

## Juniper Identity Management Service Overview

### IN THIS SECTION

- [Access Token Query | 416](#)
- [Batch or Periodic Query | 416](#)
- [IP Address Query | 417](#)
- [User Mapping Query | 417](#)

Juniper Identity Management Service (JIMS) provides a robust and scalable user identification and IP address mapping implementation that includes endpoint context and machine ID. JIMS collects user identity information from different authentication sources, for SRX Series devices.

JIMS collects user identity information from a configured Active Directory and makes it available to SRX Series devices or vSRX instances. You can download and install Juniper Identity Management Service (JIMS), configure the CSO client on JIMS to obtain user identity information from the configured Active Directory, and use CSO and JIMS to manage user-based firewall policy intents on SRX Series devices and vSRX instances.

The SRX Series devices communicate with JIMS through HTTP or HTTPS connection. Use HTTP connection for debugging and HTTPS for deployments. SRX Series devices consist of primary and secondary JIMS configurations. These devices must always query the primary JIMS. The secondary JIMS is available as a

fall back option with limited resources. The secondary JIMS must be used when the HTTP GET query or a number of queries to the primary JIMS fails. SRX Series devices constantly scrutinize the failed primary JIMS and revert to the primary JIMS, once it is up and running.

When you request a JIMS report, the SRX Series device specifies the timestamp. JIMS forms an HTTPS response from the earliest known report since the requested timestamp. SRX Series devices request for the maximum number of reports to include in the response from JIMS. Along with the requested reports, JIMS always returns a cookie. In the subsequent requests to JIMS, SRX Series devices include cookies instead of timestamp to indicate the same context, same beginning timestamp, and to resume the same response from where it has stopped the previous time.

**NOTE:**

- IP and user mapping information might be inaccurate, if the user identities in JIMS are cleared, delayed, or missing.
- SRX firewall authentication can also push the authentication entries to JIMS.

The SRX Series device communicates with JIMS through HTTP or HTTPS messages to obtain the access token and query for user identities. The following different query modes are available and all queries can happen simultaneously.

### Access Token Query

JIMS requires OAuth 2.0 protocol to authenticate or authorize. The SRX Series device user query function requires an access token to query the JIMS server. The SRX Series device uses the client credentials such as client ID and client secret to obtain an access token. These parameters must be consistent with the API client configured on JIMS.

### Batch or Periodic Query

At the beginning, SRX Series device sends the batch queries to JIMS sequentially to obtain all the expected user identities. When there are no more entries in JIMS, SRX Series device periodically queries for the newly generated reports with the configured interval.

The timestamp is mentioned in the query to restart the response. The timestamp is expected in the query under the following circumstances:

- SRX Series device queries the JIMS server for the first time
- SRX Series device switches over to the secondary JIMS
- SRX Series device does the error recovery because of an internal error or upon receiving error response from JIMS



For all the other cases, SRX Series device provides the received cookie information in the query instead of a timestamp.

### IP Address Query

SRX Series device can provide another query to JIMS specifying the IP address, if it has missed the data for the existing IP address flow. If there are many IP address queries in the queue, SRX Series device can keep multiple concurrent HTTP or HTTPS connections with JIMS to increase the throughput. However, the number of concurrent connections are restricted to less than or equal to 20 connections to reduce the load on JIMS.

### User Mapping Query

SRX Series device can engage Captive Portal to obtain the user ID to authenticate the user. Once the user is authenticated, SRX Series device can issue another query to JIMS specifying the user ID and IP address to obtain user information. The firewall authentication uses the *https://<JIMS>/<query-api>/user/ip=<ip>&id=<id>&domain=<domain>* API to push an authentication success entry to JIMS with the user IP, user ID, and the domain. JIMS responds with the user information.

The difference between the IP address query and user query is that the IP address query does not have the user ID. Both these queries insert the user information to the internal cache of JIMS , and all SRX devices are updated with user information.

## RELATED DOCUMENTATION

---

[About the Identity Management Page | 418](#)

---

[Configuring CSO and JIMS Connection | 419](#)

---

[Configuring JIMS for an SRX Device | 421](#)

## About the Identity Management Page

To access this page, select **Administration > Identity Management**.


### NOTE:

- For information on system requirements for installing JIMS, see [System Requirements for Installing Juniper Identity Management Service](#)
- For information on installing JIMS on your Windows server, see [Installing Juniper Identity Management Service](#).

Use the **Identity Management** page to download and install JIMS, interface JIMS with CSO to obtain advanced user identity an active directory, and use CSO to push the JIMS configuration to SRX Series devices.

[Figure 20 on page 418](#) illustrates the connectivity between, CSO, JIMS, and an SRX Series device.

Figure 20: CSO-JIMS-SRX Connectivity Configuration

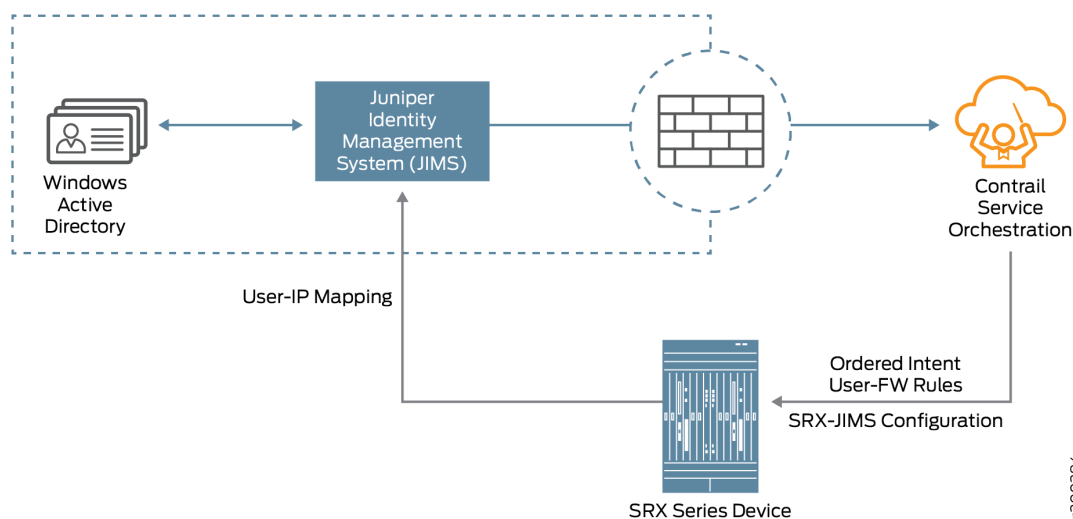

## Tasks You Can Perform

You can perform the following tasks from this page:

- Download the JIMS executable to your Windows server using **Download JIMS**. Run the JIMS executable to install JIMS on your Windows server machine. See [System Requirements for Installing Juniper Identity Management Service](#) and [Installing Juniper Identity Management Service](#).

After you have successfully installed JIMS, you can login into JIMS using your Windows user ID and password.

- Configure the connection between CSO and JIMS to import user and group lists from an Active Directory (AD) of your choice, using **JIMS to CSO**. See [“Configuring CSO and JIMS Connection” on page 419](#).
- Configure the connection between JIMS and an SRX Series device. See [“Configuring JIMS for an SRX Device” on page 421](#).

## RELATED DOCUMENTATION

[Juniper Identity Management Service Overview | 415](#)

[Configuring CSO and JIMS Connection | 419](#)

[Configuring JIMS for an SRX Device | 421](#)

[Preparing CSO Identity Management](#)

[JIMS v1.1 Feature Guide](#)

## Configuring CSO and JIMS Connection

Before you begin to configure the connection between CSO and JIMS, ensure that you have downloaded and installed JIMS. See [System Requirements for Installing Juniper Identity Management Service](#) and [Installing Juniper Identity Management Service](#).

To configure a connection between CSO and JIMS:

1. Select **Administration > Identity Management**.

The **Identity Management** page appears.

2. Click **JIMS-to-CSO Configuration** or the greater-than (>) symbol beside it.

The **JIMS-to-CSO Configuration** panel expands. The panel displays a system-generated user name which cannot be changed, the last updated time of the user identity information from Active Directory and the connection status of the JIMS server(s).

**NOTE:** If you have already configured a JIMS user account in CSO, the details of this connection is displayed in the **JIMS-to-CSO Configuration** panel.

3. The **Username** is auto-generated for each tenant. You will not be able to change it. Enter a password of your choice for your JIMS-to-CSO connection in the **Password** field.

**NOTE:** The password must contain a number, an upper-case letter, and a special character.

**NOTE:** The password you entered will appear encrypted. If you want to see the password that you entered as plain text, select **Show Password**.

4. Click **Save** to save your changes. The JIMS user credentials are saved.  
If you do not want to save your changes, click **Cancel**.
5. CSO and JIMS need to be connected in order for JIMS to push data to CSO. To set up this connection, you must configure the CSO client on JIMS, using the username and password that you created in the **JIMS-to-CSO Configuration** panel. For more information on configuring the CSO client on JIMS, see [Configuring the Connection to a CSO Client](#).
6. Configure an Active Directory (AD) as a data source in JIMS, see [Configuring the Connection to an Active Directory](#).

**NOTE:** After your JIMS user credentials are saved, the password field changes to the **Change Password** link.

If you want to change your password, click **Change Password**.

The **Change Password** page appears.

- Enter your new password in the **New Password** field and re-enter the same password in the **Confirm Password** field.
- Click **OK** to save the new password. The updated password is saved.

If you do not want to save your new password, click **Cancel** instead.

## RELATED DOCUMENTATION

## Configuring JIMS for an SRX Device

Configuring the connection between SRX Series devices to JIMS allows the JIMS server to send the IP address, username, and group relationship information to SRX Series devices through CSO. You can also configure a set of optional advanced settings for authentication timeout, domain filters, and choose to include or exclude user identity information in the communication between the JIMS server and the SRX Series device.

For every SRX Series device, you can configure the primary and secondary JIMS servers. The SRX Series device always queries the primary JIMS server. The secondary JIMS server is available as a fallback option with limited resources. The secondary JIMS server is used when a number of queries to the primary JIMS server fails. The SRX Series device constantly scrutinizes the failed primary JIMS server and reverts to the primary JIMS server, once it is up and running.

Before you begin, you need the following information:

- The IP address of the primary and secondary (optional) JIMS server.
- The client ID to obtain an OAuth token from the JIMS server for user queries.
- The client secret to obtain an OAuth token from the JIMS server for user queries.

To configure a connection between an SRX Series device and JIMS:

1. Select **Administration > Identity Management**.

The **Identity Management** page appears.

2. Click **SRX-to-JIMS Configuration** or the greater-than (>) symbol beside it.

The **SRX-to-JIMS Configuration** panel expands.

**NOTE:** If you have already configured JIMS for an SRX Series device, the details of this configuration is displayed in the **SRX-to-JIMS Configuration** panel.

3. Complete the configuration according to the guidelines provided in [Table 127 on page 422](#).

4. Click **Save** to save the changes. JIMS is now configured for an SRX device.

If you want to discard your changes, click **Cancel** instead.

Table 127 on page 422 provides guidelines on using the fields on the **SRX-to-JIMS Configuration** panel.

**Table 127: Fields on the SRX-to-JIMS Configuration Panel**

Field	Description
<b>Identity</b>	
IP Address	<p>Enter a valid IPv4 or IPv6 address of the primary JIMS server.</p> <p>SRX Series devices always query the primary JIMS to obtain the user identities.</p>
Secondary Identity	<p>Enable this option to use the secondary JIMS server as a fallback when the primary JIMS server fails. By default, this option is disabled.</p>
Secondary IP Address	<p>Enter a valid IPv4 or IPv6 address of the secondary JIMS server.</p> <p>The secondary JIMS is available as a fall back option with limited resources. Use the secondary JIMS when the HTTP GET query or number of queries to the primary JIMS fails.</p>
<b>Client Credentials</b>	
Client ID	<p>Enter the client ID that the SRX Series device provides to JIMS server as part of its authentication. The SRX Series device must authenticate itself with the JIMS server to obtain an access token that allows the it to query the JIMS server for user identity information. The client ID must be consistent with the CSO client ID or username configured on the JIMS server.</p>
Client Secret	<p>Enter the client secret that the SRX Series device provides to the JIMS server as part of its authentication. The client secret must be consistent with the CSO client secret or password configured on the JIMS server.</p>
<b>Advanced Settings</b>	
Authentication Entry Timeout	<p>Enter the timeout interval (in minutes) after which, the idle entries in the JIMS authentication table expire. The timeout interval begins from when the user authentication entry is added to the authentication table. This value can be between 10 and 1440 minutes, where a value of 0 means no timeout. The default value is 69 minutes.</p>
Include IP Address(es)	<p>The SRX Series device sends a query to JIMS for the user identity information only for the IP addresses present in the selected address group; JIMS responds with the requested user identity information.</p> <p>Click <b>Add New Address</b> to create a new IP address group, see <a href="#">“Creating Addresses or Address Groups” on page 786</a>.</p>

Table 127: Fields on the SRX-to-JIMS Configuration Panel (*continued*)

Field	Description
Exclude IP Address(es)	<p>The SRX Series device does not query JIMS for the user identity information for the excluded IP addresses present in the selected address group.</p> <p>Click <b>Add New Address</b> to create a new IP address group, see <a href="#">“Creating Addresses or Address Groups” on page 786</a>.</p>
Filter Domain(s)	<p>The SRX Series device sends a query to JIMS for the user identity information within the specified domains. Enter a comma-separated list of up to 25 domain names. A domain name can be an alphanumeric string of up to 64 characters that can also contain dashes, underscores, and dots.</p> <p>Example: example.net</p>

## RELATED DOCUMENTATION

---

[Juniper Identity Management Service Overview | 415](#)


---

[About the Identity Management Page | 418](#)


---

[Configuring CSO and JIMS Connection | 419](#)

# 4

PART

## Managing Policies, Profiles, and Proxies

---

Managing Firewall Policies | **425**

Managing UTM Profiles | **502**

Managing SLA Profiles and SD-WAN Policies | **551**

Managing NAT Policies | **609**

Managing IPS Signatures and Profiles | **646**

Managing SSL Proxies | **691**

Deploying Policies | **719**

Configuring Policies for SD-LAN | **725**

---



# Managing Firewall Policies

## IN THIS CHAPTER

- Firewall Policy Overview | 426
- About the Firewall Policy List Page | 428
- About the Firewall Policy Name Page | 429
- Adding a Firewall Policy | 430
- Editing and Deleting Firewall Policies | 432
- Adding Firewall Policy Intents | 433
- Editing, Cloning, and Deleting Firewall Policy Intents | 439
- Selecting Firewall Source | 441
- Selecting Firewall Destination | 445
- Firewall Policy Examples | 448
- Firewall Policy Schedules Overview | 488
- About the Firewall Policy Schedules Page | 489
- Creating Schedules | 490
- Editing, Cloning, and Deleting Schedules | 492
- Deploying Firewall Policies | 493
- About the Default Profiles for Unified Firewall Policy Page | 494
- Editing Default Settings for the Unified Firewall Policy | 496
- Importing Policies Overview | 498
- Importing Firewall Policies | 500

## Firewall Policy Overview

Contrail Service Orchestration (CSO) provides the ability to create, modify, and delete firewall policy intents associated with a firewall policy. Firewall policies are presented as *intent-based policies*. A firewall policy intent controls transit traffic within a context that is derived out of the end-points defined in the intent. Intent-based firewall policies can incorporate both transport layer (Layer 4) and application layer (Layer 7) firewall constructs in a single intent. The underlying system, automatically analyzes the intent, translates them into the set of rules the devices understand. The choice of sequence and the assignment happens implicitly based on the endpoints in the intent definition. The intent consist of source and destination endpoints. Endpoints could be applications (L7), sites or site groups, IP address/address-groups, services, or departments.

### NOTE:

- Starting from CSO Release 5.0.1, if a device (CPE or next-generation firewall) is running Junos OS Release 18.2R1 or later, a firewall policy acts as a unified firewall policy. In a unified firewall policy, dynamic application can be used as a match condition along with the existing match conditions. Therefore, a separate application firewall is not configured on the device to allow or block traffic to an application.

However, If the device is running a version earlier than Junos OS Release 18.2R1, the firewall policy does not act as a unified firewall policy and application firewalls continue to be configured on the device.

See [Unified Security Policies](#) for information about unified firewall policies.

Firewall policies provide security functionality by enforcing intents on traffic that passes through a device. Traffic is permitted or denied based on the action defined as the firewall policy intent.

A firewall policy provides the following features:

- Permits, rejects, or denies traffic based on the application in use.
- Identifies not only HTTP but also any application running on top of it, enabling you to properly enforce policies. For example, an application firewall intent could block HTTP traffic from Facebook but allow Web access to HTTP traffic from Microsoft Outlook.
- Provides the ability to enable advanced security protection by specifying one or more of the following:
  - Unified threat management (UTM) profile
  - SSL proxy profile
  - Intrusion prevention system (IPS) profile

In CSO, intents are categorized as zone-based intents and enterprise-based intents.

- Zone-based-intents are intents with zones as source and destination endpoints. The policies with zone-based intents can be applied to SD-WAN sites and next-generation firewall sites. The parameters that you can define for zone-based intents are listed in [Table 128 on page 427](#).

**Table 128: Zone-based intents**

Source End Points	Destination End points	Advanced Security Options	Supported Options
Zones	Zones	SSL Proxy Profile	Scheduler
Address	Address	UTM Profile	Logging
Users	Service (L4 port/protocol) Applications (Dynamic Applications)	IPS Profile	

**NOTE:** You cannot select a department or site as an endpoint in zone-based intents. The sites assigned to the policy are applicable for zone-based intents and are automatically considered for deployment.

- Enterprise-based intents are intents that contain sites, site-groups, departments, addresses as source and destination endpoints. Firewall policies with enterprise-based intents can be applied only to SD-WAN sites. The parameters that you can define for enterprise-based intents are listed in [Table 129 on page 427](#).

**Table 129: Enterprise-based intents**

Source Endpoints	Destination Endpoints	Advanced Security Options	Supported Options
Sites	Sites	UTM Profile	Scheduler
Site-groups	Site-groups	IPS Profile	Logging
Departments	Departments		
Addresses	Addresses		
Users	Users Service/Applications		

**NOTE:**

- Zones cannot be selected as source or destination endpoints for enterprise-based intents.
- Intents added in CSO Release 4.1 and earlier are now called enterprise-based-intents.

RELATED DOCUMENTATION

About the Firewall Policy Name Page   429
Firewall Policy Examples   448
Adding Firewall Policy Intents   433
Editing, Cloning, and Deleting Firewall Policy Intents   439

## About the Firewall Policy List Page

To access this page, select **Configuration > Firewall > Firewall Policy**.

Use this page to view and manage firewall policies associated with your site or site groups.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a firewall policy. See [“Adding a Firewall Policy” on page 430](#).
- Edit or delete a firewall policy. See [“Editing and Deleting Firewall Policies” on page 432](#).
- Import a firewall policy. See [“Importing Firewall Policies” on page 500](#).
- Deploy a firewall policy. See [“Deploying Firewall Policies” on page 493](#).
- Search for a firewall policy. Click the Search icon in the top right corner of the page to search for a firewall policy.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

### Field Descriptions

[Table 130 on page 428](#) provides guidelines on using the fields on the **Policy List** page.

Table 130: Fields on the Policy List Page

Field	Description
Policy Name	Name of the firewall policy.
Number of intents	Number of intents associated with the firewall policy.
Applied to	Sites to which the firewall policies are applied.

Table 130: Fields on the Policy List Page (continued)

Field	Description
Status	Status of firewall policy deployment.

RELATED DOCUMENTATION

| [Firewall Policy Overview](#) | 426

## About the Firewall Policy Name Page

To access this page, select **Configuration > Firewall > Firewall Policy** and click on a firewall policy.

Use this page to view and manage policy intents associated with your site or site groups. You can filter and sort this information to get a better understanding of what you want to configure.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a firewall policy intent. See [“Adding Firewall Policy Intents” on page 433](#).
- Modify, clone or delete firewall policy intents. See [“Editing, Cloning, and Deleting Firewall Policy Intents” on page 439](#).
- Deploy a firewall policy. See [“Deploying Policies” on page 723](#).

**NOTE:** An orange line is displayed against all undeployed firewall policy intents.

- Search for a firewall policy intent. Click the Search icon in the top right corner of the page to search for a firewall policy intent.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

- Show or hide columns. Click the **Show Hide Columns** icon at the top right corner of the page.
- View undeployed intents. Click the **Show Hide Columns** icon at the top right corner of the page and select **Undeployed Intent** under **Quick Filters**.

Field Descriptions

Table 131 on page 430 provides guidelines on using the fields on the **Firewall Policy** page.

Table 131: Fields on the Firewall Policy Page

Field	Description
Source	Source endpoint to which a firewall policy intent applies. A source endpoint can be addresses, sites, site groups, departments, users, or Internet (all in-bound traffic).
Destination	Destination endpoint to which a firewall policy intent applies. A destination endpoint can be addresses, services, sites, application signatures and groups, services and groups, or departments.
Options	Displays whether scheduling, logging, and UTM options are enabled for the firewall policy intent.
Total	Number of intents associated with the firewall policy.
Undeployed	Number of intents associated with the firewall policy that are either created new or updated, but are not yet deployed.

RELATED DOCUMENTATION

<a href="#">Firewall Policy Overview</a>	<a href="#">  426</a>
<a href="#">Adding Firewall Policy Intents</a>	<a href="#">  433</a>
<a href="#">Firewall Policy Examples</a>	<a href="#">  448</a>
<a href="#">Editing, Cloning, and Deleting Firewall Policy Intents</a>	<a href="#">  439</a>
<a href="#">About the Deployments Page</a>	<a href="#">  720</a>
<a href="#">Deploying Policies</a>	<a href="#">  723</a>

Adding a Firewall Policy

A firewall policy enforces rules for transit traffic, in terms of what traffic can pass through the firewall, and the actions that need to take place on traffic as it passes through the firewall.

Use this page to add a firewall policy and assign it to one or more sites.

**NOTE:** A single policy can have both enterprise based intents and zone based intents for SD-WAN sites and next generation firewall sites.

To add a firewall policy:

1. Select **Configuration > Firewall > Firewall Policy**,  
The Firewall Policy page appears.
2. Click the plus icon (+).  
The Add Firewall Policy page appears.
3. Complete the configuration settings according to the guidelines provided in [Table 132 on page 431](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.  
The new firewall policy is created and a confirmation message is displayed.

**Table 132: Fields on the Add Firewall Policy Page**

Field	Description
Name	Enter a unique string of alphanumeric characters that can include spaces and some special characters.  The maximum length is 255 characters.
Description	Enter a description for the policy; the maximum length is 255 characters.
All Sites	Select the check box to apply the firewall policy to all sites.
Select Sites	Select one or more sites to which the policy must be applied.  Select the sites from the <b>Available</b> column and click the right-arrow to move the sites to the <b>Selected</b> column.

## Editing and Deleting Firewall Policies

### IN THIS SECTION

- [Editing Firewall Policies | 432](#)
- [Deleting Firewall Policies | 432](#)

You can edit and delete firewall policies from the **Firewall Policy** page.

### Editing Firewall Policies

**NOTE:** You cannot modify the firewall policy name.

To modify the parameters configured for a firewall policy:

1. Select **Configuration > Firewall > Firewall Policy**.

The **Firewall Policy** page appears, displaying the list of firewall policies.

2. Hover over the firewall policy that you want to edit, and then click the ... icon that appears on the right side of the page.
3. Click **Edit**.

The Edit Firewall Policy page appears displaying the same options that you entered while creating the firewall policy.

4. Modify the parameters following the guidelines provided in ["Adding a Firewall Policy" on page 430](#).
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **Save**, the modified policy appears on the **Firewall Policy** page.

### Deleting Firewall Policies

To delete a firewall policy:

1. Select **Configuration > Firewall > Firewall Policy**.



The **Firewall Policy** page appears, displaying the list of firewall policies.

2. Select the firewall policy that you want to delete and then click the ... icon that appears on the right side of the policy and click **Remove**.

Alternatively, you can select the firewall policy and click the Delete icon.

A message requesting confirmation for the deletion appears.

3. Click **Yes** to delete the selected firewall policy. If you want to discard your changes, click **Cancel** instead.

If you click **Yes**, the selected policy is deleted from the Firewall Policy page.

## RELATED DOCUMENTATION

| [Adding a Firewall Policy](#) | 430

## Adding Firewall Policy Intents

Use this page to add a firewall intent that controls transit traffic within a context. The traffic is classified by matching its source and destination zones, the source and destination addresses, and the application that the traffic carries in its protocol headers with the policy database.

You can also enable advanced security protection by specifying one or more of the following:

- Unified threat management (UTM) profile
- SSL proxy profile
- Intrusion prevention system (IPS) profile

To configure a firewall policy intent:

1. Select **Configuration > Firewall > Firewall Policy**.

The Firewall Policy page appears.

2. Click the firewall policy to which you want to add the intent.

The *Firewall-Policy-Name* page appears.

3. Click the add icon (+).

The option to create firewall policy intent appears inline on the *Firewall-Policy-Name* page.

4. Complete the configuration according to the guidelines provided in [Table 133 on page 434](#).
5. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **Save**, a new firewall policy intent with the provided configuration is saved and a confirmation message is displayed. Based on the source and destination end points, the intents are categorized as zone-based intents and enterprise-based intents.

**NOTE:** After the policy intent is created, you must deploy the policy to ensure that the changes take effect on the applicable sites, departments, or applications. When a firewall policy intent is created, the Undeployed field is incremented by one indicating that intents are pending deployment.

**Table 133: Fields on the <Firewall-Policy-Name> Page**

Field	Description
<b>General Information</b>	
<b>Name</b>	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. If you do not enter a name, the intent is saved with a default name assigned by CSO.
<b>Description</b>	Enter a description for the policy intent; maximum length is 1024 characters.

Table 133: Fields on the &lt;Firewall-Policy-Name&gt; Page (continued)

Field	Description
<b>Select Schedule</b>	<p>Policy schedules enable you to define when a policy is active, and thus are an implicit match criterion. You can define the day of the week and the time of the day when the policy is active. For instance, you can define a security policy that opens or closes access based on business hours. Select a pre-saved schedule and the schedule options are populated with the selected schedule's data.</p> <p>You can add a schedule from the <b>End Points</b> panel, by selecting the schedule and clicking on the check mark icon (✓).</p> <p>You can also create new schedules and then associate the schedule to your firewall policy.</p> <p>To create a new schedule and then add it to a firewall policy:</p> <ol style="list-style-type: none"> <li>1. Click <b>Select Schedule</b>.</li> <li>2. Click <b>Add schedule</b>. The <b>Create Schedules</b> page appears.</li> <li>3. Create a new schedule. See <a href="#">“Creating Schedules” on page 490</a>. The new schedule appears in the <b>End Points</b> tab, under <b>Schedules</b>.</li> <li>4. Select the schedule and click on the add icon (+) to add it to the firewall policy.</li> </ol>
<b>Logging</b>	<p>Click the toggle button to enable logging; by default, logging is disabled. You can see the logged firewall events in the <b>Firewall Events</b> page by using <b>Monitor &gt; Security Events &gt; Firewall Events</b>.</p> <p>For more information, see <a href="#">“About the Firewall Events Page” on page 867</a>.</p>
<i>Identify the traffic that the intent applies to</i>	
<b>Source</b>	<p>Click the add icon (+) to select the source end points on which the firewall policy intent applies, from the displayed list of addresses, departments, sites, site groups, users, zones, or the Internet. You can also select a source end point using the methods described in <a href="#">“Selecting Firewall Source” on page 441</a>.</p>

Table 133: Fields on the <Firewall-Policy-Name> Page (*continued*)

Field	Description
<b>Destination</b>	Click the add icon (+) to select the destination end points on which the firewall policy intent applies, from the displayed list of addresses, applications, application groups, departments, services, sites, site groups, zones or the Internet. You can also select a destination end point using the methods described in <a href="#">“Selecting Firewall Destination” on page 445</a> .
<b>Select Action</b>	<p>Click the add icon (+) to choose whether you want to permit, deny, or reject traffic between the source and destination.</p> <ul style="list-style-type: none"> <li>• <b>Allow</b>—Device permits traffic using the type of firewall authentication you applied to the policy.</li> <li>• <b>Deny</b>—Device silently drops all packets for the session and does not send any active control messages such as TCP Resets or ICMP unreachable.</li> <li>• <b>Reject</b>—Device sends a TCP reset if the protocol is TCP, and device sends an ICMP reset if the protocols are UDP, ICMP, or any other IP protocol. This option is useful when dealing with trusted resources so that applications do not waste time waiting for timeouts and instead get the active message.</li> </ul>
<b>Advanced Security</b>	<p><b>NOTE:</b> This field is enabled only if you either select <b>Allow</b> for the action or if you select a zone as a source and destination.</p> <ul style="list-style-type: none"> <li>• <b>UTM Profile</b>—When you set the action to <b>Allow</b>, you can specify a UTM profile by selecting a profile from the list (under <b>UTM Profiles [UTM]</b>). You specify a UTM profile for protection against multiple threat types including spam and malware, and control access to unapproved websites and content. You can add a new UTM profile by clicking + in the End Points pane and selecting <b>UTM Profiles</b>. See <a href="#">“Creating UTM Profiles” on page 509</a>.</li> <li>• <b>IPS Profile</b>—When you set the action to <b>Allow</b>, you can specify an IPS profile by selecting a profile from the list (under <b>IPS Profiles [IPS]</b>). You specify an IPS profile to monitor and prevent intrusions.</li> <li>• <b>SSL Proxy Profile</b>—When you configure a zone as part of the source and the destination, you can specify an SSL proxy profile by selecting a profile from the list (under <b>SSL Profiles [SSLP]</b>). You add an SSL proxy profile to ensure the secure transmission of data between a client and a server through a combination of privacy, authentication, confidentiality, and data integrity. You can also add a new SSL proxy profile by clicking + in the End Points pane and selecting <b>SSL Proxy Profile</b>. See <a href="#">“Creating SSL Forward Proxy Profiles” on page 710</a>.</li> </ul>

*Add source and destination end points*

Table 133: Fields on the <Firewall-Policy-Name> Page (*continued*)

Field	Description
End Points	

Table 133: Fields on the &lt;Firewall-Policy-Name&gt; Page (continued)

Field	Description
	<p>To add an end point to the source or destination:</p> <ol style="list-style-type: none"> <li>Click on <b>Select Source</b> or <b>Select Destination</b> text box and then click the lesser-than icon on the right side of the page to open the <b>End Points</b> panel.</li> </ol> <p>The <b>End Points</b> panel displays the end points relevant to the source or destination based on your selection.</p> <ul style="list-style-type: none"> <li>End points from addresses, departments, users, zones, and sites are displayed for source.</li> </ul> <p><b>NOTE:</b> If JIMS is not configured for CSO, users will not be listed in the <b>End Points</b> panel. Instead you will be provided with an option to import users through the <b>Administration &gt; Identity Management</b> page. To import users, click <b>Set Up</b> and follow the steps provided in <a href="#">“About the Identity Management Page” on page 418</a>.</p> <ul style="list-style-type: none"> <li>End points from addresses, applications, departments, services, zones, and sites are displayed for destination.</li> </ul> <p><b>NOTE:</b> You can also search for a specific end point using the search option.</p> <ol style="list-style-type: none"> <li>(Optional) Click on the edit icon (pencil symbol) to modify an end point.</li> <li>(Optional) Click on the details icon on the right of the end point, to view more information about a source or destination end point.</li> <li>Select the end point you want to add and click on the check mark icon (✓) to add it the source or destination.</li> </ol> <p>The selected end point is added to the source or destination.</p> <p>To add new source and destination end points:</p> <ol style="list-style-type: none"> <li>Click the less-than icon (&lt;) on the right side of the page, to open the <b>End Points</b> panel.</li> <li>Click on the add icon (+) on the top right of the <b>End Points</b> panel.</li> </ol> <p>A list of end points that you can add is displayed.</p> <ol style="list-style-type: none"> <li>Select the end point you want to add.</li> </ol> <p>You can add the following end points:</p> <ul style="list-style-type: none"> <li>Address or address group. See <a href="#">“Creating Addresses or Address Groups” on</a></li> </ul>

Table 133: Fields on the <Firewall-Policy-Name> Page (continued)

Field	Description
	<p><a href="#">page 786</a>.</p> <ul style="list-style-type: none"><li>• Site or site group. See <a href="#">“Creating Site Groups” on page 226</a>.</li><li>• Department. See <a href="#">“Adding a Department” on page 816</a>.</li><li>• Service or service group. See <a href="#">“Creating Services and Service Groups” on page 793</a>.</li><li>• Application signature or application signature group. See <a href="#">“Adding Application Signatures” on page 806</a>, and <a href="#">“Adding Application Signature Groups” on page 813</a>.</li><li>• Create a schedule. See <a href="#">“Creating Schedules” on page 490</a>.</li></ul> <p>4. Click <b>Save</b> to add the new end point.</p> <p>The created end point is listed in the <b>End Points</b> panel.</p> <p>5. Select the end point you want to add to the source or destination, and click on the check mark icon (✓).</p> <p>The end point is added to the source or destination.</p>

RELATED DOCUMENTATION

Firewall Policy Overview	426
About the Firewall Policy Name Page	429
Firewall Policy Examples	448
Editing, Cloning, and Deleting Firewall Policy Intents	439

Editing, Cloning, and Deleting Firewall Policy Intents

IN THIS SECTION

- Editing Firewall Policy Intents | 440
- Cloning Firewall Policy Intents | 440
- Deleting Firewall Policy Intents | 441

You can edit, clone, and delete firewall policy intents from the **Firewall Policy** page.

### Editing Firewall Policy Intents

To modify the parameters configured for a firewall policy intent:

1. Select **Configuration > Firewall > Firewall Policy**.

The **Firewall Policy** page appears, displaying the list of firewall policies.

2. Click the firewall policy for which you want to edit the firewall policy intents.

The firewall policy intents are displayed in the Firewall Policy page.

3. Hover over the firewall policy intent that you want to edit, and then click the ... icon that appears on the right side of the intent. Click **Edit**.

The **Firewall Policy** page displays the same options as those that appear when you create a new firewall policy intent.

4. Modify the parameters following the guidelines provided in [“Adding Firewall Policy Intents” on page 433](#).

5. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **Save**, the modified intent appears on the **Firewall Policy** page.

### Cloning Firewall Policy Intents

To clone a firewall policy intent:

1. Select **Configuration > Firewall > Firewall Policy**.

The **Firewall Policy** page appears, displaying the intents associated with the policy.

2. Click the firewall policy for which you want to clone the firewall policy intents.

The firewall policy intents are displayed in the Firewall Policy page.

3. Hover over the firewall policy intent that you want to clone, and then click the ... icon that appears on the right side of the intent. Click **Clone**.

The **Firewall Policy** page displays the same options as those that appear when you create a new firewall policy intent. Update the cloned intent as required.

4. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.



If you click **Save**, the cloned intent is added to the firewall policy and appears on the **Firewall Policy** page.

## Deleting Firewall Policy Intents

To delete a firewall policy intent:

1. Select **Configuration > Firewall > Firewall Policy**.

The **Firewall Policy** page appears, displaying the intents associated with the policy.

2. Click the firewall policy for which you want to delete the firewall policy intent.

The firewall policy intents are displayed in the Firewall Policy page.

3. Select the firewall policy intent you want to delete, and then click the ... icon that appears on the right side of the intent. Click **Delete**.

An alert message appears, verifying that you want to delete the selected intent.

4. Click **Yes** to delete the selected intent. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected intent is deleted from the policy.

## RELATED DOCUMENTATION

---

[Firewall Policy Overview | 426](#)

---

[About the Firewall Policy Name Page | 429](#)

---

[Firewall Policy Examples | 448](#)

---

[Adding Firewall Policy Intents | 433](#)

## Selecting Firewall Source

### IN THIS SECTION

- [Adding an End Point as Firewall Source | 442](#)
- [Selecting Firewall Source Using Abbreviations | 443](#)
- [Selecting a Firewall Source from the End Points Panel | 443](#)

- Creating and Selecting a Firewall Source from the End Points Panel | 444
- Creating Addresses from Source | 444

The following procedures provides various methods using which you can choose a firewall source end point:

### Adding an End Point as Firewall Source

View and select the source end point from the complete list of addresses, sites, site groups, zones, or departments. You can also select the **Internet** option which denotes all in-coming traffic from outside your network.

**NOTE:** When you select **Any** address as a source, it implies traffic originating within the network.

**NOTE:**

The following conditions apply when you select **Internet** as a source end point:

- When **Internet** is not chosen as a source end point, it is implied that the traffic is originating within the network.
- If you chose **Internet** as a source, you cannot add other sites, site groups or departments as a source end point along with **Internet**.
- If you chose **Internet** as a source, the destination end point must be a site, site group, or department.

1. Click the **Source** field. A list of relevant endpoints are displayed.
2. Click on **View more results** link provided at the bottom of the source end points. The complete list of addresses, departments, users, sites, site groups, and zones is displayed in the **End Points** panel on the right.
3. (Optional) Click the edit icon to edit the address, users, department, or site group end point. You cannot edit a site end point.
4. Click check mark icon (✓) to select the end point as a source.

## Selecting Firewall Source Using Abbreviations

Enter an abbreviation in the **Source** field to select the source end point from a filtered list of source endpoints.

- To view a filtered list of addresses, enter **ADDR** or **addr**.
- To view a filtered list of departments, enter **DEPT** or **dept**.
- To view a filtered list of sites, enter **SITE** or **site**.
- To view a filtered list of site groups, enter **STGP** or **stgp**.
- To view a filtered list of user ids, enter **USER** or **user**.
- To view a filtered list of zones, enter **ZONE** or **zone**.

Click the endpoints in the filtered list to select them. You can also select the end point from the complete list of addresses, departments, users, sites, and site groups. See [“Adding an End Point as Firewall Source” on page 442](#).

## Selecting a Firewall Source from the End Points Panel

You can select a firewall source end point from the **End Points** panel. Alternately, you can create a new firewall source end point from the **End Points** panel, see [“Creating and Selecting a Firewall Source from the End Points Panel” on page 444](#)

To select an firewall source end point from the from the **End Points** panel:

1. Click on the **Source** field.
2. Click the lesser-than icon (<) on the right.

The **End Points** panel appears, displaying the list of available addresses, departments, users, sites, site groups, and zones.

3. (Optional) To view more information about a source end point, click the details icon on the right of the end point. To edit the source end point, click the edit icon (pencil symbol) on the right of the end point.

**NOTE:** You can only edit or view details of a source end point if these options appear on right side of the end point when you hover over it. Not all endpoints provide these options.

4. Click the check mark icon (✓) to add the end point as a source.

## Creating and Selecting a Firewall Source from the End Points Panel

To create an new source end point from the **End Points** panel:

1. Click the add icon (+) on the top right of the panel and select the type of end point you want to create, among the options provided.

Based on the option you select, the respective page appears. Fill in the required details to create a new end point.

- To create a new address, see [“Creating Addresses or Address Groups” on page 786](#).
- To create a site or site group, see [“Creating Site Groups” on page 226](#).

After the end point is created, it appears in the **End Points** panel.

2. Click the check mark icon (✓) to add the new end point as a source.

## Creating Addresses from Source

You can use one of the following ways to create a new address from the **Source** field and use the newly created address as a source end point:

- Type the address directly in the **Source** field. If the address is valid, it is created immediately and added as a source end point.
- Create an address from the **Source** field, using the following steps:
  1. In the **Source** field, type **addr**. The **Add new address** link appears at the bottom of the list of addresses.
  2. Click **Add new address** to create a new address.

The **Create Addresses** page appears.

3. Configure the new address. See [“Creating Addresses or Address Groups” on page 786](#).
4. Click **Save** to save the new address.

The new address is created, and will be listed as an option for the source. Select the new address to add it to the source.

## RELATED DOCUMENTATION

[Selecting Firewall Destination | 445](#)

[Adding Firewall Policy Intents | 433](#)

[Firewall Policy Overview | 426](#)[About the Firewall Policy Name Page | 429](#)[Editing, Cloning, and Deleting Firewall Policy Intents | 439](#)

## Selecting Firewall Destination

### IN THIS SECTION

- [Adding an End Point as Firewall Destination | 445](#)
- [Selecting Firewall Destination Using Abbreviations | 446](#)
- [Selecting a Firewall Destination from the End Points Panel | 446](#)
- [Creating and Selecting a Firewall Destination from the End Points Panel | 447](#)
- [Creating Addresses from Destination | 447](#)

The following procedures provides various methods using which you can choose a firewall destination end point:

### Adding an End Point as Firewall Destination

View and select the end point from the complete list of addresses, applications, application groups, departments, services, sites, site groups, or zones.

#### NOTE:

- When you choose **Any** address or service as the destination, it implies that traffic is flowing outside the network unless a site or department is mentioned explicitly.
- Unless you choose a site, site group, or department as a destination end point, it is implied the traffic will flow outside your network.

1. Click on **Destination**. A list of relevant end points are displayed.
2. Click on **View more results** link provided at the bottom of the destination end points. The complete list of addresses, departments, sites, and site groups is displayed in the **End Points** panel on the right.

3. (Optional) Click the edit icon to edit the address, department, or site group end point. You cannot edit a site end point.
4. Click check mark icon (✓) to select the end point as a destination.

### Selecting Firewall Destination Using Abbreviations

Enter an abbreviation in the **Destination** field to select the destination end point from a filtered list of destination endpoints.

- To view a filtered list of addresses, enter **ADDR** or **addr**.
- To view a filtered list of applications or application groups, enter **APPS** or **apps**.
- To view a filtered list of departments, enter **DEPT** or **dept**.
- To view a filtered list of services, enter **SVCS** or **svcs**.
- To view a filtered list of sites, enter **SITE** or **site**.
- To view a filtered list of site groups, enter **STGP** or **stgp**.
- To view a filtered list of zones, enter **ZONE** or **zone**.

Click the endpoints in the filtered list to select them. You can also select the end point from the complete list of addresses, departments, sites, and site groups. See [“Adding an End Point as Firewall Destination” on page 445](#).

### Selecting a Firewall Destination from the End Points Panel

You can select a firewall destination end point from the **End Points** panel. Alternately, you can create a new firewall destination end point from the **End Points** panel, see [“Creating and Selecting a Firewall Destination from the End Points Panel” on page 447](#).

To select an firewall destination end point from the from the **End Points** panel:

1. Click on the **Destination** field.
2. Click the lesser-than icon (<) on the right.

The **End Points** panel appears, displaying the list of available addresses, applications, application groups, departments, services, sites, site groups, or zones.

3. (Optional) To view more information about a destination end point, click the details icon on the right of the end point. To edit the destination end point, click the edit icon (pencil symbol) on the right of the end point.

**NOTE:** You can only edit or view details of a destination end point if these options appear on right side of the end point when you hover over it. Not all endpoints provide these options.

4. Click the check mark icon (✓) to add the end point as a destination.

## Creating and Selecting a Firewall Destination from the End Points Panel

To create an new destination end point from the **End Points** panel:

1. Click the add icon (+) on the top right of the panel and select the type of end point you want to create, among the options provided.

Based on the option you select, the respective page appears. Fill in the required details to add a new end point.

- To add a new address, see [“Creating Addresses or Address Groups” on page 786](#).
- To add a site or site group department, see [“Creating Site Groups” on page 226](#).
- To add an application or application group, see [“Adding Application Signatures” on page 806](#) and [“Adding Application Signature Groups” on page 813](#).
- To add a new service, see [“Creating Services and Service Groups” on page 793](#).
- To add an SSL proxy profile, see [“Creating SSL Forward Proxy Profiles” on page 710](#).
- To add an UTM Profile, see [“Creating UTM Profiles” on page 509](#).

After the end point is created, it appears in the **Endpoints** panel.

2. Click the check mark icon (✓) to add the new end point as a destination.

## Creating Addresses from Destination

You can use one of the following ways to create a new address from the **Destination** and use the newly created address as a destination end point:

- Type the address directly in the **Destination** field. If the address is valid, it is created immediately and added as a destination end point.

- Create an address from the **Destination** field, using the following steps:
  1. In the **Destination** field, type **addr**. The **Add new address** link appears at the bottom of the list of addresses.
  2. Click **Add new address** to create a new address.  
The **Create Addresses** page appears.
  3. Configure the new address. See [“Creating Addresses or Address Groups” on page 786](#).
  4. Click **Save** to save the new address.  
The new address is created, and will be listed as an option for the destination. Select the new address to add it to the destination.

## RELATED DOCUMENTATION

[Adding Firewall Policy Intents | 433](#)

[Firewall Policy Overview | 426](#)

[About the Firewall Policy Name Page | 429](#)

[Editing, Cloning, and Deleting Firewall Policy Intents | 439](#)

## Firewall Policy Examples

### IN THIS SECTION

- [Example 1: Firewall Policy that Permits Traffic from Departments in Site A to the Departments in Site B | 450](#)
- [Example 2: Firewall Policy that Permits Internet Access for all Departments in Site A and Site B | 452](#)
- [Example 3: Firewall Policy that Permits Any Public Internet Address to Access the Sales Department in Site B | 455](#)
- [Example 4: Firewall Policy that Permits Social Media Access to all Departments in Site A | 456](#)
- [Example 5: Firewall Policy that Controls Access to Specific Applications for Various Departments | 458](#)
- [Example 6: Firewall Policy that Denies Access to Social Networking Sites | 466](#)
- [Example 7: Firewall Policy that Controls Access to an Address over the Internet \(HTTP\) | 469](#)
- [Example 8: Firewall Policy that Permits or Denies the Use of HTTP or FTP as a Service | 475](#)



- Example 9: Firewall Policy that Denies Access to BitTorrent to the Finance Departments across both Site A and Site B | 477
- Example 10: Firewall Policy that Allows Access to Facebook for Users in User Group A | 480
- Example 11: Firewall Policy that Permits User B in Site A Access to YouTube with UTM Enabled | 484
- Example 12: Firewall Policy that blocks access to Internet and allow access to Google Drive. | 487


This topic provides information on how firewall policy intents that you define as part of your firewall policy is handled by Contrail Service Orchestration (CSO), using various examples. Each of the examples provide detailed explanation about how a firewall policy intent defined through the CSO GUI resolves into configuration in the system.

**NOTE:** For more information, see [“Firewall Policy Overview” on page 426](#) and [“Adding Firewall Policy Intents” on page 433](#).

For easier understanding, all the examples have been defined to use the topology in illustrated in [Figure 21 on page 449](#). In this topology, there are two sites—site A and site B. Each site has two departments defined as follows:

- Site A - IT (LAN segment LS1) and Finance (LAN segment LS2).
- Site B - Finance (LAN segment LS3) and Sales (LAN segment LS4).

**Figure 21: Topology Diagram**

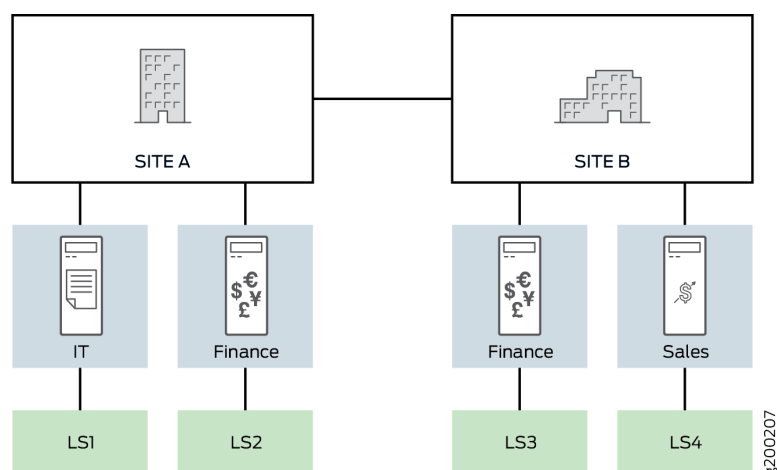

The following definitions are applicable to all the examples:

- While creating a site, you can designate some of the WAN interfaces to be breakout interfaces. These WAN interfaces can carry both site-to-site traffic (through the trust zone) and breakout traffic (through the untrust zone). The WAN interfaces can also be designated exclusively for carrying breakout traffic.
- A trust zone refers to the overlay interface that contains all the GRE tunnel interfaces, such as gr-0/0/0.1, gr-0/0/0.2, and IPsec interfaces, such as st0.1, st0.2 created between the sites.
- An untrust zone refers to the underlay interfaces (underlying physical interfaces) such as ge-0/0/0, ge-0/0/1.
- If you select an address or a service as a destination endpoint, CSO considers it as an address or service hosted on the Internet, unless the selected address or service is associated with a site.
- [Table 134 on page 450](#) captures the addresses associated with the LAN segments used in the topology illustrated in [Figure 21 on page 449](#).

**Table 134: LAN Segments Definition**

Site	Department	LAN Segment	LAN Segment Address
site A	IT	LS1	192.0.2.0/24
site A	Finance	LS2	192.168.1.0/24
site B	Finance	LS3	198.51.100.0/24
site B	Sales	LS4	203.0.113.0/24

The following examples help you understand the creation of intent-based firewall policies for various traffic scenarios across sources and destinations.

### **Example 1: Firewall Policy that Permits Traffic from Departments in Site A to the Departments in Site B**

Define a firewall policy that permits traffic from the departments in site A to the departments in site B.

[Table 135 on page 450](#) shows the firewall policy intent that is defined:

**Table 135: Firewall Policy Intent Definition for Example - 1**

Source	Destination	Action
site A	site B	Permit

[Table 136 on page 451](#) shows how this firewall policy intent is resolved:

Table 136: Firewall Policy Intent Resolution for Example - 1

Site	Source Department	Source Address	Zone	Destination Address	Service	Intent Created
site A	Finance	[LS2]	Trust	[LS3, LS4]	Any	Intent 1__0
	IT	[LS1]	Trust	[LS3, LS4]	Any	Intent 1__1
site B	Trust	[LS3, LS4]	Sales	[LS2]	Any	Intent 1__0
	Trust	[LS3, LS4]	Finance	[LS1]	Any	Intent 1__1

### Configuration Output Sample

Sample of configuration that permits traffic from departments in site A to the departments in site B.

The hierarchy level for the following configuration sample is [\[edit security policies\]](#).

```

from-zone FINANCE to-zone trust {
  policy Intent_1__0 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address [ls-198.51.100.0/24-SP50-L3,
ls-203.0.113.0/24-SP50-L4];
      application any;
    }
    then {
      permit;
    }
  }
}

from-zone IT to-zone trust {
  policy Intent_1__1 {
    match {
      source-address ls-192.0.2.0/24-S42-L1;
      destination-address [ls-198.51.100.0/24-SP50-L3,
ls-203.0.113.0/24-SP50-L4];
      application any;
    }
    then {
      permit;
    }
  }
}

```

```

    }
  }
}

```

Sample of configuration that permits traffic from departments in site B to the departments in site A.

The hierarchy level for the following configuration sample is [\[edit security policies\]](#).

```

from-zone trust to-zone SALES {
  policy Intent_1__0 {
    match {
      source-address [ls-198.51.100.0/24-SP50-L3,
        ls-203.0.113.0/24-SP50-L4];
      destination-address ls-192.0.2.0/24-S42-L1;
      application any;
    }
    then {
      permit;
    }
  }
}

from-zone trust to-zone FINANCE {
  policy Intent_1__1 {
    match {
      source-address [ls-198.51.100.0/24-SP50-L3,
        ls-203.0.113.0/24-SP50-L4];
      destination-address ls-192.168.1.0/24-SP50-L2;
      application any;
    }
    then {
      permit;
    }
  }
}

```

## Example 2: Firewall Policy that Permits Internet Access for all Departments in Site A and Site B

Define a firewall policy that permits all the department in site A and site B access to Internet.

[Table 137 on page 453](#) shows the firewall policy intent that is defined:

Table 137: Firewall Policy Intent Definition for Example - 2

Source	Destination	Action
site A	http, https, icmp-ping, dns	Permit
site B	http, https, icmp-ping, dns	Permit

Table 138 on page 453 shows how this firewall policy intent is resolved:

Table 138: Firewall Policy Intent Resolution for Example - 2

Site	Source Department	Source Address	Zone	Destination Address	Service	Intent Created
site A	Finance	[LS2]	Untrust	Any	http, https, icmp-ping, dns	Intent 1__0
	IT	[LSI]	Untrust	Any	http, https, icmp-ping, dns	Intent 1__1
site B	Sales	[LS4]	Untrust	Any	http, https, icmp-ping, dns	Intent 1__0
	Finance	[LS3]	Untrust	Any	http, https, icmp-ping, dns	Intent 1__1

### Configuration Output Sample

Sample of configuration that permits Internet access to all departments in site A.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
  policy Intent_1__0 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address any;
    }
  }
}

```

```

        application [junos-http junos-dns-tcp junos-https
                    junos-icmp-ping];
    }
    then {
        permit;
    }
}
}
from-zone IT to-zone untrust {
    policy Intent_1__1 {
        match {
            source-address ls-192.0.2.0/24-S42-L1;
            destination-address any;
            application [junos-http junos-dns-tcp junos-https
                    junos-icmp-ping];
        }
        then {
            permit;
        }
    }
}
policy-rematch;

```

Sample of configuration that permits Internet access to all departments in site B.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Sales to-zone untrust {
    policy Intent_1__0 {
        match {
            source-address ls-203.0.113.0/24-SP50-L4;
            destination-address any;
            application [junos-http junos-dns-tcp junos-https
                    junos-icmp-ping];
        }
        then {
            permit;
        }
    }
}
from-zone Finance1 to-zone untrust {

```

```

    policy Intent_1__1 {
        match {
            source-address ls-198.51.100.0/24-SP50-L3;
            destination-address any;
            application [junos-http junos-dns-tcp junos-https
                        junos-icmp-ping];
        }
        then {
            permit;
        }
    }
}
policy-rematch;
```

**Example 3: Firewall Policy that Permits Any Public Internet Address to Access the Sales Department in Site B**

Define a firewall policy that permits any public Internet address access to a sales application hosted by the Sales department in site B.

**NOTE:** For this example, breakout is not enabled and MPLS link type is used.

Table 139 on page 455 shows the firewall policy intent that is defined:

**Table 139: Firewall Policy Intent Definition for Example - 3**

Source	Destination	Action
Internet	Sales, site B	Permit

Table 140 on page 455 shows how this firewall policy intent is resolved:

**Table 140: Firewall Policy Intent Resolution for Example - 3**

Source Address	Zone	Destination Address	Service	Intent Created
Any public Internet address	Trust to Sales (No breakout)	[LS4]	Any	Intent 1__0

**Configuration Output Example**

Sample of configuration that permits any public Internet address to access the Sales department in site B.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone untrust to-zone Sales {
  policy Intent_1__0 {
    match {
      source-address any;
      destination-address ls-203.0.113.0/24-SP50-L4;
      application any;
    }
    then {
      permit;
    }
  }
}

```

#### Example 4: Firewall Policy that Permits Social Media Access to all Departments in Site A

Define a firewall policy that permits all departments in site A access to Facebook.

[Table 141 on page 456](#) shows the firewall policy intent that is defined:

**Table 141: Firewall Policy Intent Definition for Example - 4**

Source	Destination	Action
site A	Facebook	Permit

[Table 142 on page 456](#) shows how this firewall policy intent is resolved:

**Table 142: Firewall Policy Intent Resolution for Example - 4**

Site	Source Address	Zone	Destination Address	Service	Intent Created	Application Firewall Profile
site A	[LS2]	Untrust	Facebook	Any	Intent 1__0	AppFwProfile_0
site A	[LS1]	Untrust	Facebook	Any	Intent 1__1	AppFwProfile_0

#### Configuration Output Example



Sample of configuration that controls access to Facebook for site A.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
  policy Intent_1__0 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
}

from-zone IT to-zone untrust {
  policy Intent_1__1 {
    match {
      source-address ls-192.0.2.0/24-S42-L1;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
}

policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

application-firewall {
  rule-sets AppFwProfile_0 {
    rule rule-1 {
      match {
        dynamic-application junos:FACEBOOK-APP;
        ssl-encryption any;
      }
      then {
        permit;
      }
    }
    default-rule {
      deny;
    }
  }
}

```

### Example 5: Firewall Policy that Controls Access to Specific Applications for Various Departments

Define a firewall policy that controls access to specific applications from various departments, with the following intents:

- The finance departments located in site A and site B (which are in different geographical locations) are permitted to access the news applications BBC and CNN.
- The IT department located in site A is denied access to the news applications BBC and CNN.
- Access to Telnet and SSH applications is given only to the finance departments.
- Access to Telnet and SSH applications is denied to all departments, except for the finance department.

[Table 143 on page 458](#) shows the firewall policy intents that are to fulfil this requirement:

**Table 143: Firewall Policy Intent Definition for Example - 5**

Source	Destination	Action
Finance department, site A and Finance department, site B	BBC and CNN	Permit
IT department, site A	BBC and CNN	Deny
Finance department, site A and Finance department, site B	Telnet and SSH	Permit

Table 143: Firewall Policy Intent Definition for Example - 5 (continued)

Source	Destination	Action
Any (All addresses except the finance department)	Telnet and SSH	Deny

**NOTE:** The number of intents depends on the number of source sites within the given department and the number of destination sites.

Table 144 on page 459 shows how this firewall policy intent is resolved:

Table 144: Firewall Policy Intent Resolution for Example - 5

Source Department	Source Address	Zone	Destination Address	Service	Application Firewall Profile
Finance	[LS2]	Trust/Untrust	Any	Any	AppFwProfile_1  Permit: CNN/BBC  Def. Rule : Permit
Finance	[LS3]	Trust/Untrust	Any	Any	AppFwProfile_1  Permit: CNN/BBC  Def. Rule : Permit
IT	[LS1]	Trust/Untrust	Any	Any	AppFwProfile_3  Deny: CNN/BBC  Def. Rule : Deny
Finance department, site A and Finance department, site B	[LS2, LS3]	Trust/Untrust	Any	Telnet, SSH	AppFwProfile_1-1  Permit: Telnet/SSH  Def. Rule : Deny

Table 144: Firewall Policy Intent Resolution for Example - 5 (continued)

Source Department	Source Address	Zone	Destination Address	Service	Application Firewall Profile
IT department, site A	[LS1]	Trust/Untrust	Any	Telnet, SSH	AppFwProfile_3-1  Deny: Telnet/SSH  Def. Rule : Deny

### Configuration Output Example

Sample of configuration that controls access to specific applications for various departments in site A.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone trust {
  policy Intent_3 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address any;
      application [junos-telnet junos-ssh];
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_1-1;
          }
        }
      }
    }
  }
}
policy Intent_1 {
  match {
    source-address ls-192.168.1.0/24-SP50-L2;
    destination-address any;
    application any;
  }
  then {
    permit {

```

```

        application-services {
            application-firewall {
                rule-set AppFwProfile_1;
            }
        }
    }
}
policy Intent_4__0 {
    match {
        source-address any;
        destination-address any;
        application [junos-telnet junos-ssh];
    }
    then {
        permit;
    }
}
from-zone IT to-zone trust {
    policy Intent_4__1-1 {
        match {
            source-address ls-192.0.2.0/24-S42-L1;
            destination-address any;
            application [junos-telnet junos-ssh];
        }
        then {
            permit {
                application-services {
                    application-firewall {
                        rule-set AppFwProfile_3-1;
                    }
                }
            }
        }
    }
}
policy Intent_2 {
    match {
        source-address ls-192.0.2.0/24-S42-L1;
        destination-address any;
        application any;
    }
}

```



```

        match {
            dynamic-application [junos:BBC junos:CNN];
            ssl-encryption any;
        }
        then {
            deny;
        }
    }
    default-rule {
        deny;
    }
}

rule-sets AppFwProfile_1 {
    rule rule-3 {
        match {
            dynamic-application [junos:BBC junos:CNN];
            ssl-encryption any;
        }
        then {
            permit;
        }
    }
    default-rule {
        deny;
    }
}

rule-sets AppFwProfile_3-1 {
    rule rule-4 {
        match {
            dynamic-application [junos:BBC junos:CNN];
            ssl-encryption any;
        }
        then {
            deny;
        }
    }
    default-rule {
        deny;
    }
}

```

Sample of configuration that controls access to specific applications for various departments in site B.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone trust {
  policy appQoe-36600-Permit-rule {
    match {
      source-address any;
      destination-address any;
      application appQoe-36000;
    }
    then {
      permit;
    }
  }
  policy Intent_3 {
    match {
      source-address ls-198.51.100.0/24-SP50-L3;
      destination-address any;
      application [ junos-telnet junos-ssh ];
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_1-1;
          }
        }
      }
    }
  }
  policy Intent_1 {
    match {
      source-address ls-198.51.100.0/24-SP50-L3;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_1;
          }
        }
      }
    }
  }
}

```



```

        }
    }
}
policy Intent_4__1 {
    match {
        source-address any;
        destination-address any;
        application [junos-telnet junos-ssh];
    }
    then {
        deny;
    }
}
}
from-zone Sales to-zone trust {
    policy Intent_4__0 {
        match {
            source-address any;
            destination-address any;
            application [junos-telnet junos-ssh];
        }
        then {
            deny;
        }
    }
}
policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

rule-sets AppFwProfile_1-1 {
    rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {
        match {
            dynamic-application [junos:BBC junos:CNN];
            ssl-encryption any;
        }
        then {
            permit;
        }
    }
    default-rule {
        deny;
    }
}

```

```
    }
rule-sets AppFwProfile_1 {
  rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {
    match {
      dynamic-application [junos:BBC junos:CNN];
      ssl-encryption any;
    }
    then {
      permit;
    }
  }
  default-rule {
    deny;
  }
}
```

**Example 6: Firewall Policy that Denies Access to Social Networking Sites**

Define a firewall policy that denies access to networking sites such as Facebook and Twitter (defined as application group Social Networking) to the IT and finance departments located in Site A.

Table 145 on page 466 shows the firewall policy intent that is needed to fulfil this requirement:

**Table 145: Firewall Policy Intent Definition for Example - 6**

Source	Destination	Action
IT and Finance, site A	Application group Social Networking (Facebook and Twitter)	Deny

**NOTE:** Add site A if the IT or finance departments are present in different sites, but you only want to apply this firewall policy intent to the IT or finance departments present in site A.

Table 146 on page 467 shows how this firewall policy intent is resolved:

Table 146: Firewall Policy Intent Resolution for Example - 6

Source Department	Source Address	Zone	Destination Address	Service	Application Firewall Profile
Finance	[LS2]	Trust/Untrust	Any	Any	AppFwProfile_0  Deny: Social Networking (Apps)  Def. Rule : Deny
IT	[LS1]	Trust/Untrust	Any	Any	AppFwProfile_1  Deny: Social Networking (Apps)  Def. Rule : Deny

### Configuration Output Example

Sample of configuration that denies access to social networking sites for departments in site A.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone IT to-zone untrust {
  policy Intent_1__0 {
    match {
      source-address ls-192.0.2.0/24-S42-L1;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
}

```

```

    }
  }
  from-zone Finance to-zone untrust {
    policy Intent_1__1 {
      match {
        source-address ls-192.168.1.0/24-SP50-L2;
        destination-address any;
        application any;
      }
      then {
        permit {
          application-services {
            application-firewall {
              rule-set AppFwProfile_0;
            }
          }
        }
      }
    }
  }
}

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

application-firewall {
  rule-sets AppFwProfile_0 {
    rule rule-b7e4ed02-e196-400a-88bf-f1de8973d30c-appFwRule {
      match {
        dynamic-application-group Socialnetwork;
        ssl-encryption any;
      }
      then {
        deny;
      }
    }
    default-rule {
      deny;
    }
  }
}

```

}

### Example 7: Firewall Policy that Controls Access to an Address over the Internet (HTTP)

Define a firewall policy that controls access to an address over the Internet (HTTP) for various sites or site groups with the following intents:

- IP address prefix of site A and site B are permitted to access example.com.
- IP address prefix of site group Q1 are denied access to example-one.com. Site group Q1 consists of site A and site B.

Table 147 on page 469 shows the firewall policy intents that are needed to fulfil this requirement:

**Table 147: Firewall Policy Intent Definition for Example - 7**

Source	Service	Destination	Action
IP address prefix, site A and IP-Prefix, site B	HTTP	www.example.com	Permit
IP address prefix, site group Q1	HTTP	www.example-one.com	Deny

Table 148 on page 469 shows how this firewall policy intent is resolved:

**Table 148: Firewall Policy Intent Resolution for Example - 7**

Source Department	Source Address	Zone	Destination Address	Service	Application Firewall Profile
IT, Finance departments in site A	[LS1, LS2]	Trust/Untrust	www.example.com	Any	AppFwProfile_0  Permit: HTTP  Def. Rule : Deny
Finance, Sales departments in site B	[LS3, LS4]	Trust/Untrust	www.example.com	Any	AppFwProfile_1  Permit: HTTP  Def. Rule : Deny

Table 148: Firewall Policy Intent Resolution for Example - 7 (continued)

Source Department	Source Address	Zone	Destination Address	Service	Application Firewall Profile
IT, Finance departments in site A	[LS1, LS2]	Trust/Untrust	www.example-one.com	Any	AppFwProfile_2  Deny: HTTP  Def. Rule : Deny
Finance, Sales departments in site B	[LS3, LS4]	Trust/Untrust	www.example-one.com	Any	AppFwProfile_3  Deny: HTTP  Def. Rule : Deny

### Configuration Output Example

Sample of configuration that controls access to an address over the Internet (HTTP) for site A.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
  policy Intent_4__0 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address www.example.com;
      application junos-http;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
}
policy Intent_1__0 {
  match {
    source-address ls-192.168.1.0/24-SP50-L2;

```

```

        destination-address addr2;
        application junos-http;
    }
    then {
        permit {
            application-services {
                application-firewall {
                    rule-set AppFwProfile_1;
                }
            }
        }
    }
}

from-zone IT to-zone untrust {
    policy Intent_4__1 {
        match {
            source-address ls-192.0.2.0/24-S42-L1;
            destination-address addr2;
            application junos-http;
        }
        then {
            permit {
                application-services {
                    application-firewall {
                        rule-set AppFwProfile_0;
                    }
                }
            }
        }
    }
}

policy Intent_1__1 {
    match {
        source-address ls-192.0.2.0/24-S42-L1;
        destination-address addr2;
        application junos-http;
    }
    then {
        permit {
            application-services {
                application-firewall {
                    rule-set AppFwProfile_1;
                }
            }
        }
    }
}

```

```

    }
  }
}
}
}
policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

rule-sets AppFwProfile_1 {
  rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {
    match {
      dynamic-application junos:YOUTUBE;
      ssl-encryption any;
    }
    then {
      deny;
    }
  }
  default-rule {
    deny;
  }
}
rule-sets AppFwProfile_0 {
  rule rule-00f3879c-f3d7-4cb3-89b6-78328e3bfff38-appFwRule {
    match {
      dynamic-application junos:CNN;
      ssl-encryption any;
    }
    then {
      permit;
    }
  }
}
rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {
  match {
    dynamic-application junos:YOUTUBE;
    ssl-encryption any;
  }
  then {

```



```

        deny;
    }
}
default-rule {
    deny;
}
}

```

Sample of configuration that controls access to an address over the Internet (HTTP) for site B.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
    policy Intent_4__1 {
        match {
            source-address ls-198.51.100.0/24-SP50-L3;
            destination-address addr2;
            application junos-http;
        }
        then {
            permit {
                application-services {
                    application-firewall {
                        rule-set AppFwProfile_0;
                    }
                }
            }
        }
    }
}
policy Intent_1__1 {
    match {
        source-address ls-198.51.100.0/24-SP50-L3;
        destination-address addr2;
        application junos-http;
    }
    then {
        permit {
            application-services {
                application-firewall {
                    rule-set AppFwProfile_1;
                }
            }
        }
    }
}

```

```

    }
  }
}
from-zone Sales to-zone untrust {
  policy Intent_4__0 {
    match {
      source-address ls-203.0.113.0/24-SP50-L4;
      destination-address addr2;
      application junos-http;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
  policy Intent_1__0 {
    match {
      source-address ls-203.0.113.0/24-SP50-L4;
      destination-address addr2;
      application junos-http;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_1;
          }
        }
      }
    }
  }
}
policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

rule-sets AppFwProfile_1 {
  rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {

```

```

        match {
            dynamic-application junos:YOUTUBE;
            ssl-encryption any;
        }
        then {
            deny;
        }
    }
    default-rule {
        deny;
    }
}

rule-sets AppFwProfile_0 {
    rule rule-00f3879c-f3d7-4cb3-89b6-78328e3bffa3-appFwRule {
        match {
            dynamic-application junos:CNN;
            ssl-encryption any;
        }
        then {
            permit;
        }
    }
    rule rule-ca2354d6-a7ba-488e-8c5a-91cbddfb9583-appFwRule {
        match {
            dynamic-application junos:YOUTUBE;
            ssl-encryption any;
        }
        then {
            deny;
        }
    }
    default-rule {
        deny;
    }
}

```

### Example 8: Firewall Policy that Permits or Denies the Use of HTTP or FTP as a Service

Define a firewall policy where a specific IP address that belongs to the IT department is permitted or denied the use of HTTP or FTP as a service.

[Table 149 on page 476](#) shows the firewall policy intents that are needed to fulfil this requirement:

Table 149: Firewall Policy Intent Definition for Example - 8

Source	Service	Destination	Action
192.0.2.0	HTTP	example.com	Permit
192.0.2.0	FTP	example.com	Deny

Table 150 on page 476 shows how this firewall policy intent is resolved:

Table 150: Firewall Policy Intent Resolution for Example - 8

Source Department	Source Address	Zone	Destination Address	Service
IT, site A	192.0.2.0	Trust/Untrust	example.com	FTP
IT, site A	192.0.2.0	Trust/Untrust	example.com	HTTP

### Configuration Output Example

Sample of configuration that allows access to HTTP

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone IT to-zone trust {
  policy Intent_1__1 {
    match {
      source-address 192.0.2.0;
      destination-address example.com;
      application junos-ftp;
    }
    then {
      deny;
    }
  }
}
policy Intent_4__1 {
  match {
    source-address 192.0.2.0;
    destination-address example.com;
    application junos-http;
  }
}

```

```

        then {
            permit;
        }
    }
}
policy-rematch;

```

### Example 9: Firewall Policy that Denies Access to BitTorrent to the Finance Departments across both Site A and Site B

Define a firewall policy that denies access to BitTorrent for the Finance departments in site A and Site B.

[Table 151 on page 477](#) shows the firewall policy intents that are needed to fulfil this requirement:

**Table 151: Firewall Policy Intent Definition for Example - 9**

Source	Destination	Action
site A, Finance department	BitTorrent	Deny
site B, Finance department	BitTorrent	Deny

[Table 152 on page 477](#) shows how this firewall policy intent is resolved:

**Table 152: Firewall Policy Intent Resolution for Example - 9**

Site	Source Address	Zone	Destination Application	Service	Application Firewall Profile
Finance department, site A	[LS2]	Trust/Untrust	BitTorrent	Any	AppFwProfile_0 Deny: BitTorrent Def. Rule : Deny
Finance department, site B	[LS3]	Trust/Untrust	BitTorrent	Any	AppFwProfile_0 Deny: BitTorrent Def. Rule : Deny

### Configuration Output Example

Sample of configuration that allows site A access to BitTorrent.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
  policy appQoe-36600-Permit-rule {
    match {
      source-address any;
      destination-address any;
      application appQoe-36000;
    }
    then {
      permit;
    }
  }
  policy Intent_1 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
      log {
        session-init;
        session-close;
      }
    }
  }
}
policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```
rule-sets AppFwProfile_0 {
  rule rule-2226740d-03a9-483c-b315-eddc9ae8619a-appFwRule {
    match {
      dynamic-application junos:BITTORRENT;
      ssl-encryption any;
    }
    then {
      deny;
    }
  }
  default-rule {
    deny;
  }
}
```

Sample of configuration that allows site B to access to BitTorrent.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```
from-zone Financel to-zone untrust {
  policy appQoe-36600-Permit-rule {
    match {
      source-address any;
      destination-address any;
      application appQoe-36000;
    }
    then {
      permit;
    }
  }
  policy Intent_4 {
    match {
      source-address ls-198.51.100.0/24-SP50-L3;
      destination-address any;
      application any;
    }
    then {
      permit {
        application-services {
          application-firewall {
```

```

        rule-set AppFwProfile_0;
    }
}
}
log {
    session-init;
    session-close;
}
}
}
}
policy-rematch;
```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```
rule-sets AppFwProfile_0 {
    rule rule-00f3879c-f3d7-4cb3-89b6-78328e3bff38-appFwRule {
        match {
            dynamic-application junos:BITTORRENT;
            ssl-encryption any;
        }
        then {
            deny;
        }
    }
    default-rule {
        deny;
    }
}
```

**Example 10: Firewall Policy that Allows Access to Facebook for Users in User Group A**

Define a firewall policy where the users that are a part of user group A are provided access only to Facebook, and no other applications. User group A consists of users located in site A.

[Table 153 on page 480](#) shows the firewall policy intent that is needed to fulfil this requirement:

**Table 153: Firewall Policy Intent Definition for Example - 10**

Source	Destination	Action
user group A, site A	Facebook	Permit



Table 154 on page 481 shows how this firewall policy intent is resolved:

**Table 154: Firewall Policy Intent Resolution for Example - 10**

Site	User/User Group	Source Address Range	Destination Address	Application
site A	user group A	192.0.2.0 to 192.0.2.20	Any	Facebook

### Configuration Output Example

Sample of configuration that allows users in user group A access to Facebook.

The hierarchy level for the following configuration sample is [\[edit security policies\]](#).

```

from-zone Finance to-zone untrust {
  policy appQoe-36600-Permit-rule {
    match {
      source-address any;
      destination-address any;
      application appQoe-36000;
    }
    then {
      permit;
    }
  }
}
policy Intent_4__0 {
  match {
    source-address ls-192.168.1.0/24-SP50-L2;
    destination-address any;
    application any;
    source-identity "USERFW.LOCAL\Cert Publishers";
  }
  then {
    permit {
      application-services {
        application-firewall {
          rule-set AppFwProfile_0;
        }
      }
    }
  }
}

```

```

        log {
            session-init;
            session-close;
        }
    }
}

from-zone IT to-zone untrust {
    policy appQoe-36600-Permit-rule {
        match {
            source-address any;
            destination-address any;
            application appQoe-36000;
        }
        then {
            permit;
        }
    }
    policy Intent_4__1 {
        match {
            source-address ls-192.0.2.0/24-S42-L1;
            destination-address any;
            application any;
            source-identity "USERFW.LOCAL\Cert Publishers";
        }
        then {
            permit {
                application-services {
                    application-firewall {
                        rule-set AppFwProfile_0;
                    }
                }
            }
            log {
                session-init;
                session-close;
            }
        }
    }
}

policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```
rule-sets AppFwProfile_0 {
  rule rule-00f3879c-f3d7-4cb3-89b6-78328e3bff38-appFwRule {
    match {
      dynamic-application junos:FACEBOOK-APP;
      ssl-encryption any;
    }
    then {
      permit;
    }
  }
  default-rule {
    deny;
  }
}
```

The hierarchy level for the following configuration sample is **[edit services user-identification identity-management]**.

```
connection {
  connect-method https;
  port 443;
  primary {
    address 10.213.50.50;
    client-id 1234;
    client-secret "$ABC123"; ## SECRET-DATA
  }
  token-api oauth_token/oauth;
  query-api user_query/v2;
}
batch-query {
  items-per-batch 200;
  query-interval 5;
}
ip-query {
  query-delay-time 15;
}
```

### Example 11: Firewall Policy that Permits User B in Site A Access to YouTube with UTM Enabled

Define a firewall policy where the User B located in Site A is provided access only to YouTube with UTM enabled. The user does not have permission to access any other applications.

Table 155 on page 484 shows the firewall policy intent that is needed to fulfil this requirement:

**Table 155: Firewall Policy Intent Definition for Example - 11**

Source	Destination	Action
user B, site A	YouTube	Permit

Table 156 on page 484 shows how this firewall policy intent is resolved:

**Table 156: Firewall Policy Intent Resolution for Example - 11**

Site	Source Address	User/User Group	Destination Address	UTM	Application
site A	192.0.2.22	user B	Any	Enabled	Facebook

### Configuration Output Example

Sample of configuration that allows user B in site A access to YouTube, with UTM enabled.

The hierarchy level for the following configuration sample is **[edit security policies]**.

```

from-zone Finance to-zone untrust {
  policy Intent_4__0 {
    match {
      source-address ls-192.168.1.0/24-SP50-L2;
      destination-address any;
      application any;
      source-identity "userfw.local\CS01";
    }
    then {
      permit {
        application-services {
          utm-policy testUTM;
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
    }
  }
}

```

```

    }
  }
  log {
    session-init;
    session-close;
  }
}
}
}
from-zone IT to-zone untrust {
  policy Intent_4__1 {
    match {
      source-address ls-192.0.2.0/24-S42-L1;
      destination-address any;
      application any;
      source-identity "userfw.local\CS01";
    }
    then {
      permit {
        application-services {
          utm-policy testUTM;
          application-firewall {
            rule-set AppFwProfile_0;
          }
        }
      }
      log {
        session-init;
        session-close;
      }
    }
  }
}
policy-rematch;

```

The hierarchy level for the following configuration sample is **[edit security utm]**.

```

feature-profile {
  web-filtering {
    type juniper-local;
  }
}

```

```

    }
  }
  utm-policy testUTM {
    web-filtering {
      http-profile junos-wf-local-default;
    }
    anti-spam {
      smtp-profile junos-as-defaults;
    }
  }
  traffic-options {
    sessions-per-client {
      over-limit log-and-permit;
    }
  }
}

```

The hierarchy level for the following configuration sample is **[edit security application-firewall]**.

```

rule-sets AppFwProfile_0 {
  rule rule-00f3879c-f3d7-4cb3-89b6-78328e3bff38-appFwRule {
    match {
      dynamic-application junos:FACEBOOK-APP;
      ssl-encryption any;
    }
    then {
      permit;
    }
  }
  default-rule {
    deny;
  }
}

```

The hierarchy level for the following configuration sample is **[edit services user-identification identity-management]**.

```

connection {
  connect-method https;
  port 443;
  primary {
    address 10.213.50.50;
  }
}

```

```

    client-id 1234;
    client-secret "$ABC123"; ## SECRET-DATA
  }
  token-api oauth_token/oauth;
  query-api user_query/v2;
}
batch-query {
  items-per-batch 200;
  query-interval 5;
}
ip-query {
  query-delay-time 15;
}

```

### Example 12: Firewall Policy that blocks access to Internet and allow access to Google Drive.

The following section provides a sample firewall policy to block access to Internet and allow access to Google Drive. The firewall policy has one enterprise-based intent and one zone-based intent.

An enterprise-based intent to block access to Internet is provided in [Table 157 on page 487](#).

**Table 157: Sample Enterprise-based Intent**

Rule Name	Source Endpoint	Destination Endpoint	Action
EnterpriseIntent_1	Engg (Department)	Internet	Deny

A zone-based intent to allow access to Google drive is provided in [Table 158 on page 487](#).

**Table 158: Sample Zone based Intent**

Rule Name	Source Endpoint	Destination Endpoint	Action
ZoneIntent_1	Engg (Zone)	untrust(zone), google-drive	Allow

The intents in [Table 157 on page 487](#) and [Table 158 on page 487](#) result in firewall rules order that is provided in [Table 159 on page 487](#).

**Table 159: Sample firewall rule**

Rule Name	Rule Order	Source Endpoint	Destination Endpoint	Action
ZoneIntent_1	1	Engg (Zone)	untrust(zone), google-drive	Allow
EnterpriseIntent_1	2	Engg (Department)	Internet	Deny

## RELATED DOCUMENTATION

---

[Firewall Policy Overview | 426](#)

---

[Adding Firewall Policy Intents | 433](#)

---

## Firewall Policy Schedules Overview

A schedule allows a policy to be active for a specified duration. If you want a policy to be active during a scheduled time, you must first create a schedule for that policy or link the policy to an existing schedule. When a schedule timeout expires, the associated policy is deactivated and all sessions associated with the policy are also timed out.

If a policy contains a reference to a schedule, that schedule determines when the policy is active. When a policy is active, it can be used as a possible match for traffic. A schedule lets you restrict access to, or remove a restriction from a resource, for a period of time.

A schedule uses the following guidelines:

- A schedule can have multiple policies associated with it; however, a policy cannot be associated with multiple schedules.
- A policy remains active as long as the schedule it refers to is also active.

A schedule can be active during a single time slot, as specified by a start date and time, and a stop date and time.

- A schedule can be active forever (recurrent), but only as specified by the daily schedule. The schedule on a specific day (time slot) takes priority over the daily schedule.
- A scheduler can be active during a time slot, as specified by the weekday schedule.
- A scheduler be active within two different time slots (daily or for a specified duration).

## RELATED DOCUMENTATION

---

[About the Firewall Policy Schedules Page | 489](#)

---

[Firewall Policy Examples | 448](#)

---

[Creating Schedules | 490](#)

---

[Editing, Cloning, and Deleting Schedules | 492](#)

---



## About the Firewall Policy Schedules Page

To access this page, select **Configuration > Firewall > Schedules**.

The **Firewall Policy Schedules** page enables you to create, modify, clone, and delete schedules. A schedule allows you to restrict access to a resource, or remove a restriction to a resource, for a specified period of time.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a firewall policy schedule. See [“Creating Schedules” on page 490](#).
- Modify, clone, or delete a firewall policy schedule. See [“Editing, Cloning, and Deleting Schedules” on page 492](#).
- View the configured parameters of a schedule. Click the details icon that appears when you hover over the name of an image or click **More > Detailed View**.
- Show or hide columns about the firewall policy schedule. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a specific firewall policy schedule. Click the Search icon in the top right corner of the page to search for a firewall policy schedule.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

### Field Descriptions

[Table 160 on page 489](#) provides guidelines on using the fields on the **Firewall Policy Schedules** page.

**Table 160: Fields on the Firewall Policy Schedules Page**

Field	Description
Name	Name of the schedule; maximum length is 63 characters.
Description	Description for the schedule; maximum length is 900 characters.
Start Date	The date and time from when the schedule comes into effect.
End Date	The date and time from when the schedule ends.
Second Start Date	The second date and time from when the schedule comes into effect.

Table 160: Fields on the Firewall Policy Schedules Page (*continued*)

Field	Description
Second End Date	The second date and time from when the schedule ends.

## RELATED DOCUMENTATION

[Firewall Policy Schedules Overview | 488](#)

[Firewall Policy Examples | 448](#)

[Creating Schedules | 490](#)

[Editing, Cloning, and Deleting Schedules | 492](#)

## Creating Schedules

Use the **Create Schedules** page to create schedules. A schedule allows you to restrict access to a resource, or remove a restriction to a resource, for a specified period of time.

To configure a schedule:

1. Select **Configuration > Firewall > Schedules**.

The **Firewall Policy Schedules** page appears.

2. Click the add icon (+).

The **Create Schedules** page appears.

3. Complete the configuration of the schedule according to the guidelines provided in [Table 161 on page 491](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new schedule is created. You can use this schedule to activate firewall policies for the times and dates configured in your schedules.

[Table 161 on page 491](#) provides guidelines on using the fields to create a schedule.

Table 161: Fields on the Create Schedules Page

Field	Description
<b>General Information</b>	
Name	Required. Enter a unique name for the service. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed.
Description	Enter a description for your service. You should make this description as useful as possible for all administrators.
<b>Dates</b>	
Date Range	<p>Select <b>Ongoing</b> if you want your schedules to always be active.</p> <p>Select <b>Custom</b> to configure two sets of start and end dates for a single schedule. For the first set, enter dates in the <b>Start Date</b> and <b>End Date</b> fields. You must enter the days in MM/DD/YYYY format.</p> <p>For the second set of the schedule, enter the start date in the <b>Second Start Date</b> field and enter the end date in the <b>Second End Date</b> field.</p>
<b>Times</b>	
Time Ranges	Create a schedule to be active daily or for any specific times of the day.
Daily Options	<p>Select <b>Daily</b> to make the schedule applicable daily.</p> <p>Select <b>Custom</b> to enter specific days and times. Click on a specific day to specify time options for an entire day, to exclude a specific day, or to enter time ranges for the selected day. You must enter the time in HH:MM:SS format.</p> <p>For example, if you click on Monday, you get a dialog box that allows you to specify whether you want the schedule to be active all day Monday, exclude Monday from the schedule, or have the schedule be active at specific times.</p> <p>Select <b>Specify the same time for all days</b> to enter a date and time that is applicable for all days.</p>

## RELATED DOCUMENTATION

[Firewall Policy Schedules Overview | 488](#)
[About the Firewall Policy Schedules Page | 489](#)
[Firewall Policy Examples | 448](#)

## Editing, Cloning, and Deleting Schedules

### IN THIS SECTION

- [Editing Schedules | 492](#)
- [Cloning Schedules | 492](#)
- [Deleting Schedules | 493](#)

You can edit, clone, and delete schedules from the **Firewall Policy Schedules** page.

### Editing Schedules

To modify the parameters configured for a schedule:

1. Select **Configuration > Firewall > Schedules**.

The **Firewall Policy Schedules** page appears.

2. Select the schedule that you want to edit, and then click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit Schedule**.

The **Edit Schedules** page appears, showing the same options as when creating a new schedule.

3. Modify the parameters according to the guidelines provided in [“Creating Schedules” on page 490](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the modified schedule appears on the **Firewall Policy Schedules** page.

### Cloning Schedules

To clone a schedule:

1. Select **Configuration > Firewall Policy > Schedules**.

The **Firewall Policy Schedules** page appears.

2. Right-click on the schedule that you want to clone and then click **Clone**, or select **More > Clone**.

The **Clone Schedules** page appears with editable fields. You can modify the parameters according to the guidelines provided in [“Creating Schedules” on page 490](#).

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the cloned schedule appears under the scheduled it is cloned from, in the **Firewall Policy Schedules**.

### Deleting Schedules

To delete a schedule:

1. Select **Configuration > Firewall Policy > Schedules**.

The **Firewall Policy Schedules** page appears.

2. Select the schedule you want to delete and then click the delete icon **(X)**.

An alert message appears, verifying that you want to delete the schedule.

3. Click **Yes** to delete the selection. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected schedule is deleted.

### RELATED DOCUMENTATION

[Firewall Policy Schedules Overview | 488](#)

[About the Firewall Policy Schedules Page | 489](#)

[Creating Schedules | 490](#)

[Firewall Policy Examples | 448](#)

## Deploying Firewall Policies

After adding the intents to the firewall policies, you can deploy the firewall policy by clicking the **Deploy** option that is above the **End Points** panel. You can also deploy one or more policies from the **Firewall Policy** page.

To deploy firewall policies:

1. Select **Configuration > Firewall > Firewall Policy**.

The Firewall Policy page appears.

2. Select one or more policies and click **Deploy**.

The Deploy page appears.

3. In **Choose Deployment Time** options, select **Run Now** to deploy the policy immediately. Select **Schedule at a later time** and specify the date and time at which the policy should be deployed.

4. Click **Deploy**.

A job is created. Click the job ID to go to the Jobs page and view the status of the deploy operation.

**NOTE:** During deployment, CSO ensures the order of the zone-based intents and enterprise-based intents within and across the policies.

## About the Default Profiles for Unified Firewall Policy Page

To access this page, select **Configuration > Firewall > Default Settings**.

Use this page to view and edit the default settings for unified firewall policies. In a unified firewall policy, dynamic application is used as a match criteria and therefore a separate application firewall is not configured on a device (CPE or next-generation firewall) to allow or block traffic to an application.

The unified firewall takes some time to detect the application in a traffic and act upon it. The default profiles help in providing security during that time.

**NOTE:** The unified firewall policy settings are applied on a device only when Junos OS version 18.2R1 or later is installed on the device.

The default settings comprise the following:

- A UTM profile to define antispam, antivirus, content filtering and web filtering behavior.
- An SSL proxy profile to define the action to be taken when server certificates are not authenticated.

- An IPS profile to define the actions to be taken when the traffic matches the attack objects specified in the IPS profile.
- Reject Settings to define an action when the firewall blocks traffic for a particular application:
  - Take no action
  - Provide a redirect URL to redirect the traffic to another application or URL.
  - Provide a block message to display or log a message indicating that the traffic for the particular application is blocked by the firewall policy.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View the default unified firewall settings—See [Table 162 on page 495](#) describes the fields on this page.
- Modify the default profiles for the unified firewall policy—See [“Editing Default Settings for the Unified Firewall Policy” on page 496](#).

### Field Descriptions

[Table 162 on page 495](#) describes the fields on the Default Profiles for the Unified Firewall Policy page.

**Table 162: Default Profiles for the Unified Firewall Policy Page**

Setting	Guideline
Default UTM Policy	UTM profile assigned for the unified firewall policy, which is set the default UTM policy.
Default SSL Profile	SSL proxy profile assigned for the unified firewall policy, which is set as the default SSL proxy profile.
Default IPS Profile	IPS profile assigned for the unified firewall policy, which is set as the default IPS policy on the device.
<i>Reject Settings</i>	
Reject Action	The action assigned to the unified firewall policy when a firewall blocks application traffic: <ul style="list-style-type: none"> <li>• <b>None:</b> No message or redirection is provided.</li> <li>• <b>Redirect URL:</b> The firewall redirects the traffic to the specified URL.</li> <li>• <b>Text:</b> The firewall displays or logs the message configured for this field.</li> </ul>

## RELATED DOCUMENTATION

| [About the Firewall Policy Name Page](#) | 429

## Editing Default Settings for the Unified Firewall Policy

Use the Default Profiles for Unified Firewall Policy page to configure the default profile, SSL proxy profile, IPS profile,, and reject or redirect URL or message in the unified firewall policy for a tenant. If you enable a default SSL proxy profile for the tenant, CSO sets the default SSL proxy profile for the tenant as the the default SSL profile in the unified firewall policy.

The unified firewall takes some time to detect the application in a traffic and act upon it. The default profiles help in providing security during that time. The default settings are applicable to all the unified firewall policies belonging to a tenant and pushed to all those sites where a firewall policy is deployed.

To configure default settings for the unified firewall policy:

1. Select **Configuration > Firewall > Default Settings** in Customer Portal.

The Default Profiles for Unified Firewall Policy Settings page appears.

2. Click the **Edit** button.

The fields on the page can now be modified.

3. Complete the configuration according to the guidelines provided in [Table 163 on page 497](#).

4. Do one of the following:

- Click **Cancel** to cancel the changes.
- Click **OK** to save the changes.

The settings are saved and a confirmation message is displayed.

You can deploy the changes by editing the unified firewall policy and then redeploying it.



Table 163: Default Profiles for the Unified Firewall Policy

Setting	Guideline
<b>Default UTM Policy</b>	<p>Select a default UTM profile (policy) from the drop-down list.</p> <p>Alternatively, click the <b>Add UTM Profile</b> to add a UTM profile and use it as the default UTM profile.</p> <p>The Create UTM Profiles wizard appears. For information about creating an UTM policy, see <a href="#">“Creating UTM Profiles” on page 509</a>.</p>
<b>Default SSL Profile</b>	<p>Select a default SSL proxy profile from the drop-down list.</p> <p>Alternatively, click <b>Add SSL Profile</b> to add a new SSL proxy profile and use it as the default SSL proxy profile. .</p> <p>The Create SSL Proxy Profiles page appears. For information about configuring SSL proxy profiles, See <a href="#">“Creating SSL Forward Proxy Profiles” on page 710</a>.</p>
<b>Default IPS Profile</b>	<p>Select the IPS profile that you want to associate with the unified firewall policy as the default IPS profile.</p>
<b>Reject Settings</b>	
<b>Reject Action</b>	<p>When the action of the firewall is set to deny a particular application traffic, provide an alternative URL to redirect such traffic or a reason for blocking the traffic and an action that a user can perform.</p> <p>Select one of the following:</p> <ul style="list-style-type: none"> <li>• <b>None:</b> Do nothing when an application’s traffic is blocked by the firewall.</li> <li>• <b>Redirect URL:</b> Redirect traffic to a specified URL when the firewall blocks the traffic. If you select this option, you must specify the URL to which traffic should be redirected (in the Redirect URL field).</li> <li>• <b>Text:</b> Block traffic and display a message. If you select this option, you must enter the message (in the Block Message field) to be displayed or logged when the firewall blocks the traffic.</li> </ul>
<b>Redirect URL</b>	<p>If you chose <b>Redirect URL</b> for Reject Action, enter the URL to which an application traffic must be redirected.</p>
<b>Text</b>	<p>If you choose <b>Text</b> for Reject Action, enter the reason for blocking the traffic and what a user can do subsequently.</p> <p>You can enter a maximum of 256 alphanumeric characters including spaces.</p>

## RELATED DOCUMENTATION

[UTM Overview | 503](#)

[SSL Forward Proxy Overview | 691](#)

## Importing Policies Overview

CSO supports importing policy configurations from next-generation firewall devices. You can discover existing policy configuration while onboarding next-generation firewall device (without enabling ZTP) or import policy configurations from Firewall and NAT policy pages (after ZTP).. For more information about overview and configuration of ZTP on SRX Series devices, see [Zero Touch Provisioning on SRX Series Devices](#).

- To import policy configuration after ZTP , see [“Importing Firewall Policies” on page 500](#), and [“Importing NAT Policies” on page 643](#).
- To discover existing policy configuration while onboarding next-generation firewall device (without enabling ZTP), see [“Adding a Standalone Next Generation Firewall Site” on page 187](#), and [“Add an On-Premise Spoke Site with Next Generation Firewall and LAN Capabilities” on page 155](#).

CSO uses object name as the unique identifier for an object (such as addresses, services, schedulers, SSL profiles, unified threat management (UTM), and Layer 7 applications). During policy import, all objects that are supported by CSO are imported and all objects names are compared between what is in CSO and what is on the next generation firewall device. A conflict occurs when the name of the object to be imported matches an existing object, but the value of the object does not match. The object conflict resolution (OCR) operation is triggered to resolve the object name conflicts.

- If the object name does not exist in CSO, the object is added to CSO.
- If the object name exists in CSO with the same content, the existing object in CSO is used.
- If the object name exists in CSO with different content, the object conflict resolution operation is triggered, providing users with the following conflict resolution options:
  - Rename object
    - This is the default option.
    - By default, "\_1" is added to the object name, or users can specify a new unique name.
    - Deploying the policy will delete the original object and add the object with the new name.
    - There is no functional change to the firewall policy (labels only).
  - Overwrite with imported value
    - The object in CSO is replaced with the object from the import operation.
    - The change will be reflected for all other devices that use this object after the policy deployment.

- There is no functional change to the firewall policy.
- There may be possible traffic impact to all other devices that use this object the next time the other device is updated from CSO.
- Keep existing object
  - The object name in CSO is used instead of what is on the next generation firewall device.
  - Policy deployment for the imported firewall policy will show the modification.
  - There may be possible traffic impact to this firewall because the content is different in some way.

The following section provides an example for importing policies. Here we use Address as an object type and see how to resolve the object name conflicts.

The existing objects in CSO are listed in [Table 164 on page 499](#).

**Table 164: Existing address in CSO**

Object Name	Existing Value
Address1	198.51.100.10
Address2	198.51.100.20
Address3	198.51.100.30

The existing objects in the next generation firewall device are listed in [Table 165 on page 499](#).

**Table 165: Existing address in next-generation firewall device**

Object Name	Existing Value
Address1	203.0.113.10/32
Address2	203.0.113.20/32
Address3	203.0.113.30/32

During policy import, OCR is triggered and the object conflicts between next generation firewall device and CSO. The resolution that we have chosen is listed in [Table 166 on page 499](#).

**Table 166: OCR while importing policies to CSO**

Object Name in CSO	Object Type in CSO	Existing Value in CSO	Imported Value to CSO	Conflict Resolution	New Object Name in CSO
Address1	Address	198.51.100.10	203.0.113.10	Keep Existing Object	Address1_1

Table 166: OCR while importing policies to CSO (continued)

Object Name in CSO	Object Type in CSO	Existing Value in CSO	Imported Value to CSO	Conflict Resolution	New Object Name in CSO
Address2	Address	198.51.100.20	203.0.113.20	Overwrite with Imported value	Address2_1
Address3	Address	198.51.100.30	203.0.113.30	Rename Object	Address3_1

The object values and the result after resolving conflicts are listed in [Table 167 on page 500](#).

Table 167: After importing policies to CSO

Discovered Object Name in CSO	Discovered Value in CSO	Result
Address1	198.51.100.10	No change
Address2	203.0.113.20	Content changed
Address3	198.51.100.30	No change
Address3_1	203.0.113.30	Address3_1 created

## RELATED DOCUMENTATION

*Deployment Guide*

## Importing Firewall Policies

Use this page to manually import a firewall policy from the discovered or onboarded sites (next generation firewall sites).

To import a firewall policy:

1. Select **Configuration > Firewall > Firewall Policy**.

The Firewall Policy page appears.

2. Click **Import**.

The Import Firewall Policies page appears displaying a list of discovered devices (next generation firewall devices).

3. Select the devices from which you want to import the firewall policies and click **Next**.

The Discovered Services tab appears.

4. Select the policies that you want to import and click **Next**.

The Resolve Conflicts tab appears.

5. If there are any conflicts with the imported objects, object conflict resolution(OCR) operation is triggered. The Conflicts window displays all the conflicts between CSO and the next generation firewall device. Select an object from the Conflicts window and click on any of the below option to resolve the object conflict.

The resolution options are:

- Rename Object—Rename the imported object. By default, "\_1" is added to the object name, or you can specify a new name.
- Overwrite with imported value—The object in CSO is replaced with the object from the import operation.
- Keep existing object—The object name in CSO is used instead of what is on the next generation firewall device.

6. Click **Finish**.

A summary of the discovered services is listed.

7. Review the summary and click **OK** to import the firewall policies.

The import policy job is created and the firewall policies are imported from next generation firewall device to CSO. You can view the imported policy from the Firewall Policy page.

## WHAT'S NEXT

After importing the firewall policy successfully, you can edit and deploy the policy. See [Editing and Deleting Firewall Policies | 432](#), [Editing, Cloning, and Deleting Firewall Policy Intents | 439](#), and [Deploying Firewall Policies | 493](#).

## RELATED DOCUMENTATION

[Importing Policies Overview | 498](#)

# Managing UTM Profiles

## IN THIS CHAPTER

- UTM Overview | 503
- Configuring UTM Settings | 505
- About the UTM Profiles Page | 507
- Creating UTM Profiles | 509
- Editing, Cloning, and Deleting UTM Profiles | 512
- About the Web Filtering Profiles Page | 514
- Creating Web Filtering Profiles | 516
- Editing, Cloning, and Deleting Web Filtering Profiles | 520
- About the Antivirus Profiles Page | 522
- Creating Antivirus Profiles | 524
- Editing, Cloning, and Deleting Antivirus Profiles | 527
- About the Antispam Profiles Page | 529
- Creating Antispam Profiles | 530
- Editing, Cloning, and Deleting Antispam Profiles | 532
- About the Content Filtering Profiles Page | 534
- Creating Content Filtering Profiles | 536
- Editing, Cloning, and Deleting Content Filtering Profiles | 540
- About the URL Patterns Page | 542
- Creating URL Patterns | 543
- Editing, Cloning, and Deleting URL Patterns | 544
- About the URL Categories Page | 546
- Creating URL Categories | 547
- Editing, Cloning, and Deleting URL Categories | 549

## UTM Overview

### IN THIS SECTION

- [UTM Licensing | 504](#)
- [UTM Components | 504](#)

Unified threat management (UTM) is a term used to describe the consolidation of several security features to protect against multiple threat types. The advantage of UTM is a streamlined installation and management of multiple security capabilities.

The following security features are provided as part of the UTM solution:

- **Antispam**—This feature examines transmitted messages to identify e-mail spam. E-mail spam consists of unwanted messages usually sent by commercial, malicious, or fraudulent entities. When the device detects an e-mail message deemed to be spam, it either drops the message or tags the message header or subject field with a preprogrammed string. The antispam feature uses a constantly updated Spamhaus Block List (SBL). Sophos updates and maintains the IP-based SBL.
- **Full file-based antivirus**—A virus is an executable code that infects or attaches itself to other executable code to reproduce itself. Some malicious viruses erase files or lock up systems. Other viruses merely infect files and overwhelm the target host or network with bogus data. The full file-based antivirus feature provides file-based scanning on specific application layer traffic, checking for viruses against a virus signature database. The antivirus feature collects the received data packets until it has reconstructed the original application content, such as an e-mail file attachment, and then scans this content.
- **Express antivirus**—Express antivirus scanning is offered as a less CPU-intensive alternative to the full file-based antivirus feature. The express antivirus feature is similar to the antivirus feature in that it scans specific application layer traffic for viruses against a virus signature database. However, unlike full antivirus, express antivirus does not reconstruct the original application content. Rather, it just sends (streams) the received data packets, as is, to the scan engine. With express antivirus, the virus scanning is executed by a hardware pattern-matching engine. This improves performance while scanning is occurring, but the level of security provided is lessened. Juniper Networks provides the scan engine.
- **Content filtering**—Content filtering blocks or permits certain types of traffic based on the MIME type, file extension, protocol command, and embedded object type.
- **Web filtering**—Web filtering enables you to manage Internet usage by preventing access to inappropriate Web content. The following types of Web filtering solutions are available:

- Integrated Web filtering—Blocks or permits Web access after the device identifies the category for a URL either from user-defined categories or from a category server (Websense provides the SurfControl Content Portal Authority (CPA) server).
- Redirect Web filtering—Intercepts HTTP requests and forwards the server URL to an external URL filtering server to determine whether to block or permit the requested Web access. Websense provides the URL filtering server.

## UTM Licensing

All UTM components require licenses with the exception of content filtering, which uses the parameters defined in the content filtering profile. This is because Juniper Networks leverages third-party technology that is constantly updated to provide the most up-to-date inspection capabilities.

## UTM Components

UTM components include custom objects, feature profiles, and UTM profiles that can be configured on SRX Series devices. From a high level, feature profiles specify how a feature is configured and then applied to UTM profiles, which in turn is applied to firewall policies, as shown in [Figure 22 on page 504](#).

Figure 22: UTM Components



UTM profiles do not have their own seven-tuple rulebase; in a sense they inherit the rules from the firewall rule. The strength of the UTM feature comes from URL filtering, where you can have a separate configuration for different users or user groups.

- Custom objects—Although SRX Series devices support predefined feature profiles that can handle most typical use cases, there are some cases where you might need to define your own objects, specifically for URL filtering, antivirus filtering, and content filtering.
- Feature profiles—Feature profiles specify how components of each profile should function. You can configure multiple feature profiles that can be applied through different UTM profiles to firewall rules.
- UTM profiles—UTM profiles function as a logical container for individual feature profiles. UTM profiles are then applied to specific traffic flows based on the classification of rules in the firewall policy, thereby enabling you to define separate UTM profiles per firewall rule to differentiate the enforcement per



firewall rule. Essentially, the firewall rulebase acts as the match criteria, and the UTM profile is the action to be applied.

- Firewall policy—You can predefine feature profiles for the UTM profile that are then applied to the firewall rules. This gives you the advantage of using the predefined UTM profile for that one UTM technology (for example, antivirus or URL filtering), not both.

RELATED DOCUMENTATION

<a href="#">Configuring UTM Settings   505</a>
<a href="#">About the UTM Profiles Page   507</a>
<a href="#">Creating UTM Profiles   509</a>

Configuring UTM Settings

Use the Edit UTM Settings page to configure unified threat management (UTM) antispam, antivirus, and Web filtering settings for a tenant.

These settings are applicable to all the sites belonging to a tenant. The settings are pushed to all those sites where a firewall policy intent with UTM enabled is applicable.

To configure UTM settings:

1. Select **Configuration > Unified Threat Mgmt > UTM Settings** in Customer Portal.  
The Edit UTM Settings page appears.
2. Complete the configuration according to the guidelines provided in [Table 168 on page 505](#).
3. Do one of the following:
  - Click **Reset** to reset the settings to the previously saved configured.
  - Click **OK** to save the settings.

The settings are saved and a confirmation message is displayed.

Table 168: UTM Settings

Setting	Guideline
<b>Antispam Settings</b>	

Table 168: UTM Settings (*continued*)

Setting	Guideline
<b>Address Whitelist</b>	<p>Select the URL pattern to be used as the antispam allowlist.</p> <p>Alternatively, click <b>Create a New Pattern</b> to create a new URL pattern to use as a allowlist.</p> <p>The Create URL Patterns page appears. For more information, see <a href="#">“Creating URL Patterns” on page 543</a> for an explanation of the fields on this page.</p>
<b>Address Blacklist</b>	<p>Select the URL pattern to be used as the antispam blocklist.</p> <p>Alternatively, click <b>Create a New Pattern</b> to create a new URL pattern to use as a blocklist.</p>
<b>Antivirus Settings</b>	
<b>MIME Whitelist</b>	Enter one or more MIME types (separated by commas) to exclude from antivirus scanning.
<b>Exception MIME Whitelist</b>	Enter one or more MIME types (separated by commas) that are to be excluded from the list of MIME types specified as part of the MIME allowlist. This list is a subset of the MIME types that you specified in the MIME allowlist. For example, if you specify <b>video/</b> in the allowlist and <b>video/x-shockwave-flash</b> in the exception allowlist, all objects of MIME type <b>video/</b> except MIME type <b>video/x-shockwave-flash</b> are excluded from antivirus scanning.
<b>URL Whitelist</b>	Select the list of URLs the antivirus settings can allow.
<b>Web Filtering Settings</b>	
<b>URL Whitelist</b>	Select the list of URLs the Web filtering settings can allow; these URLs are excluded from Web filtering.
<b>URL Blacklist</b>	Select the list of URLs the Web filtering settings can block; these URLs are blocked from Web access.

## RELATED DOCUMENTATION

| [About the UTM Profiles Page](#) | 507

## About the UTM Profiles Page

To access this page, select **Configuration > Unified Threat Mgmt > UTM Profiles** in Customer Portal.

Use this page to view and manage unified threat management (UTM) profiles. UTM profiles enable you to consolidate several security features into one system to protect against multiple threat types.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a UTM profile—See [“Creating UTM Profiles” on page 509](#).
- Edit, clone, or delete a UTM profile—See [“Editing, Cloning, and Deleting UTM Profiles” on page 512](#).
- Clear the selected UTM profiles—Click **Clear All Selections** to clear any UTM profiles that you might have selected.
- View the details of a UTM profile—Select the UTM profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The UTM Profile Details page appears. [Table 170 on page 508](#) describes the fields on this page.
- Search for UTM profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 169 on page 507](#) describes the fields on the UTM Profiles page.

**Table 169: UTM Profiles Page Fields**

Field	Description
Name	Name of the UTM profile.
Antispam	Information about the antispam profile associated with the UTM profile.
Antivirus	Information about the antivirus profiles associated with the UTM profile.
Content Filtering	Information about the content filtering profiles associated with the UTM profile.
Web Filtering	Information about the Web filtering profile associated with the UTM profile.
Description	Description of the UTM profile.

Table 170: UTM Profile Details Page Fields

Field	Description
<b>General Information</b>	
Name	Name of the UTM profile.
Description	Description of the UTM profile.
<b>Traffic Options</b>	
Action When Connection Limit Is Reached	Action to be taken when the configured connection limit per client is reached.
<b>Web Filtering Profile</b>	
HTTP	Web filtering profile to be used for HTTP traffic.
<b>Antivirus Profile</b>	
HTTP	Antivirus profile to be used for HTTP traffic.
FTP Upload	Antivirus profile to be used for FTP upload traffic.
FTP Download	Antivirus profile to be used for FTP download traffic.
IMAP	Antivirus profile to be used for IMAP traffic.
SMTP	Antivirus profile to be used for SMTP traffic.
POP3	Antivirus profile to be used for POP3 traffic.
<b>Antispam Profile</b>	
SMTP	Antispam profile to be used for SMTP traffic.

## RELATED DOCUMENTATION

[Creating UTM Profiles](#) | 509

# Creating UTM Profiles

Use the Create UTM Profiles page to configure UTM profiles. Unified threat management (UTM) consolidates several security features to protect against multiple threat types. The Create UTM Profiles wizard provides step-by-step procedures to create a UTM profile. You can configure antispam, antivirus, Web filtering, and content filtering profiles by launching the respective wizards from the wizard.

To create a UTM profile:

1. Select **Configuration > Unified Threat Mgmt > UTM Profiles** in Customer Portal.

The UTM Profiles page appears.

2. Click the add icon (+) to create a new UTM profile.

The Create UTM Profiles wizard appears, displaying brief instructions about creating a UTM profile.

3. Click **Next** to navigate to the next page.

4. Complete the configuration according to the guidelines provided in [Table 171 on page 509](#).

**NOTE:** Fields marked with \* are mandatory.

5. Click **Finish**.

A UTM profile is created. You are returned to the UTM Profiles page where a confirmation message is displayed. After you create a UTM profile, you can assign it to a firewall policy intent on the Firewall Policy page.

Table 171: UTM Profile Settings

Setting	Guideline
<b>General</b>	
<b>Name</b>	Enter a unique name for the UTM profile. The maximum length is 29 characters.
<b>Description</b>	Enter a description for the UTM profile. The maximum length is 255 characters.
<b>Traffic Options</b>	
<b>NOTE:</b> In an attempt to consume all available resources, a malicious user might generate a large amount of traffic all at once. To prevent such activity from succeeding, you can impose traffic options.	

Table 171: UTM Profile Settings (*continued*)

Setting	Guideline
<b>Connection Limit per Client</b>	Specify the connection limit per client for client connections on the device. The default is 2000 and a value of 0 means that there is no connection limit.
<b>Action when connection limit is reached</b>	Specify the action that must be taken when the connection limit is reached. The available actions are No action (default), Log and permit, and Block.  Click <b>Next</b> to continue.
<b>Web Filtering</b>	
<b>HTTP</b>	Select the Web filtering profile to be applied for HTTP traffic.  Alternatively, click <b>Create Another Profile</b> to create a Web filtering profile. The Create Web Filtering Profiles wizard appears. See <a href="#">“Creating Web Filtering Profiles” on page 516</a> for an explanation of the fields on this wizard.  Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.
<b>Antivirus</b>	
<b>Apply to all protocols</b>	Select this check box to apply a single antivirus profile to all traffic protocols. and then specify the profile in the <b>Default Profile</b> field.  Clear the check box if you want to apply traffic-specific profiles.
<b>Default Profile</b>	Select the antivirus profile to be applied to all traffic protocols.  Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.
<b>NOTE:</b> Click <b>Create Another Profile</b> to create an antivirus profile that you can then assign. The Create Antivirus Profiles wizard appears. See <a href="#">“Creating Antivirus Profiles” on page 524</a> for an explanation of the fields on this wizard.	
<b>HTTP</b>	Select the antivirus profile to be applied to HTTP traffic.
<b>FTP Upload</b>	Select the antivirus profile to be applied to FTP upload traffic.
<b>FTP Download</b>	Select the antivirus profile to be applied to FTP download traffic.
<b>IMAP</b>	Select the antivirus profile to be applied to IMAP traffic.
<b>SMTP</b>	Select the antivirus profile to be applied to SMTP traffic.

Table 171: UTM Profile Settings (*continued*)

Setting	Guideline
POP3	<p>Select the antivirus profile to be applied to POP3 traffic.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<b>Antispam</b>	
SMTP	<p>Select the antispam profile to be applied for SMTP traffic.</p> <p>Alternatively, click <b>Create Another Profile</b> to create an antispam profile. The Create Antispam Profiles wizard appears. See <a href="#">“Creating Antispam Profiles” on page 530</a> for an explanation of the fields on this wizard.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<b>Content Filtering</b>	
Apply to all protocols	<p>Select this check box to apply a single content filtering profile to all traffic protocols, and then specify the profile in the <b>Default Profile</b> field.</p> <p>Clear the check box if you want to apply traffic-specific profiles.</p>
Default Profile	<p>Select the content filtering profile to be applied to all traffic protocols.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<p><b>NOTE:</b> Click <b>Create Another Profile</b> to create a content filtering profile that you can then assign. The Create Content Filtering Profiles wizard appears. See <a href="#">“Creating Content Filtering Profiles” on page 536</a> for an explanation of the fields on this wizard.</p>	
HTTP	Select the content filtering profile to be applied to HTTP traffic.
FTP Upload	Select the content filtering profile to be applied to FTP upload traffic.
FTP Download	Select the content filtering profile to be applied to FTP download traffic.
IMAP	Select the content filtering profile to be applied to IMAP traffic.
SMTP	Select the content filtering profile to be applied to SMTP traffic.
POP3	<p>Select the content filtering profile to be applied to POP3 traffic.</p> <p>Click <b>Back</b> to go the preceding step.</p>

## RELATED DOCUMENTATION

[About the UTM Profiles Page | 507](#)

[Configuring UTM Settings | 505](#)

## Editing, Cloning, and Deleting UTM Profiles

### IN THIS SECTION

- [Editing UTM Profiles | 512](#)
- [Cloning UTM Profiles | 513](#)
- [Deleting UTM Profiles | 513](#)

You can edit, clone, and delete UTM profiles from the UTM Profiles page. This topic has the following sections:

### Editing UTM Profiles

To modify the parameters configured for a UTM profile:

**NOTE:** You cannot modify the default profiles already present in the system.

1. Select **Configuration > Unified Threat Mgmt > UTM Profiles** in Customer Portal.

The UTM Profiles page appears, displaying the existing UTM profiles.

2. Select the UTM profile that you want to edit and click the edit icon (pencil). Alternatively, right-click a profile and select **Edit Profile**.

The Edit UTM Profiles page appears, displaying the same fields that are presented when you create a UTM profile.

3. Modify the UTM profile fields as needed.

4. Click **OK** to save your changes.



You are taken to the UTM Profiles page. A confirmation message appears indicating the status of the edit operation.

## Cloning UTM Profiles

Cloning enables you to easily create a new UTM profile based on an existing one.

To clone a UTM profile:

1. Select **Configuration > Unified Threat Mgmt > UTM Profiles** in Customer Portal.

The UTM Profiles page appears, displaying the existing UTM profiles.

2. Select the UTM profile that you want to clone and then select **More > Clone**. Alternatively, right-click a profile and select **Clone**.

The Clone UTM Profiles page appears, displaying the same fields that are presented when you create a UTM profile.

3. Modify the UTM profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the UTM Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting UTM Profiles

**NOTE:** Before deleting a UTM profile, ensure that the profile is not used in a firewall policy intent. If you try to delete a profile that is used in a firewall policy intent, an error message is displayed.

To delete one or more UTM profiles:

1. Select **Configuration > Unified Threat Mgmt > UTM Profiles** in Customer Portal.

The UTM Profiles page appears, displaying the existing UTM profiles.

2. Select one or more UTM profiles that you want to delete and click the delete icon (X). Alternatively, right-click a profile and select **Delete Profile**.

An alert message appears, asking you to confirm the delete operation.

- Click **Yes** to delete the selected UTM profiles.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

[Creating UTM Profiles | 509](#)

[About the UTM Profiles Page | 507](#)

## About the Web Filtering Profiles Page

To access this page, select **Configuration > Unified Threat Mgmt > Web Filtering Profiles** in Customer Portal.

Use the Web Filtering Profiles page to view and manage Web filtering profiles. Web filtering profiles enable you to manage Internet usage by preventing access to inappropriate Web content over HTTP. [Table 172 on page 514](#) lists the Web filtering solutions that are supported and the license requirements.

**Table 172: Web Filtering Solutions Supported**

Type	Description	License Requirement
Integrated Web Filtering	Blocks or permits Web access after the device identifies the category for a URL, either from user-defined categories or from a category server (SurfControl Content Portal Authority provided by Websense).	A separately licensed subscription service
Redirect Web Filtering	Intercepts HTTP requests and forwards the server URL to an external URL filtering server to determine whether to block or permit the requested Web access. Websense provides the URL filtering server.	Does not require a license.
Juniper Local Web Filtering	Intercepts every HTTP request in a TCP connection. In this case, the decision making is done on the device after it looks up a URL to determine whether it is in the allowlist or blocklist based on its user-defined category.	Does not require a license or a remote category server

## Tasks You Can Perform

You can perform the following tasks from this page:

- Create a Web filtering profile—See [“Creating Web Filtering Profiles” on page 516](#).
- Edit, clone, or delete a Web filtering profile—See [“Editing, Cloning, and Deleting Web Filtering Profiles” on page 520](#).
- Clear the selected Web filtering profiles—Click **Clear All Selections** to clear any Web filtering profiles that you might have selected.
- View the details of a Web filtering profile—Select the Web filtering profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The Web Filtering Profile Details page appears. [Table 174 on page 515](#) describes the fields on this page.
- Search for Web filtering profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

## Field Descriptions

[Table 173 on page 515](#) describes the fields on the Web Filtering Profiles page.

**Table 173: Web Filtering Profiles Page Fields**

Field	Description
Name	Name of the Web filtering profile.
Profile Type	Type of engine used for the profile: Juniper-enhanced or Websense redirect.
Default Action	Default action taken when the specified connection limit per client is reached.
Timeout	
Description	Description of the Web filtering profile.

**Table 174: Web Filtering Profile Details Page Fields**

Field	Description
<b>General Information</b>	
Name	Name of the Web filtering profile.
Description	Description of the Web filtering profile.
Engine Type	Type of engine used for the profile: Juniper-enhanced or Websense redirect.
Default Action	Default action taken when the specified connection limit per client is reached.

Table 174: Web Filtering Profile Details Page Fields (*continued*)

Field	Description
Fallback Options	
Default Action	Action taken for URL categories with no assigned action and for uncategorized URLs. This action is taken only if no reputation action is assigned.
Global Reputation Actions	Actions taken for the following site reputations: <ul style="list-style-type: none"> <li>• Very Safe</li> <li>• Moderately Safe</li> <li>• Fairly Safe</li> <li>• Suspicious</li> <li>• Harmful</li> </ul>
URL Categories	URL categories associated with the Web filtering profile.

## RELATED DOCUMENTATION

[Creating Web Filtering Profiles | 516](#)
[Editing, Cloning, and Deleting Web Filtering Profiles | 520](#)

## Creating Web Filtering Profiles

Web filtering profiles enable you to manage Internet usage by preventing access to inappropriate Web content over HTTP.

To create a Web filtering profile:

1. Select **Configuration > Unified Threat Mgmt > Web Filtering Profiles** in Customer Portal.

The Web Filtering Profiles page appears.

2. Click the add icon (+) to create a new Web filtering profile.

The Create Web Filtering Profiles wizard appears, displaying brief instructions about creating a Web filtering profile.

3. Click **Next** to navigate to the next page.

4. Complete the configuration according to the guidelines provided in [Table 175 on page 517](#).

**NOTE:** Fields marked with \* are mandatory.

5. Click **Finish**.

A Web filtering profile is created, which you can associate with a UTM profile. You are returned to the Web Filtering Profiles page where a confirmation message is displayed.

**Table 175: Creating Web Filtering Profiles Settings**

Setting	Guideline
<b>General Information</b>	
<b>Name</b>	Enter a unique name for the Web filtering profile. The maximum length is 29 characters.
<b>Description</b>	Enter a description for the Web filtering profile. The maximum length is 255 characters.
<b>Timeout</b>	Enter a timeout (in seconds) to wait for a response from the Websense server. The default is 15 seconds and the maximum is 1000 seconds.
<b>Engine Type</b>	Select an engine type for Web filtering: <ul style="list-style-type: none"> <li>• (Default) Juniper Enhanced—UTM-enhanced Web filtering.</li> <li>• Websense Redirect—Redirect Web filtering profile.</li> </ul>
<b>Safe Search</b>	Select the check box (default) to ensure that embedded objects, such as images on the URLs received from the search engines, are safe and that undesirable content is not returned to the client.  Clear the check box to disable safe search redirects.  <b>NOTE:</b> This option is available only for the Juniper Enhanced engine type. Safe search redirect supports only HTTP and you cannot extract the URL for HTTPS. Therefore, it is not possible to generate a redirect response for HTTPS search URLs.
<b>Custom Block Message/URL</b>	Specify the redirect URL or a custom message to be sent when HTTP requests are blocked. The maximum length is 512 characters.  <b>NOTE:</b> If a message begins with http: or https:, the message is considered a block message URL. Messages that begin with values other than http: or https: are considered custom block messages.  Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.

Table 175: Creating Web Filtering Profiles Settings (*continued*)

Setting	Guideline
<b>Custom Quarantine Message</b>	<p>Define a custom message to allow or deny access to a blocked site based on a user's response to the message. The maximum length is 512 characters.</p> <p>The quarantine message contains the following information:</p> <ul style="list-style-type: none"> <li>• URL name</li> <li>• Quarantine name</li> <li>• Category (if available)</li> <li>• Site reputation (if available)</li> </ul> <p>For example, if you set the action for <code>Enhanced_Search_Engines_and_Portals</code> to quarantine, and you try to access <code>www.search.yahoo.com</code>, the quarantine message is as follows: <b>***The requested webpage is blocked by your organization's access policy***</b>.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<b>Account</b>	Specify the user account associated with the Websense Web filtering profile.
<b>Server</b>	Specify the hostname or IP address for the Websense server.
<b>Port</b>	<p>Specify the port number to use to communicate with the Websense server. The default port value is 15968.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<b>Sockets</b>	Enter the number of sockets used for communication between the client and the server. The default value is 8.
<b>URL Categories</b>	
<b>Deny Action List</b>	<p>Click the <b>Add URL Categories</b> button to specify a list of URL categories that should be denied access.</p> <p>The Select URL Categories page appears. Complete the configuration according to the guidelines provided in <a href="#">Table 176 on page 520</a>.</p> <p>The list of URL categories selected is displayed in a text box.</p>
<b>Log &amp; Permit Action List</b>	<p>Specify a list of URL categories that are logged and then permitted.</p> <p>The Select URL Categories page appears. Complete the configuration according to the guidelines provided in <a href="#">Table 176 on page 520</a>.</p> <p>The list of URL categories selected is displayed in a text box.</p>

Table 175: Creating Web Filtering Profiles Settings (*continued*)

Setting	Guideline
<b>Permit Action List</b>	<p>Specify a list of URL categories that should be permitted access.</p> <p>The Select URL Categories page appears. Complete the configuration according to the guidelines provided in <a href="#">Table 176 on page 520</a></p> <p>The list of URL categories selected is displayed in a text box.</p>
<b>Quarantine Action List</b>	<p>Specify a list of URL categories that should be quarantined.</p> <p>The Select URL Categories page appears. Complete the configuration according to the guidelines provided in <a href="#">Table 176 on page 520</a>.</p> <p>The list of URL categories selected is displayed in a text box.</p> <p>Click <b>Back</b> to go the preceding step or click <b>Next</b> to go to the next step.</p>
<b>Fallback Options</b>	
<b>Global Reputation Actions</b>	<p>Select this check box (default) if you want to apply global reputation actions.</p> <p>Enhanced Web filtering intercepts HTTP and HTTPS requests and sends the HTTP URL or the HTTPS source IP to the Websense ThreatSeeker Cloud (TSC). The TSC categorizes the URL into one of the predefined categories and also provides site reputation information for the URL to the device. The device determines if it can permit or block the request based on the information provided by the TSC.</p> <p>The URLs can be processed using their reputation score if there is no category available. Select the action that you want to take for the uncategorized URLs based on their reputation score:</p> <ul style="list-style-type: none"> <li>● <b>Very Safe</b>—Permit, log and permit, block, or quarantine a request if a site reputation of 90 through 100 is returned. By default, Permit is selected.</li> <li>● <b>Moderately Safe</b>—Permit, log and permit, block, or quarantine a request if a site reputation of 80 through 89 is returned. By default, Log and Permit is selected.</li> <li>● <b>Fairly Safe</b>—Permit, log and permit, block or quarantine a request if a site-reputation of 70 through 79 is returned. By default, Log and Permit is selected.</li> <li>● <b>Suspicious</b>—Permit, log and permit, block, or quarantine a request if a site reputation of 60 through 69 is returned. By default, Quarantine is selected.</li> <li>● <b>Harmful</b>—Permit, log and permit, block, or quarantine a request if a site reputation of zero through 59 is returned. By default, Block is selected.</li> </ul>
<b>Default Action</b>	<p>Choose the actions to be taken for URL categories with no assigned action and for uncategorized URLs. This is used only if no reputation action is assigned.</p>

Table 175: Creating Web Filtering Profiles Settings (*continued*)

Setting	Guideline
<b>Fallback Action</b>	<p>Select the fallback action, which is used when:</p> <ul style="list-style-type: none"> <li>• The ThreatSeeker Websense Cloud servers are unreachable.</li> <li>• A timeout occurs for requests to ThreatSeeker Cloud.</li> <li>• There are too many requests to be handled by the device.</li> </ul>

Table 176: Select URL Categories Settings

Setting	Guideline
<b>Show</b>	<p>Choose which URL categories should be displayed for selection: <b>All categories</b>, <b>Custom URL categories</b>, or <b>Websense URL categories</b>.</p> <p>The <b>Available</b> column of the <b>URL Categories</b> field displays URL categories based on your selection.</p>
<b>URL Categories</b>	<p>Select one or more URL categories in the <b>Available</b> column and click the forward arrow to confirm your selection. The selected URL categories are displayed in the <b>Selected</b> column.</p> <p>Alternatively, click <b>Create New URL Category</b> to create a URL category and assign it to the URL category. The Create URL Categories page appears; for more information, see <a href="#">“Creating URL Categories” on page 547</a>.</p> <p>Click <b>OK</b> to confirm your selection. You are returned to the Create Web Filtering Profiles page.</p>

## RELATED DOCUMENTATION

| [Creating UTM Profiles | 509](#)

## Editing, Cloning, and Deleting Web Filtering Profiles

### IN THIS SECTION

- [Editing Web Filtering Profiles | 521](#)
- [Cloning Web Filtering Profiles | 521](#)
- [Deleting Web Filtering Profiles | 522](#)



You can edit, clone, and delete Web filtering profiles from the Web Filtering Profiles page. This topic has the following sections:

## Editing Web Filtering Profiles

To modify the parameters configured for a Web filtering profile:

**NOTE:** You cannot modify the default profiles already present in the system.

1. Select **Configuration > Unified Threat Mgmt > Web Filtering Profiles** in Customer Portal.  
The Web Filtering Profiles page appears, displaying the existing Web filtering profiles.
2. Select the Web filtering profile that you want to edit and click the edit icon (pencil). Alternatively, right-click a profile and select **Edit Profile**.  
The Edit Web Filtering Profiles page appears, displaying the same fields that are presented when you create a Web filtering profile.
3. Modify the Web filtering profile fields as needed.
4. Click **OK** to save your changes.  
You are taken to the Web Filtering Profiles page. A confirmation message appears, indicating the status of the edit operation.

## Cloning Web Filtering Profiles

Cloning enables you to easily create a new Web filtering profile based on an existing one.

To clone a Web filtering profile:

1. Select **Configuration > Unified Threat Mgmt > Web Filtering Profiles** in Customer Portal.  
The Web Filtering Profiles page appears, displaying the existing Web filtering profiles.
2. Select the Web filtering profile that you want to clone and then select **More > Clone**. Alternatively, right-click a profile and select **Clone**.  
The Clone Web Filtering Profiles page appears, displaying the same fields that are presented when you create a Web filtering profile.

3. Modify the Web filtering profile fields as needed.
4. Click **OK** to save your changes.

You are taken to the Web Filtering Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting Web Filtering Profiles

Before deleting a Web filtering profile, ensure that the profile is not used in a UTM profile that is, in turn, used in a firewall policy intent. If you try to delete a Web filtering profile that is used in a firewall policy intent, an error message is displayed.

To delete one or more Web filtering profiles:

1. Select **Configuration > Unified Threat Mgmt > Web Filtering Profiles** in Customer Portal.  
The Web Filtering Profiles page appears, displaying the existing Web filtering profiles.
2. Select one or more Web filtering profiles that you want to delete and click the delete icon (X).  
Alternatively, right-click a profile and select **Delete Profile**.  
An alert message appears, asking you to confirm the delete operation.
3. Click **Yes** to delete the selected Web filtering profiles.  
A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

[Creating Web Filtering Profiles | 516](#)

[About the Web Filtering Profiles Page | 514](#)

## About the Antivirus Profiles Page

To access this page, select **Configuration > Unified Threat Mgmt > Antivirus Profiles** in Customer Portal.

Use the Antivirus Profiles page to view and manage antivirus profiles. Antivirus profiles enable you to inspect files transmitted over several protocols (HTTP, FTP upload and download, IMAP, SMTP, and POP3) to determine whether the files exchanged are known malicious files, similar to how desktop antivirus software scans files for the same purpose.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create an antivirus profile—See [“Creating Antivirus Profiles” on page 524](#).
- Edit, clone, or delete an antivirus profile—See [“Editing, Cloning, and Deleting Antivirus Profiles” on page 527](#).
- Clear the selected antivirus profiles—Click **Clear All Selections** to clear any antivirus profiles that you might have selected.
- View the details of an antivirus profile—Select the antivirus profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The Antivirus Profile Details page appears. [Table 178 on page 523](#) describes the fields on this page.
- Search for antivirus profiles by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

Field Descriptions

[Table 177 on page 523](#) describes the fields on the Antivirus Profiles page.

Table 177: Antivirus Profiles Page Fields

Field	Description
Name	Name of the antivirus profile.
Profile Type	Type of engine used for the profile.
Content Size Limit	Content size limit, in kilobytes, refers to accumulated TCP payload size.
Trickling Timeout	Number of seconds to wait for a response from the server.
Description	Description of the antivirus profile.

Table 178: Antivirus Profiles Details Page Fields

Field	Description
General Information	
Name	Name of the antivirus profile.
Description	Description of the antivirus profile.

Table 178: Antivirus Profiles Details Page Fields (*continued*)

Field	Description
Engine Type	Type of engine used for the profile.
Scan Options	
Content Size Limit	Content size limit, in kilobytes, refers to accumulated TCP payload size.
Fallback Options	
Default Action	Displays the default fallback action taken when the antivirus system encounters errors.
Content Size	Displays the actions taken if the content size exceeds a set limit.
Engine Error	Displays the action taken when an engine error occurs.

## RELATED DOCUMENTATION

| [Creating UTM Profiles](#) | 509

## Creating Antivirus Profiles

Use the Create Antivirus Profiles page to configure antivirus profiles. The antivirus profile defines the content to scan for any malware and the action to be taken when malware is detected. After you create a profile, you can assign it to UTM profiles.

To create an antivirus profile:

1. Select **Configuration > Unified Threat Mgmt > Antivirus Profiles** in Customer Portal.

The Antivirus Profiles page appears.

2. Click the add icon (+) to create a new antivirus profile.

The Create Antivirus Profiles wizard appears, displaying brief instructions about creating an antivirus profile.

3. Click **Next** to navigate to the next page.

4. Complete the configuration according to the guidelines provided in [Table 179 on page 525](#).

**NOTE:** Fields marked with \* are mandatory.

5. Click **Finish**.

A summary page is displayed. Review the settings, and if you need to make any modifications, click the **Edit** link or the **Back** button.

6. Click **OK** to save the settings and create the profile.

A message indicating the status of the create operation is displayed.

7. Click **Close**.

You are returned to the Antivirus Profiles page.

**Table 179: Antivirus Profile Settings**

Setting	Guideline
<b>General Information</b>	
Name	Enter a unique name for the antivirus profile. The maximum length is 29 characters.
Description	Enter a description for the antivirus profile. The maximum length is 255 characters.
Engine Type	Displays the engine type used for scanning. Currently, <b>Sophos</b> is the only antivirus engine supported.  Sophos antivirus is an in-the-cloud antivirus solution. The virus and malware database is located on external servers maintained by Sophos (Sophos Extensible List) servers, thus there is no need to download and maintain large pattern databases on the Juniper Networks device.
<b>Fallback Options</b>	

Table 179: Antivirus Profile Settings (*continued*)

Setting	Guideline
	<p>Fallback options are used when the antivirus system experiences errors and must fall back to one of the previously configured actions to either deny (block) or permit the object.</p> <p>Specify the fallback options to use when there is a failure, or select the default action if no specific options are to be configured:</p> <ul style="list-style-type: none"> <li>• <b>Content Size</b>—Select an option to specify whether the content should be blocked (default) or logged and permitted if the content size the previously defined limit.</li> <li>• <b>Content Size Limit</b>—Enter the content size limit in kilobytes (KB) based on which action is taken. The range is 20 through 40,000 KB. The content size limit check occurs before the scan request is sent. The content size refers to accumulated TCP payload size.</li> <li>• <b>Engine Error</b>—Select the action to take (<b>Block</b> [default] or <b>Log and Permit</b>) when an engine error occurs.  The term <i>engine error</i> refers all engine errors, including engine not ready, timeout, too many requests, password protected, corrupt file, decompress layer, and out of resources.</li> <li>• <b>Default Action</b>—Select the default action (<b>Block</b> [default] or <b>Log and Permit</b>) to take when an error occurs.</li> </ul>
<b>Notification Options</b>	
	<p>Use the notification options to configure a method of notifying the user when a fallback occurs or a virus is detected:</p> <ul style="list-style-type: none"> <li>• <b>Fallback Deny</b>—Select this option to notify mail senders that their messages were blocked.</li> <li>• <b>Fallback Non-Deny</b>—Select this option to warn mail recipients that they received unblocked messages despite problems.</li> <li>• <b>Virus Detected</b>—Select this option to notify mail recipients that their messages were blocked.</li> </ul>

## RELATED DOCUMENTATION

| [Creating UTM Profiles](#) | 509

## Editing, Cloning, and Deleting Antivirus Profiles

### IN THIS SECTION

- [Editing Antivirus Profiles | 527](#)
- [Cloning Antivirus Profiles | 527](#)
- [Deleting Antivirus Profiles | 528](#)

You can edit, clone, and delete antivirus profiles from the Antivirus Profiles page. This topic has the following sections:

### Editing Antivirus Profiles

To modify the parameters configured for an antivirus profile:

**NOTE:** You cannot modify the default profiles already present in the system.

1. Select **Configuration > Unified Threat Mgmt > Antivirus Profiles** in Customer Portal.

The Antivirus Profiles page appears, displaying the existing antivirus profiles.

2. Select the antivirus profile that you want to edit and then select the edit icon (pencil). Alternatively, right-click a profile and select **Edit Antivirus Profile**.

The Edit Antivirus Profiles page appears, displaying the same fields that are presented when you create an antivirus profile.

3. Modify the antivirus profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Antivirus Profiles page. A confirmation message appears, indicating the status of the edit operation.

### Cloning Antivirus Profiles

Cloning enables you to easily create a new antivirus profile based on an existing one.

To clone an antivirus profile:

1. Select **Configuration > Unified Threat Mgmt > Antivirus Profiles** in Customer Portal.

The Antivirus Profiles page appears, displaying the existing antivirus profiles.

2. Select the antivirus profile that you want to clone and then select **More > Clone**. Alternatively, right-click a profile and select **Clone**.

The Clone Antivirus Profiles page appears, displaying the same fields that are presented when you create an antivirus profile.

3. Modify the antivirus profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Antivirus Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting Antivirus Profiles

Before deleting an antivirus profile, ensure that the profile is not used in a UTM profile that is, in turn, used in a firewall policy intent. If you try to delete an antivirus profile that is used in a firewall policy intent, an error message is displayed.

To delete one or more antivirus profiles:

1. Select **Configuration > Unified Threat Mgmt > Antivirus Profiles** in Customer Portal.

The Antivirus Profiles page appears, displaying the existing antivirus profiles.

2. Select one or more antivirus profiles that you want to delete and then select the delete icon (X). Alternatively, right-click a profile and select **Delete Antivirus Profiles**.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected antivirus profiles.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

---

[Creating Antivirus Profiles | 524](#)

[About the Antivirus Profiles Page | 522](#)



## About the Antispam Profiles Page

To access this page, select **Configuration > Unified Threat Mgmt > Antispam Profiles** in Customer Portal.

Use the Antispam Profiles page to view and manage antispam profiles. An antispam profile is used to examine transmitted e-mail messages to identify e-mail spam by using a constantly updated spam block list.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create an antispam profile—See [“Creating Antispam Profiles” on page 530](#).
- Edit, clone, or delete an antispam profile—See [“Editing, Cloning, and Deleting Antispam Profiles” on page 532](#).
- Clear the selected antispam profiles—Click **Clear All Selections** to clear any antispam profiles that you might have selected.
- View the details of an antispam profile—Select the antispam profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The Antispam Profile Details page appears. [Table 181 on page 530](#) describes the fields on this page.
- Search for antispam profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 180 on page 529](#) describes the fields on the Antispam Profiles page.

**Table 180: Antispam Profiles Page Fields**

Field	Description
<b>Name</b>	Name of the antispam profile.
<b>Blacklist</b>	Indicates whether server-based spam filtering or local spam filtering is used.
<b>Action</b>	Action to be taken when spam is detected.
<b>Custom Tag</b>	Custom-defined tag that identifies an e-mail message as spam.
<b>Description</b>	Description of the antispam profile.

Table 181: Antispam Profile Details Page Fields

Field	Description
<b>Name</b>	Name of the antispam profile.
<b>Description</b>	Description of the antispam profile.
<b>Sophos Blacklist</b>	Indicates whether Sophos Blacklist is enabled (server-based filtering) or disabled (local filtering).
<b>Default Action</b>	Action to be taken when spam is detected.
<b>Custom Tag</b>	Custom-defined tag that identifies an e-mail message as spam.

## RELATED DOCUMENTATION

[Creating UTM Profiles](#) | 509

## Creating Antispam Profiles

Use the Create Antispam Profiles page to configure antispam profiles.

E-mail spam consists of unwanted e-mail messages usually sent by commercial, malicious, or fraudulent entities. When the device detects an e-mail message deemed to be spam, it either blocks the message or tags the message header or subject field with a preprogrammed string. Antispam filtering allows you to use a third-party server-based spam block list (SBL) and to optionally create your own local allowlists (benign) and blocklists (malicious) for filtering against e-mail messages.

**NOTE:** Sophos updates and maintains the IP-based SBL. Antispam is a separately licensed subscription service.

After you create an antispam profile, you can assign it to UTM profiles.

To create an antispam profile:

1. Select **Configuration > Unified Threat Mgmt > Antispam Profiles** in Customer Portal.

The Antispam Profiles page appears.

2. Click the add icon (+) to create a new antispam profile.

The Create Antispam Profiles wizard appears, displaying brief instructions about creating an antispam profile.

3. Complete the configuration according to the guidelines provided in [Table 182 on page 531](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** save the settings and create the profile.

A message indicating the status of the create operation is displayed. You are returned to the Antispam Profiles page.

**Table 182: Antispam Profile Settings**

Setting	Guideline
<b>General Information</b>	
<b>Name</b>	Enter a unique name for the antispam profile. The maximum length is 29 characters.
<b>Description</b>	Enter a description for the antispam profile. The maximum length is 255 characters.
<b>Sophos Blacklist</b>	<p>Select this check box (the default) to use server-based spam filtering. If you clear the check box, local spam filtering is used.</p> <p>Server-based antispam filtering requires Internet connectivity with the spam block list (SBL) server. Domain Name Service (DNS) is required to access the SBL server. The firewall performs SBL lookups through the DNS protocol.</p> <p><b>NOTE:</b> Server-based spam filtering supports only IP-based SBL blocklist lookup. Sophos updates and maintains the IP-based spam block list. Server-based antispam filtering is a separately licensed subscription service.</p>
<b>Action</b>	

Table 182: Antispam Profile Settings (continued)

Setting	Guideline
Default Action	Select the action to be taken when spam is detected: <ul style="list-style-type: none"><li>• Tag Email Subject Line</li><li>• Tag SMTP Header</li><li>• Block Email</li><li>• None</li></ul>
Custom Tag	Enter a custom string for identifying a message as spam. The maximum length is 512 characters and the default is <b>***SPAM***</b> .

RELATED DOCUMENTATION

| [Creating UTM Profiles](#) | 509

Editing, Cloning, and Deleting Antispam Profiles

IN THIS SECTION

- [Editing Antispam Profiles](#) | 533
- [Cloning Antispam Profiles](#) | 533
- [Deleting Antispam Profiles](#) | 534

You can edit, clone, and delete antispam profiles from the Antispam Profiles page. This topic has the following sections:

## Editing Antispam Profiles

To modify the parameters configured for an antispam profile:

**NOTE:** You cannot modify the default profiles already present in the system.

1. Select **Configuration > Unified Threat Mgmt > Antispam Profiles** in Customer Portal.

The Antispam Profiles page appears, displaying the existing antispam profiles.

2. Select the antispam profile that you want to edit and click the edit icon (pencil). Alternatively, right-click a profile and select **Edit Antispam Profile**.

The Edit Antispam Profiles page appears, displaying the same fields that are presented when you create an antispam profile.

3. Modify the antispam profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Antispam Profiles page. A confirmation message appears, indicating the status of the edit operation.

## Cloning Antispam Profiles

Cloning enables you to easily create a new antispam profile based on an existing one.

To clone an antispam profile:

1. Select **Configuration > Unified Threat Mgmt > Antispam Profiles** in Customer Portal.

The Antispam Profiles page appears displaying the existing antispam profiles.

2. Select the antispam profile that you want to clone and then select **More > Clone**. Alternatively, right-click a profile and select **Clone**.

The Clone Antispam Profiles page appears, displaying the same fields that are presented when you create an antispam profile.

3. Modify the antispam profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Antispam Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting Antispam Profiles

Before deleting an antispam profile, ensure that the profile is not used in a UTM profile that is, in turn, used in a firewall policy intent. If you try to delete an antispam profile that is used in a firewall policy intent, an error message is displayed.

To delete one or more antispam profiles:

1. Select **Configuration > Unified Threat Mgmt > Antispam Profiles** in Customer Portal.

The Antispam Profiles page appears, displaying the existing antispam profiles.

2. Select one or more antispam profiles that you want to delete and click the delete icon (X). Alternatively, right-click a profile and select **Delete Antispam Profiles**.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected antispam profiles.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

| [About the Antispam Profiles Page](#) | 529

## About the Content Filtering Profiles Page

To access this page, select **Configuration > Unified Threat Mgmt > Content Filtering Profiles** in Customer Portal.

Use the Content Filtering Profiles page to view and manage content filtering profiles. Content filtering profiles enable you to block or permit certain types of traffic over several protocols (HTTP, FTP upload and download, IMAP, SMTP, and POP3) based on the MIME type, file extension, protocol command, and embedded object type.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Create a content filtering profile—See [“Creating Content Filtering Profiles” on page 536](#).
- Edit, clone, or delete a content filtering profile—See [“Editing, Cloning, and Deleting Content Filtering Profiles” on page 540](#).
- Clear the selected content filtering profiles—Click **Clear All Selections** to clear any content filtering profiles that you might have selected.
- View the details of a content filtering profile—Select the content filtering profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The Content Filtering Profile Details page appears. [Table 184 on page 535](#) describes the fields on this page.
- Search for content filtering profiles by using keywords—Click the search icon, enter the search term in the text box, and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 183 on page 535](#) describes the fields on the Content Filtering Profiles page.

**Table 183: Content Filtering Profiles Page Fields**

Field	Description
Name	Name of the content filtering profile.
Permit Command List	List of protocol commands permitted by the content filtering profile.
Block Command List	List of protocol commands blocked by the content filtering profile.
Notification Type	Type of notification that is sent when content is blocked.
Description	Description of the content filtering profile.

**Table 184: Content Filtering Profiles Details Page Fields**

Field	Description
<b>General Information</b>	
Name	Name of the content filtering profile.
Description	Description of the content filtering profile.
<b>General Information</b>	
Notify Mail Sender	Specifies whether the option to notify the e-mail sender is enabled or disabled.

Table 184: Content Filtering Profiles Details Page Fields (*continued*)

Field	Description
Notification Type	Type of notification that is sent when content is blocked.
Custom Notification Message	Custom notification message that is sent when content is blocked.
Protocol Commands	
Command Block List	List of protocol commands permitted by the content filtering profile.
Command Permit List	List of protocol commands blocked by the content filtering profile.
Content Types	
Block Content Types	List of harmful content types to be blocked.
File Extensions	
Extension Block List	File extensions to be blocked.
MIME	
MIME Block List	List of MIME types to be blocked.
MIME Permit List	List of MIME types to be permitted.

## RELATED DOCUMENTATION

| [Creating UTM Profiles](#) | 509

## Creating Content Filtering Profiles

Use the Create Content Filtering Profiles page to configure content filtering profiles. Content filtering blocks or permits certain types of traffic based on the MIME type, file extension, and protocol command. The content filter controls file transfers across the device by checking traffic against configured filter lists. [Table 185 on page 537](#) displays the types of content filters that you can configure as part of a content filtering profile.



**NOTE:** The content filtering profile evaluates traffic before all other UTM profiles. Therefore, if traffic meets criteria configured in the content filter, the content filter acts first upon this traffic.

**Table 185: Supported Content Filter Types**

Type	Description
MIME pattern filter	<p>MIME patterns are used to identify the type of traffic in HTTP and MAIL protocols. There are two lists of MIME patterns that are used by the content filter to determine the action to be taken. The block MIME list contains a list of MIME type traffic that is to be blocked. The MIME exception list contains MIME patterns that are not to be blocked by the content filter and are generally subsets of items on the block list.</p> <p><b>NOTE:</b> The exception list has a higher priority than the block list.</p>
Block Extension List	<p>Because the name of a file is available during the transfers, using file extensions is a highly practical way to block or allow file transfers. All protocols support the use of the block extension list.</p>
Protocol Command Block and Permit Lists	<p>Different protocols use different commands to communicate between servers and clients. By blocking or allowing certain commands, traffic can be controlled on the protocol command level. The block or permit command lists are intended to be used in combination, with the permit list acting as an exception list to the block list.</p> <p><b>NOTE:</b> If a protocol command appears on both the permit list and the block list, the command is permitted.</p>

To create a content filtering profile:

1. Select **Configuration > Unified Threat Mgmt > Content Filtering Profiles** in Customer Portal.

The Content Filtering Profiles page appears.

2. Click the add icon (+) to create a new content filtering profile.

The Create Content Filtering Profiles wizard appears, displaying brief instructions about creating a content filtering profile.

3. Click **Next** to navigate to the next page.

4. Complete the configuration according to the guidelines provided in [Table 186 on page 538](#).

**NOTE:** Fields marked with \* are mandatory.

5. Click **Finish**.

A summary page is displayed. Review the settings and if you need to make any modifications click the **Edit** link or the **Back** button.

6. Click **OK** save the settings and create the profile.

A message indicating the status of the create operation is displayed.

7. Click **Close**.

You are returned to the Content Filtering Profiles page.

**Table 186: Content Filtering Profile Settings**

Setting	Guideline
<b>General Information</b>	
Name	Enter a unique name for the content filtering profile. The maximum length is 29 characters.
Description	Enter a description for the content filtering profile. The maximum length is 255 characters.
<b>Notification Options</b>	
<b>Notify Mail Sender</b>	Select this check box if you want to notify the sender when a failure occurs or a virus is detected. This check box is cleared by default.
<b>Notification Type</b>	Select the type of notification ( <b>Protocol</b> or <b>Message</b> ) from the drop-down list.
<b>Custom Notification Message</b>	Enter a custom notification message. The maximum length is 512 characters.
<b>Protocol Commands</b>	
<b>Command Block List</b>	<p>Enter the protocol commands to be blocked for the HTTP, FTP, SMTP, IMAP, and POP3 protocols. Use commas to separate each command.</p> <p>Protocol commands allow you to control traffic at the protocol-command level.</p>

Table 186: Content Filtering Profile Settings (*continued*)

Setting	Guideline
<b>Command Permit List</b>	Enter specific commands to be permitted for the HTTP, FTP, SMTP, IMAP, and POP3 protocols. Use commas to separate each command.
<b>Content Types</b>	
<b>Block Content Type</b>	<p>Use the content filter to block other types of harmful files that the MIME type or the file extension cannot control. Select from the following types of content blocking (supported only for HTTP):</p> <ul style="list-style-type: none"> <li>• Active X</li> <li>• Windows executables (.exe)</li> <li>• HTTP cookie</li> <li>• Java applet</li> <li>• ZIP files</li> </ul>
<b>File Extensions</b>	
<b>Extension Block List</b>	<p>Use a file extension list to define a set of file extensions to block over HTTP, FTP, SMTP, IMAP, and POP3.</p> <p>Enter file extensions to block separated by commas. For example, exe, pdf, js, and so on.</p>
<b>MIME Types</b>	
<b>MIME Block List</b>	Enter the MIME types you want to block over HTTP, FTP, SMTP, IMAP, and POP3 connections. Use commas to separate each MIME type.
<b>MIME Permit List</b>	Enter the MIME types you want to permit over HTTP, FTP, SMTP, IMAP, and POP3 connections. Use commas to separate each MIME type.

## RELATED DOCUMENTATION

[Creating UTM Profiles](#) | 509

## Editing, Cloning, and Deleting Content Filtering Profiles

### IN THIS SECTION

- [Editing Content Filtering Profiles | 540](#)
- [Cloning Content Filtering Profiles | 540](#)
- [Deleting Content Filtering Profiles | 541](#)

You can edit, clone, and delete content filtering profiles from the Content Filtering Profiles page. This topic has the following sections:

### Editing Content Filtering Profiles

To modify the parameters configured for a content filtering profile:

**NOTE:** You cannot modify the default profiles already present in the system.

1. Select **Configuration > Unified Threat Mgmt > Content Filtering Profiles** in Customer Portal.

The Content Filtering Profiles page appears, displaying the existing content filtering profiles.

2. Select the content filtering profile that you want to edit and click the edit icon (pencil). Alternatively, right-click a profile and select **Edit Profile**.

The Edit Content Filtering Profiles page appears, displaying the same fields that are presented when you create a content filtering profile.

3. Modify the content filtering profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Content Filtering Profiles page. A confirmation message appears, indicating the status of the edit operation.

### Cloning Content Filtering Profiles

Cloning enables you to easily create a new content filtering profile based on an existing one.

To clone a content filtering profile:

1. Select **Configuration > Unified Threat Mgmt > Content Filtering Profiles** in Customer Portal.

The Content Filtering Profiles page appears, displaying the existing content filtering profiles.

2. Select the content filtering profile that you want to clone and then select **More > Clone**. Alternatively, right-click a profile and select **Clone**.

The Clone Content Filtering Profiles page appears, displaying the same fields that are presented when you create a content filtering profile.

3. Modify the content filtering profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the Content Filtering Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting Content Filtering Profiles

Before deleting a content filtering profile, ensure that the profile is not used in a UTM profile that is, in turn, used in a firewall policy intent. If you try to delete a content filtering profile that is used in a firewall policy intent, an error message is displayed.

To delete one or more content filtering profiles:

1. Select **Configuration > Unified Threat Mgmt > Content Filtering Profiles** in Customer Portal.

The Content Filtering Profiles page appears, displaying the existing content filtering profiles.

2. Select one or more content filtering profiles that you want to delete and click the delete icon (X). Alternatively, right-click a profile and select **Delete Profile**.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected content filtering profiles.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

| [Creating Content Filtering Profiles](#) | 536

## About the URL Patterns Page

To access this page, select **Configuration > Unified Threat Mgmt > URL Patterns** in Customer Portal.

Use this page to view, create, edit, clone, and delete URL patterns. A URL pattern contains a list of URLs.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a URL pattern—See [“Creating URL Patterns” on page 543](#).
- Edit, clone, or delete a URL pattern—See [“Editing, Cloning, and Deleting URL Patterns” on page 544](#).
- Clear the selected URL patterns—Click **Clear All Selections** to clear any URL patterns that you might have selected.
- View the details of a URL pattern—Select the URL pattern for which you want to view the details and from the More or right-click menu, select **Detailed View**. The URL Pattern Details page appears displaying the fields shown in [Table 187 on page 542](#).
- Search for URL patterns using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 187 on page 542](#) describes the fields on the URL Patterns page.

Table 187: URL Patterns Page Fields

Field	Description
Name	Name of the URL pattern.
URLs	List of URLs in the URL pattern.
Description	Description of the URL pattern.

### RELATED DOCUMENTATION

[About the URL Categories Page](#) | [546](#)

## Creating URL Patterns

Use this page to create URL patterns. You can also assign URL patterns to a URL category.

To create a URL pattern:

1. Select **Configuration > Unified Threat Mgmt > URL Patterns** in Customer Portal.

The URL Patterns page appears.

2. Click the add icon (+) to create a URL pattern.

The Create URL Patterns page is displayed.

3. Complete the configuration according to the guidelines provided in [Table 188 on page 543](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.

A new URL pattern is created and you are returned to the URL Patterns page.

**Table 188: Create URL Patterns Settings**

Settings	Guidelines
Name	Enter a unique name for the URL pattern.  The name must begin with a letter or an underscore (_) and can contain alphanumeric characters and some special characters (_ -). The maximum length is 29 characters.
Description	Enter a description for the URL pattern. The maximum length is 255 characters.
URL Category	Select the URL category to which you want to assign the URL pattern. Alternatively, click <b>Create New URL Category</b> to create a URL category, enter the URL category name in the text box, and click <b>Save</b> to assign the URL pattern to the new category.

Table 188: Create URL Patterns Settings (continued)

Settings	Guidelines
Add URLs	<p>Enter one or more URLs (separated by commas) in the text box, and click <b>Add</b>. The URLs are displayed in the URL List table.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"><li>• The following wildcard characters are supported:<ul style="list-style-type: none"><li>• asterisk (*)</li><li>• period (.)</li><li>• square brackets ([])</li><li>• question mark (?)</li></ul></li><li>• Precede all wildcard characters with http://.</li><li>• The asterisk (*) can only be used at the beginning of a URL and must be followed by a period (.).</li><li>• The question mark (?) can only be used at the end of a URL.</li><li>• The following are examples of wildcard syntaxes that are supported: http://*.example.net, http://www.example.ne?, and http://www.example.n??.</li><li>• The following are examples of wildcard syntaxes that are not supported: *.example.???, http://*example.net, http://?, and www.example.ne?.</li></ul>

RELATED DOCUMENTATION

| [Creating URL Categories | 547](#)

Editing, Cloning, and Deleting URL Patterns

IN THIS SECTION

- [Editing URL Patterns | 545](#)
- [Cloning URL Patterns | 545](#)
- [Deleting URL Patterns | 546](#)



You can edit, clone, and delete URL patterns from the URL Patterns page. This topic has the following sections:

## Editing URL Patterns

To modify the parameters configured for a URL pattern:

1. Select **Configuration > Unified Threat Mgmt > URL Patterns** in Customer Portal.

The URL Patterns page appears, displaying the existing URL patterns.

2. Select the URL pattern that you want to edit and click the edit icon (pencil). Alternatively, right-click a pattern and select **Edit URL Patterns**.

The Edit URL Patterns page appears, displaying the same fields that are presented when you create a URL pattern.

3. Modify the URL pattern fields as needed.

4. Click **OK** to save your changes.

You are taken to the URL Patterns page. A confirmation message appears, indicating the status of the edit operation.

## Cloning URL Patterns

Cloning enables you to easily create a new URL pattern based on an existing one.

To clone a URL pattern:

1. Select **Configuration > Unified Threat Mgmt > URL Patterns** in Customer Portal.

The URL Patterns page appears, displaying the existing URL patterns.

2. Select the URL pattern that you want to clone and then select **More > Clone**. Alternatively, right-click a pattern and select **Clone**.

The Clone URL Patterns page appears, displaying the same fields that are presented when you create a URL pattern.

3. Modify the URL pattern fields as needed.

4. Click **OK** to save your changes.

You are taken to the URL Patterns page. A confirmation message appears, indicating the status of the clone operation.

## Deleting URL Patterns

Before deleting a URL pattern, ensure that the URL pattern is not referenced in any UTM profiles that are, in turn, used in firewall policy intents or in URL categories referenced in the UTM settings. If you try to delete such a URL pattern, an error message is displayed.

To delete one or more URL patterns:

1. Select **Configuration > Unified Threat Mgmt > URL Patterns** in Customer Portal.

The URL Patterns page appears, displaying the existing URL patterns.

2. Select one or more URL patterns that you want to delete and click the delete icon (X). Alternatively, right-click a pattern and select **Delete URL Pattern**.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected URL patterns.

A confirmation message appears, indicating the status of the delete operation.

### RELATED DOCUMENTATION

| [Creating URL Patterns](#) | 543

## About the URL Categories Page

To access this page, select **Configuration > Unified Threat Mgmt > URL Categories** in Customer Portal.

Use this page to view, create, edit, clone, and delete URL categories. A URL category is a list of URL patterns grouped under a single title.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a URL category—See [“Creating URL Categories” on page 547](#).
- Edit, clone, or delete a URL category—See [“Editing, Cloning, and Deleting URL Categories” on page 549](#).
- Clear the selected URL categories—Click **Clear All Selections** to clear any URL categories that you might have selected.

- View the details of a URL category—Select the URL category for which you want to view the details and from the More or right-click menu, select **Detailed View**. The URL Category Details page appears, displaying the details of the selected URL category; see [Table 189 on page 547](#) for an explanation of the fields.
- Search for URL categories by using keywords—Click the search icon, enter the search term in the text box, and press Enter. The search results are displayed on the same page.

Field Descriptions

[Table 189 on page 547](#) describes the fields on the URL Categories page.

Table 189: URL Categories Page Fields

Field	Description
Name	Name of the URL category.
URL Patterns	List of URL patterns in the URL category.
Definition Type	Indicates the type of URL category: <ul style="list-style-type: none"><li>• Predefined—URL categories that are loaded by default.</li><li>• Custom—URL categories that are created by the user.</li></ul>
Description	Description of the URL category.

RELATED DOCUMENTATION

| [About the URL Patterns Page](#) | 542

Creating URL Categories

Use this page to create URL categories. A URL category is a list of URL patterns grouped under a single title.

To create a URL category:

1. Select **Configuration > Unified Threat Mgmt > URL Categories** in Customer Portal.

The URL Categories page appears.

2. Click the add icon (+) to create a URL category.

The Create URL Categories page is displayed.

3. Complete the configuration according to the guidelines provided in [Table 190 on page 548](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.

A new URL category is created and you are returned to the URL Categories page.

Table 190: Create URL Categories Settings

Settings	Guidelines
Name	<p>Enter a unique name for the URL category.</p> <p>The name must begin with a letter or an underscore (_) and can contain alphanumeric characters and some special characters ( _ -). The maximum length is 59 characters.</p>
Description	<p>Enter a description for the URL pattern. The maximum length is 255 characters.</p>
URL Patterns	<p>Select one or more URL patterns in the <b>Available</b> column and click the forward arrow to confirm your selection. The selected URL patterns are displayed in the <b>Selected</b> column.</p> <p>Alternatively, click <b>Create a New Pattern</b> to create a URL pattern and assign it to the URL category. The Create URL Patterns page appears. For more information, see <a href="#">“Creating URL Patterns” on page 543</a></p> <p><b>NOTE:</b> You must select at least one URL pattern.</p>

RELATED DOCUMENTATION

## Editing, Cloning, and Deleting URL Categories

### IN THIS SECTION

- [Editing URL Categories | 549](#)
- [Cloning URL Categories | 549](#)
- [Deleting URL Categories | 550](#)

You can edit, clone, and delete URL categories from the URL Categories page. This topic has the following sections:

### Editing URL Categories

To modify the parameters configured for a URL category:

1. Select **Configuration > Unified Threat Mgmt > URL Categories** in Customer Portal.

The URL Categories page appears, displaying the existing URL categories.

2. Select the URL category that you want to edit and click the edit icon (pencil). Alternatively, right-click a category and select **Edit URL Categories**.

The Edit URL Categories page appears, displaying the same fields that are presented when you create a URL category.

3. Modify the URL category fields as needed.

4. Click **OK** to save your changes.

You are taken to the URL Categories page. A confirmation message appears, indicating the status of the edit operation.

### Cloning URL Categories

Cloning enables you to easily create a new URL category based on an existing one.

To clone a URL category:

1. Select **Configuration > Unified Threat Mgmt > URL Categories** in Customer Portal.

The URL Categories page appears, displaying the existing URL categories.

2. Select the URL category that you want to clone and then select **More > Clone**. Alternatively, right-click a category and select **Clone**.

The Clone URL Categories page appears, displaying the same fields that are presented when you create a URL category.

3. Modify the URL category fields as needed.

4. Click **OK** to save your changes.

You are taken to the URL Categories page. A confirmation message appears, indicating the status of the clone operation.

## Deleting URL Categories

Before deleting a URL category, ensure that the URL category is not referenced in any UTM profiles that are, in turn, used in firewall policy intents or in the UTM settings. If you try to delete such a URL category, an error message is displayed.

To delete one or more URL categories:

1. Select **Configuration > Unified Threat Mgmt > URL Categories** in Customer Portal.

The URL Categories page appears, displaying the existing URL categories.

2. Select one or more URL categories that you want to delete and click the delete icon (X). Alternatively, right-click a category and select **Delete URL Category**.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected URL categories.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

| [Creating URL Categories](#) | 547

# Managing SLA Profiles and SD-WAN Policies

## IN THIS CHAPTER

- [SLA Profiles and SD-WAN Policies Overview | 552](#)
- [About the SD-WAN Policy Page | 555](#)
- [Creating SD-WAN Policy Intents | 557](#)
- [Editing and Deleting SD-WAN Policy Intents | 564](#)
- [Application Quality of Experience Overview | 565](#)
- [Configure and Monitor Application Quality of Experience | 567](#)
- [About the SLA-Based Steering Profiles Page | 568](#)
- [Adding SLA-Based Steering Profiles | 572](#)
- [Editing and Deleting SLA-Based Steering Profiles | 579](#)
- [About the Path-Based Steering Profiles Page | 580](#)
- [Adding Path-Based Steering Profiles | 583](#)
- [Editing and Deleting Path-Based Steering Profiles | 585](#)
- [Breakout and Breakout Profiles Overview | 587](#)
- [About the Breakout Profiles Page | 590](#)
- [Adding Breakout Profiles | 595](#)
- [Adding Cloud Breakout Settings | 597](#)
- [Assigning Cloud Breakout Settings to Sites | 601](#)
- [Detaching Cloud Breakout Settings from Sites | 602](#)
- [Editing Breakout Profiles and Cloud Breakout Settings | 603](#)
- [Deleting Breakout Profiles and Cloud Breakout Settings | 605](#)
- [Configuring Breakout on SD-WAN Sites | 607](#)

# SLA Profiles and SD-WAN Policies Overview

## IN THIS SECTION

- [SLA Profiles | 552](#)
- [SD-WAN Policies | 553](#)

Contrail Service Orchestration (CSO) enables you to create service-level agreement (SLA) profiles and map them to software-defined WAN (SD-WAN) policies for traffic management.

## SLA Profiles

SLA profiles are created for applications or groups of applications for all tenants. An SLA profile consists of a set of configurable constraints that can be defined in the unified portal for both the Administration and Customer Portals. [Table 191 on page 552](#) lists the categories of configurable constraints that are defined in an SLA profile.

**Table 191: SLA Profile Categories**

Category	Description
SLA profile parameters	<p>You can define one or more than one of the following SLA profile parameters:</p> <ul style="list-style-type: none"> <li>● SLA Configuration—Whether to use recommended or custom values for the SLA threshold and SLA parameters.</li> <li>● SLA Threshold—Whether to use, liberal, baseline, or conservative settings for the threshold.</li> <li>● SLA parameters: <ul style="list-style-type: none"> <li>● Packet loss—Percentage of data packets dropped by the network to manage congestion.</li> <li>● RTT—Target round-trip time (RTT) for the SLA profile.</li> <li>● Jitter—Difference between the maximum and minimum round-trip times (in ms) of a packet of data.</li> </ul> </li> </ul>
Path preference and failover	<p>Paths are the WAN links to be used for the SLA profile. You can select MPLS, Internet, or any link as the preferred path. MPLS is more latency-sensitive than Internet.</p> <p>You can trigger the path failover criteria when any of the SLA parameters is violated, or when all the SLA parameters are violated.</p>



Table 191: SLA Profile Categories (*continued*)

Category	Description
Class of service	Class of service (CoS) provides different levels of service assurances to various forms of traffic. CoS enables you to divide traffic into classes and offer an assured service level for each class. The classes of service listed in increasing order of priority and sensitivity to latency are best effort, voice, interactive video, streaming audio or video, control, and business essential. The default CoS is voice.
Rate limiters	<p>Rate limiters are defined for traffic shaping and efficient bandwidth utilization. You can define the following rate limiters:</p> <ul style="list-style-type: none"> <li>• <b>Maximum upstream and downstream rates</b>—The maximum upstream and downstream rate for all applications associated with the SLA profile.</li> <li>• <b>Maximum upstream and downstream burst sizes</b>—The maximum size of a steady stream of traffic sent at average rates that exceed the upstream and downstream rate limits for short periods.</li> </ul>

**NOTE:** You must define at least one of the SLA parameters or path preference. You cannot leave both path preference and SLA parameters fields blank at the same time.

## SD-WAN Policies

Applications are classified into the following categories:

- **Cacheable applications**, which refer to applications or application groups that are stored in the application cache when they are recognized by the device. After they are stored in the application cache, subsequent sessions are routed directly through the correct WAN link.
- **Non-cacheable applications**, which refer to applications or application groups that are not stored in the application cache and all sessions are first routed through the default path, and then routed to the correct WAN link based on the SD-WAN policy.

Policy intents consist of the following parameters:

- **Source**—A source endpoint that you can choose from a list of sites, site groups, and departments or a combination of all of these. The SD-WAN policy intent is applied to the selected source endpoint.
- **Destination**—A destination endpoint that you can choose from a list of applications and predefined or custom application groups. You can select a maximum of 32 applications or application groups as destination endpoints. The SD-WAN policy intent is applied to the selected destination endpoint.

- **Traffic Steering Profile**—Depending on whether you want to apply the policy intent to site-to-site traffic or breakout traffic, you can associate the traffic steering profile with the policy intent. The following options are available:
  - SLA-based steering profile— Applicable for site-to-site traffic
  - Path-based steering profile— Applicable for site-to-site traffic
  - Breakout profile—Applicable for breakout traffic (local, central, or cloud).
- **Intent name**—A unique name for the SD-WAN policy intent.

SD-WAN supports advanced policy-based routing (APBR). APBR enables you to dynamically define the routing behavior of the SD-WAN network based on applications. Dynamic application-based routing makes it possible to define policies and to switch WAN links on the fly based on the application's defined SLA parameters. The APBR mechanism classifies sessions based on applications and application signatures and uses policy intents to identify the best possible route for the application. When the best possible route does not meet the application's defined SLA requirements, the SD-WAN network finds the next best possible route to meet SLA requirements.

For example, consider an application in a site. If you want the application group to use custom throughput, latency, or jitter, you can create an SLA profile with these custom values. You can then create an intent and configure the intent with the application and apply the custom SLA profile. When the intent is deployed, CSO determines the best suited WAN link to route traffic based in the application. If the WAN link fails to meet SLA requirements in runtime, the SD-WAN network switches WAN links to the next best suited path.

On the basis of the configured traffic-based steering profile constraints, you can categorize SD-WAN policies into three types:

- **Path-based steering policy**—If only the path preference is defined and none of the SLA parameters are defined in the SLA profile, then the policy is called a path-based steering policy. In path-based steering profile, you can define the path (MPLS or Internet) that must be used for a given traffic type profile. You cannot configure SLA parameters or path failover criteria for a path-based steering profile. The traffic type profile must be in enabled state in order to be used in any profile.
- **SLA-based steering policy**—If one or more SLA parameters in the SLA profile are defined, then the policy is called an SLA-based steering policy. In an SLA-based steering profile, each profile is associated with a traffic type profile and tracks the SLA parameters such as packet loss, Jitter and RTT. The traffic type profile must be in enabled state in order to be used in any profile. Based on your requirements, you can choose the recommended SLA threshold or enter custom SLA threshold for the traffic type profile. You can even set the path preference (Any, MPLS, or Internet) to switch traffic from one WAN interface to another based on the path failover criteria.

When an intent is deployed on a site, if the WAN link chosen by the SD-WAN network does not meet the SLA requirements and the network performance deteriorates, then the site switches WAN links to meet the SLA requirements. The link switching is recorded as an SD-WAN event and displayed in the

SD-WAN Events page in the customer portal and the *Tenant\_name* SLA Performance pages in the administration and customer portals.

- **Breakout policy**—If local breakout, central breakout, or cloud breakout parameters are defined, then the policy is called a breakout policy.

## RELATED DOCUMENTATION

[About the SD-WAN Policy Page | 555](#)

[Breakout and Breakout Profiles Overview | 587](#)

[SD-WAN Events Overview | 892](#)

## About the SD-WAN Policy Page

To access this page, select **Configuration > SD-WAN > SD-WAN Policy** in the Customer Portal.

SD-WAN policy intents help in optimum utilization of the WAN links and efficient load distribution of traffic. SD-WAN policy intents are applied to source endpoints (such as sites and departments) and destination endpoints (applications or application groups) and can be defined for site-to-site traffic (by using SLA profiles) or for breakout traffic (by using breakout profiles).

You can use the SD-WAN Policy page to view, create, edit, and deploy SD-WAN policy intents. SD-WAN policy intents use SLA profiles for traffic management. SD-WAN policies help in optimum utilization of the WAN links and efficient distribution of traffic. Every tenant has an SD-WAN policy and intents are created in the SD-WAN policy.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View existing SD-WAN policy intents. CSO provides pre-defined SD-WAN policy intents for the tenants. See [Table 193 on page 556](#).

**NOTE:** The pre-defined SD-WAN policy intents are available for the tenants only if the SP administrator has the downloaded the signature database prior to creating the tenants.

- Create SD-WAN policy intents. See [“Creating SD-WAN Policy Intents” on page 557](#).
- Edit or delete SD-WAN policy intents. See [“Editing and Deleting SD-WAN Policy Intents” on page 564](#).

- Deploy SD-WAN policy intents. See [“Deploying Policies” on page 723](#).
- View the number of undeployed SD-WAN policy intents.
- Search for SD-WAN policy intents using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

## Field Descriptions

[Table 192 on page 556](#) describes the fields on the SD-WAN Policy page.

**Table 192: Fields on the SD-WAN Policy Page**

Field	Description
Name	Displays the name of the SD-WAN policy intent.
Source	Displays the source endpoints that are configured for the policy intents. A source endpoint is chosen from sites, site groups, and departments or a combination of all of these to which the policy intent is applied.
Application	Displays the application destination endpoints that are configured for the policy intents. An application destination endpoint is chosen from a list of applications and predefined or custom application groups to which the policy intent is applied.
Traffic Steering Profile	Displays the breakout profile or the SLA profile associated with the policy intent.

**Table 193: Pre-defined SD-WAN Policies**

SD-WAN Policy Name	Applicable Sites	Application	Traffic Steering Profile
System-1	All Sites	CSO-Collaboration	CSO-AV
System-2	All Sites	CSO-Security	CSO-Sec
System-3	All Sites	CSO-Collaboration	CSO-Email
System-4	All Sites	CSO-Productivity	CSO-Productive
System-5	All Sites	CSO-File-Share	CSO-FileShare

## RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview](#) | 552

## Creating SD-WAN Policy Intents

You can create policy intents for SD-WAN policies from the **SD-WAN Policy** page.

To create an SD-WAN policy intent:

1. Select **Configuration > SD-WAN > SD-WAN Policy** in Customer Portal.

The SD-WAN Policy page appears.

2. Click the add icon (+).

The options to create policy intents appear inline on the SD-WAN Policy page.

3. Enter the policy intent information according to the guidelines provided in [Table 194 on page 558](#).

4. Click **Save** to create the policy intent.

The SD-WAN policy intent is saved and a confirmation message is displayed.

**NOTE:** After the policy intent is created, you must deploy the policy to ensure that the changes take effect on the applicable sites, departments, or applications. When an SD-WAN policy intent is created, the Undeployed field is incremented by one indicating that intents are pending deployment.

Table 194: Create SD-WAN Policy Intent Settings

Field	Guidelines
Source	

Table 194: Create SD-WAN Policy Intent Settings (*continued*)

Field	Guidelines
	<p>You can select the source endpoints in one of the following ways:</p> <ul style="list-style-type: none"> <li>• Select source endpoints from the displayed list of departments, sites, or site groups, or a combination of these. Click the source endpoints to select them.</li> <li>• Select the source endpoints from the complete list of departments, sites, and site groups.</li> </ul> <p>To view the complete list of departments, sites, and site groups.</p> <ol style="list-style-type: none"> <li>1. Click <b>View more results</b>. The complete list of departments, sites, and site groups is displayed in the <b>End Points</b> pane on the right.</li> <li>2. (Optional) Hover over a department or site group and click the edit icon to edit the department or site group. You cannot edit a site.</li> <li>3. Click the add icon (+) to select the endpoint.</li> </ol> <ul style="list-style-type: none"> <li>• Enter an abbreviation in the <b>Source</b> field to select the endpoint from a filtered list of departments, sites, or site groups. To view a filtered list of departments, sites, or site groups, enter DEPT, SITE, or STGP, respectively. The abbreviation is not case-sensitive. You can select the source endpoint in one of the following ways: <ul style="list-style-type: none"> <li>• Click the endpoints in the filtered list to select them.</li> <li>• Click <b>View more results</b> to select the endpoint from the complete list of departments, sites, and site groups.</li> <li>• Click <b>Add new department</b> or <b>Add new sitegroup</b> to create new departments or site groups and select them. The Create Site Group page or Add Department page appears based on your selection. See <a href="#">“Adding a Department” on page 816</a> and <a href="#">“Creating Site Groups” on page 226</a> for information about creating site groups and departments.</li> </ul> </li> <li>• Create site groups or departments to select the source endpoint from the newly created site group or department.</li> </ul> <p>To create site groups or departments:</p> <ol style="list-style-type: none"> <li>1. Click anywhere within the <b>Source</b> field.</li> <li>2. Click the lesser-than icon (&lt;) on the right. <p>The list of available departments, sites, and site groups is displayed in the <b>End Points</b> pane on the right.</p> </li> <li>3. (Optional) To view more information about a source endpoint, hover over the endpoint click the details icon.</li> <li>4. Click the add icon (+) on the top right of the pane.</li> </ol>

Table 194: Create SD-WAN Policy Intent Settings (continued)

Field	Guidelines
	<p>5. Click <b>Department</b> or <b>Site Group</b> as needed. The Add Department page or Create Site Group page appears based on your selection. See <a href="#">“Adding a Department” on page 816</a> and <a href="#">“Creating Site Groups” on page 226</a> for information about creating departments and site groups.</p> <p>6. Click the check mark icon (✓) if you want to save the department or site group to the policy intent. Alternatively, if you want to discard your updates, click <b>Cancel</b> instead.</p>



Table 194: Create SD-WAN Policy Intent Settings (continued)

Field	Guidelines
Application	

Table 194: Create SD-WAN Policy Intent Settings (*continued*)

Field	Guidelines
	<p>You can select the application endpoints in one of the following ways:</p> <p><b>NOTE:</b> You can select <b>Any</b> as an application endpoint only if you are creating an SD-WAN policy intent that references a breakout profile.</p> <ul style="list-style-type: none"> <li>• Select application endpoints from the displayed list of applications and application groups. Click the endpoints to select them.</li> <li>• Select the application endpoints from the complete list of applications and application groups. To view the complete list of applications and applications groups. <ol style="list-style-type: none"> <li>1. Click <b>View more results</b>. The complete list of applications and applications groups is displayed in the <b>End Points</b> pane on the right.</li> <li>2. (Optional) Hover over an application group and click the edit icon to edit the application group.</li> <li>3. (Optional) Hover over an application and click the details icon to view details about the application.</li> <li>4. Click the add icon (+) to select the endpoint.</li> </ol> </li> <li>• Enter an abbreviation in the <b>Application</b> field to select the endpoint from a filtered list of applications and application groups. To view a filtered list of applications and application groups, enter apps or APPS. You can select the application endpoint in one of the following ways: <ul style="list-style-type: none"> <li>• Click the endpoints in the filtered list to select them.</li> <li>• Click <b>View more results</b> to select the endpoint from the complete list of applications and applications groups.</li> <li>• Click <b>Add new application</b> to create a new application group and select the application group. The Create Application Signature Group page appears. See <a href="#">“Adding Application Signature Groups” on page 813</a> for information about creating application groups.</li> </ul> </li> <li>• Create custom application groups to select the application endpoint from the newly created application group. To create an application group: <ol style="list-style-type: none"> <li>1. Click anywhere within the <b>Application</b> field.</li> <li>2. Click the lesser-than icon (&lt;) on the right.  The list of available applications, departments, sites, and site groups is displayed in the <b>End Points</b> pane on the right.</li> <li>3. Click the add icon (+) on the top right of the pane.</li> </ol> </li> </ul>

Table 194: Create SD-WAN Policy Intent Settings (*continued*)

Field	Guidelines
	<p>4. Click <b>Application</b>. The Create Application Signature Group page appears. See <a href="#">“Adding Application Signature Groups” on page 813</a> for information about creating application groups.</p> <p>5. Click the check mark icon (✓) if you want to save the application signature group to the policy intent.</p> <p>Alternatively, if you want to discard your updates, click <b>Cancel</b> instead.</p>
Traffic Steering Profile	<p>Select a breakout profile, SLA-based profile, or a path-based profile to apply to the source and application endpoints. You can select the profile in one of the following ways:</p> <ul style="list-style-type: none"> <li>• Select the breakout profile, SLA-based profile, or the path-based profile from the displayed list of profiles. Click the profile to select it.</li> <li>• Select the profile from the complete list of breakout, SLA-based, or path-based profiles: To view the complete list of breakout, SLA-based, or path-based profiles. <ol style="list-style-type: none"> <li>1. Click <b>View more results</b>. The complete list of profiles is displayed in the <b>End Points</b> pane on the right.</li> <li>2. Click the add icon (+) to select the profile.</li> </ol> </li> <li>• Select the profile by creating a custom SLA-based, path-based, or breakout profile: <ul style="list-style-type: none"> <li>• To create a breakout profile: <ol style="list-style-type: none"> <li>1. Click anywhere within the Profile field.</li> <li>2. Click the lesser-than icon (&lt;) on the right. The list of breakout profiles is displayed in the <b>End Points</b> pane on the right.</li> <li>3. Click the add icon (+) on the top right of the pane and select <b>BRKT</b>. The Add Breakout Profile page appears. For more information, see <a href="#">“Adding Breakout Profiles” on page 595</a></li> </ol> </li> </ul> </li> </ul>
Options	
Name	Enter a name for the policy intent.
Description	Enter a description for the policy intent.

## RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview | 552](#)

[About the SD-WAN Policy Page | 555](#)

[Editing and Deleting SD-WAN Policy Intents | 564](#)

[Deploying Policies | 723](#)

## Editing and Deleting SD-WAN Policy Intents

### IN THIS SECTION

- [Editing SD-WAN Policy Intents | 564](#)
- [Deleting SD-WAN Policy Intents | 565](#)

You can edit or delete SD-WAN policy intents from the SD-WAN Policy page.

### Editing SD-WAN Policy Intents

You can edit SD-WAN policy intents from the SD-WAN Policy page.

To edit an SD-WAN policy intent:

1. Hover over the SD-WAN policy intent that you want to edit, and then click the edit icon that appears on the right side of the policy intent.

The options to create policy intents appear within the SD-WAN Policy page showing the same options that you see when you create a new SD-WAN policy intent.

2. Modify the parameters according to the guidelines provided in [“Creating SD-WAN Policy Intents” on page 557](#).
3. Click **Save** to save your changes.

Alternatively, click **Cancel** to discard your changes.

**NOTE:** After you modify an SD-WAN policy intent, you must redeploy the policy to ensure that the changes take effect on the applicable sites, departments, or applications.

## Deleting SD-WAN Policy Intents

If an SD-WAN intent is no longer needed, you can delete the SD-WAN policy intent from the SD-WAN Policy page.

To delete one or more SD-WAN policy intents:

1. Select one or more policy intents that you want to delete and click the delete icon (trash can).

A page appears asking you to confirm the delete operation.

2. Click **Yes** to confirm that you want to delete the selected policy intents.

A confirmation message appears indicating the status of the delete operation.

**NOTE:** After you delete one or more SD-WAN policy intents, you must redeploy the policy to ensure that the changes take effect on the applicable sites, departments, or applications.

### RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview | 552](#)

[About the SD-WAN Policy Page | 555](#)

[Creating SD-WAN Policy Intents | 557](#)

## Application Quality of Experience Overview

### IN THIS SECTION

- [Benefits of Application Quality of Experience | 567](#)

Contrail Service Orchestration (CSO) supports Application Quality of Experience (AppQoE) that enables you to effectively prioritize, segregate, and route business-critical application traffic without compromising performance or availability.

AppQoE utilizes the capabilities of two application security services:

- Application identification (AppID) to identify specific applications in your network.
- Advanced policy-based routing (APBR) to specify a path for the application traffic.

AppQoE-enabled devices perform service-level agreement (SLA) measurements across the available WAN links, and then dynamically map the application traffic to the path that best serves the application's SLA requirement.

**NOTE:** AppQoE is applicable only for SD-WAN sites.

AppQoE is supported on the following devices in both hub-and-spoke and full mesh topologies:

- vSRX instances
- SRX300 series
- SRX550M
- SRX1500
- SRX4100
- SRX4200

You can configure an AppQoE between two SRX Series device endpoints (book-ended) when both the devices run the same version of Junos OS.

CSO pushes the SLA parameters, path selection parameters and related configuration to the device and the device monitors the links for SLA violation. If there is a violation, the device switches the link and generates **APPQOE\_(APP)\_SLA\_METRIC\_VIOLATION** and **APPQOE\_BEST\_PATH\_SELECTED** system log messages. The device also aggregates and averages the SLA metrics, and generates periodic **APPQOE\_APP\_PASSIVE\_SLA\_METRIC\_REPORT** system log messages.

AppQoE measures the application performance across multiple links by collecting real-time data by continuously monitoring application traffic and identifying any network or device issues by sending active and passive probes. To monitor the SLA compliance of the link on which the application traffic is sent, the Customer Premises Equipment (CPE) device sends inline probes (called passive probes) along with the application traffic. Additionally, to identify the best available link for an application if the active link fails to meet the SLA criteria, the CPE constantly monitors and collects the SLA compliance data for the other available links by sending probes (called active probes) over the links. The active probes are sent based on the probe parameters that you configure in the application traffic type profile.

The CPE device switches links at the application level, which means that only the traffic corresponding to the application that reported the SLA violation is moved to a link that meets the specified SLA. Traffic for the remaining applications remain on the same link until those applications report an SLA violation.

You can configure traffic type profiles to specify the class of service (CoS) and probe parameters for each traffic type. When you add a steering profile (SLA-based or path-based), you specify the SLA parameters

and SLA sampling criteria, and link the steering profile with a traffic type profile. The steering profile is then linked to an SD-WAN policy intent and the SD-WAN policy is deployed to enable AppQoE.

From the Application SLA Performance (**Monitor > Application SLA Performance**) page, you can view the application-level SLA performance information and whether AppQoE is enabled. You can also view applications-level SLA performance details such as packet loss, round-trip time (RTT), jitter metric, throughput, latency metric, and the number of probes.

For more information on the AppQoE workflow, see [“Configure and Monitor Application Quality of Experience” on page 567](#).

### Benefits of Application Quality of Experience

- Enables cost-effective QoE by real-time monitoring of application traffic, which provides a consistent and predictable level of service.
- Improves the user experience at the application level by ensuring that the application data is sent over the most SLA-compliant link.

#### RELATED DOCUMENTATION

| [Application Quality of Experience](#)

## Configure and Monitor Application Quality of Experience

Application Quality of Experience (AppQoE) improves the user experience by constantly monitoring the class of service (CoS) parameters and service-level agreement (SLA) compliance of the available WAN links, ensuring that the application data is sent over the most SLA-compliant link. For more information, see [“Application Quality of Experience Overview” on page 565](#).

**NOTE:** Ensure that Service Provider (SP) administrator has enabled the required traffic type profiles.

As a tenant administrator user, to configure and monitor AppQoE in Customer Portal:

1. Add an SLA-based steering profile or a path-based steering profile and associate a traffic type profile with the added steering profile. For more information, see [“Adding SLA-Based Steering Profiles” on page 572](#) or [“Adding Path-Based Steering Profiles” on page 583](#).
2. Add an SD-WAN policy intent that references to the steering profile you added previously. For more information, see [“Creating SD-WAN Policy Intents” on page 557](#).

**NOTE:** Before you deploy an SD-WAN policy, ensure that you have added one or more SD-WAN sites. For more information, see [“About the Sites Page” on page 55](#).

3. Deploy the SD-WAN policy on one or more SD-WAN sites to enable AppQoE. For more information, see [“Deploying Policies” on page 723](#).
4. View the SLA performance details of all the sites in a tenant on the Application SLA Performance page (**Monitor > Application SLA Performance**). For more information, see [“About the SLA Performance of a Single Tenant Page” on page 895](#).

## RELATED DOCUMENTATION

[About the SLA-Based Steering Profiles Page | 568](#)

[About the SD-WAN Policy Page | 555](#)

## About the SLA-Based Steering Profiles Page

To access this page, select **Configuration > SD-WAN > SLA-Based Steering Profiles** in the Customer Portal.

You can use the SLA-Based Steering Profiles page to view information about service-level agreement (SLA)-based steering for the tenant profile in which you are logged in.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details of SLA profiles for the tenants.
- Add an SLA-based steering profile for the tenant. See [“Adding SLA-Based Steering Profiles” on page 572](#).



- Edit or delete an SLA-based steering profile. See [“Editing and Deleting SLA-Based Steering Profiles” on page 579](#).
- Show or hide columns that contain information about SLA-based steering profiles. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for SLA-based steering profiles using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

## Field Descriptions

[Table 195 on page 569](#) shows the descriptions of the fields on the SLA-Based Steering Profiles page.

**Table 195: Fields on the SLA-Based Steering Profiles Page**

Field	Description	Displayed On
Name	Name of the SLA-based steering profile.	SLA-Based Steering Profiles page (SLA Profiles List tab)  Detail for <i>SLA-Profile-Name</i> pane
Priority	Priority of the SLA-based steering profile. A value zero (0) indicates lower priority and one (1) indicates highest priority.	Detail for <i>SLA-Profile-Name</i> pane
Traffic Type Profile	Indicates the traffic type profile associated with the SLA-based steering profile. <ul style="list-style-type: none"> <li>• VOICE-VIDEO</li> <li>• HIGH_PRIORITY_VIDEO</li> <li>• HOSTED_AV</li> <li>• PREMIUM_INTERNET</li> <li>• INTERNET</li> </ul>	SLA-Based Steering Profiles page (SLA Profiles List tab)  Detail for <i>SLA-Profile-Name</i> pane
Packet Loss (%)	Target packet loss for the SLA profile.	SLA-Based Steering Profiles page (SLA Profiles List tab)  Detail for <i>SLA-Profile-Name</i> pane
Jitter (ms)	Target jitter for the SLA profile.	SLA-Based Steering Profiles page (SLA Profiles List tab)  Detail for <i>SLA-Profile-Name</i> pane

Table 195: Fields on the SLA-Based Steering Profiles Page (*continued*)

Field	Description	Displayed On
RTT	Target round-trip time (RTT) for the SLA profile.	SLA-Based Steering Profiles page (SLA Profiles List tab)  Detail for <i>SLA-Profile-Name</i> pane
SLA Probe Match	Indicates whether the profile requires the SLA probe to match all SLA criteria (All) or not (Any) .	Detail for <i>SLA-Profile-Name</i> pane
Created By	Name of the user who created the SLA-based steering profile.	SLA-Based Steering Profiles page (SLA Profiles List tab)
Path Preference	The preferred path for the SLA profile. The available options are: <ul style="list-style-type: none"> <li>• MPLS</li> <li>• Internet</li> <li>• Any (default)</li> </ul>	Detail for <i>SLA-Profile-Name</i> pane
Session-sampling %	Indicates the matching percentage of sessions for which you want to run the passive probes.	Detail for <i>SLA-Profile-Name</i> pane
SLA Violation Counts	Indicates the number of SLA violations after which you want CSO to switch paths.	Detail for <i>SLA-Profile-Name</i> pane
Sampling Period	The sampling period, in milliseconds, for which the SLA violations are counted.	Detail for <i>SLA-Profile-Name</i> pane
Switch Cool-off Period	The waiting period, in milliseconds, only after which you want the link switch to happen if an active link comes back online. This parameter helps prevent frequent switching of traffic between active and backup links.	Detail for <i>SLA-Profile-Name</i> pane
Path Failover Criteria	Indicates the path failover criteria for link switching. Path failover occurs when any (Any)of the SLA parameters is violated or when all (All) the SLA parameters are violated.	Detail for <i>SLA-Profile-Name</i> pane
Maximum Upstream Rate	The maximum upstream rate (in Kbps) for all applications associated with the SLA-based steering profile.	Detail for <i>SLA-Profile-Name</i> pane

Table 195: Fields on the SLA-Based Steering Profiles Page (*continued*)

Field	Description	Displayed On
Maximum Upstream Burst Size	The maximum upstream burst size (in bytes).	Detail for <i>SLA-Profile-Name</i> pane
Maximum Downstream Rate	The maximum downstream rate (in Kbps) for all applications associated with the SLA-based-steering profile.	Detail for <i>SLA-Profile-Name</i> pane
Maximum Downstream Burst Size	The maximum downstream burst size (in bytes).	Detail for <i>SLA-Profile-Name</i> pane

## RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview](#) | 552

## Adding SLA-Based Steering Profiles

You can use the Add SLA Profile page to add a new service-level agreement (SLA)-based steering profile, specify the traffic type profile, SLA configuration, SLA threshold, SLA parameters, path selection criteria, and rate limiting parameters for the profile. [Table 196 on page 573](#) lists the SLA-based steering profiles that are tuned for specific application categories and traffic types.

**Table 196: Predefined SLA-Based Steering Profiles**

SLA-Based Steering Profiles	Traffic Type	Application Group	Applications Supported
CSO-AV	VOICE-VIDEO	CSO_Collaboration_AV	Skype for Business Zoom Video GotoMeeting Jive Jabber Citrix Online WebEx Zoho Meeting Google Hangout Adobe Connect

Table 196: Predefined SLA-Based Steering Profiles (continued)

SLA-Based Steering Profiles	Traffic Type	Application Group	Applications Supported
CSO-Productivity	PREMIUM-INTERNET	CSO_Productivity	ERP: Salesforce, Oracle, SAP Office365 (including SharePoint) Zendesk HRPayroll Zoho Office Suite Slack Square Concur Adobe Quickbooks Freshbooks Workday Project Management-MS PJ Basecamp Asana
CSO-Security	INTERNET	CSO_Security	Symantec McAfee Sophos Zonealarm Lookout

Table 196: Predefined SLA-Based Steering Profiles (*continued*)

SLA-Based Steering Profiles	Traffic Type	Application Group	Applications Supported
CSO-Email	PREMIUM-INTERNET	CSO_Collaboration_Email	MS Exchange IMAP POP3 Gmail OWA Yahoo
CSO-FileShare	INTERNET	CSO_File_Share	Box Dropbox Gsuite OneDrive Skype for Business-File Transfer Zoho Share

To add an SLA-based steering profile to the tenant:

1. Select **Configuration > SD-WAN > SLA-Based Steering Profiles**.

The SLA-Based Steering Profiles page appears.

2. Click the add icon (+).

The Add SLA Profile page appears.

3. Enter the SLA profile information according to the guidelines provided in [Table 197 on page 576](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK** to add the SLA profile.

The SLA-Based Steering Profiles page appears with the new SLA profile information. You are returned to the SLA-Based Steering Profiles page and a confirmation message indicating that the SLA-based

steering profile was added is displayed. The page refreshes to display the SLA-based steering profile that you added.

Alternatively, if you want to discard your updates, click **Cancel** instead.

**NOTE:** After you add an SLA-based steering profile, you must add an SD-WAN policy intent that references the SLA-based steering profile in order to enable site-to-site traffic.

**Table 197: Fields on the Add SLA Profile page**

Field	Guidelines
<i>General</i>	
Name	Enter a unique string that can contain alphanumeric characters and hyphens (-); the maximum length is 15 characters.
Traffic Type Profile	Choose a traffic type profile to apply the class-of-service configuration and priority to the SLA profile. You can select a traffic type profile only when it is in the <b>Enabled</b> state.
SLA Configuration	Choose one of the following options: <ul style="list-style-type: none"> <li>• <b>Use Recommended:</b> To use the default SLA threshold and SLA parameters for the SLA-based steering profile.</li> <li>• <b>Enter Custom:</b> To specify customized values for SLA configuration and SLA parameters for the SLA-based steering profiles.</li> </ul>
SLA Threshold	Choose one of the following options: <ul style="list-style-type: none"> <li>• <b>Liberal</b>—To use a relaxed SLA threshold.</li> <li>• <b>Baseline</b>—To use the default SLA threshold.</li> <li>• <b>Conservative</b>—To use a strict SLA threshold.</li> </ul>
<i>SLA Parameters</i>	
Packet Loss	Enter the target packet loss (in %) for the SLA-based steering profile. Packet loss is the percentage of data packets dropped by the network to manage congestion.
RTT	Enter the target round-trip time (RTT) for the SLA-based steering profile.
Jitter	Enter the target jitter (in ms) for the SLA-based steering profile. Jitter is the difference between the maximum and minimum round-trip times of a packet of data.



Table 197: Fields on the Add SLA Profile page (continued)

Field	Guidelines
<i>Path Selection Criteria</i>	
Path Preference	<p>Select the preferred WAN link type to associate with the SLA profile. The options are Any, MPLS, and Internet. Any is the default value.</p> <p>Select the preferred path (MPLS, Internet, or Any) to be used for site-to-site traffic.</p> <p>If a WAN link type that matches the preferred path is enabled for site-to-site traffic, then that WAN link type is used for site-to-site traffic.</p> <p>If you specify that any path can be used, then there is no preference and all site-to-site-traffic-enabled links are used in a load-balancing mode.</p>
Path Failover Criteria	<p>Specify the failover criteria to determine how links are switched when the active links fail to meet the SLA criteria. In such cases, the traffic is routed to links that meet SLA criteria.</p> <p>Choose one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>Does not meet one or more SLA parameters</b>—This triggers the path failover if any of the SLA parameters is violated.</li> <li>• <b>Does not meet all SLA parameters</b>—This triggers the path failover only when all the SLA parameters are violated.</li> </ul>
<i>Advanced Configuration-</i>	
<b>Rate Limiting</b>	
Maximum Upstream Rate	<p>Enter the maximum upstream rate (in Kbps) for all applications associated with the SLA profile.</p> <p>Range: 64 through 10,485,760 Kbps</p>
Maximum Upstream Burst Size	<p>Enter the maximum upstream burst size (in bytes).</p> <p>Range: 1 through 1,342,177,280 bytes</p>
Maximum Downstream Rate	<p>Enter the maximum downstream rate (in Kbps) for all applications associated with the SLA profile.</p> <p>Range: 64 through 10,485,760 Kbps</p>
Maximum Downstream Burst Size	<p>Enter the maximum downstream burst size (in bytes).</p> <p>Range: 1 through 1,342,177,280</p>

Table 197: Fields on the Add SLA Profile page (continued)

Field	Guidelines
Loss Priority	Select a loss priority based on which packets can be dropped or retained when network congestion occurs. The chances of a packet getting dropped is the highest when the loss priority is set to <b>High</b> . Other available values are <b>Medium High</b> , <b>Medium Low</b> , and <b>Low</b> .

*Real Time Optimized Mode Setting*

**NOTE:** The following fields are applicable only for sites configured with the real-time-optimized SD-WAN mode.

SLA Sampling	
Session-sampling %	Enter the matching percentage of sessions for which you want to run the passive probes.
SLA-violation-count	Enter the number of SLA violations after which you want CSO to switch paths. The range is 1 through 32.
Sampling-period	Enter the sampling period, in seconds, for which the SLA violations are counted. The range is 2 through 60.
Switch-cool-off-period	Enter the waiting period, in seconds, only after which you want the link switch to happen if an active link comes back online. This parameter helps prevent frequent switching of traffic between active and backup links. The range is 5 through 300.

## RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview | 552](#)

[About the SLA-Based Steering Profiles Page | 568](#)

[Editing and Deleting SLA-Based Steering Profiles | 579](#)

## Editing and Deleting SLA-Based Steering Profiles

### IN THIS SECTION

- [Editing an SLA-Based Steering Profile | 579](#)
- [Deleting SLA-Based Steering Profiles | 580](#)

You can use the SLA-Based Steering Profiles page to edit and delete SLA profiles.

**NOTE:** You cannot edit the predefined SLA-Based steering profiles that are automatically created by Contrail Service Orchestration (CSO).

### Editing an SLA-Based Steering Profile

To edit an SLA-based steering profile:

**NOTE:** If you edit an SLA-based steering profile that is used in an SD-WAN policy intent, then that SD-WAN policy is marked for redeployment.

1. Select **Configuration > SD-WAN > SLA-Based Steering Profiles**.

The SLA-Based Steering Profiles page appears.

2. Select the SLA-based steering profile that you want to edit, and click the Edit (pencil) icon.

The Edit SLA Profile page appears displaying the same fields that are presented when you add a SLA-based steering profile. For more information, see [“Adding SLA-Based Steering Profiles” on page 572](#).

3. Modify the fields as needed.

**NOTE:** You cannot edit the SLA-based steering profile name.

4. Click **OK**.

You are returned to the SLA-Based Steering Profiles page. The modifications that you made are saved and a confirmation message is displayed.

## Deleting SLA-Based Steering Profiles

You can delete the SLA-based steering profile if they are no longer needed. To delete one or more SLA-based steering profile:

**NOTE:** You cannot delete an SLA-based steering profile if it is referenced by one or more SD-WAN policy intents.

1. Select **Configuration > SD-WAN > SLA Based Steering Profiles**.

The SLA-Based Steering Profiles page appears.

2. Select the SLA-based steering profiles that you want to delete and click the delete (trash can) icon.

A popup dialog appears asking you to confirm the deletion.

3. Click **Yes**.

You are returned to the SLA-Based Steering Profiles page. The selected SLA-based steering profile is deleted and a confirmation message is displayed.

## RELATED DOCUMENTATION

[SLA Profiles and SD-WAN Policies Overview | 552](#)

[About the SLA-Based Steering Profiles Page | 568](#)

[Adding SLA-Based Steering Profiles | 572](#)

## About the Path-Based Steering Profiles Page

To access this page, select **Configuration > SD-WAN > Path-Based Steering Profiles** in the Customer Portal.

You can use the Path-Based Steering Profiles page to view information about path profiles for the tenant profile in which you are logged in.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details of path-based steering profiles for the tenant.
- Add path-based steering profiles for for the tenant. See [“Adding Path-Based Steering Profiles” on page 583](#).
- Edit or delete a path-based steering profile. See [“Editing and Deleting Path-Based Steering Profiles” on page 585](#).
- Show or hide columns that contain information about path-based steering profile. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for path-based steering profiles using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

### Field Descriptions

[Table 198 on page 581](#) shows the descriptions of the fields on the Path-Based Steering Profiles page.

**Table 198: Fields on the Path-Based Steering Profiles Page**

Field	Description	Displayed on
Name	Name of the path-based-steering profile.	Path-Based Steering Profiles Page (Path Profiles List tab)  Detail for <i>Path-Profile-Name</i> pane
Traffic Type Profile	Indicates the traffic type profile associated with the path-based-steering profile. <ul style="list-style-type: none"> <li>• VOICE-VIDEO</li> <li>• HIGH_PRIORITY_VIDEO</li> <li>• HOSTED_AV</li> <li>• PREMIUM_INTERNET</li> <li>• INTERNET</li> </ul>	Path-Based Steering Profiles Page (Path Profiles List tab)  Detail for <i>Path-Profile-Name</i> pane
Path Preference	The preferred path for the SLA profile. The available options are: <ul style="list-style-type: none"> <li>• MPLS</li> <li>• Internet</li> </ul>	Path-Based Steering Profiles Page (Path Profiles List tab)  Detail for <i>Path-Profile-Name</i> pane
Created by	The name of the user who created the path profile.	Path-Based Steering Profiles Page (Path Profiles List tab)

Table 198: Fields on the Path-Based Steering Profiles Page (continued)

Field	Description	Displayed on
Priority	Priority of the path-based steering profile. A value zero (0) indicates lower priority and one (1) indicates highest priority.	Detail for <i>Path-Profile-Name</i> pane
Packet Loss	Target packet loss for the SLA profile.	Detail for <i>Path-Profile-Name</i> pane
RTT	Target round-trip time (RTT) for the SLA profile.	Detail for <i>Path-Profile-Name</i> pane
Jitter	Target jitter for the SLA profile.	Detail for <i>Path-Profile-Name</i> pane
SLA Probe Match	Indicates whether the profile requires the SLA probe to match all SLA criteria (All) or not (Any) .	Detail for <i>Path-Profile-Name</i> pane
Session-sampling %	Indicates the matching percentage of sessions for which you want to run the passive probes.	Detail for <i>Path-Profile-Name</i> pane
SLA Violation Counts	Indicates the number of SLA violations after which you want CSO to switch paths.	Detail for <i>Path-Profile-Name</i> pane
Sampling Period	The sampling period, in milliseconds, for which the path-based steering profile violations are counted.	Detail for <i>Path-Profile-Name</i> pane
Switch Cool-off Period	The waiting period, in milliseconds, only after which you want the link switch to happen if an active link comes back online. This parameter helps prevent frequent switching of traffic between active and backup links.	Detail for <i>Path-Profile-Name</i> pane
Path Failover Criteria	Indicates the path failover criteria for link switching. Path failover occurs when any (Any)of the path-based steering profile parameters is violated or when all (All) the path-based steering profile parameters are violated.	Detail for <i>Path-Profile-Name</i> pane
Maximum Upstream Rate	The maximum upstream rate (in Kbps) for all applications associated with the path-based steering profile.	Detail for <i>Path-Profile-Name</i> pane
Maximum Upstream Burst Size	The maximum upstream burst size (in bytes).	Detail for <i>Path-Profile-Name</i> pane

Table 198: Fields on the Path-Based Steering Profiles Page (*continued*)

Field	Description	Displayed on
Maximum Downstream Rate	The maximum downstream rate (in Kbps) for all applications associated with the path-based-steering profile.	Detail for <i>Path-Profile-Name</i> pane
Maximum Downstream Burst Size	The maximum downstream burst size (in bytes).	Detail for <i>Path-Profile-Name</i> pane

## RELATED DOCUMENTATION

| [SLA Profiles and SD-WAN Policies Overview](#) | 552

## Adding Path-Based Steering Profiles

You can use the Add Path Profile page to add a new path-based steering profile, and specify the traffic type profile, path preference, and advanced configuration for the profile.

To add a path-based steering profile to the tenant:

1. Select **Configuration > SD-WAN > Path-Based Steering Profiles**.

The Path-Based Steering Profiles page appears.

2. Click the add (+) icon.

The Add Path Profile page appears.

3. Enter the path-based steering profile information according to the guidelines provided in [Table 199 on page 584](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the Path-Based Steering Profiles page and a confirmation message indicating that the path-based steering profile was added is displayed. The page refreshes to display the path-based steering profile that you added.

**NOTE:** After you add a path-based steering profile, you must add an SD-WAN policy intent that references the path-based steering profile in order to enable site-to-site traffic.

**Table 199: Fields on the Add Path Profile page**

Field	Guidelines
Name	Enter a unique string that can contain alphanumeric characters and hyphens (-); the maximum length is 15 characters.
Traffic Type Profile	Choose a traffic type profile to apply the class-of-service configuration and priority to the SLA profile. You can select a traffic type profile only when it is in the <b>Enabled</b> state.
Path Preference	Select the preferred WAN link type to associate with the SLA profile. The options are MPLS, and Internet.
<i>Advanced Configuration</i>	
Maximum Upstream Rate	Enter the maximum upstream rate (in Kbps) for all applications associated with the SLA profile.  Range: 64 through 10,485,760 Kbps
Maximum Upstream Burst Size	Enter the maximum burst size (in bytes).  Range: 1 through 1,342,177,280 bytes
Maximum Downstream Rate	Enter the maximum downstream rate (in Kbps) for all applications associated with the SLA profile.  Range: 64 through 10,485,760 Kbps
Maximum Downstream Burst Size	Enter the maximum burst size (in bytes).  Range: 1 through 1,342,177,280 bytes



Table 199: Fields on the Add Path Profile page *(continued)*

Field	Guidelines
Loss Priority	Select a loss priority based on which packets can be dropped or retained when network congestion occurs. The chances of a packet getting dropped is the highest when the loss priority is set to <b>High</b> . Other available values are <b>Medium High</b> , <b>Medium Low</b> , and <b>Low</b> .

RELATED DOCUMENTATION

<a href="#">SLA Profiles and SD-WAN Policies Overview   552</a>
<a href="#">About the Path-Based Steering Profiles Page   580</a>
<a href="#">Editing and Deleting Path-Based Steering Profiles   585</a>

## Editing and Deleting Path-Based Steering Profiles

IN THIS SECTION

- [Editing a Path-Based Steering Profile | 586](#)
- [Deleting a Path-Based Steering Profile | 587](#)

You can use the Path-Based Steering Profiles page to edit and delete path-based steering profiles.

## Editing a Path-Based Steering Profile

To edit a path-based steering profile:

**NOTE:** If you edit a path-based steering profile that is used in an SD-WAN policy intent, then that SD-WAN policy is marked for redeployment.

1. Select **Configuration > SD-WAN > Path-Based Steering Profiles**.

The Path-Based Steering Profiles page appears.

2. On the Path Profiles tab, select the path-based steering profile that you want to edit.

3. Click the edit (pencil) icon.

The Edit Path Profile page appears displaying the same fields that are presented when you add a path-based steering profile. For more information, see [“Adding Path-Based Steering Profiles” on page 583](#).

4. Modify the fields as needed.

**NOTE:** You cannot edit the path profile name.

5. Click **OK**.

You are returned to the Path-Based Steering Profiles page. The modifications that you made are saved and a confirmation message is displayed..

## Deleting a Path-Based Steering Profile

You can delete path-based steering profiles if they are no longer needed. To delete one or more path-based steering profiles:

**NOTE:** You cannot delete a path-based steering profile if it is referenced by one or more SD-WAN policy intents.

1. Select **Configuration > SD-WAN > Path-Based Steering Profiles**.

The Path-Based Steering Profiles page appears.

2. On the Path Profiles List tab, select the path profiles that you want to delete.

3. Click the delete (trash can) icon.

A popup dialog appears asking you to confirm the deletion.

4. Click **Yes**.

You are returned to the Path-Based Steering Profiles page. The selected path-based steering profiles are deleted and a confirmation message is displayed.

### RELATED DOCUMENTATION

---

[SLA Profiles and SD-WAN Policies Overview | 552](#)

---

[About the Path-Based Steering Profiles Page | 580](#)

---

[Adding Path-Based Steering Profiles | 583](#)

## Breakout and Breakout Profiles Overview

### IN THIS SECTION

- [Cloud Breakout | 589](#)
- [Breakout Profiles | 589](#)

- SD-WAN Policy Intents for Breakout | 589
- Benefits of Breakout Profiles | 590

Site-to-site traffic between spoke sites of a tenant is sent (on overlay tunnels) directly from one site to another depending on the tenant topology or through the hub or enterprise hub. However, for Internet-bound or Software as a Service (SaaS) traffic, you can break out the traffic in different ways:

- Local breakout—The traffic exits the VPN directly at the site and goes to the destination.

**NOTE:** If underlay BGP is enabled for a WAN link, then the routes learnt from BGP are installed for local breakout; CSO does not generate the static default route.

- Backhaul or central breakout—The traffic exits the VPN at the provider hub or at the enterprise hub (if a enterprise hub is associated with the spoke site) and then goes to the destination.
- Cloud breakout—The traffic is sent from the site to a designated cloud-based security platform instead of traffic being sent over an underlay.

**NOTE:** From CSO Release 4.1.0 onwards, Zscaler is the only cloud-based security platform supported.

In CSO Release 4.0, only local breakout and central breakout (backhaul) are supported and the breakout option is enabled only at the site level. However, from CSO Release 4.1.0 onward, breakout is supported at the site, department, and application (cacheable only) levels by using breakout profiles that are applied using SD-WAN policy intents. Non-cacheable applications follow the site-specific or department-specific behavior as configured in the SD-WAN policy intent.

**NOTE:** For sites added in CSO Release 4.1.0 onward, you cannot configure breakout *directly* at the site level and must use breakout profiles referenced in SD-WAN policy intents for this purpose.

## Cloud Breakout

In releases before CSO Release 5.1.0, as part of providing the tunneled breakout to Zscaler, the tunnel source public IP address was obtained only from the WAN interface. With pool-based NAT supported from Release 5.1.0 onward, the tunnel creation to Zscaler (when pool-based NAT is configured) obtains the source address from the WAN link's NAT pool.

When multiple Zscaler tunnels are needed on a WAN interface (for example, when primary and secondary cloud breakout nodes are configured), the pool IP address must be large enough to accommodate these tunnels. In the case of multiple Zscaler tunnels, no two Zscaler tunnels will have the same source IP address. However, the IP address that is used as Zscaler tunnel's source address, can also be used in the NAT pools.

## Breakout Profiles

The following three types of breakout profiles are supported in CSO:

- Local breakout (underlay)
- Backhaul (central breakout)
- Cloud breakout

After you add a breakout profile, you must create an SD-WAN policy intent specifying the source (site, site group, or department) and application and the applicable breakout profile.

## SD-WAN Policy Intents for Breakout

For SD-WAN policy intents configured at different source endpoints, the following is applicable:

- Site—A policy intent configured at the site level applies to all the departments within the site. In addition, by default, the site-level configuration is also applicable to all applications because the default configuration for applications is **Any**.
- Department—A policy intent configured at the department level (for tenants with network segmentation enabled) overrides the policy intent configured at the site level. Similar to the behavior for the site-level policy intent, by default, a department-level policy intent is also applicable to all applications because the default configuration for applications is **Any**.
- Application (cacheable only)—A policy intent (at the application level) where you specify one or more cacheable applications overrides the policy intent specified at either the department level or the site level *only* for the specified applications.

## Benefits of Breakout Profiles

- Breakout profiles used in intent-based Internet breakout policies (through SD-WAN policy intents) give users granular control over the Internet breakout behavior for specific applications.

### RELATED DOCUMENTATION

[Adding Breakout Profiles | 595](#)

[Adding Cloud Breakout Settings | 597](#)

[Creating SD-WAN Policy Intents | 557](#)

## About the Breakout Profiles Page

### IN THIS SECTION

- [Tasks You Can Perform | 590](#)
- [Breakout Profiles Field Descriptions | 591](#)
- [Cloud Breakout Settings Field Descriptions | 593](#)

To access this page, click **Configuration > SD-WAN > Breakout Profiles**.

You can use the Breakout Profiles page to view existing breakout profiles, add local, backhaul, and cloud breakout profiles, edit breakout profiles, and delete breakout profiles. You can also add settings for cloud breakout, edit cloud breakout settings, assign the settings to one or more sites, detach the settings from one or more sites, and delete the settings.

The breakout profiles are displayed on the Breakout Profiles tab and the cloud breakout settings are displayed on the Cloud Breakout Settings tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View existing breakout profiles—See [Table 200 on page 591](#) for a description of the fields.
- View the details of a breakout profile—On the Breakout Profiles tab, select a breakout profile and from the More menu, select **Detail View**. The Detail for *Breakout-Profile-Name* pane appears on the right-hand side of the page. See [Table 200 on page 591](#) for a description of the fields on this pane.
- View existing cloud breakout settings—See [Table 201 on page 593](#) for a description of the fields.
- View the details of cloud breakout settings—On the Cloud Breakout Settings tab, select a cloud breakout setting and from the More menu, select **Detail View**. The Detail for *Cloud-Breakout-Setting-Name* pane appears on the right-hand side of the page. See [Table 201 on page 593](#) for a description of the fields on this pane.
- Add a breakout profile—See [“Adding Breakout Profiles” on page 595](#).
- Edit a breakout profile—See [“Editing Breakout Profiles and Cloud Breakout Settings” on page 603](#).
- Delete a breakout profile—See [“Deleting Breakout Profiles and Cloud Breakout Settings” on page 605](#).
- Add cloud breakout settings—See [“Adding Cloud Breakout Settings” on page 597](#).
- Edit cloud breakout settings—See [“Editing Breakout Profiles and Cloud Breakout Settings” on page 603](#).
- Delete cloud breakout settings—See [“Deleting Breakout Profiles and Cloud Breakout Settings” on page 605](#).
- Assign cloud breakout settings to one or more sites—See [“Assigning Cloud Breakout Settings to Sites” on page 601](#).
- Detach cloud breakout settings from one or more sites—See [“Detaching Cloud Breakout Settings from Sites” on page 602](#).

## Breakout Profiles Field Descriptions

Table 200: Breakout Profiles Field Descriptions

Field	Description	Displayed On
Name	Name of the breakout profile.	Breakout Profiles page (Breakout Profiles tab)  Detail for <i>Breakout-Profile-Name</i> pane
Type	Indicates whether the breakout profile is for local breakout (underlay) or backhaul (central breakout) or cloud breakout.	Breakout Profiles page (Breakout Profiles tab)  Detail for <i>Breakout-Profile-Name</i> pane
Description	Description of the breakout profile.	Breakout Profiles page (Breakout Profiles tab)

Table 200: Breakout Profiles Field Descriptions (*continued*)

Field	Description	Displayed On
Path Preference	<p>Indicates the preferred path to be used for breakout traffic:</p> <ul style="list-style-type: none"> <li>• MPLS</li> <li>• Internet</li> <li>• Any, which indicates no preference.</li> </ul>	Breakout Profiles page (Breakout Profiles tab)
Added by	Username of the user who added the breakout profile.	Breakout Profiles page (Breakout Profiles tab)
FqName	Internal name of the breakout profile.	Breakout Profiles page (Breakout Profiles tab)
Rate Limiting	Indicates whether rate limiting is enabled or disabled for the breakout profile.	Detail for <i>Breakout-Profile-Name</i> pane
Downstream Rate	Indicates the maximum downstream rate (in Kbps) for all cacheable applications associated with the breakout profile.	Detail for <i>Breakout-Profile-Name</i> pane
Downstream Burst Size	Indicates the maximum downstream burst size (in bytes) for all cacheable applications associated with the breakout profile.	Detail for <i>Breakout-Profile-Name</i> pane
Upstream Rate	Indicates the maximum upstream rate (in Kbps) for all cacheable applications associated with the breakout profile.	Detail for <i>Breakout-Profile-Name</i> pane
Upstream Burst Size	Indicates the maximum upstream burst size (in bytes) for all cacheable applications associated with the breakout profile.	Detail for <i>Breakout-Profile-Name</i> pane
Loss Priority	Indicates the loss priority associated with the breakout profile. The loss priority determines which packets are dropped or retained when network congestion occurs.	Detail for <i>Breakout-Profile-Name</i> pane



## Cloud Breakout Settings Field Descriptions

Table 201: Cloud Breakout Settings Field Descriptions

Field	Description	Displayed On
<b>General</b>		
Name or Profile-Name	Name of the cloud breakout setting.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Tunnel Type	Overlay tunnel type (IPSEC or GRE) used to break out traffic to the cloud breakout node.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Primary Gateway	IPv4 address of the primary cloud breakout node.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Primary Link Type	Preferred type of WAN link to be used for breaking out the traffic to the primary cloud breakout node.  If a WAN link type that matches the preferred path is enabled for breakout, then that WAN link type is used for breakout traffic.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Secondary Gateway	IPv4 address of the secondary cloud breakout node.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Secondary Link Type	Preferred type of WAN link to be used for breaking out the traffic to the secondary cloud breakout node.	Breakout Profiles page (Cloud Breakout Settings tab)  Detail for <i>Cloud-Breakout-Setting-Name</i> pane

Table 201: Cloud Breakout Settings Field Descriptions (*continued*)

Field	Description	Displayed On
Sites	If the cloud breakout settings are assigned to one or more sites, the names of the sites are displayed; if not, this field is blank.	Breakout Profiles page (Cloud Breakout Settings tab)
Provider	Name of the cloud service provider.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
<b>IPSEC Configuration Parameters</b>		
Domain Name	The domain name to generate the fully qualified domain name (FQDN) that is used by the cloud security providers to identify the IPsec tunnel end points. The domain name is populated based on the customer domain name that you provided while onboarding the tenant ( <b>Administration Portal &gt; Tenants &gt; Add Tenant &gt; Tenant Properties &gt; Cloud Breakout Settings</b> ).	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
<b>Phase 1 Parameters</b>		
Encryption Type	The encryption type for IPsec proposals.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Authentication Type	The IPsec authentication algorithm for security association.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
DH Group	The Diffie-Hellman (DH) group.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
<b>Phase 2 Parameters</b>		
Encryption Type	The encryption type for IPsec proposals.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane
Authentication Type	The IPsec authentication algorithm for security association.	Detail for <i>Cloud-Breakout-Setting-Name</i> pane

## RELATED DOCUMENTATION

| [Breakout and Breakout Profiles Overview](#) | 587

## Adding Breakout Profiles

You use the Add Breakout Profile page to add a local breakout (underlay), backhaul, or a cloud breakout profile. A cloud breakout profile is added by Contrail Service Orchestration (CSO) by default.

To add a breakout profile:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Breakout Profiles** tab, click the add icon (+).

The Add Breakout Profile page appears.

3. Complete the configuration according to the guidelines provided in [Table 202 on page 596](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the Breakout Profiles page (Breakout Profiles tab) and a confirmation message indicating that the breakout profile was added is displayed. The page refreshes to display the breakout profile that you added.

**NOTE:** After you add a breakout profile, you must add an SD-WAN policy intent that references the breakout profile in order to enable breakout traffic.

Table 202: Fields on the Add Breakout Profile Page

Field	Description
<b>Type</b>	<p>Select the type of breakout profile that you want to add:</p> <ul style="list-style-type: none"> <li>• <b>Local Breakout (Underlay)</b>—Select this option if you want traffic to break out locally (on the underlay) from the site.</li> <li>• <b>Backhaul</b>—Select this option if you want traffic to break out through a hub or a enterprise hub (if configured).</li> <li>• <b>Local Breakout (Cloud)</b>—Select to break out traffic through a cloud-based security platform. Currently, Zscaler is the only cloud-based security platform supported.</li> </ul>
<b>Name</b>	Enter a unique name for the breakout profile. You can use alphanumeric characters and hyphens (-); the maximum length is 15 characters.
<b>Description</b>	Enter a description for the breakout profile.
<b>Traffic Type Profile</b>	Select a traffic type profile to apply class of service parameters to the breakout traffic. You can select only a traffic type profile that is enabled.
<b>Preferred Path</b>	<p>Select the preferred path (MPLS, Internet, or Any) to be used for breaking out the traffic.</p> <p>If a WAN link type that matches the preferred path is enabled for breakout, then that WAN link type is used for breakout traffic.</p> <p>If you specify that any path can be used, then there is no preference and all breakout-enabled links are used in a load-balancing mode.</p>
Advanced Configuration	
<b>Rate Limiting</b>	<p>Click the toggle button to enable rate limiting of breakout traffic for cacheable applications. By default, rate limiting is disabled.</p> <p>If you enable rate limiting, you must specify the upstream and downstream parameters, and the loss priority.</p>
<b>Upstream Rate</b>	Specify the maximum upstream rate (in Kbps) for all cacheable applications associated with the breakout profile.
<b>Upstream Burst Size</b>	Specify the maximum size (in bytes) of a steady stream of traffic sent at average rates that exceed the upstream rate limit for short periods.
<b>Downstream Rate</b>	Specify the maximum downstream rate (in Kbps) for all cacheable applications associated with the breakout profile.

Table 202: Fields on the Add Breakout Profile Page (*continued*)

Field	Description
<b>Downstream Burst Size</b>	Specify the maximum size (in bytes) of a steady stream of traffic sent at average rates that exceed the downstream rate limit for short periods.
<b>Loss Priority</b>	Select a loss priority based on which packets are dropped or retained when network congestion occurs. Packet drops are most likely when the loss priority is High and least likely when the loss priority is Low.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)
[Creating SD-WAN Policy Intents | 557](#)

## Adding Cloud Breakout Settings

You use the Add Cloud Breakout Settings page to add cloud breakout settings that you can then apply to sites.

To add cloud breakout settings:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Cloud Breakout Settings** tab, click the add icon (+).

The Add Cloud Breakout Settings page appears.

3. Complete the configuration according to the guidelines provided in [Table 203 on page 598](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

**NOTE:** If the gateway is unreachable, an error message **Gateway is unreachable. Do you want to proceed with profile creation?** is displayed. If you want to continue with the cloud breakout profile creation, click **Yes**, else click **Cancel**.

You are returned to the Breakout Profiles page (Cloud Breakout Settings tab) and a confirmation message indicating that the breakout settings are added is displayed.

After you add cloud breakout settings, you can assign the settings to one or more sites. Assigning cloud breakout settings to sites provisions the cloud breakout node (Zscaler) overlay. For traffic to flow, you must reference the cloud breakout profile in an SD-WAN policy intent.

**Table 203: Fields on the Add Cloud Breakout Settings Page**

Field	Description
<b>Name</b>	Enter a unique name for the cloud breakout settings. You can use alphanumeric characters and hyphens (-); the maximum length is 15 characters.
<b>Tunnel Type</b>	Select the type of overlay tunnel (IPSEC or GRE) used to break out the traffic to the cloud breakout node.
<b>IPsec Configuration Parameters</b>	
<b>Domain Name</b>	<p>Displays the domain name that is used to generate the fully qualified domain name (FQDN) for SD-WAN policies. The FQDN is used by the cloud security providers to identify the IPsec tunnels. The domain name is populated based on the customer domain name that you provided while onboarding the tenant (<b>Administration Portal &gt; Tenants &gt; Add Tenant &gt; Tenant Properties &gt; Cloud Breakout Settings</b>).</p> <p>Though the domain name is populated automatically, you can modify the domain name.</p>
<b>Phase 1</b>	In Phase 1, the SD-WAN spoke site and the cloud breakout node establish a secure tunnel to negotiate the IPsec security associations (SAs).
<b>Encryption Type</b>	<p>Select an encryption type for IPsec proposals:</p> <ul style="list-style-type: none"> <li>• <b>AES-256-CBC (default)</b>—Advanced Encryption Standard (AES) 256-bit encryption algorithm in Cipher Block Chaining (CBC) mode.</li> <li>• <b>AES-192-CBC</b>—AES 192-bit encryption algorithm.</li> <li>• <b>AES-128-CBC</b>—AES 128-bit encryption algorithm.</li> <li>• <b>3DES-CBC</b>—Triple Data Encryption Algorithm (3DES) in CBC mode. Has a block size of 24 bytes; the key size is 192 bits long.</li> </ul>

Table 203: Fields on the Add Cloud Breakout Settings Page (*continued*)

Field	Description
<b>Authentication Type</b>	<p>Select an IPsec authentication algorithm for security association:</p> <ul style="list-style-type: none"> <li>• <b>SHA-256 (default)</b>—Secure Hash Algorithm (SHA) that converts a text of any length into a string of 256 bits.</li> <li>• <b>SHA-384</b>—Produces a 384-bit string.</li> <li>• <b>SHA1</b>—Produces a 160-bit string.</li> </ul>
<b>DH Group</b>	<p>Specify the Diffie-Hellman (DH) group to match the IPsec encryption algorithm:</p> <ul style="list-style-type: none"> <li>• <b>GROUP2 (default)</b>—1024-bit Modular Exponential (MODP) algorithm.</li> <li>• <b>GROUP5</b>—1536-bit MODP algorithm.</li> <li>• <b>GROUP14</b>—2048-bit MODP algorithm.</li> </ul>
Phase 2	In Phase 2, the SD-WAN spoke site and the cloud breakout node negotiate the IPsec SAs for encrypting and authenticating the exchange of data.
<b>Encryption Type</b>	<p>Select an encryption type for IPsec proposals.</p> <ul style="list-style-type: none"> <li>• <b>NULL (default)</b>—No encryption. This is the default.</li> <li>• <b>AES-256-CBC</b>—AES 256-bit encryption algorithm.</li> <li>• <b>AES-192-CBC</b>—AES 192-bit encryption algorithm.</li> <li>• <b>AES-128-CBC</b>—AES 128-bit encryption algorithm.</li> </ul>
<b>Authentication Type</b>	<p>Select an IPsec authentication algorithm for security association.</p> <ul style="list-style-type: none"> <li>• <b>HMAC-MD5-96 (default)</b>—Produces a 128-bit digest. This is the default.</li> <li>• <b>HMAC-SHA-256-128</b>—Produces a 256-bit digest, truncated to 128 bits.</li> <li>• <b>HMAC-SHA1-96</b>—Produces a 160-bit digest.</li> </ul>
<b>Protocol</b>	<p>Displays the protocol as ESP (default). Encapsulating Security Payload (ESP) protocol provides a means to ensure privacy (encryption), source authentication and content integrity (authentication).</p> <p><b>NOTE:</b> You cannot edit the protocol.</p>
<b>Primary Gateway</b>	Configuration for the primary cloud breakout node.
<b>Link Type</b>	<p>Select the preferred type of WAN link (MPLS or Internet) to be used for breaking out the traffic to the primary cloud breakout node.</p> <p>If a WAN link type that matches the preferred path is enabled for breakout, then that WAN link type is used for breakout traffic.</p>

Table 203: Fields on the Add Cloud Breakout Settings Page (*continued*)

Field	Description
<b>IP Address/Hostname</b>	<p>Enter the IPv4 address or host name of the primary cloud breakout node. Currently, Zscaler is the only cloud-based security platform supported.</p> <p>The IP address or hostname, is validated. If the IP address or host name is not reachable, the <b>Host Unreachable</b> message is displayed.</p>
<b>Preshared Key</b>	<p>Enter the preshared key used for IKE authentication with the primary cloud breakout node. The preshared key is provided by the Zscaler.</p> <p>The key that you enter is masked.</p>
<b>Confirm Preshared Key</b>	Reenter the preshared key for confirmation.
<b>Secondary Gateway</b>	Configuration for the secondary cloud breakout node.
<b>Link Type</b>	<p>Select the preferred type of WAN link (MPLS or Internet) to be used for breaking out the traffic to the secondary cloud breakout node.</p> <p>If a WAN link type that matches the preferred path is enabled for breakout, then that WAN link type is used for breakout traffic.</p>
<b>IP Address/Hostname</b>	<p>Enter the IPv4 address or host name of the secondary cloud breakout node. Currently, Zscaler is the only cloud-based security platform supported.</p> <p>The IP address or hostname, is validated. If the IP address or host name is not reachable, the <b>Host Unreachable</b> message is displayed.</p>
<b>Preshared Key</b>	<p>Enter the preshared key used for IKE authentication with the secondary cloud breakout node. The preshared key is provided by the Zscaler.</p> <p>The key that you enter is masked.</p>
<b>Confirm Preshared Key</b>	Reenter the preshared key for confirmation.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)
[Creating SD-WAN Policy Intents | 557](#)



## Assigning Cloud Breakout Settings to Sites

You use the Assign Cloud Breakout Settings to Sites page to assign cloud breakout settings to one or more sites. You assign cloud breakout settings to one or more sites to provision tunnels from the sites to the cloud breakout node. For breakout traffic from the site, the cloud breakout profile must be referenced in an SD-WAN policy intent.

**NOTE:**

- If you want a site to have cloud breakout enabled, you must assign cloud breakout settings for that site.
- A site can have only one cloud breakout setting associated with it at any given time.

To assign one or more sites to a cloud breakout profile:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Cloud Breakout Settings** tab, select a cloud breakout profile and click **Assign Sites**.

The Assign Cloud Breakout Settings to Sites page appears displaying the name of the cloud breakout setting and the existing sites to which you can assign the setting. All SD-WAN sites that have local breakout enabled will be displayed in the Available sites column.

3. In the Sites field, select one or more sites in the Available column and click the right arrow icon to move the selected sites to the Selected column. You can also use the search icon on the top right of each column to search for sites names.

Alternatively, if you want to remove sites that you previously selected for assignment, select one or more sites in the Selected column and click the left arrow icon to move the selected sites back to the Available column.

**NOTE:** You must select at least one site before proceeding.

4. Click **Next**.

The Edit Site Tunnels tab is displayed.

5. Review the configuration and modify the settings, if needed.

- For IPsec Tunnels, ensure that the format for the FQDN is as follows:

- *Site-name.primary\_link.primary\_gateway.1@Customer-Domain-Name* for the primary gateway primary link
- *Site-name.backup\_link.primary\_gateway.1@Customer-Domain-Name* for the primary gateway backup link
- *Site-name.primary\_link.backup\_gateway.1@Customer-Domain-Name* for the secondary gateway primary link
- *Site-name.backup\_link.backup\_gateway.1@Customer-Domain-Name* for the secondary gateway backup link

Where *Site-Name* is the name of the site (in CSO) for which the breakout is configured and *Customer-Domain-Name* is the name of the customer domain (in CSO) that you added while onboarding the tenant (**Administration Portal > Tenants > Add Tenant > Tenant Properties > Cloud Breakout Settings**).

- For GRE tunnels, ensure that the primary and secondary gateway internal IP prefix is same as provided by the Zscaler.

6. Select the local links (WAN links) to create the tunnel.

7. Select the link mode as Active-Active or Active-Backup. The primary link is always set to active mode and is used to send the traffic. If secondary link is set to active, the CPE device will load balance the traffic on both primary and secondary links. If the secondary link is set to backup, then secondary link will not be used to send traffic unless the primary link fails.

8. Click **OK**.

A Job is created and you are returned to the Breakout Profiles page (Cloud Breakout Settings tab). After successful completion of the job, the names of the sites to which the settings are assigned are displayed in the Sites column.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)

[Detaching Cloud Breakout Settings from Sites | 602](#)

## Detaching Cloud Breakout Settings from Sites

You must detach the cloud breakout settings from one or more sites (by using the Detach Cloud Breakout From Sites page) before editing or deleting the cloud breakout settings.

To detach one or more sites from a cloud breakout profile:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Cloud Breakout Settings** tab, select a cloud breakout profile and click **Detach Sites**.

The Detach Cloud Breakout From Sites page appears displaying the name of the cloud breakout setting and the existing sites to which the setting was assigned.

3. In the **Sites** field, select one or more sites in the Available column and click the right arrow icon to move the selected sites to the Selected column. You can also use the search icon on the top right of each column to search for sites.

Alternatively, if you want to remove the selected sites, select one or more sites in the Selected column and click the left arrow icon to move the selected sites back to the Available column.

**NOTE:** You must select at least one site before proceeding to the next step.

4. Click **Save**.

A job is created and you are returned to the Breakout Profiles page (Cloud Breakout Settings tab). After successful completion of the job, the names of the sites to which the settings are detached are removed from the Sites column of the cloud breakout settings tab.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)

[Assigning Cloud Breakout Settings to Sites | 601](#)

## Editing Breakout Profiles and Cloud Breakout Settings

### IN THIS SECTION

- [Editing Breakout Profiles | 604](#)
- [Editing Cloud Breakout Settings | 604](#)

On the Breakout Profiles page, you can edit breakout profiles and cloud breakout settings that are not assigned to sites.

**NOTE:** You cannot edit the cloud breakout profile that is automatically created by Contrail Service Orchestration (CSO).

## Editing Breakout Profiles

To edit a breakout profile:

**NOTE:** If you edit a breakout policy that is used in an SD-WAN policy intent, then that SD-WAN policy is marked for redeployment.

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Breakout Profiles** tab, select the breakout profile that you want to edit.

3. Click the edit (pencil) icon.

The Edit Breakout Profile page appears displaying the same fields that are presented when you add a breakout profile. For more information, see [“Adding Breakout Profiles” on page 595](#).

4. Modify the fields as needed.

**NOTE:** You can modify only some fields when you are editing a breakout profile

5. Click **OK**.

You are returned to the Breakout Profiles page. The modifications that you made are saved and a confirmation message is displayed.

## Editing Cloud Breakout Settings

Before editing a cloud breakout setting, ensure that the setting is detached from the site. The edit (pencil) icon is disabled for cloud breakout settings that are assigned to sites.

To edit cloud breakout settings that are not assigned to sites:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Cloud Breakout Settings** tab, select the cloud breakout setting that you want to edit.

3. Click the edit (pencil) icon.

The Edit Cloud Breakout page appears displaying the same fields that are presented when you add cloud breakout settings. For more information, see [“Adding Cloud Breakout Settings” on page 597](#).

4. Modify the fields as needed.

**NOTE:** You can modify only some fields when you are editing a breakout profile

5. Click **OK**.

You are returned to the Breakout Profiles page. The modifications that you made are saved and a confirmation message is displayed.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)

[About the Breakout Profiles Page | 590](#)

[Detaching Cloud Breakout Settings from Sites | 602](#)

## Deleting Breakout Profiles and Cloud Breakout Settings

### IN THIS SECTION

- [Deleting Breakout Profiles | 606](#)
- [Deleting Cloud Breakout Settings | 606](#)

On the Breakout Profiles page, you can delete breakout profiles that are not used in SD-WAN policy intents and cloud breakout settings that are not assigned to sites.

## Deleting Breakout Profiles

To delete a breakout profile that is not used in an SD-WAN policy intent:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Breakout Profiles** tab, select the breakout profile that you want to delete.

3. Click the delete (trash can) icon.

A popup dialog appears asking you to confirm the deletion.

4. Click **Yes**.

You are returned to the Breakout Profiles page. The selected breakout profile is deleted and a confirmation message is displayed.

## Deleting Cloud Breakout Settings

Before deleting a cloud breakout setting, ensure that the setting is detached from the site. The delete (trash can) icon is disabled for cloud breakout settings that are assigned to sites.

To delete cloud breakout settings that are not assigned to sites:

1. Select **Configuration > SD-WAN > Breakout Profiles**.

The Breakout Profiles page appears.

2. On the **Cloud Breakout Settings** tab, select the cloud breakout setting that you want to delete.

3. Click the delete (trash can) icon.

A popup dialog appears asking you to confirm the deletion.

4. Click **Yes**.

You are returned to the Breakout Profiles page. The selected cloud breakout setting is deleted and a confirmation message is displayed.

## RELATED DOCUMENTATION

[Breakout and Breakout Profiles Overview | 587](#)[About the Breakout Profiles Page | 590](#)[Detaching Cloud Breakout Settings from Sites | 602](#)

## Configuring Breakout on SD-WAN Sites

The following is the workflow for configuring breakout (local breakout [underlay], backhaul [central breakout], or cloud breakout):

1. *Before* configuring breakout, ensure that you complete the following tasks:
  - a. If you are using enterprise hub sites, add, configure, and activate one or more enterprise hub sites. See [“Add Enterprise Hubs with SD-WAN Capability or SD-WAN and LAN Capabilities” on page 65](#).
  - b. Add, configure, and activate one or more on-premise spoke sites with SD-WAN capability. See [“Add an On-Premise Spoke Site with SD-WAN Capability” on page 103](#).

**NOTE:** You must attach an on-premise spoke site with SDWAN capability to a provider hub site or an enterprise hub site, or to both hub sites.

- c. (Optional) If you are using application-based breakout, ensure that you install the application ID license (if it is required for the device) and signatures on the devices (associated with the sites).
2. Depending on the type of breakout you are configuring, add one or more breakout profiles for the following types of breakout:
  - Local breakout (underlay)
  - Backhaul (central breakout)
  - Cloud breakoutSee [“Adding Breakout Profiles” on page 595](#).
3. For cloud breakout, add cloud breakout settings and then assign the cloud breakout settings to one or more on-premise spoke or enterprise hub sites. See [“Adding Cloud Breakout Settings” on page 597](#) and [“Assigning Cloud Breakout Settings to Sites” on page 601](#).

4. Add one or more SD-WAN policy intents in which you reference the previously-added breakout profiles. See [“Creating SD-WAN Policy Intents” on page 557](#).
5. Deploy the SD-WAN policy. See [“Deploying Policies” on page 723](#).
6. Configure firewall policy intents to allow Internet-bound traffic from the sites or departments for which you configured breakout (through the SD-WAN policy intent). See [“Adding Firewall Policy Intents” on page 433](#).
7. Deploy the firewall policy. See [“Deploying Policies” on page 723](#).
8. For cloud breakout using Zscaler, ensure that the user IDs in the Zscaler account are configured as follows:
  - *Site-Name.primary.1@Tenant-Name.com* for the primary tunnel
  - *Site-Name.backup.1@Tenant-Name.com* for the secondary tunnel

Where *Site-Name* is the name of the site (in CSO) for which the breakout is configured and *Tenant-Name* is the name of the tenant (in CSO) to which the site belongs.

## RELATED DOCUMENTATION

| [Breakout and Breakout Profiles Overview](#) | 587



# Managing NAT Policies

## IN THIS CHAPTER

- [NAT Policies Overview | 610](#)
- [About the NAT Policies Page | 613](#)
- [Creating NAT Policies | 614](#)
- [Editing and Deleting NAT Policies | 616](#)
- [About the Single NAT Policy Page | 617](#)
- [Creating NAT Policy Rules | 619](#)
- [Editing, Cloning, and Deleting NAT Policy Rules | 626](#)
- [Deploying NAT Policy Rules | 628](#)
- [Selecting NAT Source | 629](#)
- [Selecting NAT Destination | 633](#)
- [NAT Pools Overview | 637](#)
- [About the NAT Pools Page | 637](#)
- [Creating NAT Pools | 639](#)
- [Editing, Cloning, and Deleting NAT Pools | 641](#)
- [Deploying NAT Policies | 643](#)
- [Importing NAT Policies | 643](#)

## NAT Policies Overview

Network Address Translation (NAT) is a form of network masquerading where you can hide devices or sites between zones or interfaces. A trusted zone is a segment of a network on which security measures are applied. It is usually assigned to the internal LAN. An example of an untrusted zone is the internet. NAT modifies the IP addresses of the packets moving between the trusted and untrusted zones.

Whenever a packet exits a NAT device (when traversing from the internal LAN to the external WAN), the device performs a translation on the packet's IP address by rewriting it with an IP address that was specified for external use. After translation, the packet appears to have originated from the gateway rather than from the original device within the network. This process hides your internal IP addresses from the other networks and keeps your network secure.

Using NAT also enables you to use more internal IP addresses. As these IP addresses are hidden, there is no risk of conflict with an IP address from a different network. This helps you conserve IP addresses.

CSO supports three types of NAT:

- **Source NAT**— Translates the source IP address of a packet leaving a trust zone (outbound traffic). It translates the traffic originating from the device in the trust zone. The source IP address of the traffic (which is a private IP address), is translated to a public IP address that can be accessed by the destination device specified in the NAT rule. The destination IP address is not translated.

The following uses cases show the support for source NAT translation between IPv6 and IPv4 address domains:

- Translation from one IPv6 subnet to another IPv6 subnet without Network Address Port Translation (NAPT), also known as Port Address Translation (PAT).
- Translation from IPv4 addresses to IPv6 prefixes along with IPv4 address translation.
- Translation from IPv6 hosts to IPv6 hosts with or without NAPT.
- Translation from IPv6 hosts to IPv4 hosts with or without NAPT.
- Translation from IPv4 hosts to IPv6 hosts with or without NAPT.
- **Destination NAT**—Translates the destination IP address of a packet. Using destination NAT, an external device can send packets to a hidden internal device. As an example, consider the case of a webserver behind a NAT device. Traffic to the WAN-facing public IP address (the destination IP address) is translated to the internal webserver private IP address.

The following uses cases show the support for destination NAT translation between IPv6 and IPv4 address domains:

- Mapping of one IPv6 subnet to another IPv6 subnet
- Mapping between one IPv6 host and another IPv6 host

- Mapping of one IPv6 host (and optional port number) to another special IPv6 host (and optional port number)
- Mapping of one IPv6 host (and optional port number) to another special IPv4 host (and optional port number)
- Mapping of one IPv4 host (and optional port number) to another special IPv6 host (and optional port number)
- Static NAT— Always translates a private IP address to the same public IP address. It translates traffic from both sides of the network (both source and destination). For example, a web-server with a private IP address can access the Internet using a static, one-to-one address translation. In this case, outgoing traffic from the web-server undergoes source NAT translation, and incoming traffic to the web-server undergoes destination NAT translation.

The following uses cases show the support for static NAT translation between IPv6 and IPv4 address domains:

- Mapping of one IPv6 subnet to another IPv6 subnet.
- Mapping between one IPv6 host and another IPv6 host.
- Mapping between IPv4 address *a.b.c.d* and IPv6 address *Prefix::a.b.c.d*.
- Mapping between IPv4 hosts and IPv6 hosts.
- Mapping between IPv6 hosts and IPv4 hosts.

CSO also supports persistent NAT where address translations are maintained in the database for a configurable amount of time after a session ends.

[Table 204 on page 611](#) shows the persistent NAT support for different source NAT and destination NAT addresses.

**Table 204: Persistent NAT Support**

Source NAT Address	Translated Address	Destination NAT Address	Persistent NAT
IPv4	IPv6	IPv4	No
IPv4	IPv6	IPv6	No
IPv6	IPv4	IPv4	Yes
IPv6	IPv6	IPv6	No

[Table 205 on page 612](#) and [Table 206 on page 612](#) show the translated address pool selection for source NAT, destination NAT, and static NAT addresses.

Table 205: Translated Address Pool Selection for Source NAT

Source NAT Address	Destination Address	Pool Address
IPv4	IPv4	IPv4
IPv4	IPv6 - Subnet must be greater than 96	IPv6
IPv6	IPv4	IPv4
IPv6	IPv6	IPv6

Table 206: Translated Address Pool Selection for Destination NAT And Static NAT

Source NAT Address	Destination Address	Pool Address
IPv4	IPv4	IPv4 or IPv6
IPv4	IPv6 - Subnet must be greater than 96	IPv4 or IPv6
IPv6	IPv4	IPv4
IPv6	IPv6	IPv4 or IPv6

**NOTE:**

- For source NAT, the proxy Neighbor Discovery Protocol (NDP) is available for NAT pool addresses. For destination NAT and static NAT, the proxy NDP is available for destination NAT addresses.
- A NAT pool can have a single IPv6 subnet or multiple IPv6 hosts.
- You cannot configure the overflow pool if the address type is IPv6.
- NAT pools permit address entries of only one version type: IPv4 or IPv6.

**RELATED DOCUMENTATION**
[About the NAT Policies Page | 613](#)
[Creating NAT Policies | 614](#)
[Editing and Deleting NAT Policies | 616](#)
[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

# About the NAT Policies Page

To access this page, select **Configuration > NAT > NAT Policies**.

Use the **NAT Policies** page to create, modify, clone, and delete NAT policies and policy rules. You can filter and sort this information to get a better understanding of what you want to configure.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Create a NAT policy. See [“Creating NAT Policies” on page 614](#).
- Modify or delete a NAT policy. See [“Editing and Deleting NAT Policies” on page 616](#).
- Create, modify, clone, and delete NAT policy rules. See [“About the Single NAT Policy Page” on page 617](#).
- Search for a specific NAT policy. Click the Search icon in the top right corner of the page to search for a NAT policy.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

- Show or hide columns. Click the **Show Hide Columns** icon in the top right corner of the page.

## Field Descriptions

[Table 207 on page 613](#) provides guidelines on using the fields on the **NAT Policies** page.

Table 207: Fields on the NAT Policies Page

Field	Description
Name	Displays the name of the NAT policy.
Installed On	Displays the sites on which the NAT policy is assigned.
Rules	Number of rules assigned to the NAT policy.
Undeployed	Number of undeployed rules associated with the NAT policy.

## RELATED DOCUMENTATION

[NAT Policies Overview | 610](#)

Creating NAT Policies | 614

Editing and Deleting NAT Policies | 616

About the Single NAT Policy Page | 617

## Creating NAT Policies

Use the **Create NAT Policy** page to create NAT policies.

To create a NAT policy:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears.

2. Click the add icon (+).

The **Create NAT Policy** page displays fields required for creating and configuring a NAT policy.

3. Complete the configuration according to the guidelines provided in [Table 208 on page 614](#).

**NOTE:** You can associate only a single device or a device cluster with a site.

4. Click **OK** to save the changes.

A NAT policy with the configuration you provided is created.

Table 208: Fields on the Create NAT Policy Page

Field	Description
Name	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters.
Description	Enter a description for the policy; the maximum length is 1024 characters.

Table 208: Fields on the Create NAT Policy Page (*continued*)

Field	Description
Manage Auto-Proxy ARP	<p>The Address Resolution Protocol (ARP) protocol translates IPv4 addresses to MAC addresses. Typically, an interface responds with its MAC address only when an ARP request for its IP address is received.</p> <p>A proxy ARP implies that the same interface will proxy for other IP addresses (that is, respond to ARP requests for other IP addresses).</p> <p>Managing a proxy ARP automatically enables the selection of an appropriate interface for any address (as part of a NAT rule) that is not an actual interface address. Proxy ARP management applies to translated addresses in a source NAT rule or to a destination address in a destination NAT rule.</p> <p><b>NOTE:</b> When creating a source NAT rule with pool translation, the address pool assigned must be in the same subnet as the outgoing interface selected.</p> <p><b>NOTE:</b> When creating a destination NAT rule, the external WAN interface can be a proxy for another IP address in the same subnet as the original IP address of the interface.</p>
Sites Applied On	<p>Select the sites on which you want to apply the policy in the <b>Available</b> column and move them to the <b>Selected</b> column by clicking the greater-than icon (&gt;).</p> <p><b>NOTE:</b> The <b>Available</b> column lists only those sites that do not have a NAT policy associated with them.</p>
Sequence No.	<p>Click <b>Select Policy Sequence</b>. The <b>Select Policy Sequence</b> page appears, displaying all NAT policies. Select the policy you want to reorder and select <b>Move Policy Up</b> or <b>Move Policy Down</b> to reorder your NAT policy among the existing policies.</p>

## RELATED DOCUMENTATION

[NAT Policies Overview | 610](#)
[About the NAT Policies Page | 613](#)
[Editing and Deleting NAT Policies | 616](#)
[About the Single NAT Policy Page | 617](#)
[Creating NAT Policy Rules | 619](#)
[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

## Editing and Deleting NAT Policies

### IN THIS SECTION

- [Editing NAT Policies | 616](#)
- [Deleting NAT Policies | 616](#)

You can edit or delete a NAT policy from the **NAT Policies** page.

### Editing NAT Policies

To modify the parameters configured for a NAT Policy:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears.

2. Hover over the NAT policy you want to edit, and then click on the edit icon (pencil symbol) on the right side of the table.

The **Edit NAT Policy** page appears, showing the same fields as those seen when you create a new NAT policy.

3. Modify the parameters according to the guidelines provided in [“Creating NAT Policies” on page 614](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, you will see the modified NAT policy in the **NAT Policies** page.

### Deleting NAT Policies

To delete a NAT policy:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears.

2. Hover over the NAT policy you want to delete and then click the delete icon (X).

An alert message appears, verifying that you want to delete your selection.



3. Click **Yes** to delete the selection. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the NAT policy is deleted.

**NOTE:** When the NAT policy is deleted, the NAT rules associated with the policy are deleted from device.

## RELATED DOCUMENTATION

[NAT Policies Overview | 610](#)

[About the NAT Policies Page | 613](#)

[Creating NAT Policies | 614](#)

[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

## About the Single NAT Policy Page

To access this page, select **Configuration > NAT > NAT Policies**. The **NAT Policies** page appears displaying all existing NAT policies. Click on a NAT policy to view the rules associated with it.

The *Single NAT Policy* page displays the NAT rules associated with the NAT policy, and keep track of the number and order of rules for each policy. You can also create a new NAT rule, modify the configured parameters of existing NAT rules, clone, and delete NAT rules, using this page.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a NAT rule. See [“Creating NAT Policy Rules” on page 619](#).
- Update the sequence of the NAT rules using the up and down arrows that appear when you hover over the NAT rule.
- Modify, clone, and delete NAT rules. See [“Editing, Cloning, and Deleting NAT Policy Rules” on page 626](#).
- Deploy a NAT rule. See [“Deploying NAT Policy Rules” on page 628](#).
- Search for a specific NAT rule. Click the Search icon in the top right corner of the page to search for a NAT rule.
- Show or hide columns. Click the **Show Hide Columns** icon in the top right corner of the page.

Field Descriptions

Table 209 on page 618 provides information on the fields in the NAT rules contained within this NAT policy.

Table 209: Fields on the Single NAT Policy Page

Field	Description
Source	Displays the source endpoint on which the NAT policy applies. A source endpoint can be an address, protocol, interface, routing instance, zone, or port.
Destination	Displays the destination endpoint on which the NAT policy applies. A destination endpoint can be an address, interface, service, routing instance, zone, or port.
Translation	Displays the translation type applied on the incoming or outgoing traffic.
Details	Displays the type of NAT rule. A NAT rule can be of type source, static, or destination.

The **Total Rules** field on the top right corner of the page displays the total number of rules associated with the NAT policy. The **Undeployed** field displays the number of undeployed rules associated with the NAT policy. To deploy undeployed rules, click **Deploy**. See “[Deploying NAT Policy Rules](#)” on page 628.

RELATED DOCUMENTATION

<a href="#">NAT Policies Overview</a>	<a href="#">  610</a>
<a href="#">About the NAT Policies Page</a>	<a href="#">  613</a>
<a href="#">Creating NAT Policies</a>	<a href="#">  614</a>
<a href="#">Editing and Deleting NAT Policies</a>	<a href="#">  616</a>
<a href="#">Creating NAT Policy Rules</a>	<a href="#">  619</a>
<a href="#">Editing, Cloning, and Deleting NAT Policy Rules</a>	<a href="#">  626</a>
<a href="#">Deploying NAT Policy Rules</a>	<a href="#">  628</a>

## Creating NAT Policy Rules

NAT processing centers on the evaluation of NAT rule sets and rules. A rule set determines the overall direction of the traffic to be processed. After a rule set that matches the traffic is found, each rule in the rule set is evaluated for a match. NAT rules can match on the following packet information:

- Source and destination address
- Source port (for source and static NAT only)
- Destination port

The first rule in the rule set that matches the traffic is used. If a packet matches a rule in a rule set during session establishment, traffic is processed according to the action specified by that rule.

To create a new NAT rule, click the NAT policy name. The *Single NAT Policy* page appears, providing you with options to configure NAT rules. Alternately, you can click on the rule number listed under **Rules** against the policy, to create a new rule. You can configure the following types of NAT rules:

- **Static**—To add a static NAT rule, click **Add Static NAT Rule** or click **Create** on the top right corner and select **Static**.
- **Source**—To add a source NAT rule, click **Add Source NAT Rule** or click **Create** on the top right corner and select **Source**.
- **Destination**—To add a destination NAT rule, click **Add Destination NAT Rule** or click **Create** on the top right corner and select **Destination**.

Depending on the type of rule you have chosen, some fields in the rule will not be applicable. In addition to defining rules between zones and interfaces, you can define NAT rules with virtual routers defined on the device. These rules can be successfully published and updated on the device.

To create a NAT policy rule:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears, displaying the existing NAT policies.

2. Click the name of the NAT policy for which you want to create rules. Alternately, you can click on the number listed under **Rules** against a NAT policy.

The *Single NAT Policy* page appears.

3. Click **Create** and select either **Source**, **Static**, or **Destination**. The page displays fields for creating a NAT rule.

4. Complete the configuration according to the guidelines provided in [Table 210 on page 620](#).
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A NAT rule with the configuration you provided is created.

[Table 210 on page 620](#) provides guidelines on using the fields on the **Single NAT Policy** page.

**Table 210: Fields on the Single NAT Policy Page for Creating NAT Rules**

Field	Description
Source	<p>Click the add icon (+) to select the source endpoints on which the NAT policy rule applies, from the displayed list of addresses, protocols, interfaces, routing instances, zones, or ports.</p> <p>The possible endpoints for source differ based on whether the NAT rule is a source, destination, or static NAT rule.</p> <ul style="list-style-type: none"> <li>• The possible endpoints for source for a source NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Routing instances, interfaces, or zones</li> <li>• Protocols</li> <li>• Ports</li> </ul> </li> <li>• The possible endpoints for source for a destination NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Routing instances, interfaces, or zones</li> <li>• Protocols</li> </ul> </li> <li>• The possible endpoints for source for a static NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Routing instances, interfaces, or zones</li> <li>• Ports</li> </ul> </li> </ul> <p>You can also select a source endpoint by using the methods described in <a href="#">“Selecting NAT Source” on page 629</a>.</p>

Table 210: Fields on the Single NAT Policy Page for Creating NAT Rules (*continued*)

Field	Description
Destination	<p>Click the add icon (+) to select the destination endpoints on which the NAT policy rule applies, from the displayed list of addresses, interfaces, services, routing instances, zones, or ports.</p> <p>The possible endpoints for destination differ based on whether the NAT rule is a source, destination, or static NAT rule.</p> <ul style="list-style-type: none"> <li>• The possible endpoints for destination for a source NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Routing instances, interfaces, or zones</li> <li>• Services</li> <li>• Ports</li> </ul> </li> <li>• The possible endpoints for destination for a destination NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Services</li> <li>• Ports</li> </ul> </li> <li>• The possible endpoints for destination for a static NAT rule are: <ul style="list-style-type: none"> <li>• Addresses</li> <li>• Ports</li> </ul> </li> </ul> <p>You can select a destination endpoint by using the methods described in <a href="#">“Selecting NAT Destination” on page 633</a>.</p> <p><b>NOTE:</b> When you create a destination NAT rule for traffic arriving on an interface that terminates a VPN link, the translation process may break the VPN link. This will happen if the destination address in a destination NAT rule is specified only as the WAN-facing IP address of that interface. For example, in the following NAT rule, any traffic destined to Wan.IP will get translated to the destination pool and will break functionality of the VPN link packets terminating on this interface.</p> <p><b>[Any.Address] --&gt; [Wan.IP] :: [Dest-Pool-1]</b></p> <p>Therefore, the recommendation in such cases is to use a destination NAT rule with destination field as <b>[Address + Port]</b>. For example:</p> <p><b>[Any.Address] --&gt; [Wan.IP + Port] :: [Dest-Pool-1]</b></p>
Translation	

Table 210: Fields on the Single NAT Policy Page for Creating NAT Rules (*continued*)

Field	Description
Translation Type	<p>Specify the translation type for the incoming traffic. The translation options vary based on whether you are creating a source, static, or destination NAT rule.</p> <p>Chose one among the following translation types for a source NAT rule:</p> <ul style="list-style-type: none"> <li>• None—No translation is required for the incoming traffic.</li> <li>• Interface—Performs interface-based translations on the source or destination packet.</li> <li>• Pool—Performs pool-based translations on the source or destination packet. Click on the add icon (+) in the <b>Select Pool</b> field to choose the translation pool.</li> </ul> <p>You can also create a new pool by clicking <b>Add new pool</b>. See <a href="#">“Creating NAT Pools” on page 639</a>.</p> <p>Chose one among the following translation types for a static NAT rule:</p> <ul style="list-style-type: none"> <li>• Address—Performs address-based translations on the source or destination packet. Click on the add icon (+) in the <b>Select Address</b> field to choose the translation address.</li> </ul> <p>You can also create a new address by clicking <b>Add new address</b>. See <a href="#">“Creating Addresses or Address Groups” on page 786</a>.</p> <p><b>NOTE:</b> In an SD-WAN environment, it is mandatory that you select the routing instance corresponding to the translation address. You can select the routing instance for a translation address using the <b>Advanced Settings</b> page. For more information on <b>Advanced Settings</b>, see <a href="#">Table 212 on page 625</a>.</p> <ul style="list-style-type: none"> <li>• Corresponding IPv4—Uses the corresponding IPv4 address to perform translations on the source or destination packet.</li> </ul> <p>Chose one among the following translation types for a destination NAT rule:</p> <ul style="list-style-type: none"> <li>• None—No translation is required for the incoming traffic.</li> <li>• Pool—Performs pool-based translations on the source or destination packet. Click on the add icon (+) in the <b>Select Pool</b> field to choose the translation pool.</li> </ul> <p>You can also create a new pool by clicking <b>Add new pool</b>. See <a href="#">“Creating NAT Pools” on page 639</a>.</p> <p><b>NOTE:</b> In an SD-WAN environment, the destination NAT pool selected should be configured with a site and a routing instance corresponding to the pool address. For example, a webserver with IP address (IP1) is running in the HR department. To create a destination NAT pool corresponding to this webserver IP address, you must specify the following mandatory fields while creating the NAT pool:</p> <p><b>Address - IP1</b></p> <p><b>Site - the site hosting the webserver</b></p> <p><b>Routing instance - natVR_HR</b></p>

Table 210: Fields on the Single NAT Policy Page for Creating NAT Rules (*continued*)

Field	Description
Advanced Settings (Optional)	Click <b>Configure</b> to configure advance settings for a source or static NAT rule. For more information about advanced settings for the translation types <b>Interface</b> and <b>Pool</b> for a source NAT rule, see <a href="#">Table 211 on page 623</a> . For more information about advanced settings for the translation types <b>Interface</b> and <b>Pool</b> for a static NAT rule, see <a href="#">Table 212 on page 625</a>
<b>Details</b>	
Name	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters.
Description	Enter a description for the policy intent; maximum length is 1024 characters.
End Points	<p>Create source and destination endpoints such as addresses and services.</p> <ul style="list-style-type: none"> <li>• To create an address, click the add icon (+) and select <b>Address</b>. See <a href="#">“Creating Addresses or Address Groups” on page 786</a> to configure the parameters of the address.</li> <li>• To create a service, click the add icon (+) and select <b>Service</b>. See <a href="#">“Creating Services and Service Groups” on page 793</a> to configure the parameters of the service.</li> </ul> <p>To edit the configured parameters of an address or service, hover over it and click on the edit icon (pencil symbol).</p>

[Table 211 on page 623](#) provides guidelines on using the fields on the **Advanced Settings** page for a source NAT rule.

Table 211: Fields on the Advanced Settings Page for Source NAT Rule

Field	Description
Persistent	<p>Enable the check box to ensure that all requests from the same internal transport address are mapped to the same reflexive transport address.</p> <p><b>NOTE:</b> For persistence to be applicable for the NAT policy, ensure that port overloading is turned off for the device to which the NAT policy is applicable. Use the following command to turn off port overloading for a device:</p> <pre>[Edit mode] set security nat source interface port-overloading off</pre>

Table 211: Fields on the Advanced Settings Page for Source NAT Rule (*continued*)

Field	Description
Persistent NAT Type	<p>Configure persistent NAT mappings.</p> <ul style="list-style-type: none"> <li>• Permit any remote host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. (The reflexive transport address is the public IP address and port created by the NAT device closest to the STUN server.) Any external host can send a packet to the internal host by sending the packet to the reflexive transport address.</li> <li>• Permit target host—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external host's IP address.</li> <li>• Permit target host port—All requests from a specific internal IP address and port are mapped to the same reflexive transport address. An external host can send a packet to an internal host by sending the packet to the reflexive transport address. The internal host must have previously sent a packet to the external host's IP address and port.</li> </ul>
Inactivity Timeout	<p>The amount of time, in seconds, that the persistent NAT binding remains in the site's memory when all the sessions of the binding entry have ended. When the configured timeout is reached, the binding is removed from memory. The value of the inactivity timeout can range from 60 through 7200 seconds. The default value of the inactivity timeout is 60 seconds.</p>
Maximum Session Number	<p>Maximum session number—The maximum number of sessions with which a persistent NAT binding can be associated. For example, if the maximum session number of the persistent NAT rule is 65,536, then a 65,537th session cannot be established if that session uses the persistent NAT binding created from the persistent NAT rule.</p> <p>The range is 8 through 65,536. The default is 30 sessions.</p>
Address Mapping	<p>Select an address from the available list.</p>
Pool Address	<p>Displays the NAT pool address.</p>
Host Address Base	<p>Displays the base address of the original source IP address range. The host address base is used for IP address shifting.</p>
Port Translation	<p>Displays whether port translation is enabled or disabled for this NAT rule.</p>
Overflow Pool Type	<p>Displays the source pool to be used when the current address pool is exhausted.</p>
Overflow Pool Name	<p>Displays the name of the overflow pool.</p>



Table 211: Fields on the Advanced Settings Page for Source NAT Rule (*continued*)

Field	Description
Mapped Port Type	<p>Specify the type of port mapping:</p> <ul style="list-style-type: none"> <li>• Port—Enter a value for <b>Port</b>, ranging from 0 through 65,535.</li> <li>• Range—Enter the port range values in the <b>Start</b> and <b>End</b> fields, ranging from 0 through 65,535.</li> </ul>

[Table 212 on page 625](#) provides guidelines on using the fields on the **Advanced Settings** page for a static NAT rule.

Table 212: Fields on the Advanced Settings Page for Static NAT Rule

Field	Description
Mapped Port Type	<p>Specify the type of port mapping:</p> <ul style="list-style-type: none"> <li>• Port—Enter a value for <b>Port</b>, ranging from 0 through 65,535.</li> <li>• Range—Enter the port range values in the <b>Start</b> and <b>End</b> fields, ranging from 0 through 65,535.</li> </ul>
Routing Instance	Select the routing instance for the static NAT rule.

## RELATED DOCUMENTATION

[About the Single NAT Policy Page | 617](#)

[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

[Deploying NAT Policy Rules | 628](#)

[NAT Policies Overview | 610](#)

[About the NAT Policies Page | 613](#)

[Creating NAT Policies | 614](#)

[Editing and Deleting NAT Policies | 616](#)

## Editing, Cloning, and Deleting NAT Policy Rules

### IN THIS SECTION

- [Editing NAT Policy Rules | 626](#)
- [Cloning NAT Policy Rules | 626](#)
- [Deleting NAT Policy Rules | 627](#)

You can edit, clone, or delete a NAT policy rule from the **NAT Policy** page.

### Editing NAT Policy Rules

To modify the parameters configured for an NAT policy rule:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears, displaying the NAT policies.

2. Select the NAT policy whose rules you want to edit.

The selected **NAT Policy** appears, displaying the rules associated with the NAT policy.

3. Hover over the NAT policy rule that you want to modify and click on the edit icon (pencil symbol) that appears on the right side of the NAT policy rule. The page changes to display the same fields that you use to create a NAT policy rule.

4. Complete the configuration according to the guidelines provided in [“Creating NAT Policy Rules” on page 619](#).

5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified NAT policy rule appears on the **NAT Policy** page.

### Cloning NAT Policy Rules

To clone a NAT policy rule:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears, displaying the NAT policies.

2. Select the NAT policy whose rule you want to clone.

The selected **NAT Policy** appears, displaying the rules associated with the NAT policy.

3. Hover over the NAT policy rule that you want to clone and click on the clone icon that appears on the right side of the NAT policy rule.

The cloned NAT policy rule appears below the current rule.

You can modify the parameters configured for the cloned NAT policy rule or rename it as required.

## Deleting NAT Policy Rules

To delete a NAT policy rule:

1. Select **Configuration > NAT > NAT Policies**.

The **NAT Policies** page appears, displaying the NAT policies.

2. Select the NAT policy whose rule you want to delete.

The selected **NAT Policy** appears, displaying the rules associated with the NAT policy.

3. Hover over the NAT policy rule you want to delete and then click the delete icon **(X)**.

An alert message appears, verifying that you want to delete your selection.

4. Click **Yes** to delete the selection. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected NAT policy rule is deleted.

## RELATED DOCUMENTATION

[About the Single NAT Policy Page | 617](#)

[Creating NAT Policy Rules | 619](#)

[Deploying NAT Policy Rules | 628](#)

[NAT Policies Overview | 610](#)

[About the NAT Policies Page | 613](#)

[Creating NAT Policies | 614](#)

[Editing and Deleting NAT Policies | 616](#)

## Deploying NAT Policy Rules

To deploy an NAT policy rule:

1. Select **Configuration > NAT Policy > Policies**.

2. Click on the name of the NAT policy rules displayed.

The NAT policy rule page appears.

3. Click **Deploy**.

The **Deploy** page appears.

4. Configure your deployment as required. See [“Deploying Policies” on page 723](#).

All the NAT policy rules associated with the NAT policy are deployed. That is, the entire NAT policy is deployed.

**NOTE:** By default, all the NAT policy rules associated with the NAT policy (the entire NAT policy) are deployed when you click **Deploy**. Suppose you select a particular NAT policy rule and click **Deploy**, even then, all the NAT policy rules associated with that NAT policy are deployed.

### RELATED DOCUMENTATION

---

[About the Single NAT Policy Page | 617](#)

---

[Creating NAT Policy Rules | 619](#)

---

[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

---

[NAT Policies Overview | 610](#)

---

[About the NAT Policies Page | 613](#)

---

[Creating NAT Policies | 614](#)

---

[Editing and Deleting NAT Policies | 616](#)

## Selecting NAT Source

### IN THIS SECTION

- [Adding an Endpoint as NAT Source | 629](#)
- [Selecting Interfaces when GWR Resides Inside an NFX Box | 629](#)
- [Selecting NAT Source Using Abbreviations | 630](#)
- [Selecting a NAT Source from the End Points Panel | 631](#)
- [Creating and Selecting a NAT Source from the End Points Panel | 631](#)
- [Creating Addresses from Source Field | 632](#)

The following procedures provides various methods using which you can choose an endpoint as a NAT source:

### Adding an Endpoint as NAT Source

View and select the source endpoint from the complete list of addresses, protocols, interfaces, zones, routing instances, or ports.

1. Click the **Source** field. A list of relevant endpoints are displayed.
2. Click the **View more results** link provided at the bottom of the source endpoints. The complete list of addresses, protocols, interfaces, and ports is displayed in the **End Points** panel on the right.
3. (Optional) Click the edit icon to edit the address, protocol, interface, zones, routing instances, or port endpoint.
4. Click check mark icon (✓) to select the endpoint as a source.

### Selecting Interfaces when GWR Resides Inside an NFX Box

The physical interfaces of an NFX box are mapped to the virtual interfaces of the Gateway Router (GWR) (vSRX) as given in [Table 213 on page 630](#). These are the default mappings provided by CSO. You may change these interface mappings based on your requirements.

Table 213: NFX and GWR Interface Mapping

NFX Physical Interface	GWR Virtual Interface
WAN 0 (ge-0/0/10)	ge-0/0/2
WAN 1 (ge-0/0/11)	ge-0/0/3
WAN 2 (xe-0/0/12)	ge-0/0/7
WAN 3 (xe-0/0/13)	ge-0/0/8
LAN-X (ge-0/0/X)	Ge-0/0/06.<vlan-id-for-X>

When you create a new NAT rule and an NFX physical interface is intended as the source endpoint, select the respective mapped GWR interface.

### Selecting NAT Source Using Abbreviations

Enter an abbreviation in the **Source** field to select the source endpoint from a filtered list of source endpoints.

- To view a filtered list of addresses, enter **ADDR** or **addr**.
- To view a filtered list of protocols, enter **PROT** or **prot**.
- To view a filtered list of interfaces, enter **INTR** or **intr**.
- To view a filtered list of zones, enter **ZONE** or **zone**.
- To view a filtered list of routing instances, enter **ROUT** or **rout**.

Click the endpoints in the filtered list to select them.

You can add a port number as a source endpoint. To do so:

1. Type **PORT** or **port** in the **Source** field.
2. Press Tab.
3. Enter the port number and press Enter.

You can also enter a range of ports by using the separator -. For example, you can enter **10-20**.

The entered port value is selected as a source endpoint.

You can also select the endpoint from the complete list of addresses, protocols, interfaces, zones, and routing instances. See [“Adding an Endpoint as NAT Source” on page 629](#).

## Selecting a NAT Source from the End Points Panel

You can select a NAT source endpoint from the **End Points** panel. Alternately, you can create a new NAT source endpoint from the **End Points** panel, see [“Creating and Selecting a NAT Source from the End Points Panel” on page 631](#).

To select an NAT source endpoint from the **End Points** panel:

1. Click the **Source** field.

2. Click the lesser-than icon (<) on the right.

The **End Points** panel appears, displaying the list of available addresses, interfaces, protocols, zones, and routing instances.

3. (Optional) To view more information about a source endpoint, click the details icon on the right of the endpoint. To edit the source endpoint, click the edit icon (pencil symbol) on the right of the endpoint.

**NOTE:** You can only edit or view details of a source endpoint if these options appear on right side of the endpoint when you hover over it. Not all endpoints provide these options.

4. Click the check mark icon (✓) to add the endpoint as a source.

## Creating and Selecting a NAT Source from the End Points Panel

To create a new source endpoint from the **End Points** panel:

1. Click the add icon (+) on the top right of the panel and select the type of endpoint you want to create, among the options provided.

Based on the option you select, the respective page appears. Fill in the required details to create a new endpoint.

- To create a new address, see [“Creating Addresses or Address Groups” on page 786](#).
- To create a new service, see [“Creating Services and Service Groups” on page 793](#).
- To create a new NAT pool, see [“Creating NAT Pools” on page 639](#).

After the endpoint is created, it appears in the **Endpoints** panel.

2. Click the check mark icon (✓) to add the new endpoint as a source.

## Creating Addresses from Source Field

You can use one of the following ways to create a new address from the **Source** field and use the newly created address as a source endpoint:

- Type the address directly in the **Source** field. If the address is valid, it is created immediately and added as a source endpoint.
- Create an address from the **Source** field, using the following steps:
  1. In the **Source** field, type **addr**. The **Add new address** link appears at the bottom of the list of addresses.
  2. Click **Add new address** to create a new address.  
The **Create Addresses** page appears.
  3. Configure the new address. See [“Creating Addresses or Address Groups” on page 786](#).
  4. Click **Save** to save the new address.

The new address is created, and will be listed as an option for the source. Select the new address to add it to the source.

## RELATED DOCUMENTATION

[Selecting NAT Destination | 633](#)

[Creating NAT Policy Rules | 619](#)

[Editing, Cloning, and Deleting NAT Policy Rules | 626](#)

[Deploying NAT Policy Rules | 628](#)

[About the Single NAT Policy Page | 617](#)

[NAT Policies Overview | 610](#)

[About the NAT Policies Page | 613](#)

[Creating NAT Policies | 614](#)

[Editing and Deleting NAT Policies | 616](#)



## Selecting NAT Destination

### IN THIS SECTION

- [Adding an Endpoint as NAT Destination | 633](#)
- [Selecting Interfaces when GWR Resides Inside an NFX Box | 633](#)
- [Selecting NAT Destination Using Abbreviations | 634](#)
- [Selecting a NAT Destination from the End Points Panel | 635](#)
- [Creating and Selecting a NAT Destination from the End Points Panel | 635](#)
- [Creating Addresses from Destination Field | 636](#)
- [Creating Services from Destination Field | 636](#)

The following procedures provides various methods that you can use to choose an endpoint as a NAT destination:

### Adding an Endpoint as NAT Destination

View and select the destination endpoint from the complete list of addresses, interfaces, services, zones, routing instances, or ports.

1. Click the **Destination** field. A list of relevant endpoints are displayed.
2. Click the **View more results** link provided at the bottom of the destination endpoints. The complete list of addresses, interfaces, services, zones, and routing instances, is displayed in the **End Points** panel on the right.
3. (Optional) Click the edit icon to edit the address, service, or port endpoint.
4. Click check mark icon (✓) to select the endpoint as a destination.

### Selecting Interfaces when GWR Resides Inside an NFX Box

The physical interfaces of an NFX box are mapped to the virtual interfaces of the Gateway Router (GWR) (vSRX) as given in [Table 214 on page 634](#). These are the default mappings provided by CSO. You may change these interface mappings based on your requirements.

Table 214: NFX and GWR Interface Mapping

NFX Physical Interface	GWR Virtual Interface
WAN 0 (ge-0/0/10)	ge-0/0/2
WAN 1 (ge-0/0/11)	ge-0/0/3
WAN 2 (xe-0/0/12)	ge-0/0/7
WAN 3 (xe-0/0/13)	ge-0/0/8
LAN-X (ge-0/0/X)	Ge-0/0/06.<vlan-id-for-X>

When you create a new NAT rule and an NFX physical interface is intended as the destination endpoint, select the respective mapped GWR interface.

### Selecting NAT Destination Using Abbreviations

Enter an abbreviation in the **Destination** field to select the destination endpoint from a filtered list of destination endpoints.

- To view a filtered list of addresses, enter **ADDR** or **addr**.
- To view a filtered list of interfaces, enter **INTR** or **intr**.
- To view a filtered list of services, enter **SVCS** or **svcs**.
- To view a filtered list of zones, enter **ZONE** or **zone**.
- To view a filtered list of routing instances, enter **ROUT** or **rout**.

Click the endpoints in the filtered list to select them.

You can add a port number as a destination endpoint. To do so:

1. Enter **PORT** or **port** in **Destination**.
2. Press Tab.
3. Enter the port number and press Enter.

You can also enter a range of ports by using the separator -. For example, you can enter **10-20**.

The entered port value is selected as a destination endpoint.

You can also select the endpoint from the complete list of addresses, interfaces, services, zones, and routing instances. See [“Adding an Endpoint as NAT Destination” on page 633](#).

## Selecting a NAT Destination from the End Points Panel

You can select a NAT destination endpoint from the **End Points** panel. Alternately, you can create a new NAT destination endpoint from the **End Points** panel, see [“Creating and Selecting a NAT Destination from the End Points Panel” on page 635](#).

To select a NAT destination endpoint from the **End Points** panel:

1. Click the **Destination** field.

2. Click the lesser-than icon (<) on the right.

The **End Points** panel appears, displaying the list of available addresses, interfaces, services, zones, and routing instances.

3. (Optional) To view more information about a destination endpoint, click the details icon on the right of the endpoint. To edit the destination endpoint, click the edit icon (pencil symbol) on the right of the endpoint.

**NOTE:** You can only edit or view details of a destination endpoint if these options appear on right side of the endpoint when you hover over it. Not all endpoints provide these options.

4. Click the check mark icon (✓) to add the endpoint as a destination.

## Creating and Selecting a NAT Destination from the End Points Panel

To create a new destination endpoint from the **End Points** panel:

1. Click the add icon (+) on the top right of the panel and select the type of endpoint you want to create, among the options provided.

Based on the option you select, the respective page appears. Fill in the required details to create a new endpoint.

- To create a new address, see [“Creating Addresses or Address Groups” on page 786](#).
- To create a new service, see [“Creating Services and Service Groups” on page 793](#).

After the endpoint is created, it appears in the **Endpoints** panel.

2. Click the check mark icon (✓) to add the new endpoint as a destination.

## Creating Addresses from Destination Field

You can use one of the following ways to create a new address from the **Destination** and use the newly created address as a destination endpoint:

- Type the address directly in the **Destination** field. If the address is valid, it is created immediately and added as a destination endpoint.
- Create an address from the **Destination** field, using the following steps:

1. In the **Destination** field, type **addr**. The **Add new address** link appears at the bottom of the list of addresses.

2. Click **Add new address** to create a new address.

The **Create Addresses** page appears.

3. Configure the new address. See [“Creating Addresses or Address Groups” on page 786](#).

4. Click **Save** to save the new address.

The new address is created, and will be listed as an option for the destination. Select the new address to add it to the destination.

## Creating Services from Destination Field

To create a new service from the **Destination** field and use the newly created service as a destination endpoint:

1. In the **Destination** link, type **svcs**. The **Add new service** link appears at the bottom of the list of services.

2. Click **Add new service** to create a new service.

The **Create Services** page appears.

3. Configure the new service. See [“Creating Services and Service Groups” on page 793](#).

4. Click **Save** to save the new service.

The new service is created, and will be listed as an option for the destination. Select the new service to add it to the destination.

## RELATED DOCUMENTATION

<a href="#">About the Single NAT Policy Page   617</a>
<a href="#">Editing, Cloning, and Deleting NAT Policy Rules   626</a>
<a href="#">Creating NAT Policy Rules   619</a>
<a href="#">Deploying NAT Policy Rules   628</a>
<a href="#">NAT Policies Overview   610</a>
<a href="#">About the NAT Policies Page   613</a>
<a href="#">Creating NAT Policies   614</a>
<a href="#">Editing and Deleting NAT Policies   616</a>

## NAT Pools Overview

A NAT pool is a set of IP addresses that you can define and use for address translation. NAT policies perform address translation by translating internal IP addresses to the addresses in these pools. Unlike static NAT, where there is a one-to-one mapping that includes destination IP address translation in one direction and source IP address translation in the reverse direction, with source NAT, you translate the original source IP address to an IP address in the address pool. With destination NAT, you translate the original destination address to an IP address in the address pool.

### RELATED DOCUMENTATION

<a href="#">NAT Policies Overview   610</a>
<a href="#">About the NAT Pools Page   637</a>
<a href="#">Creating NAT Pools   639</a>
<a href="#">Editing, Cloning, and Deleting NAT Pools   641</a>

## About the NAT Pools Page

To access this page, select **Configuration > NAT > Pools**.

Use the **NAT Pools** page to create, modify, clone, and delete NAT pools. You can filter and sort this information to get a better understanding of what you want to configure.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create a NAT pool. See [“Creating NAT Pools” on page 639](#).
- Modify, clone, or delete a NAT pool. See [“Editing, Cloning, and Deleting NAT Pools” on page 641](#).
- View unused NAT pools by selecting **More > Show Unused**. Delete unused NAT pools by selecting **More > Delete Unused Items**.
- View duplicate NAT pools. Select **More > Show Duplicates**. The **Show Duplicates** page appears, displaying duplicate NAT pools. To delete a duplicate NAT pool, select it and click the delete icon (X).
- View the details of a NAT pool by selecting **More > Detailed View**, or by right-clicking a NAT pool and select **Detailed View**.
- Search for a specific NAT pool. Click the Search icon in the top right corner of the page to search for a NAT pool. You can enter partial text or full text of the keyword in the text box and press Enter.  
  
The search results are displayed on the same page.
- Show or hide columns. Click the **Show Hide Columns** icon at the top right corner of the page.

[Table 215 on page 638](#) provides description of the fields on the **NAT Pools** page.

Table 215: Fields on the NAT Pools Page

Field	Description
Name	Displays the name of the NAT pool.
Pool Address	Displays the IP address of the NAT pool.
Description	Displays the description provided about the NAT pool when it was created.
Pool Type	Displays the NAT pool type. A NAT pool can be of type <b>Source</b> or <b>Destination</b> .

RELATED DOCUMENTATION

<a href="#">NAT Pools Overview   637</a>
<a href="#">Creating NAT Pools   639</a>
<a href="#">Editing, Cloning, and Deleting NAT Pools   641</a>

# Creating NAT Pools

Use the **Create NAT Pools** page to create NAT pools.

To create a NAT pool:

1. Select **Configuration > NAT > Pools**.

The **NAT Pools** page appears.

2. Click the add icon (+).

The **Create NAT Pool** page displays fields required for creating and configuring a NAT pool.

3. Complete the configuration according to the guidelines provided in [Table 216 on page 639](#).

4. Click **OK** to save the changes. A NAT pool with the configuration you provided is created.

If you want to discard your changes, click **Cancel** instead.

[Table 216 on page 639](#) provides guidelines on using the fields on the **Create NAT Pool** page.

**Table 216: Fields on the Create NAT Pool Page**

Field	Description
<b>General Information</b>	
Name	Enter a unique string of alphanumeric characters, dashes, spaces, and underscores. Colons, and periods are not allowed, and the maximum length is 31 characters.
Description	Enter a description for the new NAT pool; maximum length is 1024 characters.
Pool Type	Select a NAT pool type to configure: <ul style="list-style-type: none"> <li>• Source</li> <li>• Destination</li> </ul>
Pool Address	Select a NAT pool address or click <b>Add new address</b> to create a new NAT pool address.
<b>Routing Instance</b>	
Site	Select the site to which the NAT pool is applicable.
Routing Instance	Select the required routing instance from the list of available routing instances for the selected site.

Table 216: Fields on the Create NAT Pool Page (*continued*)

Field	Description
<b>Advanced</b>	
Host Address Base	Enter the base address of the original source IP address range. The <b>Host Address Base</b> is used for IP address shifting.
Translation	<p>Select the translation type for the incoming traffic:</p> <ul style="list-style-type: none"> <li>• No Translation—There is no translation required for the incoming traffic.</li> <li>• Port/Range—Set the global default single port range for source NAT pools with port translation.</li> <li>• Overload—Multiple source addresses are translated to pool addresses. If you set <b>Overload</b> as the translation type, the value of the <b>Pool Address</b> field cannot be an IP range or subnet, but it will be a single address.</li> </ul>
Address Pooling	<p>Select a NAT address pooling behavior:</p> <ul style="list-style-type: none"> <li>• Paired—Use this option for applications that require all sessions associated with one internal IP address to be translated to the same external IP address for multiple sessions.</li> <li>• Non-Paired—Use this option for applications that can be assigned IP addresses in a round-robin fashion.</li> </ul>
Port	Enter the port number for the destination NAT pool type.
Start	Enter the start port range for the source NAT pools, if the translation type is Port/Range. The value of the port range can be any value between 1024 to 65535.
End	Enter the end port range. The value of the port range can be any value between 1024 to 65535.
Port Overloading Factor	Configure the port overloading capacity for a source NAT pool. If the factor is set to x, each translated IP address has x times the maximum number of ports available. The value of the port overloading factor can range between 2 and 32.
Address Sharing	Enable address sharing so that multiple internal IP addresses can be mapped to the same external IP address. Select this option only when the source NAT pool is configured with no port translation. When a source NAT pool has only one or a few external IP addresses available, the address sharing option with a many-to-one address mapping increases NAT resources and improves traffic.



Table 216: Fields on the Create NAT Pool Page (continued)

Field	Description
Overflow Pool Type	Select a source pool to use when the current address pool is exhausted. <ul style="list-style-type: none"><li>• Interface—Allow the egress interface IP address to support overflow.</li><li>• Pool—Name of the source address pool.<ul style="list-style-type: none"><li>• Overflow Pool—When addresses from the original source NAT pool are exhausted, IP addresses and port numbers are allocated from the overflow pool. A user-defined source NAT pool or an egress interface can be used as the overflow pool. (When the overflow pool is used, the pool ID is returned with the address.)</li></ul></li></ul>

RELATED DOCUMENTATION

<a href="#">NAT Pools Overview   637</a>
<a href="#">About the NAT Pools Page   637</a>
<a href="#">Editing, Cloning, and Deleting NAT Pools   641</a>

Editing, Cloning, and Deleting NAT Pools

IN THIS SECTION

- [Editing NAT Pools | 641](#)
- [Cloning NAT Pools | 642](#)
- [Deleting NAT Pools | 642](#)

Editing NAT Pools

To modify the parameters configured for a NAT pool:

1. Select **Configuration > NAT > Pools**.  
The **NAT Pools** page appears.
2. Select the NAT pool that you want to edit, and click the edit icon (pencil symbol) at the top right corner of the table, or right-click and select **Edit NAT Pool**.

The **Edit NAT Pool** page appears, displaying the same options that are displayed when creating a new NAT pool.

3. Modify the parameters according to the guidelines provided in [“Creating NAT Pools” on page 639](#).
4. Click **OK** to save the changes. If you click **OK**, you see the modified NAT pool in the **NAT Pools** page.  
If you want to discard your changes, click **Cancel** instead.

## Cloning NAT Pools

To clone a NAT pool:

1. Select **Configuration > NAT > Pools**.

The **NAT Pools** page appears.

2. Right-click the NAT pool that you want to clone and then click **Clone**, or select **More > Clone**.

The **Clone NAT Pool** page appears with editable fields. Modify the parameters of the cloned NAT pool as per your requirements.

3. Click **OK** to save the changes. If you click **OK**, the cloned NAT pool appears at the end of the NAT pools list in the **NAT Pools** page.  
If you want to discard your changes, click **Cancel** instead.

## Deleting NAT Pools

To delete a NAT pool:

1. Select **Configuration > NAT > Pools**.

The **NAT Pools** page appears.

2. Select the NAT pool you want to delete and then click the delete icon **(X)**.

An alert message appears, verifying that you want to delete the NAT pool.

3. Click **Yes** to delete the NAT pool. If you click **Yes**, the selected NAT pool is deleted.  
If you do not want to delete, click **Cancel** instead.

## RELATED DOCUMENTATION

---

[NAT Pools Overview | 637](#)

---

[About the NAT Pools Page | 637](#)

---

[Creating NAT Pools | 639](#)

## Deploying NAT Policies

After adding the intents to the NAT policies, you can deploy the NAT policy by clicking the **Deploy** option that is above the **End Points** panel. You can also deploy one or more policies from the **NAT Policies** page.

To deploy NAT policies:

1. Select **Configuration > NAT > NAT Policies**.

The NAT Policies page appears.

2. Select one or more policies and click **Deploy**.

The Deploy page appears.

3. In **Choose Deployment Time** options, select **Run Now** to deploy the policy immediately. Select **Schedule at a later time** and specify the date and time at which the policy should be deployed.

4. Click **Deploy**.

A job is created. Click the job ID to go to the Jobs page and view the status of the deploy operation.

## Importing NAT Policies

Use this page to manually import a firewall policy from the discovered or onboarded sites (next generation firewall sites).

To import a NAT policy:

1. Select **Configuration > NAT > NAT Policies**.

The NAT Policy page appears.

2. Click **Import**.

The Import NAT Policies page appears displaying a list of discovered devices (next generation firewall devices).

3. Select the devices from which you want to import the NAT policies and click **Next**.

The Discovered Services tab appears.

4. Select the NAT policies that you want to import and click **Next**.

The Resolve Conflicts tab appears.

5. If there are any conflicts with the imported objects, object conflict resolution(OCR) operation is triggered. The Conflicts window displays all the conflicts between CSO and the next generation firewall device. Select an object from the Conflicts window and click on any of the below option to resolve the object conflict.

The resolution options are:

- **Rename Object**—Rename the imported object. By default, "\_1" is added to the object name, or you can specify a new name.
- **Overwrite with imported value**—The object in CSO is replaced with the object from the import operation.
- **Keep existing object**—The object name in CSO is used instead of what is on the next generation firewall device.

6. Click **Finish**.

A summary of the discovered services is listed.

7. Review the summary and click **OK** to import the NAT policies.

The import policy job is created and the NAT policies are imported from next generation firewall device to CSO. You can view the imported policy from the NAT Policies page.

## WHAT'S NEXT

After importing the NAT policy successfully, you can edit and deploy the policy. See [Editing and Deleting NAT Policies | 616](#), [Editing, Cloning, and Deleting NAT Pools | 641](#), and [Deploying NAT Policies | 643](#).

RELATED DOCUMENTATION

| [Importing Policies Overview](#) | 498

# Managing IPS Signatures and Profiles

## IN THIS CHAPTER

- [About the IPS Signatures Page | 646](#)
- [Create IPS Signatures | 651](#)
- [Create IPS Signature Static Groups | 659](#)
- [Create IPS Signature Dynamic Groups | 660](#)
- [Edit, Clone, and Delete IPS Signatures | 666](#)
- [Edit, Clone, and Delete IPS Signature Static Groups | 668](#)
- [Edit, Clone, and Delete IPS Signature Dynamic Groups | 671](#)
- [About the IPS Profiles Page | 673](#)
- [Create IPS Profiles | 675](#)
- [Edit, Clone, and Delete IPS Profiles | 676](#)
- [About the <IPS-Profile-Name> / Rules Page | 678](#)
- [Create IPS or Exempt Rules | 680](#)
- [Edit, Clone, and Delete IPS or Exempt Rules | 688](#)

## About the IPS Signatures Page

### IN THIS SECTION

- [Tasks You Can Perform | 647](#)
- [Field Descriptions | 647](#)

To access this page, select **Configure > IPS > IPS Signature**.

Use intrusion prevention system (IPS) signatures to monitor and prevent intrusions. IPS compares traffic against signatures of known threats and blocks traffic when a threat is detected.

### Tasks You Can Perform

- View the details of an IPS signature—Select an IPS signature and click **More > Details**, or mouse over the IPS signature and click the **Detailed View** icon. The IPS Signature Details View page appears. See [Table 218 on page 649](#) for an explanation of fields on this page.
- View the details of an IPS signature static group—Select an IPS signature static group and click **More > Details**, or mouse over the IPS signature static group and click the **Detailed View** icon. The IPS Static Group Details page appears. See [Table 219 on page 650](#) for an explanation of fields on this page.
- View the details of an IPS signature dynamic group—Select an IPS signature dynamic group and click **More > Details**, or mouse over the IPS signature dynamic group and click the **Detailed View** icon. The IPS Signature Dynamic Details View page appears. See [Table 220 on page 650](#) for an explanation of fields on this page.
- Create an IPS signature—See [“Create IPS Signatures” on page 651](#).
- Create an IPS signature static group—See [“Create IPS Signature Static Groups” on page 659](#).
- Create an IPS signature dynamic group—See [“Create IPS Signature Dynamic Groups” on page 660](#).
- Edit, clone, or delete an IPS signature—See [“Edit, Clone, and Delete IPS Signatures” on page 666](#).
- Edit, clone, or delete an IPS signature static group—See [“Edit, Clone, and Delete IPS Signature Static Groups” on page 668](#).
- Edit, clone, or delete an IPS signature dynamic group—See [“Edit, Clone, and Delete IPS Signature Dynamic Groups” on page 671](#).
- Search for IPS signatures, static groups or dynamic groups by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Filter IPS signatures, static groups or dynamic groups—Click the filter icon (funnel) and specify one or more filtering criteria. The filtered results are displayed on the same page.
- Sort IPS signatures, static groups or dynamic groups—Click a column name to sort the data in the grid (table) based on the column name.

**NOTE:** Sorting is applicable only to some fields.

- Show or hide columns—Click the **Show Hide Columns** icon at the top right corner of the page and select the columns that you want displayed on the page.

### Field Descriptions

[Table 217 on page 648](#) describes the field on the IPS Signatures page.

Table 217: Fields on the IPS Signatures Page

Field	Description
Name	Name of the IPS signature, IPS signature static group, or IPS signature dynamic group.
Severity	Severity level of the attack that the signature will report.
Category	Category of the attack object.
Object Type	Displays the type of attack object: <ul style="list-style-type: none"> <li>• Static Group</li> <li>• Dynamic Group</li> <li>• Signature</li> <li>• Protocol Anomaly</li> <li>• Compound Attack</li> </ul>
Recommended	Indicates whether the attack objects are recommended by Juniper (True) or not (False).
Action	Action taken when the monitored traffic matches the attack objects specified in the IPS rules.
Definition Type	Displays whether the IPS signature, static group, or dynamic group was created by CSO (Predefined) or user-created (Custom).
CVE	Displays the Common Vulnerabilities and Exposures (CVE) identifier or name associated with the threat.
CERT	Displays the computer emergency response team (CERT) advisory number associated with the threat.
BUG	Displays the list of bugs that are related to the signature attack.
False Positives	Displays the frequency with which the attack produces a false positive on your network.
Service	Protocol or service that the attack uses to enter your network.
Performance Impact	Performance impact of the IPS signature.
Direction	Direction of the traffic for which the attack is detected; for example, client to server.



Table 218: Fields on the IPS Signature Details View Page

Field	Description
Name	Name of the IPS signature.
Description	Description of the IPS signature.
URL(s)	Displays the URLs that have the details about the signature attack. For example, <a href="http://www.faqs.org/rfcs/rfc2865.html">http://www.faqs.org/rfcs/rfc2865.html</a> .
Category	See <a href="#">Table 217 on page 648</a> .
Recommended	See <a href="#">Table 217 on page 648</a> .
Action	See <a href="#">Table 217 on page 648</a> .
Keywords	Keywords associated with the IPS signature.
Severity	See <a href="#">Table 217 on page 648</a> .
BUGS	See <a href="#">Table 217 on page 648</a> .
CERT	See <a href="#">Table 217 on page 648</a> .
CVE	See <a href="#">Table 217 on page 648</a> .
<i>Signature Details</i>	
Binding	Protocol or service that the attack uses to enter your network.
Service	For service binding, displays the service the attack uses to enter your network.
Time Count	Number of time that IPS detects the attack in a specified time scope.

Table 218: Fields on the IPS Signature Details View Page (*continued*)

Field	Description
Signature	<p>Displays (in a table) the signature attack objects configured as part of the IPS signature. For each row, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• No.—Unique identifier for the signature attack object.</li> <li>• Context—Attack context, which defines the location of the signature where IPS should look for the attack.</li> <li>• Direction—Connection direction of the attack.</li> <li>• Pattern—Signature pattern (in Juniper's proprietary regular expression syntax) of the attack to be detected.</li> <li>• Regex—Regular expression to match malicious or unwanted behavior over the network.</li> <li>• Negated—Indicates whether the pattern should be excluded from being matched (true) or not (false).</li> </ul>
Anomaly	<p>Displays (in a table) the protocol anomaly attack objects configured as part of the IPS signature. For each row, the following fields are displayed:</p> <ul style="list-style-type: none"> <li>• No.—Unique identifier for the anomaly.</li> <li>• Anomaly—Protocol or service for which the anomaly is defined.</li> <li>• Direction—Connection direction of the attack.</li> </ul>

Table 219: Fields on the IPS Static Group Details Page

Field	Description
Name	Name of the IPS signature static group.
Description	Description of the IPS signature static group.
Group Members	<p>Displays the IPS signatures or IPS signature dynamic groups that are part of the IPS static group. See <a href="#">Table 217 on page 648</a> for an explanation of the fields in the table.</p> <p>To view the details, select a row, click <b>More &gt; Details</b>, or mouse over a row and click the <b>Detailed View</b> icon. Depending on the object type, the IPS Signature Details View page or IPS Signature Dynamic Details View page appears. See <a href="#">Table 218 on page 649</a> and <a href="#">Table 220 on page 650</a> for an explanation of the fields on these pages.</p>

Table 220: Fields on the IPS Signature Dynamic Details View Page

Field	Description
Name	Name of the IPS signature dynamic group.

Table 220: Fields on the IPS Signature Dynamic Details View Page (*continued*)

Field	Description
Severity	Severity filters used for the dynamic group.
Service	Services filters used for the dynamic group.
Category	Category filters used for the dynamic group.
Recommended	Indicates whether predefined attack objects recommended by Juniper are added to the dynamic group (true) or not (false).
Direction	Traffic direction (for which the attack is detected) filters used for the dynamic group.
Performance Impact	Performance impact filter used for the dynamic group.
False Positive	False positive filter used for the dynamic group.
Age of Attack	Age of the attack (in years) used as a filter for the dynamic group.
CVSS Score	Common Vulnerability Scoring System (CVSS) score used as a filter for the dynamic group.
File Type	File type of the attack used as a filter for the dynamic group.
Vulnerability Type	Vulnerability type of the attack used as a filter for the dynamic group.
Object Type	Type of object (anomaly or signature) used as a filter for the dynamic group.
Vendor Description	Vendor or product that the attack belongs to.

## RELATED DOCUMENTATION

[About the IPS Profiles Page](#) | 673

## Create IPS Signatures

The signature database in Contrail Service Orchestration (CSO) contains predefined intrusion prevention system (IPS) signatures that you can use. From the Create IPS Signature page, users with the tenant

administrator role or a custom role with appropriate IPS tasks can also create customized IPS signatures to block newer attacks or unknown attacks.

To create a customized IPS signature:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select **Create > IPS Signature**.

The Create IPS Signature page appears.

3. Complete the configuration according to the guidelines in [Table 221 on page 652](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the IPS Signatures page and a message indicating that the signature is created is displayed.

After you create an IPS signature, you can use the signature in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.

**Table 221: Create IPS Signature Settings**

Setting	Guideline
<b>Name</b>	Enter a unique name for the IPS signature that is a string of alphanumeric characters and some special characters (colon, hyphen, period, and underscore). No spaces are allowed and the maximum length is 255 characters.
<b>Description</b>	Enter a description for the IPS signature; the maximum length is 1024 characters.
<b>Category</b>	<p>Enter a predefined category or a new category. The category can contain alphanumeric characters and special characters (hyphen and underscore) and must begin with an alphanumeric character. No spaces are allowed and the maximum length is 63 characters.</p> <p>You use categories to group attack objects and then within each category, you can assign severity levels to the attack objects.</p>

Table 221: Create IPS Signature Settings (*continued*)

Setting	Guideline
<b>Action</b>	<p>Select the action to take when the monitored traffic matches the attack objects specified in the IPS rule:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No action is taken. Use this action to only generate logs for some traffic.</li> <li>• <b>Close Client &amp; Server</b>—Closes the connection and sends a TCP reset (RST) packet to both the client and the server.</li> <li>• <b>Close Client</b>—Closes the connection and sends an RST packet to the client, but not to the server.</li> <li>• <b>Close Server</b>—Closes the connection and sends an RST packet to the server, but not to the client.</li> <li>• <b>Ignore</b>—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection.</li> <li>• <b>Drop</b>—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing.</li> <li>• <b>Drop Packet</b>—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source-IP address.</li> </ul>
<b>Keywords</b>	<p>Enter unique identifiers that can be used to search and sort signatures. Keywords should relate to the attack and the attack object. For example, Amanda Amindexd Remote Overflow.</p>
<b>Severity</b>	<p>Select a severity level for the attack that the signature will report:</p> <ul style="list-style-type: none"> <li>• <b>Critical</b>—Contains attack objects matching exploits that attempt to evade detection, cause a network device to crash, or gain system-level privileges.</li> <li>• <b>Major</b>—Contains attack objects matching exploits that attempt to disrupt a service, gain user-level access to a network device, or activate a Trojan horse previously loaded on a device.</li> <li>• <b>Minor</b>—Contains attack objects matching exploits that detect reconnaissance efforts attempting to access vital information through directory traversal or information leaks.</li> <li>• <b>Warning</b>—Contains attack objects matching exploits that attempt to obtain noncritical information or scan a network with a scanning tool.</li> <li>• <b>Info</b>—Contains attack objects matching normal, harmless traffic containing URLs, DNS lookup failures, SNMP public community strings, and peer-to-peer (P2P) parameters. You can use informational attack objects to obtain information about your network.</li> </ul>
<i>Signature Details</i>	

Table 221: Create IPS Signature Settings (continued)

Setting	Guideline
<b>Binding</b>	<p>Select the protocol or service that the attack uses to enter your network:</p> <ul style="list-style-type: none"> <li>• IP—Match the attack for a specified protocol type number, which you must specify in the Protocol field.</li> <li>• IPv6—Match the attack for a specified protocol type number (for the header following the IPv6 header), which you must specify in the Next Header field</li> <li>• ICMP—Match the attack for ICMP packets.</li> <li>• IPv6—Match the attack for ICMPv6 packets.</li> <li>• TCP—Match the attack for specified TCP ports or port ranges, which you must specify in the Port Range(s) field.</li> <li>• UDP—Match the attack for specified UDP ports or port ranges.</li> <li>• RPC—Match the attack for a specified remote procedure call (RPC) program number, which you must specify in the Program Number field.</li> <li>• Service—Match the attack for a specified service, which you must choose from the Service field.</li> </ul>
<b>Protocol</b>	<p>For IP binding, specify the transport layer protocol number that you want matched to the attack.</p> <p>Range: 1 through 139 excluding 1, 6, and 17.</p>
<b>Next Header</b>	<p>For IPv6 binding, specify the transport layer protocol number for the next header following the IPv6 header with which to match the attack.</p> <p>Range: 1 through 139 excluding 6, 17, and 58.</p>
<b>Port Range(s)</b>	<p>For TCP or UDP binding, specify a port number or a port range (<i>min-port-no-max-port-no</i> format) that you want matched to the attack.</p>
<b>Program Number</b>	<p>For RPC binding, specify the RPC program number (ID) that you want matched to the attack.</p>
<b>Service</b>	<p>For service binding, select the service that you want matched to the attack.</p>
<b>Time Count</b>	<p>Specify the number of times that IPS detects the attack within the specified time scope before triggering an event.</p>

Table 221: Create IPS Signature Settings (*continued*)

Setting	Guideline
<b>Time Scope</b>	<p>Specify the scope within which the counting of the attack occurs:</p> <ul style="list-style-type: none"> <li>• Source IP—Detect attacks from the source IP address for the specified time count regardless of the destination IP address.</li> <li>• Dest IP—Detect attacks from the destination IP address for the specified time count regardless of the source IP address.</li> <li>• Peer—Detect attacks between source and destination IP addresses of the sessions for the specified time count.</li> </ul>
<b>Match Assurance</b>	<p>Specify a false positives filter to track attack objects based on the frequency that the attack produces a false positive on your network:</p> <ul style="list-style-type: none"> <li>• High—Provides information on the frequently tracked false positive occurrences.</li> <li>• Medium—Provides information on the occasionally tracked false positive occurrences.</li> <li>• Low—Provides information on the rarely tracked false positive occurrences.</li> </ul>
<b>Performance Impact</b>	<p>Specify this filter to select only the appropriate attacks based on performance impact; for example to filter out slow-performing attack objects:</p> <ul style="list-style-type: none"> <li>• High—Add high performance impact attack objects that are vulnerable to an attack. The performance impact of signatures is high7 to high9, where the application identification is slow.</li> <li>• Medium—Add medium performance impact attack objects that are vulnerable to an attack. The performance impact of signatures is medium4 to medium6, where the application identification is normal.</li> <li>• Low—Add low performance impact attack objects that are vulnerable to an attack. The performance impact of signatures is low1 to low3, where the application identification is faster.</li> <li>• Unknown—Add attack objects whose performance impact is unknown.</li> </ul>

Table 221: Create IPS Signature Settings (*continued*)

Setting	Guideline
<b>Add Signature</b>	<p>You can specify one or more signature attack objects that use a stateful attack signature (a pattern that always exists within a specific section of the attack) to detect known attacks.</p> <p><b>NOTE:</b> For a customized IPS signature, you must specify at least one signature attack object or anomaly.</p> <ul style="list-style-type: none"> <li>To add a signature attack object: <ol style="list-style-type: none"> <li>Click the add (+) icon. The Add Signature page appears.</li> <li>Complete the configuration according to the guidelines in <a href="#">Table 222 on page 658</a>.</li> <li>Click <b>OK</b>. You are returned to the previous page and the signature attack object is displayed in the table.</li> </ol> </li> <li>To modify a signature attack object that you added: <ol style="list-style-type: none"> <li>Select an attack object and click the edit (pencil) icon. The Edit Signature page appears, displaying the same fields that appear when you add a signature attack object.</li> <li>Modify the fields as needed. See <a href="#">Table 222 on page 658</a>.</li> <li>Click <b>OK</b>. Your modifications are saved and you are returned to the previous page.</li> </ol> </li> <li>To delete a signature attack object that you added: <ol style="list-style-type: none"> <li>Select an attack object and click the delete (trash can) icon. A popup appears asking you to confirm the delete operation.</li> <li>Click <b>Yes</b>. The signature attack object is deleted and you are returned to the previous page.</li> </ol> </li> </ul>



Table 221: Create IPS Signature Settings (*continued*)

Setting	Guideline
Add Anomaly	<p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>The Add Anomaly field is displayed only if you specify a service binding.</li> <li>For a customized IPS signature, you must specify at least one signature attack object or anomaly.</li> </ul> <p>Protocol anomaly attack objects detect abnormal or ambiguous messages within a connection according to the set of rules for the particular protocol being used.</p> <p>You can add, modify, or delete anomaly attack objects:</p> <ul style="list-style-type: none"> <li>To add an anomaly: <ol style="list-style-type: none"> <li>Click the add (+) icon. The Add Anomaly page appears.</li> <li>Complete the configuration according to the guidelines in <a href="#">Table 223 on page 658</a>.</li> <li>Click <b>OK</b>. You are returned to the previous page and the anomaly is displayed in the table.</li> </ol> </li> <li>To modify an anomaly that you added: <ol style="list-style-type: none"> <li>Select an anomaly and click the edit (pencil) icon. The Edit Anomaly page appears, displaying the same fields that appear when you add an anomaly.</li> <li>Modify the fields as needed. See <a href="#">Table 223 on page 658</a>.</li> <li>Click <b>OK</b>. Your modifications are saved and you are returned to the previous page.</li> </ol> </li> <li>To delete an anomaly that you added: <ol style="list-style-type: none"> <li>Select an anomaly and click the delete (trash can) icon. A popup appears asking you to confirm the delete operation.</li> <li>Click <b>Yes</b>. The signature anomaly is deleted and you are returned to the previous page.</li> </ol> </li> </ul>

Table 222: Add Signature Settings

Setting	Guideline
Signature No.	Displays the system-generated signature number; you cannot modify this field.
Context	Select the attack context, which defines the location of the signature where IPS should look for the attack in a specific Application Layer protocol.
Direction	<p>Select the connection direction of the attack:</p> <ul style="list-style-type: none"> <li>• Any—Detect the attack for traffic in either direction.</li> <li>• Client to-Server—Detect the attack only in client-to-server traffic.</li> <li>• Server to Client—Detect the attack only in server to client traffic.</li> </ul>
Pattern	<p>Enter the signature pattern (in Juniper Networks proprietary regular expression syntax) of the attack you want to detect.</p> <p>An attack pattern can be a segment of code, a URL, or a value in a packet header and the signature pattern is the syntactical expression that represents that attack pattern.</p> <p>For example, use <code>\[&lt;character-set&gt;\]</code> for case-insensitive matches.</p>
Regex	Enter a regular expression to define rules to match malicious or unwanted behavior over the network. For example: For the syntax <code>\[hello\]</code> , the expected pattern is hello, which is case sensitive. The example matches can be: hElLo, HEIIO, and heLLO.
Negated	Select this check box to exclude the specified pattern from being matched. When you negate a pattern, the attack is considered matched if the pattern defined in the attack does not match the specified pattern.

Table 223: Add Anomaly Settings

Setting	Guideline
Anomaly No.	Displays the system-generated anomaly number; you cannot modify this field.
Anomaly	Select the protocol (service) whose anomaly is being defined in the attack.
Direction	<p>Select the connection direction of the attack:</p> <ul style="list-style-type: none"> <li>• Any—Detect the attack for traffic in either direction.</li> <li>• Client to-Server—Detect the attack only in client-to-server traffic.</li> <li>• Server to Client—Detect the attack only in server to client traffic.</li> </ul>

RELATED DOCUMENTATION

| [Create IPS Profiles](#) | 675

## Create IPS Signature Static Groups

The signature database in Contrail Service Orchestration (CSO) contains predefined intrusion prevention system (IPS) signature static groups that you can use. Users with the tenant administrator role or a custom role with appropriate IPS tasks can also create customized IPS signature static groups from the Create IPS Signature Static Group page. Static groups enable better manageability because you can group different types of signatures into one entity.

To create a customized IPS signature static group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select **Create > Static Group**.

The Create IPS Signature Static Group page appears.

3. Complete the configuration according to the guidelines in [Table 224 on page 659](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the IPS Signatures page and a message that the static group was successfully created is displayed.

After you create an IPS signature static group, you can use the static group in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.

Table 224: Create IPS Signature Static Group Settings

Setting	Guideline
Name	Enter a unique name for the IPS signature static group that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters.

Table 224: Create IPS Signature Static Group Settings (continued)

Setting	Guideline
Description	Enter a description for the IPS signature static group; the maximum length is 1024 characters.
Group Members	<p>You can add one or more IPS signatures, static groups, or dynamic groups to be members of the static group that you are creating. In addition, you can delete group members after adding them.</p> <p><b>NOTE:</b> You must add at least one IPS signature, static group, or dynamic group to proceed.</p> <ul style="list-style-type: none"><li>To add one or more group members:<ol style="list-style-type: none"><li>Click the add (+) icon.<p>The Add IPS Signatures page appears displaying the existing predefined and custom IPS signatures, static groups, and dynamic groups in a table..</p></li><li>Select one or more group members by clicking the check boxes corresponding to the rows.</li><li>Click <b>OK</b>.<p>You are returned to the previous page and the group members that you added are displayed in the table.</p></li></ol></li><li>To delete one or more group members that you added:<ol style="list-style-type: none"><li>Select the group members that you want do delete and click the delete (trash can) icon.<p>A warning message appears asking you to confirm the deletion.</p></li><li>Click <b>Yes</b>.<p>The group members are deleted.</p></li></ol></li></ul>

RELATED DOCUMENTATION

| [Create IPS Profiles](#) | 675

## Create IPS Signature Dynamic Groups

The signature database in Contrail Service Orchestration (CSO) contains predefined intrusion prevention system (IPS) signature dynamic groups that you can use. Users with the tenant administrator role or a

custom role with appropriate IPS tasks can also create customized IPS signature dynamic groups (based on a specified filter criteria) from the Create IPS Signature Dynamic Group page.

The filter criteria that you specify are matched only to predefined or customized IPS signatures, and not to IPS static groups dynamic groups. When a new signature database is used, the dynamic group membership is automatically updated based on the filter criteria for that group.

To create a customized IPS signature dynamic group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select **Create > Dynamic Group**.

The Create IPS Signature Static Group page appears.

3. Complete the configuration according to the guidelines in [Table 225 on page 661](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. (Optional) Click **Preview Filtered Signatures** to check if the signatures that match the dynamic group are consistent with the filter criteria that you specified.

The IPS Signatures page appears displaying the list of IPS signatures matching the filters. If the signatures do not match, you can tweak the filter criteria as needed. Click **Close** to go back to the previous page.

5. Click **OK**.

You are returned to the IPS Signatures page and a message indicating that the dynamic group was successfully created is displayed.

After you create an IPS signature dynamic group, you can use the dynamic group in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.

**Table 225: Create IPS Signature Dynamic Group Settings**

Setting	Guideline
<b>Name</b>	Enter a unique name for the IPS signature dynamic group that is a string of alphanumeric characters, colons, periods, hyphens, and underscores. No spaces are allowed and the maximum length is 255 characters.

Table 225: Create IPS Signature Dynamic Group Settings (*continued*)

Setting	Guideline
<i>Filter Criteria</i>	<p>You select one or more filters to define the attributes of IPS signatures that will be added to the IPS signature dynamic group that you are creating. Filters apply to existing signatures (already downloaded in CSO) and to new signatures when they are downloaded.</p> <p>IPS signatures that match any of the filters that you configure are included as part of the signature group.</p>
<b>Severity</b>	
<b>Info</b>	Select the <b>Enable</b> check box to include IPS signatures with the severity level Info.
<b>Warning</b>	Select the <b>Enable</b> check box to include IPS signatures with the severity level Warning.
<b>Minor</b>	Select the <b>Enable</b> check box to include IPS signatures with the severity level Minor.
<b>Major</b>	Select the <b>Enable</b> check box to include IPS signatures with the severity level Major.
<b>Critical</b>	Select the <b>Enable</b> check box to include IPS signatures with the severity level Critical.
<i>Service</i>	
<b>Service</b>	<p>Specify the services that you want to use to filter for IPS signatures that should be included as part of the dynamic group.</p> <p>Select one or more services listed in the <b>Available</b> column and click the forward arrow to confirm your selection. The selected services are displayed in the Selected column.</p>
<i>Category</i>	
<b>Category</b>	<p>Specify the categories that you want to use to filter for IPS signatures that should be included as part of the dynamic group.</p> <p>Select one or more categories listed in the <b>Available</b> column and click the forward arrow to confirm your selection. The selected categories are displayed in the Selected column.</p>
<i>Recommended</i>	

Table 225: Create IPS Signature Dynamic Group Settings (*continued*)

Setting	Guideline
<b>Recommended</b>	<p>This filter is based on attack objects recommended by Juniper Networks. Select one of the following:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—Don't use this filter.</li> <li>• <b>Yes</b>—Add predefined attacks recommended by Juniper Networks to the dynamic group.</li> <li>• <b>No</b>—Add predefined attacks that are not recommended by Juniper Networks to the dynamic group.</li> </ul>
<i>Direction</i>	<p>You use this filter to add IPS signatures to the dynamic group based on the traffic direction of the attacks.</p> <p>If you specify more than one traffic direction (Any, Client-to-Server, and Server-to-Client), you must select a value in the Expression field.</p>
<b>Any</b>	<p>Select one of the following:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default): Do not use this filter.</li> <li>• <b>Yes</b>: Include IPS signatures that track traffic from client to server or server to client.</li> <li>• <b>No</b>: Do not include IPS signatures that track traffic from client to server or server to client.</li> </ul>
<b>Client-to-Server</b>	<p>Select one of the following:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default): Do not use this filter.</li> <li>• <b>Yes</b>: Include IPS signatures that track traffic from client to server.</li> <li>• <b>No</b>: Do not include IPS signatures that track traffic from client to server.</li> </ul>
<b>Server-to-Client</b>	<p>Select one of the following:.</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default): Do not use this filter</li> <li>• <b>Yes</b>: Include IPS signatures that track traffic from server to client.</li> <li>• <b>No</b>: Do not include IPS signatures that track traffic from server to client.</li> </ul>
<b>Expression</b>	<p>If you specified more than one direction filter, you must specify how the signatures should be matched:</p> <ul style="list-style-type: none"> <li>• <b>OR</b>—Include signatures that match any of the specified traffic directions.</li> <li>• <b>AND</b>—Include signatures that match all of the specified traffic directions.</li> </ul>
<i>Performance Impact</i>	

Table 225: Create IPS Signature Dynamic Group Settings (*continued*)

Setting	Guideline
<b>Unknown</b>	Select the <b>Enable</b> check box to include IPS signatures with the performance impact Unknown.
<b>Low</b>	Select the <b>Enable</b> check box to include IPS signatures with the performance impact Low.
<b>Medium</b>	Select the <b>Enable</b> check box to include IPS signatures with the performance impact Medium.
<b>High</b>	Select the <b>Enable</b> check box to include IPS signatures with the performance impact High.
<i>False Positives</i>	
<b>Unknown</b>	Select the <b>Enable</b> check box to include IPS signatures with the match assurance Unknown.
<b>Low</b>	Select the <b>Enable</b> check box to include IPS signatures with the match assurance Low.
<b>Medium</b>	Select the <b>Enable</b> check box to include IPS signatures with the match assurance Medium.
<b>High</b>	Select the <b>Enable</b> check box to include IPS signatures with the match assurance High.
<i>Age of Attack</i>	
<b>Age of Attack</b>	<p>Enter the age of the attack (in years) to be used as a filter criteria to include IPS signatures as part of the dynamic group.</p> <p>Range: 1 through 100.</p>
<b>Expression</b>	Select whether the IPS signatures should be filtered based on whether the age of attack in the signature is greater than (default) or less than the value that you specified.
<i>CVSS Score</i>	



Table 225: Create IPS Signature Dynamic Group Settings (*continued*)

Setting	Guideline
<b>CVSS Score</b>	<p>Specify the Common Vulnerability Scoring System (CVSS) to be used as a filter criteria to include IPS signatures as part of the dynamic group.</p> <p>Range: Decimal number between 0 and 10.</p>
<b>Expression</b>	Select whether the IPS signatures should be filtered based on whether the CVSS score of the attack is greater than (default) or less than the value that you specified.
<i>Other Filters</i>	
<b>Excluded</b>	<p>Select one of the following:.</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default): Do not use this filter</li> <li>• <b>Yes</b>: Include excluded attack objects as part of the dynamic group.</li> <li>• <b>No</b>: Do not include excluded attack objects as part of the dynamic group.</li> </ul>
<b>File Type</b>	Select the file type of the attack to be used as a filter criteria; for example, flash.
<b>Vulnerability Type</b>	Select the vulnerability type of the attack to be used as a filter criteria; for example, overflow.
<i>Object Type</i>	Specify this filter to group attack objects by type (anomaly or signature).
<b>Signature</b>	<p>Select the <b>Enable</b> check box to add signatures based on stateful signature attack objects specified in the signature.</p> <p>A stateful attack signature is a pattern that always exists within a specific section of the attack. Stateful signature attack objects also include the protocol or service used to perpetrate the attack and the context in which the attack occurs.</p>
<b>Protocol Anomaly</b>	Select the <b>Enable</b> check box to add signatures of attacks that violate protocol specifications (RFCs and common RFC extensions).
<i>Vendor Description</i>	
<b>Product Type</b>	Specify this filter to include signatures belonging to the selected product type.
<b>Vendor Name</b>	Specify this filter to include signatures belonging to the selected vendor.
<b>Title</b>	<p>Specify this filter to include signatures belonging to the selected product name.</p> <p>The product names are populated only when you select a product type and a vendor.</p>

## RELATED DOCUMENTATION

[Create IPS Profiles | 675](#)

## Edit, Clone, and Delete IPS Signatures

### IN THIS SECTION

- [Edit IPS Signatures | 666](#)
- [Clone IPS Signatures | 667](#)
- [Delete IPS Signatures | 667](#)

Users with the tenant administrator role or a custom role with appropriate IPS tasks can edit, clone, or delete IPS signatures.

### Edit IPS Signatures

You can edit only customized IPS signatures and not predefined (system-generated) signatures.

To edit a customized IPS signature:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select a customized IPS signature and click the edit (pencil) icon.

The Edit IPS Signature page appears, displaying the same fields that are presented when you create an IPS signature.

3. Modify the IPS signature fields as needed. See [“Create IPS Signatures” on page 651](#).

**NOTE:** You can modify all fields except the name.

4. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message that the IPS signature was successfully updated is displayed.

If the IPS signature was used in an IPS or exempt rule that is deployed on the device (through the firewall policy), then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## Clone IPS Signatures

Cloning enables you to easily create a new IPS signature based on an existing one. You can clone predefined or customized IPS signatures and modify the parameters as needed.

To clone an IPS signature:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select an IPS signature and select **More > Clone**.

The Clone IPS Signature page appears, displaying the same fields that are presented when you create an IPS signature.

3. Modify the IPS signature fields as needed. See [“Create IPS Signatures” on page 651](#).

4. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message that the IPS signature was successfully created is displayed.

After you clone an IPS signature, you can use the signature in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.

## Delete IPS Signatures

### NOTE:

- You can delete only customized (user-created) IPS signatures that are not used in an IPS or exempt rule.
- You cannot delete predefined (system-generated) IPS signatures.

To delete one or more customized IPS signatures:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select one or more customized IPS signatures and click the delete (trash can) icon

A warning message appears asking you to confirm the deletion.

3. Click **Yes** to proceed with the deletion.

You are returned to the IPS Signatures page and a message indicating the status of the delete operation is displayed.

## RELATED DOCUMENTATION

| [Create IPS Profiles | 675](#)

## Edit, Clone, and Delete IPS Signature Static Groups

### IN THIS SECTION

- [Edit IPS Signature Static Groups | 668](#)
- [Clone IPS Signature Static Groups | 669](#)
- [Delete IPS Signature Static Groups | 670](#)

Users with the tenant administrator role or a custom role with appropriate IPS tasks can edit, clone, or delete IPS signature static groups.

### Edit IPS Signature Static Groups

You can edit only customized IPS signature static groups and not predefined (system-generated) static groups.

To edit a customized IPS signature static group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select a customized IPS signature static group and click the edit (pencil) icon.

The Edit IPS Signature Static Group page appears, displaying the same fields that are presented when you create an IPS signature static group.

3. Modify the IPS signature static group fields as needed. See [“Create IPS Signature Static Groups” on page 659](#).

**NOTE:** You can modify all fields except the name.

4. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message that the IPS signature static group was successfully updated is displayed.

If the IPS signature static group was used in an IPS or exempt rule that is deployed on the device (through the firewall policy), then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## Clone IPS Signature Static Groups

Cloning enables you to easily create a new IPS signature static group based on an existing one. You can clone predefined or customized IPS signature static groups and modify the parameters as needed.

To clone an IPS signature static group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select an IPS signature static group and select **More > Clone**.

The Clone IPS Signature Static Group page appears, displaying the same fields that are presented when you create an IPS signature static group.

3. Modify the IPS signature static group fields as needed. See [“Create IPS Signature Static Groups” on page 659](#).
4. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message that the IPS signature static group was successfully created is displayed.

After you clone an IPS signature static group, you can use the static group in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.

## Delete IPS Signature Static Groups

### NOTE:

- You can delete only customized (user-created) IPS signature static groups that are not used in an IPS or exempt rule.
- You cannot delete predefined (system-generated) IPS signature static groups.

To delete one or more customized IPS signature static groups:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select one or more customized IPS signature static groups and click the delete (trash can) icon

A warning message appears asking you to confirm the deletion.

3. Click **Yes** to proceed with the deletion.

You are returned to the IPS Signatures page and a message indicating the status of the delete operation is displayed.

## RELATED DOCUMENTATION

| [Create IPS Profiles](#) | 675

## Edit, Clone, and Delete IPS Signature Dynamic Groups

### IN THIS SECTION

- [Edit IPS Signature Dynamic Groups | 671](#)
- [Clone IPS Signature Dynamic Groups | 672](#)
- [Delete IPS Signature Dynamic Groups | 673](#)

Users with the tenant administrator role or a custom role with appropriate IPS tasks can edit, clone, or delete IPS signature dynamic groups.

### Edit IPS Signature Dynamic Groups

You can edit only customized IPS signature dynamic groups and not predefined (system-generated) dynamic groups.

To edit a customized IPS signature dynamic group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select a customized IPS signature dynamic group and click the edit (pencil) icon.

The Edit IPS Signature Dynamic Group page appears, displaying the same fields that are presented when you create an IPS signature dynamic group.

3. Modify the IPS signature dynamic group fields as needed. See [“Create IPS Signature Dynamic Groups” on page 660](#).

**NOTE:** You can modify all fields except the name.

4. (Optional) Click **Preview Filtered Signatures** to check if the signatures that match the dynamic group are consistent with the filter criteria that you specified.

The IPS Signatures page appears displaying the list of IPS signatures matching the filters. If the signatures do not match, you can tweak the filter criteria as needed. Click **Close** to go back to the previous page.

5. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message indicating that the IPS signature dynamic group was successfully updated is displayed.

If the IPS signature dynamic group was used in an IPS or exempt rule that is deployed on the device (through the firewall policy), then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## Clone IPS Signature Dynamic Groups

Cloning enables you to easily create a new IPS signature dynamic group based on an existing one. You can clone predefined or customized IPS signature dynamic groups and modify the parameters as needed.

To clone an IPS signature dynamic group:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select an IPS signature dynamic group and select **More > Clone**.

The Clone IPS Signature Dynamic Group page appears, displaying the same fields that are presented when you create an IPS signature dynamic group.

3. Modify the IPS signature dynamic group fields as needed. See [“Create IPS Signature Dynamic Groups” on page 660](#).

4. (Optional) Click **Preview Filtered Signatures** to check if the signatures that match the dynamic group are consistent with the filter criteria that you specified.

The IPS Signatures page appears displaying the list of IPS signatures matching the filters. If the signatures do not match, you can tweak the filter criteria as needed. Click **Close** to go back to the previous page.

5. Click **OK** to save your changes.

You are returned to the IPS Signatures page and a message that the IPS signature dynamic group was successfully created is displayed.

After you clone an IPS signature dynamic group, you can use the dynamic group in an IPS or an exempt rule and reference the IPS profile (containing the rule) in a firewall policy that you can then deploy on the device.



## Delete IPS Signature Dynamic Groups

### NOTE:

- You can delete only customized (user-created) IPS signature dynamic groups that are not used in an IPS or exempt rule.
- You cannot delete predefined (system-generated) IPS signature dynamic groups.

To delete one or more customized IPS signature dynamic groups:

1. Select **Configuration > IPS > IPS Signatures**.

The IPS Signatures page appears.

2. Select one or more customized IPS signature dynamic groups and click the delete (trash can) icon

A warning message appears asking you to confirm the deletion.

3. Click **Yes** to proceed with the deletion.

You are returned to the IPS Signatures page and a message indicating the status of the delete operation is displayed.

### RELATED DOCUMENTATION

| [Create IPS Profiles | 675](#)

## About the IPS Profiles Page

### IN THIS SECTION

- [Tasks You Can Perform | 674](#)
- [Field Descriptions | 674](#)

To access this page, select **Configure > IPS > IPS Profiles**.

Use intrusion prevention system (IPS) IPS Profiles page to manage IPS profiles. IPS profiles can be associated with IPS or exempt rules and deployed on a device by associating a profile with a firewall intent and deploying the firewall policy on the device.

## Tasks You Can Perform

- Create an IPS profile—See [“Create IPS Profiles” on page 675](#).
- Edit, clone, or delete an IPS profile—See [“Edit, Clone, and Delete IPS Profiles” on page 676](#).
- Manage the IPS rules associated with an IPS profile—Click the **IPS-Profile-Name** to manage the IPS rules associated with the IPS profile. See [“About the <IPS-Profile-Name> / Rules Page” on page 678](#).
- Search for IPS profiles by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Sort IPS profiles—Click a column name to sort the data in the grid (table) based on the column name.

**NOTE:** Sorting is applicable only to some fields.

## Field Descriptions

[Table 226 on page 674](#) describes the field on the IPS Profiles page.

**Table 226: Fields on the IPS Profiles Page**

Field	Description
Name	<p>Name of the IPS profile.</p> <p>Click the <b>IPS-Profile-Name</b> to manage the IPS rules associated with the IPS profile. The <b>IPS-Profile-Name / Rules</b> page appears. See <a href="#">“About the &lt;IPS-Profile-Name&gt; / Rules Page” on page 678</a>.</p>
Definition Type	Indicates whether the IPS profile was system-generated (PREDEFINED) or created by a user (CUSTOM).
Description	Description of the IPS profile.

## RELATED DOCUMENTATION

## Create IPS Profiles

Contrail Service Orchestration (CSO) contains predefined intrusion prevention system (IPS) profiles that you can use. You can create customized IPS profiles from the Create IPS Profile page.

To create a customized IPS profile:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click the add (+) icon.

The Create IPS Profile page appears.

3. Complete the configuration according to the guidelines in [Table 227 on page 675](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the IPS Profiles page and a confirmation message is displayed indicating that the IPS profile is created.

After you create an IPS profile, you can add one or more IPS or exempt rules to the profile, and use the IPS profile in a firewall policy intent.

Table 227: Create IPS Profile Settings

Setting	Guideline
Name	Enter a unique name for the IPS profile that is a string of alphanumeric characters and some special characters (colon, hyphen, period, and underscore). No spaces are allowed and the maximum length is 255 characters.
Description	Enter a description for the IPS profile; the maximum length is 255 characters.

RELATED DOCUMENTATION

Create IPS or Exempt Rules | 680

Adding Firewall Policy Intents | 433

## Edit, Clone, and Delete IPS Profiles

### IN THIS SECTION

- [Edit IPS Profiles | 676](#)
- [Clone IPS Profiles | 677](#)
- [Delete IPS Profiles | 677](#)

You can edit, clone, or delete IPS profiles.

### Edit IPS Profiles

You can edit only customized IPS profiles and not predefined (system-generated) profiles.

To edit a customized IPS profile:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Select a customized IPS profile and click the edit (pencil) icon.

The Edit IPS Profile page appears, displaying the same fields that are presented when you create an IPS profile.

3. Modify the IPS profile fields as needed. See [“Create IPS Profiles” on page 675](#).

**NOTE:** You can only modify the description and not the name.

4. Click **OK** to save your changes.

You are returned to the IPS Profiles page and a message that the IPS profile was successfully updated is displayed.

If the IPS profile is referenced in a firewall policy intent, then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## Clone IPS Profiles

Cloning enables you to easily create a new IPS profile based on an existing one. You can clone predefined or customized IPS profiles and modify the parameters as needed.

To clone an IPS profile:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Select an IPS profile and select **More > Clone**.

The Clone IPS Profile page appears, displaying the same fields that are presented when you create an IPS profile.

3. Modify the IPS profile fields as needed. See [“Create IPS Profiles” on page 675](#).

4. Click **OK** to save your changes.

You are returned to the IPS Profiles page and a message that the IPS profile was successfully created is displayed.

## Delete IPS Profiles

### NOTE:

- You can delete only customized IPS profiles that are not referenced in a firewall policy intent.
- You cannot delete predefined (system-generated) IPS profiles.

To delete one or more customized IPS profiles:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Select one or more customized IPS profiles and click the delete (trash can) icon

A warning message appears asking you to confirm the deletion.

3. Click **Yes** to proceed with the deletion.

You are returned to the IPS Profiles page and a message indicating the status of the delete operation is displayed.

## RELATED DOCUMENTATION

[About the <IPS-Profile-Name> / Rules Page | 678](#)

## About the <IPS-Profile-Name> / Rules Page

### IN THIS SECTION

- [Tasks You Can Perform | 678](#)
- [Field Descriptions | 679](#)

To access this page, select **Configure > IPS > IPS Profiles > *IPS-Profile-Name***.

Use the *IPS-Profile-Name* / Rules page to manage intrusion prevention system (IPS) rules and exempt rules. IPS profiles can be associated with IPS or exempt rules and deployed on a device by associating the IPS profile with a firewall policy intent and deploying the firewall policy on the device.

### Tasks You Can Perform

- Create an IPS rule—See [“Create IPS or Exempt Rules” on page 680](#).
- Create an exempt rule—See [“Create IPS or Exempt Rules” on page 680](#).
- Edit, clone, or delete IPS or exempt rules—See [“Edit, Clone, and Delete IPS or Exempt Rules” on page 688](#).
- Search for rules by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Filter rules—Click the filter icon (funnel) and specify one or more filtering criteria. The filtered results are displayed on the same page.

**NOTE:** Filtering is applicable only to some fields.

## Field Descriptions

Table 228 on page 679 describes the field on the *IPS-Profile-Name* / Rules page.

Table 228: Fields on the <IPS-Profile-Name> / Rules Page

Field	Description
Name	Name of the IPS rule or exempt rule.
IPS Signatures	Displays the IPS signatures associated with the IPS rule or exempt rule. If there is more than one signature associated with the rule, the number of additional signatures is displayed. Mouse over the number to view the full list of signatures.
IPS Action	<ul style="list-style-type: none"> <li>For IPS rules, displays the action to be taken when the rule is matched.</li> <li>For exempt rules, displays <b>Not Applicable</b> because exempt rules are not associated with an action.</li> </ul>
Additional Actions	<ul style="list-style-type: none"> <li>For IPS rules, displays:               <ul style="list-style-type: none"> <li>Configured, if additional actions (to be taken when the rule is matched) are configured. Mouse over the gear icon to view the additional actions configured.</li> <li>Not Configured, if no additional actions are configured.</li> </ul> </li> <li>For exempt rules, displays <b>Not Applicable</b> because exempt rules are not associated with any actions.</li> </ul>
Details	<p>Displays whether the rule is an IPS rule or an exempt rule.</p> <p>Mouse over the <b>Details</b> field and then mouse over the ellipsis (...) displayed to access a menu to edit, clone, or delete the rule. See <a href="#">“Edit, Clone, and Delete IPS or Exempt Rules”</a> on page 688.</p>

## RELATED DOCUMENTATION

[About the IPS Signatures Page](#) | 646

[About the IPS Profiles Page](#) | 673

## Create IPS or Exempt Rules

### IN THIS SECTION

- [Create IPS Rules | 680](#)
- [Create Exempt Rules | 687](#)

You can create intrusion prevention system (IPS) rules or exempt rules only for customized IPS profiles.

### Create IPS Rules

To create an IPS rule:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click ***IPS-Profile-Name*** for the profile for which you want to create a rule.

The *IPS-Profile-Name* / Rules page appears.

3. Select **Create > IPS Rule**.

The parameters for an IPS rule appear inline at the top of the page.

4. Complete the configuration according to the guidelines in [Table 229 on page 681](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

5. Click **Save** to save your changes.

The changes are saved and a confirmation message appears at the top of the page.

You can use the IPS profile in a firewall policy intent and deploy the firewall policy on the device, which deploys the IPS and exempt rules associated with the profile.



Table 229: Create IPS Rule Settings

Setting	Guideline
<b>Rule Name</b>	<p>CSO generates a unique rule name by default. You can modify the name if needed.</p> <p>The name must begin with an alphanumeric character and can contain alphanumeric characters and some special characters (colons, hyphens, forward slashes, periods, and underscores); 63-character maximum.</p>
<b>Description</b>	Enter a description for the rule; the maximum length is 1024 characters.
<b>IPS Signatures</b>	<p>You can add one or more IPS signatures and IPS signature static and dynamic groups to be associated with the rule:</p> <ol style="list-style-type: none"> <li>Click inside the text box with the + icon. A list of IPS signatures and IPS signature static and dynamic groups appears.</li> <li>(Optional) Enter a search term and press Enter to filter the list of items displayed.</li> <li>Click a list item to add it to the IPS signatures and IPS signature static or dynamic groups associated with the rule.</li> <li>(Optional) Repeat the preceding step to add more signatures, static groups, and dynamic groups.</li> <li>Click the <b>View more results</b> link to view the full list of IPS signatures and IPS signature static and dynamic groups. The full list is displayed in the End Points panel on the right. To add one or more signatures, static groups, or dynamic groups: <ol style="list-style-type: none"> <li>Mouse over a list item and select the check box that appears.</li> <li>Repeat the preceding step for the other signatures, static groups, or dynamic groups that you want to add.</li> <li>Click the check mark icon ( ✓ ) at the top of the End Points panel, and select <b>Signatures</b>. The signatures, static groups, or dynamic groups that you selected are added and displayed in the IPS Signatures field.</li> </ol> </li> </ol>

Table 229: Create IPS Rule Settings (*continued*)

Setting	Guideline
IPS Action	<p>Select the action to be taken when the monitored traffic matches the attack objects specified in the rules:</p> <ul style="list-style-type: none"> <li>• None—No action is taken. Use this action to only generate logs for some traffic.</li> <li>• Ignore—Stops scanning traffic for the rest of the connection if an attack match is found. IPS disables the rulebase for the specific connection.</li> <li>• Close Client and Server—Closes the connection and sends a TCP reset (RST) packet to both the client and the server.</li> <li>• Close Client—Closes the connection and sends an RST packet to the client, but not to the server.</li> <li>• Close Server—Closes the connection and sends an RST packet to the server, but not to the client.</li> <li>• Drop Connection—Drops all packets associated with the connection, preventing traffic for the connection from reaching its destination. Use this action to drop connections for traffic that is not prone to spoofing.</li> <li>• Drop Packet—Drops a matching packet before it can reach its destination but does not close the connection. Use this action to drop packets for attacks in traffic that is prone to spoofing, such as UDP traffic. Dropping a connection for such traffic could result in a denial of service that prevents you from receiving traffic from a legitimate source-IP address.</li> <li>• Recommended (default)—Uses the action that Juniper Networks recommends when that attack is detected. All predefined attack objects have a default action associated with them.</li> <li>• Diffserv Marking—Assigns the specified differentiated services code point (DSCP) value to the packet in an attack and pass the packet on normally.</li> </ul> <p>When you select Diffserv Marking, you must enter a DSCP value:</p> <ol style="list-style-type: none"> <li>1. Click the <b>Code Point: Vaule</b> hyperlink. The Code point for Diffserve Marking action popup appears.</li> <li>2. In the <b>Code Point</b> field, enter a DSCP value from 0 through 63.</li> <li>3. Click <b>OK</b>. You are returned to the previous page; the value that you entered is displayed</li> </ol>

Table 229: Create IPS Rule Settings (continued)

Setting	Guideline
Additional Actions	

Table 229: Create IPS Rule Settings (continued)

Setting	Guideline
	<p>In addition to the IPS action, you can configure one or more of the following additional actions:</p> <ul style="list-style-type: none"> <li> <b>Notifications</b>—When attacks are detected, you can choose to log the attack and create log records with attack information and send that information to the log server.            To configure notifications:           <ol style="list-style-type: none"> <li>Click the <b>Notification</b> link.                The Notification page appears.</li> <li>Complete the configuration according to the guidelines shown in <a href="#">Table 230 on page 685</a>.</li> <li>Click <b>OK</b>.                You are returned to the previous page. A gear icon next to the Notification link indicates that you have configured notification settings.</li> </ol> </li> <li> <b>IP actions</b>—When attacks are detected, you can configure actions that you want IPS to take against future connections that use the same IP address.            To configure IP actions:           <ol style="list-style-type: none"> <li>Click the <b>IP Action</b> link.                The IP Action page appears.</li> <li>Complete the configuration according to the guidelines shown in <a href="#">Table 231 on page 686</a>.</li> <li>Click <b>OK</b>.                You are returned to the previous page. A gear icon next to the IP Action link indicates that you have configured IP action settings.</li> </ol> </li> <li> <b>Additional actions</b>—When attacks are detected, you can configure additional actions that you want CSO to take.            To configure additional actions:           <ol style="list-style-type: none"> <li>Click the <b>Additional</b> link.                The Additional page appears.</li> <li>Complete the configuration according to the guidelines shown in <a href="#">Table 232 on page 687</a>.</li> <li>Click <b>OK</b>.</li> </ol> </li> </ul>

Table 229: Create IPS Rule Settings (continued)

Setting	Guideline
	You are returned to the previous page. A gear icon next to the Additional link indicates that you have configured additional settings.

Table 230: Notification Settings

Setting	Guideline
<b>Attack Logging</b>	Select the <b>Enable</b> check box to log an attack when it is detected.
<b>Alert Flag</b>	Select the <b>Enable</b> check box to set the alert flag in the attack log.
<b>Log Packets</b>	<p>Select the <b>Enable</b> check box to log packets when an attack is detected.</p> <p>In response to a rule match, you can capture the packets received before and after the attack for further offline analysis of attacker behavior. You can configure the number of pre-attack and post-attack packets to be captured for this attack, and limit the duration of post-attack packet capture by specifying a timeout value.</p> <p>You must specify at least one of the Packets Before, Packets After, or Post Window Timeout fields.</p>
<b>Packets Before</b>	<p>Specify the number of packets received before an attack that should be captured for further analysis of the behavior of the attack.</p> <p>Range: 1 through 255.</p>
<b>Packets After</b>	<p>Specify the number of packets received after an attack that should be captured for further analysis of attacker behavior.</p> <p>Range: 1 through 255.</p>
<b>Post Window Timeout</b>	<p>Specify a time limit (in seconds) for capturing packets received after an attack. No packets are captured after the specified timeout has elapsed.</p> <p>Range: 1 through 1800.</p>

Table 231: IP Action Settings

Setting	Guideline
IP Action	<p>Select the action to be taken on future connections that use the same IP address:</p> <p><b>NOTE:</b> If there is an IP action match with more than one rule, then the most severe IP action of all the matched rules is applied. In decreasing order of severity, the actions are block, close, and notify.</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)—Do not take any action. This is similar to if you did not configure the IP action.</li> <li>• <b>IP Notify</b>—Don't take any action on future traffic but log the event.</li> <li>• <b>IP Close</b>—Close future connections of new sessions that match the IP address by sending RST packets to the client and server.</li> <li>• <b>IP Block</b>—Block future connections of any session that matches the IP address.</li> </ul>
IP Target	<p>Specify how the traffic should be matched for the configured IP actions:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—Do not match any traffic.</li> <li>• <b>Destination Address</b>—Match traffic based on the destination IP address of the attack traffic.</li> <li>• <b>Service</b>—For TCP and UDP, matches traffic based on the source IP address, source port, destination IP address, and destination port of the attack traffic.</li> <li>• <b>Source Address</b>—Matches traffic based on the source IP address of the attack traffic.</li> <li>• <b>Source Zone</b>—Matches traffic based on the source zone of the attack traffic.</li> <li>• <b>Source Zone Address</b>—Matches traffic based on the source zone and source IP address of the attack traffic.</li> <li>• <b>Zone Service</b>—Matches traffic based on the source zone, destination IP address, destination port, and protocol of the attack traffic.</li> </ul>
Refresh Timeout	<p>Select the <b>Enable</b> check box to refresh the IP action timeout (that you specify in the Timeout Value field) if future traffic matches the IP actions configured.</p>
Timeout Value	<p>Configure the number of seconds that you want the IP action to remain in effect. For example, if you configure a timeout of 3600 seconds (1 hour) and traffic matches the IP actions configured, the IP action remains in effect for 1 hour.</p> <p>Range: 0 through 64,800 seconds.</p>
Log Taken	<p>Select the <b>Enable</b> check box to log the information about the IP action against the traffic that matches a rule.</p>
Log Creation	<p>Select the <b>Enable</b> check box generate an event when the IP action filter is triggered.</p>

Table 232: Additional Settings

Setting	Guideline
<b>Severity</b>	<p>Select a severity level to override the inherited attack severity in the rules.</p> <p>The most dangerous level is critical, which attempts to crash your server or gain control of your network. Informational is the least dangerous level and is used by network administrators to discover holes in their security systems.</p>
<b>Terminal</b>	Select the <b>Enable</b> check box to mark the IPS rule as terminal. When a terminal rule is matched, the device stops matching for the rest of the rules in that IPS profile.

## Create Exempt Rules

To create an exempt rule:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click ***IPS-Profile-Name*** for the profile for which you want to create a rule.

The *IPS-Profile-Name* / Rules page appears.

3. Select **Create > Exempt Rule**.

The parameters for an exempt rule appear inline at the top of the page.

4. You can configure only the following fields:

- Rule Name
- Description
- IPS Signatures

See [Table 229 on page 681](#) for an explanation of these fields.

5. Click **Save** to save your changes.

The changes are saved and a confirmation message appears at the top of the page.

You can use the IPS profile in a firewall policy intent and deploy the firewall policy on the device, which deploy the IPS and exempt rules associated with the profile.

## RELATED DOCUMENTATION

[Adding Firewall Policy Intents | 433](#)

## Edit, Clone, and Delete IPS or Exempt Rules

### IN THIS SECTION

- [Edit IPS or Exempt Rules | 688](#)
- [Clone IPS or Exempt Rules | 689](#)
- [Delete IPS or Exempt Rules | 689](#)

You can edit, clone, or delete IPS or exempt rules.

### Edit IPS or Exempt Rules

You can edit IPS and exempt rules associated only with customized IPS profiles and not rules associated with predefined (system-generated) profiles.

To edit an IPS or an exempt rule:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click **IPS-Profile-Name** for the profile for which you want to edit a rule.

The *IPS-Profile-Name* / Rules page appears.

3. Mouse over the **Details** field, then mouse over the ellipsis (...) that appears, and from the menu, select **Edit**.

The rule that you selected for editing appears inline at the top of the page.

4. Modify the rule as needed. See [“Create IPS or Exempt Rules” on page 680](#).



**NOTE:** You can modify all fields except the name.

5. Click **Save** to save your changes.

The changes are saved and a confirmation message appears at the top of the page.

If the IPS or exempt rule belongs to an IPS profile that is referenced in a firewall policy intent, then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## Clone IPS or Exempt Rules

Cloning enables you to easily create a new IPS or exempt rule based on an existing one. You can clone IPS and exempt rules associated only with customized IPS profiles and not rules associated with predefined (system-generated) profiles.

To clone an IPS or an exempt rule:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click **IPS-Profile-Name** for the profile for which you want to clone a rule.

The *IPS-Profile-Name / Rules* page appears.

3. Select a rule and select **More > Clone**. Alternatively, Mouse over the **Details** field, then mouse over the ellipsis (...) that appears, and from the menu, select **Clone**.

The rule that you selected for cloning appears inline at the top of the page.

4. Modify the rule as needed. See [“Create IPS or Exempt Rules” on page 680](#).

5. Click **Save** to save your changes.

The new rule is created and a confirmation message appears at the top of the page.

## Delete IPS or Exempt Rules

You can delete IPS and exempt rules associated only with customized IPS profiles and not rules associated with predefined (system-generated) profiles.

To delete one or more IPS or exempt rules:

1. Select **Configuration > IPS > IPS Profiles**.

The IPS Profiles page appears.

2. Click ***IPS-Profile-Name*** for the profile for which you want to delete one or more rules.

The *IPS-Profile-Name* / Rules page appears.

3. Select one or more rules and click the delete (trash can) icon

A warning message appears asking you to confirm the deletion.

4. Click **Yes** to proceed with the deletion.

A message indicating the status of the delete operation appears at the top of the page.

If the IPS or exempt rule that you deleted belongs to an IPS profile that is referenced in a firewall policy intent, then the firewall policy is marked for deployment. You must deploy the firewall policy for the changes to take effect on the device.

## RELATED DOCUMENTATION

| [Adding Firewall Policy Intents](#) | 433

# Managing SSL Proxies

## IN THIS CHAPTER

- [SSL Forward Proxy Overview | 691](#)
- [About the SSL Proxy Policy Page | 697](#)
- [Creating SSL Proxy Policy Intents | 699](#)
- [Editing, Cloning, and Deleting SSL Proxy Policy Intents | 703](#)
- [Understanding How SSL Proxy Policy Intents Are Applied | 706](#)
- [About the SSL Proxy Profiles Page | 708](#)
- [Creating SSL Forward Proxy Profiles | 710](#)
- [Editing, Cloning, and Deleting SSL Forward Proxy Profiles | 714](#)
- [Configuring and Deploying an SSL Forward Proxy Policy | 717](#)

## SSL Forward Proxy Overview

### IN THIS SECTION

- [Supported Ciphers in Proxy Mode | 693](#)
- [Server Authentication | 694](#)
- [Root CA | 695](#)
- [Trusted CA List | 695](#)
- [Session Resumption | 696](#)
- [SSL Proxy Logs | 696](#)

Secure Sockets Layer (SSL) is an application-level protocol that provides encryption technology for the Internet. SSL, also called *Transport Layer Security* (TLS), ensures the secure transmission of data between a client and a server through a combination of privacy, authentication, confidentiality, and data integrity. SSL relies on certificates and private–public key exchange pairs for this level of security.

Server authentication guards against fraudulent transmissions by enabling a Web browser to validate the identity of a Web server. Confidentiality mechanisms ensure that communications are private. SSL enforces confidentiality by encrypting data to prevent unauthorized users from eavesdropping on electronic communications. Finally, message integrity ensures that the contents of a communication have not been tampered with.


SSL forward proxy is a transparent proxy; that is, it performs SSL encryption and decryption between the client and the server, but neither the server nor the client can detect its presence. SSL forward proxy ensures that it has the keys to encrypt and decrypt the payload:

- For the server, SSL forward proxy acts as a client—Because SSL forward proxy generates the shared pre-master key, it determines the keys to encrypt and decrypt.
- For the client, SSL forward proxy acts as a server—SSL forward proxy first authenticates the original server and replaces the public key in the original server certificate with a key that is known to it. It then generates a new certificate by replacing the original issuer of the certificate with its own identity and signs this new certificate with its own public key (provided as a part of the proxy profile configuration). When the client accepts such a certificate, it sends a shared pre-master key encrypted with the public key on the certificate. Because SSL forward proxy replaced the original key with its own key, it is able to receive the shared pre-master key. Decryption and encryption take place in each direction (client and server), and the keys are different for both encryption and decryption.

[Figure 23 on page 693](#) shows how SSL forward proxy works on an encrypted payload. When application firewall (AppFW) is configured, SSL forward proxy acts as an SSL server terminating the SSL session from the client and a new SSL session is established to the server. The device decrypts and then re-encrypts all SSL forward proxy traffic. SSL forward proxy uses the following services:

- SSL-T-SSL terminator on the client side.
- SSL-I-SSL initiator on the server side.
- Configured AppFW services use the decrypted SSL sessions.

Figure 23: SSL Forward Proxy on an Encrypted Payload

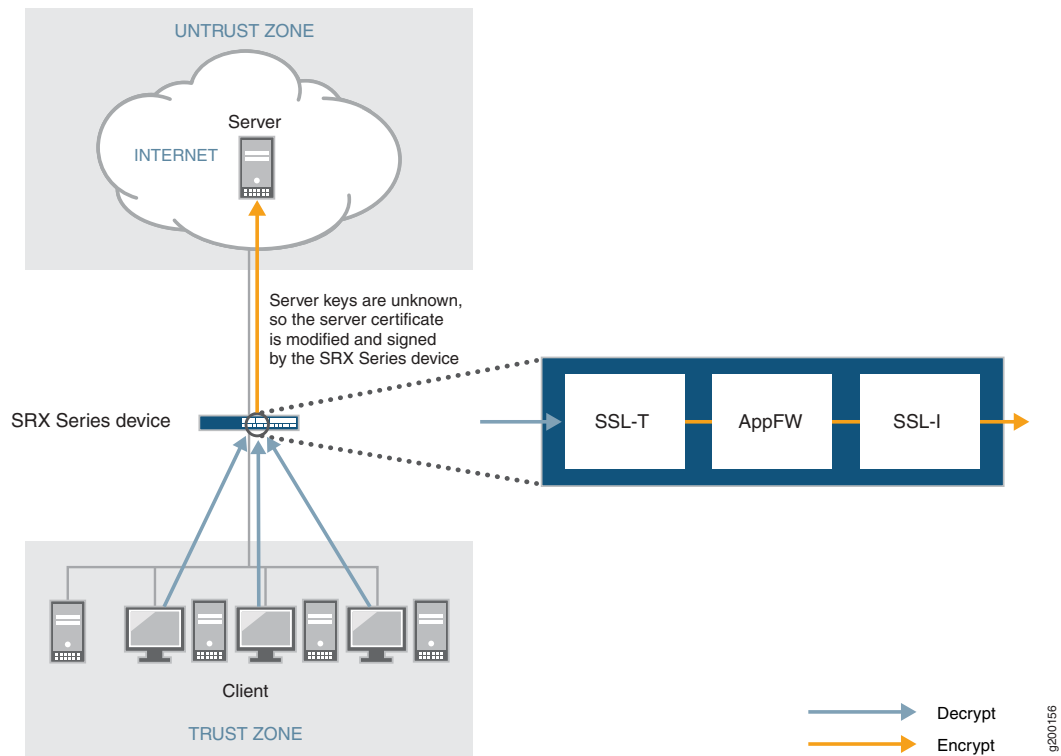

This topic has the following sections:

Supported Ciphers in Proxy Mode

An SSL cipher comprises encryption ciphers, authentication method, and compression. [Table 233 on page 693](#) displays a list of supported ciphers. NULL ciphers are excluded.

The following SSL protocols are supported:

- SSLv3
- TLS1

Table 233: Supported Ciphers in Proxy Mode

SSL Cipher	Key Exchange Algorithm	Data Encryption	Message Integrity
RSA_WITH_RC4_128_MD5	RSA key exchange	128-bit RC4	Message Digest 5 (MD5) hash

Table 233: Supported Ciphers in Proxy Mode (continued)

SSL Cipher	Key Exchange Algorithm	Data Encryption	Message Integrity
RSA_WITH_RC4_128_SHA	RSA key exchange	128-bit RC4	Secure Hash Algorithm (SHA) hash
RSA_WITH_DES_CBC_SHA	RSA key exchange	DES CBC	SHA hash
RSA_WITH_3DES_EDE_CBC_SHA	RSA key exchange	3DES EDE/CBC	SHA hash
RSA_WITH_AES_128_CBC_SHA	RSA key exchange	128-bit AES/CBC	SHA hash
RSA_WITH_AES_256_CBC_SHA	RSA key exchange	256-bit AES/CBC	SHA hash
RSA_EXPORT_WITH_RC4_40_MD5	RSA-export	40-bit RC4	MD5 hash
RSA_EXPORT_WITH_DES40_CBC_SHA	RSA-export	40-bit DES/CBC	SHA hash
RSA_EXPORT1024_WITH_DES_CBC_SHA	RSA 1024 bit export	DES/CBC	SHA hash
RSA_EXPORT1024_WITH_RC4_56_MD5	RSA 1024 bit export	56-bit RC4	MD5 hash
RSA_EXPORT1024_WITH_RC4_56_SHA	RSA 1024 bit export	56-bit RC4	SHA hash
RSA-WITH-AES-256-GCM-SHA384	RSA key exchange	256-bit AES/GCM	SHA384 hash
RSA-WITH-AES-256-CBC-SHA256	RSA key exchange	256-bit AES/CBC	SHA256 hash
RSA-WITH-AES-128-GCM-SHA256	RSA key exchange	128-bit AES/GCM	SHA256 hash
RSA-WITH-AES-128-CBC-SHA256	RSA key exchange	128-bit AES/CBC	SHA256 hash

## Server Authentication

Implicit trust between the client and the device (because the client accepts the certificate generated by the device) is an important aspect of SSL proxy. It is extremely important that server authentication is not compromised; however, in reality, self-signed certificates and certificates with anomalies are in abundance. Anomalies can include expired certificates, instances of common name not matching a domain name, and so forth.

You can specify that the SSL forward proxy should ignore server authentication completely. In this case, SSL forward proxy ignores errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry).

You can specify whether the SSL proxy should ignore server authentication errors or not during the creation of an SSL forward proxy profile.

- If you specify that server authentication errors should *not* be ignored, the following scenarios occur:
  - If authentication succeeds, a new certificate is generated by replacing the keys and changing the issuer name to the issuer name that is configured in the root CA certificate in the proxy profile.
  - If authentication fails, the connection is dropped.
- If you specify that server authentication errors should be ignored, the following scenarios occur:

**NOTE:** We do not recommend that you configure this option for authentication because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.

- If the certificate is self-signed, a new certificate is generated by replacing the keys only. The issuer name is not changed. This ensures that the client browser displays a warning that the certificate is not valid.
- If the certificate has expired or if the common name does not match the domain name, a new certificate is generated by replacing the keys and changing the issuer name to SSL-PROXY: DUMMY\_CERT:GENERATED DUE TO SRVR AUTH FAILURE. This ensures that the client browser displays a warning that the certificate is not valid.

## Root CA

In a public key infrastructure (PKI) hierarchy, the root CA is at the top of the trust path. The root CA identifies the server certificate as a trusted certificate.

## Trusted CA List

SSL forward proxy ensures secure transmission of data between a client and a server. Before establishing a secure connection, SSL forward proxy checks certificate authority (CA) certificates to verify signatures on server certificates. For this reason, a reasonable list of trusted CA certificates is required to effectively authenticate servers.

### Session Resumption

An SSL session refers to the set of parameters and encryption keys that are created when a full handshake is performed. A connection is the conversation or active data transfer that occurs within the session. The computational overhead of a complete SSL handshake and generation of master keys is considerable. In short-lived sessions, the time taken for the SSL handshake can be more than the time for data transfer. To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a mechanism for caching sessions so that session information, such as the pre-master secret key and agreed-upon ciphers, can be cached for both the client and the server. The cached information is identified by a session ID. In subsequent connections, both parties agree to use the session ID to retrieve the information rather than create a new pre-master secret key. Session resumption shortens the handshake process and accelerates SSL transactions.

### SSL Proxy Logs

When logging is enabled in an SSL proxy profile, the SSL proxy can generate the messages shown in [Table 234 on page 696](#).

Table 234: SSL Proxy Logs

Log Type	Description
SSL_PROXY_SSL_SESSION_DROP	Logs generated when a session is dropped by SSL proxy.
SSL_PROXY_SSL_SESSION_ALLOW	Logs generated when a session is processed by SSL proxy even after encountering some minor errors.
SSL_PROXY_SESSION_IGNORE	Logs generated if non-SSL sessions are initially mistaken as SSL sessions.
SSL_PROXY_SESSION_WHITELIST	Logs generated when a session is allowed.
SSL_PROXY_ERROR	Logs used for reporting errors.
SSL_PROXY_WARNING	Logs used for reporting warnings.
SSL_PROXY_INFO	Logs used for reporting general information.

All logs contain similar information; the message field contains the reason for the log generation. One of three prefixes shown in [Table 235 on page 697](#) identifies the source of the message. Other fields are descriptively labeled.



Table 235: SSL Proxy Log Prefixes

Prefix	Description
system	Logs generated because of errors related to the device or an action taken as part of the SSL proxy profile. Most logs fall into this category.
openssl error	Logs generated during the handshake process if an error is detected by the openssl library.
certificate error	Logs generated during the handshake process if an error is detected in the certificate (X.509 related errors).

## RELATED DOCUMENTATION

[About the SSL Proxy Policy Page | 697](#)
[About the SSL Proxy Profiles Page | 708](#)
[Certificates Overview | 403](#)

## About the SSL Proxy Policy Page

To access this page, select **Configuration > SSL Proxy > Policy** in Customer Portal.

Use the SSL Proxy Policy page to view and manage SSL proxy policy intents. You can also deploy the SSL proxy policy immediately or schedule the deployment for later.

**NOTE:**

- When an SSL proxy intent is deployed, the corresponding certificates used in the SSL profile (associated with the SSL proxy intent) are automatically deployed to the applicable sites.
- If the application firewall (AppFW) service is not configured in the corresponding firewall policy intent, then the SSL forward proxy services are bypassed even if an SSL proxy profile is attached to a firewall policy. Therefore, ensure that AppFW is configured for the firewall policy intents that should go through SSL inspection. If AppFW is not included in the policy intent, this does not cause an error; however, the SSL proxy action does not take place even though sessions are matched.

Tasks You Can Perform

You can perform the following tasks from this page:

- Create SSL proxy policy intents—See [“Creating SSL Proxy Policy Intents” on page 699](#).
- Edit, clone, or delete SSL proxy policy intents—See [“Editing, Cloning, and Deleting SSL Proxy Policy Intents” on page 703](#).
- Search for SSL proxy policy intents by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Filter SSL proxy policy intents—Click the filter icon and select whether you want to show or hide column filters or apply a quick filter. Depending on your selection, you can filter the policy intents based on source, destination, or both, or view the filtered results. The filtered results are displayed on the same page.
- Deploy the SSL proxy policy—See [“Deploying Policies” on page 723](#).

Field Descriptions

[Table 236 on page 698](#) describes the fields on SSL Proxy Policy page.

Table 236: SSL Proxy Policy Page Fields

Field	Description
Total Intents	Total number of policy intents in the SSL proxy policy.
Undeployed	Number of SSL proxy policy intents that have not yet been deployed.
For each SSL proxy policy intent, the following information is displayed in a grid:	
Source	Source endpoints to which an SSL proxy policy intent applies.
Destination	Destination endpoints to which an SSL proxy policy intent applies..
SSL Proxy Profile	Name of the SSL proxy profile associated with the policy intent.
Options	Name and description of the SSL proxy policy intent.

RELATED DOCUMENTATION

## Creating SSL Proxy Policy Intents

You can configure an SSL proxy policy intent inline on the SSL Proxy Policy page. An SSL proxy policy intent enables you to configure an SSL proxy between source and destination endpoints by associating the latter with an SSL proxy profile.

To create an SSL proxy policy intent:

1. Select **Configuration > SSL Proxy > Policy** in Customer Portal.

The SSL Proxy Policy page appears.

2. Click the add icon (+).

The options to create policy intents appear inline on the SSL Proxy Policy page.

3. Enter the policy intent information according to the guidelines provided in [Table 237 on page 700](#)

4. Click **Save**.

The SSL proxy policy intent is saved and a confirmation message is displayed.

**NOTE:** After the policy intent is created, you must deploy the policy to ensure that the changes take effect on the applicable sites. When an SSL proxy policy intent is created, the **Undeployed** field is incremented by one indicating that intents are pending deployment.

Table 237: Create SSL Proxy Policy Intent Settings

Setting	Guideline
Source	<p>A source endpoint can be an IP address, an IP address group, a site, a site group, or a department, or or a combination of these.</p> <p><b>NOTE:</b> A source IP address value of <b>Any</b> signifies any IP address from any site.</p> <p>Specify one or more source endpoints in one of the following ways:</p> <ul style="list-style-type: none"> <li>• Click the add icon (+) and select the endpoints from the list of previously configured endpoints.</li> <li>• Filter the endpoints by entering a search term or one or more predefined keywords in the <b>Source</b> field and select one or more endpoints.</li> </ul> <p><a href="#">Table 238 on page 702</a> displays the list of predefined keywords.</p> <ul style="list-style-type: none"> <li>• Click the <b>View more results</b> link to view additional configured endpoints. The list of endpoints is displayed in the <b>End Points</b> panel on the right.</li> </ul> <p>Do one of the following:</p> <ul style="list-style-type: none"> <li>• To add one endpoint at a time, select an endpoint and click the check mark icon (✓) that appears when you hover over the endpoint.</li> <li>• To add multiple endpoints, select one or more endpoints that you want to add, click the check mark icon (✓) at the top of the <b>End Points</b> panel, and select <b>Source</b>.</li> <li>• Filter the endpoints by entering a search term or one or more predefined keywords in the <b>End Points</b> field and select one or more endpoints.</li> </ul> <p><a href="#">Table 238 on page 702</a> displays the list of predefined keywords.</p> <p><b>NOTE:</b> You can also create endpoints by clicking the add icon (+) in the End Points panel.</p> <p><a href="#">Table 239 on page 703</a> displays the endpoints that can be created.</p>

Table 237: Create SSL Proxy Policy Intent Settings (*continued*)

Setting	Guideline
<b>Destination</b>	<p>A destination endpoint can be an IP address, an IP address group, a site, a site group, or a department, or or a combination of these.</p> <p><b>NOTE:</b> A destination IP address value of <b>Any</b> signifies traffic going to the Internet (any address). Traffic within sites (internal traffic) is not covered by the destination IP address value of <b>Any</b>.</p> <p>If you want to cover traffic between two sites, ensure that the sites are included in both the source and destination endpoints.</p> <p>Specify one or more destination endpoints in one of the following ways:</p> <ul style="list-style-type: none"> <li>• Click the add icon (+) and select the endpoints from the list of previously configured endpoints.</li> <li>• Filter the endpoints by entering a search term or one or more predefined keywords in the <b>Destination</b> field and select one or more endpoints.</li> </ul> <p><a href="#">Table 238 on page 702</a> displays the list of predefined keywords.</p> <ul style="list-style-type: none"> <li>• Click the <b>View more results</b> link to view additional configured endpoints. The list of endpoints is displayed in the <b>End Points</b> panel on the right.</li> </ul> <p>Do one of the following:</p> <ul style="list-style-type: none"> <li>• To add one endpoint at a time, select an endpoint and click the check mark icon (✓) that appears when you hover over the endpoint.</li> <li>• To add multiple endpoints, select one or more endpoints that you want to add, click the check mark icon (✓) at the top of the <b>End Points</b> panel, and select <b>Destination</b>.</li> <li>• Filter the endpoints by entering a search term or one or more predefined keywords in the <b>End Points</b> field and select one or more endpoints.</li> </ul> <p><a href="#">Table 238 on page 702</a> displays the list of predefined keywords.</p> <p><b>NOTE:</b> You can also create endpoints by clicking the add icon (+) in the End Points panel.</p> <p><a href="#">Table 239 on page 703</a> displays the endpoints that can be created.</p>

Table 237: Create SSL Proxy Policy Intent Settings (*continued*)

Setting	Guideline
<b>SSL Proxy Profile</b>	<p>Specify an SSL proxy profile to associate with the SSL proxy policy intent in one of the following ways:</p> <ul style="list-style-type: none"> <li>Click the add icon (+) and select the SSL proxy profile from the list of previously configured profiles.</li> <li>Filter the profiles by entering a search term in the <b>SSL Proxy Profile</b> field and select a profile.</li> <li>Create a SSL proxy profile—Click the <b>Add New Profile</b> link. The Create SSL Proxy Profiles page appears. See <a href="#">“Creating SSL Forward Proxy Profiles” on page 710</a>.</li> </ul> <p><b>NOTE:</b> You can also create profiles by clicking the add icon (+) in the End Points panel and selecting <b>SSL Proxy Profiles</b>.</p> <ul style="list-style-type: none"> <li>Click the <b>View more results</b> link to view additional configured profiles. The list of SSL proxy profiles is displayed in the <b>End Points</b> panel on the right.</li> </ul> <p>To add a profile, select it and click the check mark icon (✓) that appears when you hover over the profile.</p>
<b>Details</b>	<p>Enter the name of the SSL proxy policy intent in the first text box. If you do not enter a name, the system-generated name is used. The name that you enter must begin with an alphanumeric character and can contain alphanumeric characters and some special characters (- _). The maximum length is 63 characters.</p> <p>Enter the description of the SSL proxy policy intent in the second text box.</p>

Table 238: Keywords for Filtering Endpoints

Endpoint	Keyword	Applicable to
Address or Address Group	<b>addr</b> or <b>ADDR</b>	Source Destination
Site	<b>site</b> or <b>SITE</b>	Source Destination
Site Group	<b>stgp</b> or <b>STGP</b>	Source Destination
Department	<b>dept</b> or <b>DEPT</b>	Source Destination

Table 239: Creating Endpoints

Endpoint	Procedure
Address or Address Group	Click the add icon (+) and select <b>Address</b> . The Create Addresses page appears. See <a href="#">“Creating Addresses or Address Groups” on page 786</a> .
Site Group	Click the add icon (+) and select <b>Site Group</b> . The Create Site Group page appears. See <a href="#">“Creating Site Groups” on page 226</a> .
Department	Click the add icon (+) and select <b>Department</b> . The Create Department page appears. See <a href="#">“Adding a Department” on page 816</a> .

RELATED DOCUMENTATION

| [SSL Forward Proxy Overview](#) | [691](#)

Editing, Cloning, and Deleting SSL Proxy Policy Intents

IN THIS SECTION

- [Editing SSL Proxy Policy Intents](#) | [704](#)
- [Cloning SSL Proxy Policy Intents](#) | [704](#)
- [Deleting SSL Proxy Policy Intents](#) | [705](#)

You can edit, clone, and delete SSL proxy policy intents from the SSL Proxy Policy page. This topic has the following sections:

## Editing SSL Proxy Policy Intents

To modify the parameters configured for an SSL proxy policy intent:

1. Select **Configuration > SSL Proxy > Policy** in Customer Portal.

The SSL Proxy Policy page appears, displaying the intents associated with the policy.

2. Hover over the SSL proxy policy intent that you want to edit, and then click the edit icon (pencil symbol) that appears on the right side of the intent.

You can now modify the policy intent inline on the SSL Proxy Policy page.

3. Modify the parameters following the guidelines provided in [“Creating SSL Proxy Policy Intents” on page 699](#).

4. Click **Save** to save your changes.

The SSL proxy policy intent is saved and a confirmation message is displayed.

**NOTE:** After a policy intent is modified, you must redeploy the policy to ensure that the changes take effect on the relevant sites. When an SSL proxy policy intent is modified, the **Undeployed** field is incremented by one indicating that intents are pending deployment.

## Cloning SSL Proxy Policy Intents

Cloning enables you to easily create a new SSL proxy policy intent based on an existing one.

To clone an SSL proxy policy intent:

1. Select **Configuration > SSL Proxy > Policy** in Customer Portal.

The **SSL Proxy Policy** page appears, displaying the intents associated with the policy.

2. Hover over the SSL proxy policy intent that you want to clone, and then click the clone icon that appears on the right side of the intent.

You can modify the cloned policy intent inline on the SSL Proxy Policy page.

3. Modify the parameters following the guidelines provided in [“Creating SSL Proxy Policy Intents” on page 699](#).

4. Click **Save** to save your changes.



The SSL proxy policy intent is cloned and a confirmation message is displayed.

**NOTE:** After a policy intent is cloned, you must redeploy the policy to ensure that the changes take effect on the relevant sites. When an SSL proxy policy intent is cloned, the **Undeployed** field is incremented by one indicating that one or more intents are pending deployment.

## Deleting SSL Proxy Policy Intents

To delete one or more SSL proxy policy intents:

1. Select **Configuration > SSL Proxy > Policy** in Customer Portal.

The **SSL Proxy Policy** page appears, displaying the intents associated with the policy.

2. Select the SSL proxy policy intents that you want to delete and then click the delete icon (X).

You are asked to confirm the delete operation.

3. Click **Yes** to delete the selected SSL proxy policy intents.

A confirmation message appears indicating the status of the delete operation.

**NOTE:** After one or more policy intents are deleted, you must redeploy the policy to ensure that the changes take effect on the applicable sites.

## RELATED DOCUMENTATION

| [About the SSL Proxy Policy Page](#) | 697

# Understanding How SSL Proxy Policy Intents Are Applied

## IN THIS SECTION

- [Example 1: Firewall Policy Intent and SSL Proxy Policy Intent Match | 706](#)
- [Example 2: Firewall Policy Intent and SSL Proxy Policy Intent Do Not Match | 707](#)
- [Example 3: Applying SSL Proxy Policy Intents on Internal \(Site-to-Site\) Traffic | 707](#)

When you deploy an SSL proxy policy, SSL proxy profiles are deployed to the applicable sites based on SSL proxy policy intents. The deployments of firewall and SSL policies are related in that firewall policy deployments take into account the last-deployed SSL snapshots and vice versa. Therefore, even if an SSL proxy profile is deployed to the applicable sites, it is *applied* only to traffic to which the firewall policy intent applies.

The decision regarding *which* SSL proxy profile is attached to a firewall policy intent is based on matching criteria between SSL proxy policy and firewall policy intents. In addition, if there is a match between the SSL proxy policy intent and the firewall policy intent, the SSL profile is applied *only* to the policy intents that are common between the firewall and the SSL proxy policies.

The following examples demonstrate the matching logic between SSL proxy policy and firewall policy intents.

### Example 1: Firewall Policy Intent and SSL Proxy Policy Intent Match

[Table 240 on page 706](#) shows an example of a firewall policy intent and an SSL proxy policy intent that match, which means that the SSL proxy profile attaches to the firewall policy intent. In this case, the firewall policy intent has a source and destination of **Any** IP address, which signifies traffic from any IP address from any site to any IP address on the Internet. The SSL proxy policy intent has a source of **Any** IP address, which signifies any IP address *from* any site, and a destination IP address of 198.51.100.0.

Therefore, there is a match between the firewall policy intent and the SSL proxy policy intent and the SSL proxy profile is applied *only* to traffic from any IP address of any site to the IP address 198.51.100.0.

**Table 240: (Example) Match Between Firewall Policy Intent and SSL Proxy Policy Intent**

Type	Source	Destination	Action or Profile
Firewall policy intent	IP address—Any	IP address—Any	Allow
SSL proxy policy intent	IP address—Any	IP address—198.51.100.0	SSL-Profile-1

### Example 2: Firewall Policy Intent and SSL Proxy Policy Intent Do Not Match

Table 241 on page 707 shows an example of a firewall policy intent and an SSL proxy policy intent that do not match, which means that the SSL proxy profiles do not attach.

Although, at first glance, it *appears* that an SSL proxy policy intent with a source and destination IP address **Any** should match a firewall policy intent with a source IP address **Any** and destination department Finance, this is not the case because of what the IP address **Any** signifies in the destination.

For both firewall and SSL proxy policy intents:

- A source IP address value of **Any** signifies any IP address *from* any site.
- A destination IP address value of **Any** signifies traffic going *to* the Internet—that is, to any IP address on the Internet. Traffic *within* sites (internal traffic) is not covered by the destination IP address value of **Any**.

In this example, the firewall policy intent applies to traffic from any IP address (from any site) to the Finance department. However, the SSL proxy policy intent applies to traffic from any IP address (from any site) to any IP address on the Internet. This means that there is no match between the firewall policy intent and the SSL proxy policy intent and the SSL proxy profile does not attach.

**Table 241: (Example) No Match Between Firewall Policy Intent and SSL Proxy Policy Intent**

Type	Source	Destination	Action or Profile
Firewall policy intent	IP address—Any	Department—Finance	Allow
SSL proxy policy intent	IP address—Any	IP address—Any	SSL-Profile-2

### Example 3: Applying SSL Proxy Policy Intents on Internal (Site-to-Site) Traffic

**NOTE:** SSL forward proxy typically might not be used for site-to-site traffic, but this example is provided as an explanation of how an SSL proxy policy intent applies to site-to-site traffic.

Consider a scenario in which you have three sites (A, B, C) and you want to configure an SSL proxy for traffic between the sites. Table 242 on page 708 displays the firewall policy and SSL proxy policy intents that you can use for such a scenario.

Both the firewall policy intent and the SSL proxy policy intent use Site A, Site B, and Site C as the source and destination. Therefore, the firewall policy intent and the SSL proxy policy intent match, and the SSL proxy profile attaches to the firewall policy intent.

**NOTE:** The destination must be Site A, Site B, and Site C because the destination IP address **Any** signifies any IP address on the *Internet*.

**Table 242: (Example) Firewall Policy and SSL Proxy Policy Intents for Site-to-Site Traffic**

Type	Source	Destination	Action or Profile
Firewall Policy Intent	Site A, Site B, Site C	Site A, Site B, Site C	Allow
SSL Proxy Policy Intent	Site A, Site B, Site C	Site A, Site B, Site C	SSL-Profile-3

## RELATED DOCUMENTATION

[SSL Forward Proxy Overview | 691](#)

[Configuring and Deploying an SSL Forward Proxy Policy | 717](#)

## About the SSL Proxy Profiles Page

To access this page, click **Configuration > SSL Proxy > Profiles** in Customer Portal.

Use the SSL Proxy Profiles page to view and manage SSL proxy profiles.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create an SSL proxy profile—See [“Creating SSL Forward Proxy Profiles” on page 710](#).
- Edit, clone, or delete an SSL proxy profile—See [“Editing, Cloning, and Deleting SSL Forward Proxy Profiles” on page 714](#).
- View the details of an SSL proxy profile—Select the SSL proxy profile for which you want to view the details and from the More or right-click menu, select **Detailed View**. The View SSL Proxy Profile Details page appears. [Table 244 on page 709](#) describes the fields on this page.
- Search for SSL proxy profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

## Widget Descriptions

Table 243 on page 709 describes the fields on the SSL Proxy Profiles page.

Table 243: Fields on the SSL Proxy Profiles Page

Field	Description
<b>Name</b>	Name of the SSL proxy profile.
<b>Preferred Cipher</b>	Preferred cipher associated with the profile.
<b>Custom Ciphers</b>	The set of ciphers, if the preferred cipher is <b>Custom</b> , which the SSH server uses to perform encryption and decryption functions.
<b>Exempted Address</b>	Addresses that can are exempted from SSL forward proxy processing.
<b>Description</b>	Description of the SSL proxy profile.
<b>Root Certificate</b>	Root certificate associated with the SSL proxy profile.

Table 244: View SSL Forward Proxy Profile Details Page Fields

Field	Description
<b>General Information</b>	
<b>Name</b>	Name of the SSL proxy profile.
<b>Description</b>	Description of the SSL proxy profile.
<b>Preferred Cipher</b>	Preferred cipher associated with the proxy profile.
<b>Custom Ciphers</b>	The set of ciphers, if the preferred cipher is <b>Custom</b> , which the SSH server uses to perform encryption and decryption functions.
<b>Flow Trace Enabled</b>	Indicates whether flow tracing is enabled or disabled.
<b>Certificates</b>	Displays the root certificate and the trusted certificate authorities associated with the root certificate.
<b>Exempted Address</b>	Addresses that can are exempted from SSL forward proxy processing.
<b>Exempted URL Categories</b>	URL categories that are exempted from SSL forward proxy processing.
<b>Actions</b>	

Table 244: View SSL Forward Proxy Profile Details Page Fields (*continued*)

Field	Description
<b>Ignore</b>	Indicates whether server authentication failure is ignored ( <b>Enabled</b> ) or not ( <b>Disabled</b> ).
<b>Session Resumption</b>	Indicates whether session information is cached to enable session resumption ( <b>Enabled</b> ) or not ( <b>Disabled</b> ).
<b>Logging</b>	If logging is enabled, indicates the type of events that are logged.
<b>Renegotiation</b>	Indicates the type of renegotiation required if there is a change in SSL parameters after a session is created and SSL tunnel transport is established.

## RELATED DOCUMENTATION

[About the SSL Proxy Policy Page | 697](#)

## Creating SSL Forward Proxy Profiles

Use this page to configure SSL forward proxy profiles. SSL proxy is enabled as an application service within a security policy. You specify the traffic that you want the SSL proxy enabled on as match criteria and then specify the SSL proxy profile to be applied to the traffic.

To create an SSL forward proxy profile:

**NOTE:** Ensure that you have a root certificate imported for the tenant before you create an SSL forward proxy profile. You can import SSL certificates (root and trusted) from the Certificates page (**Administration > Certificates**) and associate the certificates with SSL forward proxy profiles.

1. Select **Configuration > SSL Proxy > Profiles** in Customer Portal.

The SSL Proxy Profiles page appears.

2. Click the add icon (+) to create an SSL forward proxy profile.

The Create SSL Proxy Profiles page appears.

3. Complete the configuration according to the guidelines provided in [Table 245 on page 711](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

An SSL forward proxy profile is created. You are returned to the SSL Proxy Profiles page where a confirmation message is displayed.

The SSL forward proxy profile can be used in an SSL proxy policy intent (**Configuration > SSL Proxy > Policy**).

Table 245: Creating SSL Forward Proxy Profile Settings

Setting	Guideline
General Information	
Name	Enter a unique name for the profile, which is string of alphanumeric characters and some special characters (- _). No spaces are allowed and the maximum length is 63 characters.
Description	Enter a description for the profile. The maximum length is 255 characters.
Preferred Cipher	Select a preferred cipher. Preferred ciphers enable you to define an SSL cipher that can be used with acceptable key strength. You can select from the following categories: <ul style="list-style-type: none"><li>• <b>None</b> (Default)—Do not specify a preferred cipher.</li><li>• <b>Medium</b>—Use ciphers with key strength of 128 bits or greater.</li><li>• <b>Strong</b>—Use ciphers with key strength of 168 bits or greater.</li><li>• <b>Weak</b>—Use ciphers with key strength of 40 bits or greater.</li><li>• <b>Custom</b>—Configure a custom cipher suite.</li></ul>

Table 245: Creating SSL Forward Proxy Profile Settings (*continued*)

Setting	Guideline
<b>Custom Ciphers</b>	<p>If you specified <b>Custom</b> as the preferred cipher, you can define a custom cipher list by selecting ciphers.</p> <p>Select the set of ciphers that the SSH server can use to perform encryption and decryption functions.</p> <p>The available custom ciphers are:</p> <ul style="list-style-type: none"> <li>• <code>rsa-with-RC4-128-md5</code>—RSA, 128-bit RC4, MD5 hash</li> <li>• <code>rsa-with-RC4-128-sha</code>—RSA, 128-bit RC4, SHA hash</li> <li>• <code>rsa-with-des-cbc-sha</code>—RSA, DES/CBC, SHA hash</li> <li>• <code>rsa-with-3DES-ede-cbc-sha</code>—RSA, 3DES EDE/CBC, SHA hash</li> <li>• <code>rsa-with-aes-128-cbc-sha</code>—RSA, 128-bit AES/CBC, SHA hash</li> <li>• <code>rsa-with-aes-256-cbc-sha</code>—RSA, 256 bit AES/CBC, SHA hash</li> <li>• <code>rsa-export-with-rc4-40-md5</code>—RSA-export, 40 bit RC4, MD5 hash</li> <li>• <code>rsa-export-with-des40-cbc-sha</code>—RSA-export, 40 bit DES/CBC, SHA hash</li> <li>• <code>rsa-export1024-with-des-cbc-sha</code>—RSA 1024 bit export, DES/CBC, SHA hash</li> <li>• <code>rsa-export1024-with-rc4-56-md5</code>—RSA 1024 bit export, 56 bit RC4, MD5 hash</li> <li>• <code>rsa-export1024-with-rc4-56-sha</code>—RSA 1024 bit export, 56 bit RC4, SHA hash</li> <li>• <code>rsa-with-aes-256-gcm-sha384</code>—RSA, 256 bit AES/GCM, SHA384 hash</li> <li>• <code>rsa-with-aes-256-cbc-sha256</code>—RSA, 256 bit AES/CBC, SHA256 hash</li> <li>• <code>rsa-with-aes-128-gcm-sha256</code>—RSA, 128 bit AES/GCM, SHA256 hash</li> <li>• <code>rsa-with-aes-128-cbc-sha256</code>—RSA, 256 bit AES/CBC, SHA256 hash</li> <li>• <code>ecdhe-rsa-with-aes-256-gcm-sha384</code>—ECDHE, RSA, 256 bit AES/GCM, SHA384 hash</li> <li>• <code>ecdhe-rsa-with-aes-256-cbc-sha384</code>—ECDHE, RSA, 256 bit AES/CBC, SHA384 hash</li> <li>• <code>ecdhe-rsa-with-aes-256-cbc-sha</code>—ECDHE, RSA, 256 bit AES/CBC, SHA hash</li> <li>• <code>ecdhe-rsa-with-aes-3des-ede-cbc-sha</code>—ECDHE, RSA, 3DES, EDE/CBC, SHA hash</li> <li>• <code>ecdhe-rsa-with-aes-128-gcm-sha256</code>—ECDHE, RSA, 128 bit AES/GCM, SHA256 hash</li> <li>• <code>ecdhe-rsa-with-aes-128-cbc-sha256</code>—ECDHE, RSA, 128 bit AES/CBC, SHA256 hash</li> <li>• <code>ecdhe-rsa-with-aes-128-cbc-sha</code>—ECDHE, RSA, 128 bit AES/CBC, SHA hash</li> </ul>
<b>Flow Trace</b>	Select this option to enable flow tracing to enable the troubleshooting of policy-related issues.
<b>Root Certificate</b>	Select or add a root certificate. In a public key infrastructure (PKI) hierarchy, the root certificate authority (CA) is at the top of the trust path.



Table 245: Creating SSL Forward Proxy Profile Settings (*continued*)

Setting	Guideline
<b>Trusted Certificate Authorities</b>	<p>Choose whether you want to add all trusted certificates present on the device (<b>All</b>) or select specific trusted certificates. Before establishing a secure connection, the SSL proxy checks CA certificates to verify signatures on server certificates.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Specifying that all trusted certificates should be used means that all trusted certificates on a particular device (site) will be used during SSL policy deployment.</li> <li>• If you specify that all trusted certificates should be used in an SSL forward proxy profile, you must ensure that at least one trusted certificate is installed on the device.</li> </ul>
<b>Actions</b>	
<b>Exempted Addresses</b>	<p>Exempted addresses include addresses that you want to exempt from undergoing SSL proxy processing.</p> <p>To specify exempted addressees, select one or more addresses in the <b>Available</b> column and click the forward arrow to confirm your selection. The selected addresses are then displayed in the <b>Selected</b> column. These addresses are used to create allowlists that bypass SSL forward proxy processing.</p> <p>Because SSL encryption and decryption are complicated and expensive procedures, network administrators can selectively bypass SSL proxy processing for some sessions.</p> <p>Such sessions typically include connections and transactions with trusted servers or domains with which network administrators are very familiar. There are also legal requirements to exempt financial and banking sites. Such exemptions are achieved by configuring the IP addresses or domain names of the servers under allowlists.</p> <p><b>NOTE:</b> You can also add addresses by clicking <b>Add New Address</b>. The Create Addresses page appears. See <a href="#">“Creating Addresses or Address Groups” on page 786</a>.</p>
<b>Exempted URL Categories</b>	<p>Select the previously defined URL categories to create allowlists that bypass SSL forward proxy processing. The selected URL categories are exempted during SSL inspection.</p>
<b>Server Auth Failure</b>	<p>Select this check box to ignore errors encountered during the server certificate verification process (such as CA signature verification failure, self-signed certificates, and certificate expiry). This check box is cleared by default.</p> <p>We do not recommend this option for authentication, because configuring it results in websites not being authenticated at all. However, you can use this option to effectively identify the root cause for dropped SSL sessions.</p>

Table 245: Creating SSL Forward Proxy Profile Settings (*continued*)

Setting	Guideline
<b>Session Resumption</b>	<p>Select this check box to disable session resumption. This check box is cleared by default.</p> <p>To improve throughput and still maintain an appropriate level of security, SSL session resumption provides a session-caching mechanism so that session information, such as the pre-master secret key and agreed-upon ciphers, can be cached for both the client and server.</p>
<b>Logging</b>	<p>Select one or more events to be logged. You can choose to log all events, warnings, general information, errors, or different sessions (allowed, dropped, or ignored). Logging is disabled by default.</p>
<b>Renegotiation</b>	<p>Select one of the following options if a change in SSL parameters requires renegotiation:</p> <ul style="list-style-type: none"> <li>• <b>None</b> (default)—Indicates that renegotiation is not required.</li> <li>• <b>Allow</b>—Allow secure and nonsecure renegotiation.</li> <li>• <b>Allow-secure</b>—Allow secure negotiation only.</li> <li>• <b>Drop</b>—Drop session on renegotiation request.</li> </ul> <p>After a session is created and SSL tunnel transport has been established, a change in SSL parameters requires renegotiation. SSL forward proxy supports both secure (RFC 5746) and nonsecure (TLS v1.0 and SSL v3) renegotiation.</p> <p>When session resumption is enabled, session renegotiation is useful in the following situations:</p> <ul style="list-style-type: none"> <li>• Cipher keys need to be refreshed after a prolonged SSL session.</li> <li>• Stronger ciphers need to be applied for a more secure connection.</li> </ul>

## RELATED DOCUMENTATION

[About the SSL Proxy Policy Page](#) | 697

## Editing, Cloning, and Deleting SSL Forward Proxy Profiles

### IN THIS SECTION

- [Editing SSL Forward Proxy Profiles](#) | 715
- [Cloning SSL Forward Proxy Profiles](#) | 715
- [Deleting SSL Forward Proxy Profiles](#) | 716

You can edit, clone, and delete SSL forward proxy profiles from the SSL Proxy Profiles page. This topic has the following sections:

## Editing SSL Forward Proxy Profiles

To modify the parameters configured for an SSL forward proxy profile:

**NOTE:** If an SSL forward proxy profile is already used in an SSL proxy policy intent, we recommend that you do not modify the profile name. If you want to create a profile with a new name, clone the existing profile and modify the name.

1. Select **Configuration > SSL Proxy > Profiles**.

The SSL Proxy Profiles page appears, displaying the existing SSL forward proxy profiles.

2. Select the SSL forward proxy profile that you want to edit and click the edit icon (pencil). Alternatively, right-click a profile and select **Edit Profile**.

The Edit SSL Proxy Profile page appears showing the same fields that are presented when you create an SSL forward proxy profile.

3. Modify the SSL forward proxy profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the SSL Proxy Profiles page. A confirmation message appears, indicating the status of the edit operation.

**NOTE:** If an SSL forward proxy profile that is associated with an SSL proxy policy intent is modified, you must redeploy the SSL proxy policy to ensure that the changes take effect on the site.

## Cloning SSL Forward Proxy Profiles

Cloning enables you to easily create a new SSL forward proxy profile based on an existing one.

To clone an SSL forward proxy profile:

1. Select **Configuration > SSL Proxy > Profiles**.

The SSL Proxy Profiles page appears displaying the existing SSL forward proxy profiles.

2. Select the SSL forward proxy profile that you want to clone and select **More > Clone**. Alternatively, right-click a profile and select **Clone**.

The Clone SSL Proxy Profile page appears, showing the same fields that are presented when you create an SSL forward proxy profile.

3. Modify the SSL forward proxy profile fields as needed.

4. Click **OK** to save your changes.

You are taken to the SSL Proxy Profiles page. A confirmation message appears, indicating the status of the clone operation.

## Deleting SSL Forward Proxy Profiles

To delete one or more SSL forward proxy profiles:

**NOTE:** If you try to delete an SSL forward proxy profile that is associated with an SSL proxy policy intent, a message is displayed indicating that the profile cannot be deleted.

1. Select **Configuration > SSL Proxy > Profiles**.

The SSL Proxy Profiles page appears, displaying the existing SSL forward proxy profiles.

2. Select one or more SSL forward proxy profiles that you want to delete and click the delete icon (X). Alternatively, right-click a profile and select **Delete SSL Proxy Profile**.

An alert message appears asking you to confirm the delete operation.

3. Click **Yes** to delete the selected SSL forward proxy profiles.

A confirmation message appears indicating the status of the delete operation.

**NOTE:** If the deleted SSL forward proxy profile is associated with an SSL proxy policy intent, you must redeploy the SSL proxy policy to ensure that the changes take effect on the site.

## RELATED DOCUMENTATION

[Creating SSL Forward Proxy Profiles | 710](#)[About the SSL Proxy Profiles Page | 708](#)

## Configuring and Deploying an SSL Forward Proxy Policy

The following is the workflow for configuring and deploying an intent-based SSL forward proxy policy in CSO:

1. Obtain the root certificate and private key from your trusted certificate authority (CA).
2. Combine the root certificate and private key into a single file.
3. Import the certificate and private key file (on the Import Certificate page); see [“Importing a Certificate” on page 406](#).
4. (Optional) Install the imported certificate on one or more sites (on the Install Certificate page); see [“Installing and Uninstalling Certificates” on page 408](#).
5. By default, Juniper Networks ships trusted certificates for sites that use HTTPS. These certificates are installed automatically by CSO when the site is successfully provisioned.  
  
If you want to use additional trusted certificates, import and install the certificates as explained in [Step 3](#) and [4](#).

6. Create an SSL proxy profile (on the Create SSL Proxy Profiles) page; see [“Creating SSL Forward Proxy Profiles” on page 710](#).

**NOTE:**

- Use the imported root certificate when you create the SSL proxy profile.
- For trusted certificates, specify that all trusted certificates on the device are used (select **All** in the **Trusted Certificate Authorities** field).

7. Create an SSL proxy policy intent that uses the SSL proxy profile that you created (on the SSL Proxy Policy page); see [“Creating SSL Proxy Policy Intents” on page 699](#).
8. Deploy the SSL proxy policy; see [“Deploying Policies” on page 723](#).

**NOTE:**

- Ensure that the root and trusted certificates are imported into CSO before the policy is deployed.
- If you have not installed the certificates referenced in the SSL proxy profile, then they are automatically installed when the SSL proxy policy is deployed.

9. For Internet access from an SRX Series device by using the SSL proxy, ensure that you import the root certificate (obtained in Step 1) into the browsers of the clients accessing the Internet.

**NOTE:** If you do not import the certificate, the traffic does not go through for clients in the LAN segments.

**RELATED DOCUMENTATION**

[SSL Forward Proxy Overview | 691](#)

[Understanding How SSL Proxy Policy Intents Are Applied | 706](#)

# Deploying Policies

## IN THIS CHAPTER

- [Deploying Policies Overview | 719](#)
- [About the Deployments Page | 720](#)
- [Using the Deployment Icon to Deploy Policies | 722](#)
- [Deploying Policies | 723](#)

## Deploying Policies Overview

When you finish creating and verifying your security configurations, you can deploy these configurations and keep them ready to be pushed to the security devices. CSO enables you to push security configurations to the devices all at once by providing a single interface that is intuitive.

The deployment workflow provides the ability to save and publish different services to be updated at a later time to the appropriate firewalls (during downtime). This enables administrators to review their firewall and NAT policies before updating the device. Administrators also save troubleshooting time, avoid errors, and save costs associated with errors. Verify and tweak your security configurations before updating them to the device. This approach helps you keep the configurations ready and update these configurations to the devices during the maintenance window.

When you deploy policies, the process takes into account the priority and precedence values set on the policy and the order of rules on the device. Rules are published in the order of their priority groups.

If you change the priority or precedence of a published policy, the policy must be republished for the changes to take effect. Sometimes, changing priority or precedence in one policy can affect other policies in the same priority group. However, such dependent policies do not need to be republished in order for their changes in priority or precedence to take effect. It will be enough if the policy which is updated is republished.

There are three ways in which you can view and deploy your security configurations:

- Click on the deployment icon present in the CSO Customer Portal banner and use the deployment panel that appears, to deploy policies. See [“Using the Deployment Icon to Deploy Policies” on page 722](#).

**NOTE:** The deployment icon is highlighted in orange if there are undeployed configurations.

- Use the **Deployments** page. See [“About the Deployments Page” on page 720](#).
- Select a firewall, NAT or SD-WAN policy from its respective landing pages and click **Deploy**. For more information, see [“Deploying Policies” on page 723](#).

RELATED DOCUMENTATION

[Using the Deployment Icon to Deploy Policies | 722](#)

[About the Deployments Page | 720](#)

[Deploying Policies | 723](#)

# About the Deployments Page

To access this page, click **Configuration > Deployments**.

Use this page to deploy or schedule the deployment of undeployed SD-WAN, NAT, and firewall policies. Undeployed policies refer to newly created firewall policy rules or NAT policies. These changes do not come into effect until the policies are deployed. The **Deploy** page provides scheduling options for you to deploy these policies.

## Tasks You Can Perform

You can perform the following task from this page:

- Deploy a policy. See [“Deploying Policies” on page 723](#).

## Field Descriptions

[Table 246 on page 721](#) provides guidelines on using the fields on the **Deployments** page.



Table 246: Fields on the Deployments Page

Field	Description
Awaiting Deployment	<p>The <b>Awaiting Deployment</b> tab displays all the policies that are awaiting deployment. The following fields provide more information about the undeployed policies:</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of the policy that needs to be deployed.</li> <li>• <b>Deployment Type</b>—Type of the policy that needs to be deployed.</li> <li>• <b>Summary</b>—Description of the policy.</li> <li>• <b>Owner</b>—The tenant who has created the policy.</li> <li>• <b>Last updated</b>—The last time the policy was updated.</li> </ul> <p>If you want to deploy a policy, select the policy and click <b>Deploy</b>. The policy is deployed and will no longer appear in the <b>Awaiting Deployment</b> tab.</p> <p>If you want to refresh the <b>Awaiting Deployment</b> tab, click the refresh icon provided below the details table.</p>
Scheduled	<p>The <b>Scheduled</b> tab displays all the policies that have been scheduled for deployment on a certain date and time. The following fields provide more information about scheduled policies:</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of the policy.</li> <li>• <b>Deployment Type</b>—Type of the policy that needs to be deployed.</li> <li>• <b>Summary</b>—Description of the policy.</li> <li>• <b>Schedule</b>—The date and time at which the policy is scheduled to be deployed.</li> <li>• <b>Status</b>—Displays whether the scheduled policy has been deployed or not.</li> <li>• <b>Next Run</b>—Date and time when the scheduled deployments will be run.</li> </ul> <p>If you want to deploy a scheduled policy immediately, select the policy and click <b>Deploy Now</b>. If you want to modify the deployment schedule of a policy, select the policy and click the edit icon (pencil icon). The <b>Deploy</b> page appears displaying the current scheduling information. See <a href="#">“Deploying Policies” on page 723</a>, to update the schedule.</p>
History	<p>The <b>History</b> tab displays all the policies that have been deployed. The following fields provide more information about deployed policies:</p> <ul style="list-style-type: none"> <li>• <b>Name</b>—Name of the deployed policy.</li> <li>• <b>Deployment Type</b>—Type of the deployed policy.</li> <li>• <b>Summary</b>—Description of the policy.</li> <li>• <b>Status</b>—Displays the status of the deployed policy.</li> <li>• <b>Job Details</b>—Details of the job.</li> <li>• <b>Deployed On</b>—Date and time the policy was deployed.</li> </ul> <p>If you want to redeploy a policy, select the policy and click <b>Re-Deploy</b>. The policy is redeployed and the <b>History</b> tab details changes to reflect this information.</p>

RELATED DOCUMENTATION

<a href="#">Deploying Policies Overview   719</a>
<a href="#">Using the Deployment Icon to Deploy Policies   722</a>
<a href="#">Deploying Policies   723</a>

## Using the Deployment Icon to Deploy Policies

CSO provides an option of viewing and deploying policies through the deployment panel, that appears when you click on the deployment icon. The deployment icon is highlighted in orange if there are undeployed policies.

To deploy policies through the deployment panel:

1. Click the deployment icon on the Customer Portal banner.  
The deployment panel appears. For information about the panel, see [Table 247 on page 722](#).
2. Hover over the policy you want to deploy. The **Deploy** option appears on the right side of the policy.
3. Click **Deploy** to deploy the policy. For more information, see [“Deploying Policies” on page 723](#).

[Table 247 on page 722](#) provides guidelines on using the fields on the deployment panel.

Table 247: Fields on the Deployment Panel

Field	Description
Awaiting Deployment	The <b>Awaiting Deployment</b> tab displays all the policies that are awaiting deployment.
In Progress	The <b>In Progress</b> tab displays all the policies that are currently being deployed.

RELATED DOCUMENTATION

<a href="#">Deploying Policies Overview   719</a>
<a href="#">About the Deployments Page   720</a>
<a href="#">Deploying Policies   723</a>

## Deploying Policies

You can deploy firewall, NAT, SD-WAN, and SSL proxy policies added by various services immediately or schedule the deployment for a later date and time.

To configure a deployment:

1. You can initiate the deployment of a policy in the following ways:
  - Select a policy from the **Awaiting Deployment** tab on the **Deployments** page and click **Deploy**.
  - Select a policy from the **Scheduled** tab on the **Deployments** page and click **Deploy**.
  - Select a policy from the **Scheduled** tab on the **History** page and click **Re-Deploy**.
  - Use the deployment icon on the Customer Portal banner. For more information about deploying policies using the deployment icon, see [“Using the Deployment Icon to Deploy Policies” on page 722](#).

**NOTE:** The deployment icon is highlighted in orange if there are undeployed policies.

- Select **Configuration > Firewall > Firewall Policy**. The **Firewall Policy** page appears, displaying the intents associated with the policy. Click **Deploy**.
  - Select **Configuration > NAT > NAT Policies** and select the NAT policy you want to deploy. Click **Deploy**.
  - Select **Configuration > SSL Proxy > Policy**. The **SSL Proxy Policy** page appears, displaying the intents associated with the policy. Click **Deploy**.
  - Select an SD-WAN policy intent on the **SD-WAN Policy** page and click **Deploy**.
2. The **Deploy** page appears. In **Choose Deployment Time** options, select **Run Now** to deploy the policy immediately.

Select **Schedule at a later time** to deploy the policy at a later date and time. For scheduling options, see [Table 248 on page 723](#).

3. Click **Deploy**.

[Table 248 on page 723](#) provides guidelines on using the fields on the **Deploy** page.

**Table 248: Fields on the Deploy Page**

Field	Description
<b>Summary</b>	
Policies	The summary of the policy that is to be deployed.

Table 248: Fields on the Deploy Page *(continued)*

Field	Description
Choose Deployment Time	
Type	<ul style="list-style-type: none"><li>• Select <b>Run now</b> if you want to deploy the policy immediately.</li><li>• Select <b>Schedule at a later time</b> if you want to schedule the deployment for a later date and time.<ul style="list-style-type: none"><li>• Click on the calendar icon to choose the date for the deployment in MM/DD/YYYY format.</li><li>• Enter the time for the deployment in HH:MM:SS format. You can choose the 12 hour (AM or PM) or 24 hour format to specify the time by selecting the option from the drop-down list provided beside the time field.</li></ul></li></ul>

RELATED DOCUMENTATION

<a href="#">Deploying Policies Overview   719</a>
<a href="#">Using the Deployment Icon to Deploy Policies   722</a>
<a href="#">About the Deployments Page   720</a>

# Configuring Policies for SD-LAN

## IN THIS CHAPTER

- [SD-LAN Profiles Overview | 726](#)
- [SD-LAN Profiles Workflow | 729](#)
- [About the Port Profiles Page | 730](#)
- [Add Port Profiles | 731](#)
- [Edit, Clone, and Delete Port Profiles | 736](#)
- [About the Authentication Profiles Page | 739](#)
- [Add Authentication Profiles | 741](#)
- [Edit, Clone, and Delete an Authentication Profile | 747](#)
- [About the Access Profiles Page | 749](#)
- [Add Access Profiles | 750](#)
- [Edit, Clone, and Delete Access Profiles | 753](#)
- [About the RADIUS Server Profiles Page | 756](#)
- [Add RADIUS Server Profiles | 757](#)
- [Edit, Clone, and Delete RADIUS Server Profiles | 759](#)
- [Firewall Filters Overview | 762](#)
- [Configure a Firewall Filter for an EX Series Switch | 763](#)
- [About the EX Firewall Filters Page | 763](#)
- [Add Firewall Filters | 764](#)
- [Delete Firewall Filters | 765](#)
- [About the < Firewall-Filters-Name> / Terms Page | 766](#)
- [Add Terms to Firewall Filters | 767](#)
- [Edit, Clone, and Delete Terms | 770](#)
- [Deploy or Redeploy a Port Profile | 772](#)
- [Enable Ports | 773](#)
- [Disable Ports | 774](#)
- [Edit Configuration of Ports | 774](#)

## SD-LAN Profiles Overview

SD-LAN profiles are templates for configuring port parameters such as flow control, MTU, link mode, and port speed, access control, user authentication, RADIUS server settings, and firewall filters. A user with tenant administrator privileges can add the following profiles to CSO and deploy them on the switch to configure the switch and the switch ports:

- **Authentication profiles:** Authentication profiles are used to implement network access control (NAC).

An authentication profile defines:

- the authentication method
- fallback options
- other settings such as number of retries, maximum number of authentication requests that can be allowed for a supplicant, authentication server timeout, and so on, related to the communication between the switch and the supplicant (a user or device such as printer).

You can reference an authentication profile directly in a port profile or assign the authentication profile to a port when you configure the port manually.

See [“Add Authentication Profiles” on page 741](#) for details.

- **Firewall filter:** Firewall filters are used to deny or permit network access to supplicants based on the filter terms.

You can reference an egress firewall filter and an ingress firewall filter in a port profile. You can also assign the firewall filters to a port when you configure the port manually.


See *Add Firewall Filters and Terms* for details.

- **Port profiles:** Port profiles are used to define the behavior of a port. You can use port profiles to simultaneously provision multiple ports with the same set of attributes. A port profile includes the following:

- Authentication profile (Optional)
- Firewall filters (Optional)
- Link settings
- Storm control settings
- Power over Ethernet (PoE) settings
- Port security settings

A port profile has an authentication profile and one ingress firewall filter and one egress firewall filter assigned to it. [Figure 24 on page 727](#) shows the relationship between an authentication profile, firewall filters, and a port profile.

Figure 24: Relationship Between a Port Profile, an Authentication Profile, and Firewall Filters

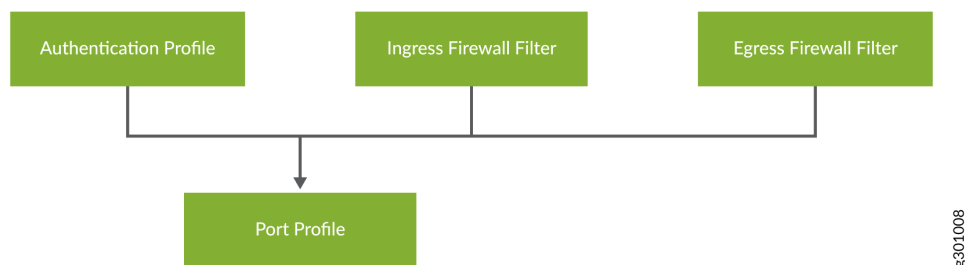

See [“Add Port Profiles” on page 731](#) for details about adding a port profile to CSO.


- **RADIUS server profiles:** RADIUS server profiles are used to define the RADIUS server for authentication and accounting. You define the RADIUS server IP address, password, authorization ports, accounting ports, retry counts, and server timeout in this profile.

A RADIUS server profile is referenced by an access profile and deployed on the switch when the access profile is deployed. See [“Add RADIUS Server Profiles” on page 757](#) for information about adding RADIUS server profiles.

- **Access profiles:** Access profiles are used to define the list of RADIUS servers to be used for authentication and accounting. An access profile has one or more RADIUS server profiles assigned to it.

[Figure 25 on page 727](#) shows the relationship between the a RADIUS profile and an access profile.

Figure 25: Relationship Between RADIUS Profiles and an Access Profile

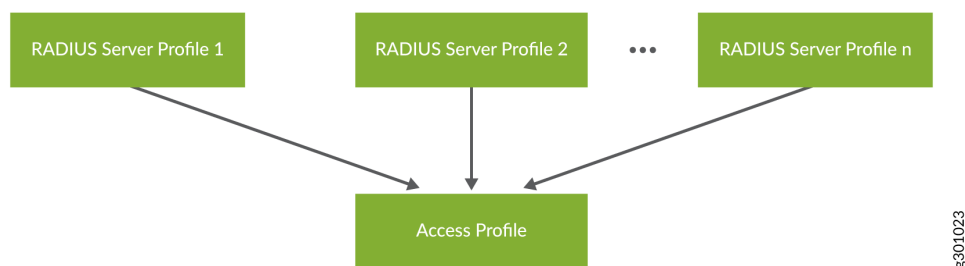


An access profile, deployed on a switch, is referenced by an authentication profile when 802.1x authentication is configured on the switch port.

See [“Add Access Profiles” on page 750](#) for details.

## Life Cycle of a Port Profile

[Figure 26 on page 728](#) shows the life cycle of a port profile.

Figure 26: Life Cycle of a Port Profile

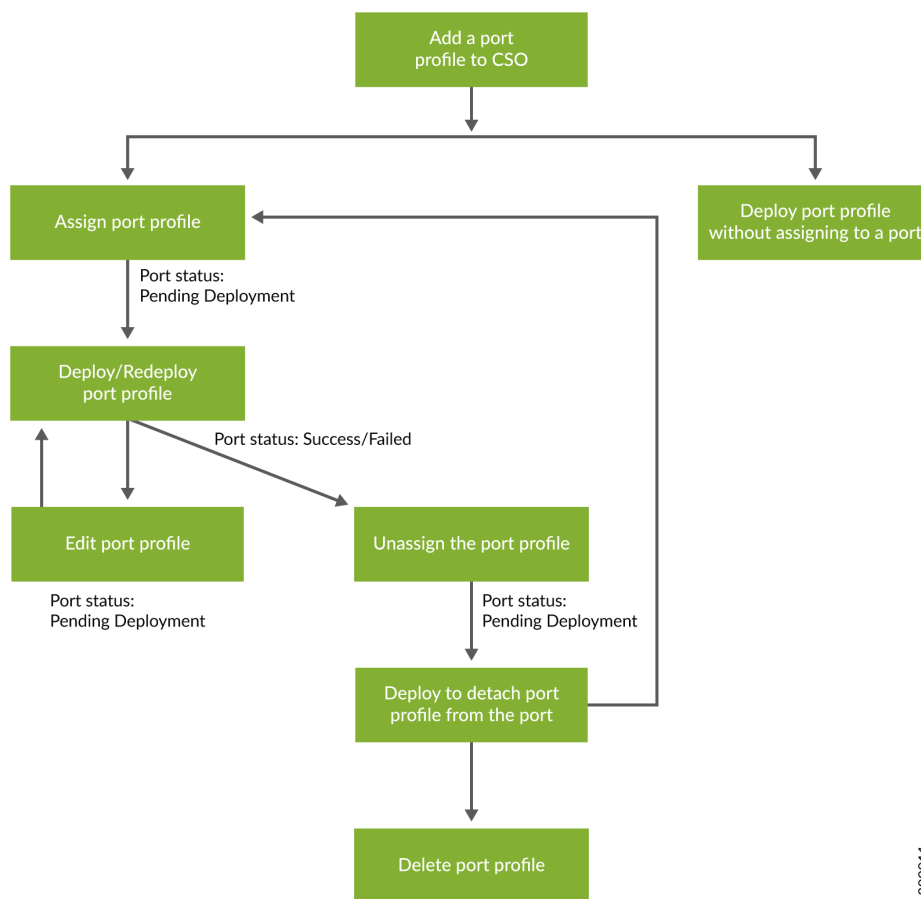

8300911

The life cycle of a port profile is as follows:

1. Add a port profile to CSO.
2. Assign the port profile to one or more ports on a switch.

When you assign the port profile, the deployment status of the port is set to *Pending Deployment* indicating that the profile is only assigned to the port.

3. Deploy the port profile on one or more ports.

During the deployment, that is, when the configuration is being committed on the port, the deployment status is changed to *In Progress*. If the deployment job completes successfully, the deployment status of the port is set to *Success*; otherwise, the deployment status is set to *Failed*.

4. Edit the port profile.

When you edit the port profile, an authentication profile or a firewall filter associated with the port profile, the deployment status of the port profile is set to *Pending Deployment*.

5. Redeploy the port profile to ensure the changes are reflected in the port configuration.




During the redeployment, the deployment status of the port is changed to *In Progress*. If the deployment job completes successfully, the deployment status of the port is set to *Success*; otherwise, the deployment status is set to *Failed*.

## SD-LAN Profiles Workflow

This section describes the workflow for SD-LAN profiles.

Figure 27 on page 729 depicts the workflow for adding SD-LAN profiles to CSO and assigning them to the EX Series switches.

Figure 27: Add Profiles Workflow

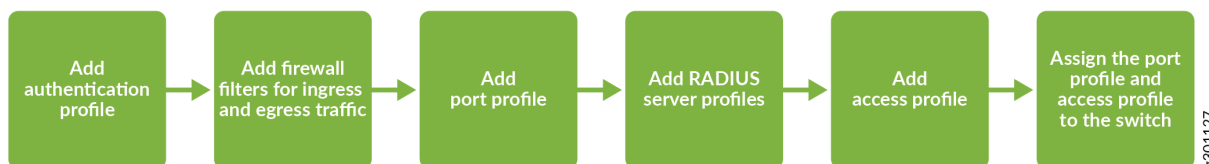

To use profiles to configure EX Series switches, do the following:

1. Add an authentication profile; see [“Add Authentication Profiles” on page 741](#).
2. Add firewall filters for egress and ingress traffic; see [“Add Firewall Filters” on page 764](#).
3. Add a port profile by assigning the authentication profile and the firewall filters; see [“Add Port Profiles” on page 731](#).
4. Add RADIUS Server profiles; see [“Add RADIUS Server Profiles” on page 757](#).
5. Add an access profile by using the RADIUS server profiles; see [“Add Access Profiles” on page 750](#).
6. Do one of the following:
  - If you are adding a site with a switch, assign the port profile and the access profile while adding the site; see [“Add an On-Premise Spoke Site with LAN Capability” on page 141](#).
  - If the switch is already onboarded to CSO, edit the switch configuration to add the port profile and the access profile; see [Configure an EX Series Switch by Using Profiles](#).

## About the Port Profiles Page

To access this page, select **Configuration > SD-LAN > Port Profiles** in Customer Portal.

Use this page to view, edit, clone, and delete port profiles. A port profile authenticates supplicants (users and devices such as a printer) trying to access network resources and configure parameters such as flow control, link mode, storm control, MAC limit, and so on, on the switch ports. If you include firewall filters for egress and ingress traffic in the port profile, you can permit or deny access to network resources granularly based on source and destination IP addresses, MAC addresses, ports, and protocols in the packets.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a port profile—See [“Add Port Profiles” on page 731](#).
- Edit, clone, or delete a port profile—See [“Edit, Clone, and Delete Port Profiles” on page 736](#).
- Clear the selected port profiles—Click **Clear All Selections** to clear any port profiles that you have selected.
- Search for port profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 249 on page 730](#) describes the fields on the Port Profiles page.

**Table 249: Fields on the Port Profiles Page**

Field	Description
Profile Name	Name of the port profile.
Description	Description of the port profile.
Port Mode	Operating mode defined in the profile for a port—Trunk, Access.
Port Authentication Profile	Authentication profile assigned on the port.
Firewall Filter (Ingress)	Firewall filter assigned for the ingress traffic.
Firewall Filter (Egress)	Firewall filter assigned for the egress traffic.

RELATED DOCUMENTATION


<a href="#">Add Authentication Profiles   741</a>
<a href="#">Add Firewall Filters   764</a>
<a href="#">Deploy or Redeploy a Port Profile   275</a>

Add Port Profiles

Use the Add Port Profiles page in Customer Portal to add port profiles. You add a port profile by assigning an authentication profile, a firewall filter for the ingress traffic, a firewall filter for the egress traffic, and configuring port parameters.

To add a port profile:

1. Select **Configuration > SD-LAN > Port Profiles** in Customer Portal.  
The Port Profiles page appears.
2. Click the add icon (+) to add a new port profile.  
The Add Port Profile wizard appears. The wizard provides step-by-step procedures to add the port profile.
3. Complete the configuration according to the guidelines provided in [Table 250 on page 731](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.  
The port profile is added to CSO. You are returned to the Port Profiles page where a confirmation message is displayed.

After you add a port profile, you can deploy the port profile on one or more ports of the switch. See [“Deploy or Redeploy a Port Profile” on page 275](#).

Table 250: Port Profile Settings

Setting	Guideline
<i>General</i>	

Table 250: Port Profile Settings (*continued*)

Setting	Guideline
<b>Profile Name</b>	Enter a unique name for the port profile which can contain only alphanumeric characters and hyphen (-); 32-characters maximum.
<b>Profile Description</b>	Enter a description for the port profile.
<i>Basic Settings</i>	
<b>Port Mode</b>	<p>Select whether the port should be configured as a trunk port or an access port:</p> <ul style="list-style-type: none"> <li>• Trunk—The port can be used to connect with other switches or routers.</li> <li>• Access—The port can be used to connect to access points and end-user devices such as laptops or printer.</li> </ul>
<i>Port Authentication Settings</i>	
<b>Authentication Profile</b>	<p>Select an authentication profile to be used in the port profile.</p> <p><b>NOTE:</b> An authentication profile defines the authentication method and other parameters related to communication between the switch and the supplicant. You must configure the authentication profile before referencing it in the port profile.</p> <p>To add an authentication profile, see <a href="#">“Add Authentication Profiles” on page 741</a>.</p> <p>If you select None (default), no authentication profile is associated with the port profile. You can use this option when you do not want 802.1x authentication to be configured on a port.</p>
<i>Firewall Filter</i>	
<b>Firewall Filter Profile (Ingress)</b>	<p>Select a firewall filter profile to be used for the ingress traffic.</p> <p>You must configure the firewall filter before referencing it in the port profile. .</p>
<b>Firewall Filter Profile (Egress)</b>	<p>Select a firewall filter profile to be used for the egress traffic.</p> <p>You must configure the firewall filter before referencing it in the port profile. .</p>
<i>Advanced Settings</i>	

Table 250: Port Profile Settings (*continued*)

Setting	Guideline
<b>Link Settings</b>	<p>Click the toggle button to enable or disable (default) link settings on a port.</p> <p>If you disable this setting, the port uses the default configurations for auto negotiation, flow control, MTU, speed, and link mode.</p> <p>Enable this option to modify the default configuration for auto negotiation, flow control, MTU, and so on.</p>
<b>Auto Negotiation</b>	<p>Click the toggle button to enable (default) or disable autonegotiation on the port.</p> <p>Auto negotiation enables a port to determine the data transmission speed and the duplex mode based on the speed and duplex mode of the peer port.</p> <p>If you have enabled autonegotiation and also configured link mode and speed, the ports use the configured values for link mode and speed. If you disable autonegotiation, you must configure values for link mode and speed.</p>
<b>Flow Control</b>	<p>Click the toggle button to enable (default) or disable flow control on a port.</p> <p>Flow control enables a port to regulate network traffic so that there is no data loss during congestion. If you disable flow control, you lose data during congestion.</p>
<b>MTU</b>	<p>Enter the size (in bytes) of the maximum transmission unit (MTU) that can be transmitted through a port.</p> <p>Range: 256 to 9,216 bytes</p> <p>Default: 1,514 bytes</p>
<b>Speed</b>	<p>Select the maximum transmission speed of a port (in GB or MB).</p> <p>If you enable auto-negotiation and select a transmission speed, the port uses the value configured here for transmission speed.</p> <p>Default: 1G</p>

Table 250: Port Profile Settings (*continued*)

Setting	Guideline
<b>Link Mode</b>	<p>Select the mode of the links configured on a port:</p> <ul style="list-style-type: none"> <li>• Automatic (default) —The port automatically selects the duplex mode based on the duplex mode of the peer port.</li> <li>• Full Duplex—The port allows data to be sent and received at the same time over a link.</li> <li>• Half Duplex—The port allows data to be either only received or sent at a given time over a link.</li> </ul> <p>If you enable autonegotiation and also select a value for link mode, the port considers the value configured here for the operating mode of the links established on the port.</p>
<b>Storm Control Settings</b>	<p>Click the toggle button to enable or disable (default) storm control settings on a port.</p> <p>If you disable this setting, the port uses the default value for storm control.</p> <p>Enable this option to modify the default storm control value.</p>
<b>Storm Control</b>	<p>Enter the bandwidth (in kbps) or the percentage of the bandwidth, beyond which a port can drop packets.</p> <p>Also, select whether the value you enter indicates the percentage or the bandwidth, from the drop-down list. The default unit is percentage.</p> <p>Range: For bandwidth, 100 through 100,000,000 kbps. For percentage, 1 through 100.</p> <p>Default: 80 percent.</p>
<b>Power over Ethernet (PoE) Settings</b>	<p>Click the toggle button to enable or disable (default) PoE on a port.</p> <p>If you disable this setting, the default PoE setting is configured on a port when you deploy the profile on the port.</p> <p>Enable this option to modify the default PoE settings.</p>
<b>Maximum Power</b>	<p>Enter the maximum power (in Watts) that a port can provide.</p> <p>Range: 1 through 90 Watts.</p> <p>Default: 30 Watts.</p>

Table 250: Port Profile Settings (*continued*)

Setting	Guideline
<b>Priority</b>	<p>Select a priority (Low or High) for a port to be used as a source for powering a device connected to the port.</p> <p>If power is insufficient for all PoE ports, the PoE power to low-priority ports is shut down before power to high-priority ports is shut down. Among ports that have the same assigned priority, the power priority is determined by port number, with lower-numbered ports having higher priority.</p> <p>Default: Low</p>
<b>Port Security Settings</b>	<p>Click the toggle button to enable or disable (default) security on a port.</p> <p>If you disable this setting, the default port security is configured on a port when you deploy the profile on the port.</p> <p>Enable this option to modify the default settings.</p>
<b>Trust DHCP</b>	<p>Click the toggle button to enable (default) or disable trusting traffic from a DHCP server.</p> <p>If you disable this option, the port drops packets sent to and received from a DHCP server.</p>
<b>MAC Limit</b>	<p>Click the toggle button to enable or disable (default) setting the maximum number of MAC addresses that can be stored in the MAC table for a port.</p> <p>If you enable MAC Limit, you must configure a value for MAC limit and MAC limit action.</p> <p>If you disable this option, you cannot limit the MAC addresses that are learnt within a VLAN and, therefore, enforce security against the flooding of the Ethernet switching table.</p>
<b>MAC Limit</b>	<p>Enter the maximum number of MAC addresses that a switch can store in the MAC table for a port.</p> <p>Range: 1 through 10,000.</p> <p>Default: 1.</p>

Table 250: Port Profile Settings (continued)

Setting	Guideline
MAC Limit Action	<p>Select the action that a port must take when the number of entries in the port MAC table exceeds the MAC limit value:</p> <ul style="list-style-type: none"><li>• Drop (Default)—Drop the packet, but do not generate an alarm</li><li>• Shutdown—Disable the port and generate an alarm, an SNMP trap, or a system log entry.</li><li>• Drop and Log—Drop the packet and generate an alarm, an SNMP trap, or system log entry.</li></ul>

RELATED DOCUMENTATION

| [Add Access Profiles](#) | 750

**Edit, Clone, and Delete Port Profiles**

IN THIS SECTION

- [Edit a Port Profile](#) | 737
- [Clone a Port Profile](#) | 737
- [Delete a Port Profile](#) | 738

You can edit, clone, and delete port profiles from the Port Profiles page.



## Edit a Port Profile

### NOTE:

- When you edit a port profile that is already deployed on a port, you must redeploy the profile on the port for the changes to take effect.
- When you edit an authentication profile or firewall filter that is used in a port profile and if the port profile is deployed on one or more ports, you must redeploy the port profile on the ports for the changes in the authentication profile and firewall filter to take effect.

To edit a port profile:

1. Select **Configuration > SD-LAN > Port Profiles** in Customer Portal.

The Port Profiles page appears, displaying the configured port profiles.

2. Select the port profile that you want to edit and click the **edit** icon (pencil).

The Edit Port Profiles page appears, displaying the same fields that were presented when you added a port profile.

3. Modify the port profile fields as needed. Refer to [Table 250 on page 731](#) topic to modify the fields.

**NOTE:** You cannot edit the port profile name.

4. Click **OK** to save your changes.

You are taken to the Port Profiles page. A confirmation message appears indicating the status of the edit operation.

## Clone a Port Profile

To clone a port profile:

1. Select **Configuration > SD-LAN > Port Profiles** in Customer Portal.

The Port Profiles page appears, displaying the configured port profiles.

2. Select the port profile that you want to clone and click **Clone**.

The Clone Port Profile page appears. A default name appears for the cloned port profile as *CLONE-Port Profile Name*.

3. (Optional) Edit the name for the cloned profile.

The name for the port profile should be unique and contain only alphanumeric characters and hyphen (-); 32-characters maximum.

4. Click **OK** to create a new profile.

The Port Profiles page appears. A confirmation message appears indicating the status of the clone operation.

5. After you clone the profile, select the profile and click **Edit** to modify the parameters as needed. See [Table 250 on page 731](#) to modify the parameters.

After you clone and modify the port profile, you can deploy the profile on the switch ports. See [“Deploy or Redeploy a Port Profile” on page 275](#) for details.

## Delete a Port Profile

**NOTE:** You cannot delete a port profile when the port profile is deployed on one or more ports. To delete the port profile, first disassociate the port profile from all the ports on which it is deployed and then attempt to delete the profile; see [“Dissociate a Profile from a Port” on page 281](#) for details.

To delete a port profile:

1. Select **Configuration > SD-LAN > Port Profiles** in Customer Portal.

The Port Profiles page appears, displaying the configured port profiles.

2. Select the port profile that you want to delete and click the **Delete** icon (dustbin).

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected port profile.

After the profile is deleted successfully, a message indicating that the port profile is deleted appears on top of the page and the port profile is removed from Port Profiles page.

## RELATED DOCUMENTATION

[About the Port Profiles Page | 730](#)

## About the Authentication Profiles Page

To access this page, select **Configuration > SD-LAN > Authentication Profiles** in Customer Portal.

Use this page to view, clone, edit, and delete authentication profiles. An authentication profile enables you to define parameters to authenticate a user. You can define the following parameters in an authentication profile—the authentication method, fallback options, and other settings (for example, number of retries, maximum number of requests that can be allowed, and authentication server timeout) related to the communication between the switch and a supplicant.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add an authentication profile—See [“Add Authentication Profiles” on page 741](#).
- Edit, clone, or delete an authentication profile—See [“Edit, Clone, and Delete an Authentication Profile” on page 747](#).
- Clear the selected authentication profiles—Click **Clear All Selections** to clear any authentication profiles that you might have selected.
- Search for authentication profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 251 on page 739](#) describes the fields on the Authentication Profiles page.

**Table 251: Authentication Profiles Page Fields**

Field	Description
Profile Name	Name of the authentication profile.
Description	A description about the authentication profile.

Table 251: Authentication Profiles Page Fields (*continued*)

Field	Description
Supplicant Mode	<p>The mode of authenticating supplicants:</p> <ul style="list-style-type: none"> <li>• Single—Authenticates only the first supplicant in a LAN. All other supplicants in the LAN that connect later to the port are allowed access without any further authentication, based on the first supplicant's authentication.</li> <li>• Single Secure—Allows only one supplicant in a LAN to connect to the port. No other supplicant in the LAN is allowed to connect until the first supplicant logs out.</li> <li>• Multiple—Allows multiple supplicants in a LAN to connect to the port. Each supplicant is authenticated individually.</li> </ul>
Primary Authentication Method	<p>The primary method for authenticating a supplicant:</p> <ul style="list-style-type: none"> <li>• dot1x—IEEE 802.1X standard for port-based network access control (PBNAC); protects Ethernet LANs from unauthorized user access. The dot1x method blocks all traffic to and from a supplicant at the port until the supplicant's credentials are presented and matched on the authentication server (a RADIUS server). When the supplicant is authenticated, the switch allows traffic from and to the supplicant to transmit through it.</li> <li>• MAC RADIUS—Used for network devices (such as a printer or a camera) connected in a LAN that needs to access network resources, but do not support the 802.1X standard. When a switch detects a supplicant that is not 802.1X-enabled on its port, the switch transmits the MAC address of the supplicant to the authentication server. The server then tries to match the MAC address with a list of MAC addresses in its database. If the MAC address matches an address in the list, the supplicant is authenticated.</li> </ul>
Secondary Authentication Method	<p>The secondary method for authenticating a supplicant when the switch is unable to validate a supplicant by using the primary method :</p> <ul style="list-style-type: none"> <li>• None</li> <li>• dot1x, when MAC RADIUS is set as the primary authentication method.</li> <li>• MAC RADIUS, when the dot1x method is set as the primary authentication method.</li> </ul>

Table 251: Authentication Profiles Page Fields (*continued*)

Field	Description
Server Fail	<p>The action that the switch takes when the RADIUS servers are unavailable for authenticating a supplicant:</p> <ul style="list-style-type: none"> <li>• None—No action is taken. If network access is already granted to a supplicant, the access is maintained.</li> <li>• Deny—Network access is denied to the supplicant.</li> <li>• Permit—Network access is permitted to the supplicant. If a RADIUS server timeout occurs during reauthentication, traffic is allowed from and to the supplicant as the supplicant is already authenticated.</li> <li>• Use Cache—Recognizes already connected supplicants and reauthenticates the supplicant when there is a RADIUS server timeout (new supplicants are denied access):</li> <li>• VLAN ID—Moves a supplicant to a specified VLAN (server fail VLAN) if a RADIUS server timeout occurs:</li> </ul>
Server Reject	<p>The action the switch takes when the switch is unable to validate a supplicant because of incorrect credentials provided by the supplicant:</p> <ul style="list-style-type: none"> <li>• None—No action is taken and the supplicant is denied network access.</li> <li>• VLAN ID—Moves the supplicant to a specified VLAN (server reject VLAN) with limited network access (Internet only)</li> </ul>
Guest	<p>The action the switch takes for temporary users such as guests or contractors:</p> <ul style="list-style-type: none"> <li>• None—No action is taken and the supplicant is denied network access.</li> <li>• VLAN ID—Moves the supplicants to a specified VLAN (guest VLAN) with limited network access (Internet only)</li> </ul>

## RELATED DOCUMENTATION

[SD-LAN Profiles Overview](#) | 726

[Add Port Profiles](#) | 731

[Add Access Profiles](#) | 750

## Add Authentication Profiles

Use the Add Authentication Profiles page in Customer Portal to add authentication profiles.

Adding an authentication profile involves the following steps:

1. Define the primary and secondary methods for authenticating a supplicant—802.1x (dot1x), MAC RADIUS.
2. Define the action that the port must take when the RADIUS server is not reachable or a user is not authenticated (fallback options).
3. Define the authentication process parameters, such as the number of times that the switch can request for user authentication, whether a user must be reauthenticated at regular intervals, the number of times a switch can attempt to contact the RADIUS server for authenticating a user, and so on.

To add an authentication profile:

1. Select **Configuration > SD-LAN > Authentication Profiles** in Customer Portal.

The Authentication Profiles page appears, displaying the existing authentication profiles.

2. Click the **Add** icon (+).

The Add Authentication Profiles wizard appears.

3. Complete the configuration according to the guidelines provided in [Table 252 on page 742](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.

An authentication profile is added. You are returned to the Authentication Profiles page where a confirmation message is displayed.

After you add an authentication profile, you can assign it to a port profile. See [“Add Port Profiles” on page 731](#).

**Table 252: Fields on the Add Authentication Profile Page**

Setting	Guideline
<i>General</i>	
<b>Profile Name</b>	Enter a unique name for the authentication profile, which can only contain alphanumeric characters and hyphen (-); 15-character maximum.
<b>Profile Description</b>	Enter a description for the authentication profile.

Table 252: Fields on the Add Authentication Profile Page (*continued*)

Setting	Guideline
<b>Supplicant Mode</b>	<p>Select a mode for authenticating the supplicant:</p> <ul style="list-style-type: none"> <li>• <b>Single</b>—Authenticates only the first supplicant in a LAN. All other supplicants in the LAN that connect to the port later are allowed or denied access without any authentication, based on the first supplicant's authentication.</li> <li>• <b>Single Secure</b>—Allows only one supplicant in a LAN to connect to the port. No other supplicant in the LAN is allowed to connect until the first supplicant logs out.</li> <li>• <b>Multiple</b>—Allows multiple supplicants in a LAN to connect to the port. Each supplicant is authenticated individually.</li> </ul>
<i>Authentication Method</i>	
<b>Primary Method</b>	<p>Select the primary method of authenticating a supplicant:</p> <ul style="list-style-type: none"> <li>• <b>dot1x</b>—IEEE 802.1X standard for port-based network access control (PBNA); protects Ethernet LANs from unauthorized user access. The 802.1x method blocks all traffic to and from a supplicant at the port until the supplicant's credentials are presented and matched on the authentication server (a RADIUS server). When the supplicant is authenticated, the switch allows traffic from and to the supplicant to transmit through it.</li> <li>• <b>MAC RADIUS</b>—Used for supplicants, connected in a LAN that need to access network resources, such as printer or camera, but do not support the 802.1X standard. When a switch detects a supplicant that is not 802.1X-enabled, the switch transmits the MAC address of the supplicant to the authentication server. The server then tries to match the MAC address with a list of MAC addresses in its database. If the MAC address matches an address in the list, the supplicant is authenticated.</li> </ul>
<b>Secondary Method</b>	<p>The secondary method for authenticating a supplicant when the switch is unable to validate a supplicant by using the primary method:</p> <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>dot1x</b>, when MAC RADIUS is selected as the primary authentication method.</li> <li>• <b>MAC RADIUS</b>, when dot1x is selected as the primary authentication method.</li> </ul>

*Fallback Options*

You can configure authentication fallback options to specify how supplicants connected to a switch are supported if the RADIUS authentication server becomes unavailable or sends a RADIUS access-reject message.

Table 252: Fields on the Add Authentication Profile Page (*continued*)

Setting	Guideline
<b>Server Fail</b>	<p>Select an action that the switch applies to supplicants when the authentication servers are not reachable. The switch can accept or deny access to supplicants or maintain the access already granted to supplicants before the RADIUS timeout occurred. You can also configure the switch to move the supplicants to a specific VLAN.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No action is taken. If network access is already granted to a supplicant, the access is maintained.</li> <li>• <b>Deny</b>—Network access is denied to the supplicant.</li> <li>• <b>Permit</b>—Network access is permitted to the supplicant. If a RADIUS server timeout occurs during reauthentication, traffic is allowed from and to the supplicant because the supplicant is already authenticated.</li> <li>• <b>Use Cache</b>—Recognizes already connected supplicants and reauthenticates the supplicants when there is a RADIUS timeout; new supplicants are denied access.</li> <li>• <b>VLAN ID</b>—Moves a supplicant to a specified VLAN (server-fail VLAN) if a RADIUS server timeout occurs: If you select this option, enter the VLAN ID in the text box that appears below the Server Fail field.</li> </ul> <p><b>NOTE:</b> The server-fail VLAN should be already configured on the site containing the switch.</p>
<b>VLAN ID</b>	If you select VLAN ID for the Server Fail option, enter the VLAN ID of the VLAN to which the supplicant must be assigned.
<b>Server Reject</b>	<p>The action the switch takes when the switch is unable to validate a supplicant because of incorrect credentials provided by the supplicant:</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No action is taken and the supplicant is denied network access.</li> <li>• <b>VLAN ID</b>—Moves the supplicant to a specified VLAN (server-reject VLAN) with limited network access (Internet only). The server-reject VLAN is already configured on the switch.</li> </ul> <p>If you select this option, enter the VLAN ID in the text box that appears below the Server Reject field.</p> <p><b>NOTE:</b> The server-reject VLAN should be already configured on the site containing the switch.</p>
<b>VLAN ID</b>	If you select VLAN ID for the Server Reject option, enter the VLAN ID to which the supplicant must be assigned.



Table 252: Fields on the Add Authentication Profile Page (*continued*)

Setting	Guideline
<b>Guest</b>	<p>Select an action to be taken for a guest (corporate guest or supplicants that are not 802.1x enabled):.</p> <ul style="list-style-type: none"> <li>• <b>None</b>—No action is taken and the supplicant is denied network access.</li> <li>• <b>VLAN ID</b>—Move the supplicants to a specified VLAN (guest VLAN) with limited network access (Internet only).</li> </ul> <p>If you select this option, enter the VLAN ID of the guest VLAN in the text box that appears below this field.</p> <p><b>NOTE:</b> The guest VLAN should be already configured on the site containing the switch.</p>
<b>VLAN ID</b>	Enter the VLAN ID of the guest VLAN.
<i>Advanced Settings</i>	
<b>Transmit Period</b>	<p>Enter the number of seconds that the switch waits before retransmitting the initial authentication request to the supplicant.</p> <p>Range: 1 through 65,535 seconds.</p> <p>Default: 30 seconds.</p>
<b>Maximum Requests</b>	<p>Enter the maximum number of times that authentication request packets are retransmitted to a supplicant before the authentication session times out.</p> <p>Range: 1 through 10.</p> <p>Default: 2.</p>
<b>Retries</b>	<p>Enter the number of times that the switch attempts to contact an authentication server for authenticating a supplicant after an initial failure.</p> <p>Range: 1 through 10.</p> <p>Default: 3.</p>
<b>Quiet Period</b>	<p>Enter the number of seconds that the port remains in the wait state following a failed authentication exchange with the supplicant, before reattempting authentication.</p> <p>Range: 0 through 65,535 seconds.</p> <p>Default: 3 seconds.</p>

Table 252: Fields on the Add Authentication Profile Page (*continued*)

Setting	Guideline
<b>Reauthentication</b>	Click to enable or disable (default) reauthentication of the supplicant after a specified interval. If you enable this option, you must provide the reauthentication interval.
<b>Reauthentication Interval</b>	<p>If you enable reauthentication, enter the number of seconds after which a supplicant must be reauthenticated.</p> <p>Range: 1 through 65,535 seconds.</p> <p>Default: 3600 seconds.</p>
<b>Supplicant Timeout</b>	<p>Enter the number of seconds that the port must wait for a response from the supplicant, before considering a timing out and resending the request.</p> <p>Range: 1 through 60 seconds.</p> <p>Default: 30 seconds.</p>
<b>RADIUS Server Timeout</b>	<p>Enter the number of seconds that the port waits for a reply from the RADIUS server when authenticating a supplicant before timing out and invoking the server-fail action (action that the switch applies to supplicants when the authentication servers are not reachable).</p> <p>Range: 1 through 60 seconds.</p> <p>Default: 30 seconds.</p>

## RELATED DOCUMENTATION

[Add Port Profiles | 731](#)
[Add Access Profiles | 750](#)

## Edit, Clone, and Delete an Authentication Profile

### IN THIS SECTION

- [Edit Authentication Profiles | 747](#)
- [Clone an Authentication Profile | 748](#)
- [Delete Authentication Profiles | 748](#)

You can edit, clone, and delete authentication profiles from the Authentication Profiles page.

### Edit Authentication Profiles

**NOTE:** If you edit an authentication profile that is used in a port profile and if the port profile is deployed on a port, you must redeploy the port profile on the port for the changes made in the authentication profile to take effect.

To edit the parameters of an authentication profile:

**NOTE:** You cannot edit the name of an authentication profile.

1. Select **Configuration > SD-LAN > Authentication Profiles** in Customer Portal.

The Authentication Profiles page appears, displaying the existing authentication profiles.

2. Select the authentication profile that you want to edit and click the **Edit** icon (pencil).

The Edit Authentication Profile page appears, displaying the same fields that were presented when you added the authentication profile.

3. Modify the authentication profile fields as needed. Refer to the [“Add Authentication Profiles” on page 741](#) page.

4. Click **OK** to save your changes.

You are taken to Authentication Profiles page. A confirmation message appears indicating the status of the edit operation.

## Clone an Authentication Profile

To clone an authentication profile:

1. Select **Configuration > SD-LAN > Authentication Profiles** in Customer Portal.

The Authentication Profiles page appears, displaying the configured authentication profiles.

2. Select the authentication profile that you want to edit and click **Clone**.

The Clone Port Authentication Profile page appears. A default name appears for the cloned profile as *CLONE-Authentication Profile Name*

3. (Optional) Edit the name for the cloned profile.

The name for the authentication profile should be unique and contain only alphanumeric characters and hyphen (-); 15-characters maximum.

4. Click **OK** to create a new profile.

You are taken to the Authentication Profiles page. A confirmation message appears indicating the status of the clone job.

5. (Optional) After you clone the profile, select the profile and click **Edit** to modify the parameters as needed. See [“Add Authentication Profiles” on page 741](#) to modify the parameters.

After you clone and modify the authentication profile, you can create a port profile by using it or modify an existing port profile to include the cloned authentication profile.

## Delete Authentication Profiles

**NOTE:** You cannot delete an authentication profile if the profile is assigned to one or more port profiles. To delete such an authentication profile, assign a different authentication profile to the port profile and then attempt deleting the authentication profile again.

To delete an authentication profile:

1. Select **Configuration > SD-LAN > Authentication Profiles** in Customer Portal.

The Authentication Profiles page appears, displaying the configured authentication profiles.

2. Select an authentication profiles that you want to delete and click the **Delete** icon (dustbin).

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected authentication profiles.

A confirmation message appears, indicating the status of the delete operation.

RELATED DOCUMENTATION

<a href="#">SD-LAN Profiles Overview   726</a>
<a href="#">Dissociate a Profile from a Port   281</a>
<a href="#">Add Port Profiles   731</a>

## About the Access Profiles Page

To access this page, select **Configuration > SD-LAN > Access Profiles** in Customer Portal.

Use this page to view, edit, clone, and delete access profiles. Access profiles enable you to define the authentication and accounting servers and their priorities.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add an access profile—See [“Add Access Profiles” on page 750](#).
- Edit, clone, or delete an access profile—See [“Edit, Clone, and Delete Access Profiles” on page 753](#).
- Clear the selected access profiles—Click **Clear All Selections** to clear any access profiles that you might have selected.
- Search for access profiles using keywords—Click the **Search** icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 253 on page 749](#) describes the fields on the Access Profiles page.

Table 253: Fields on the Access Profiles Page

Field	Description
Profile Name	Name of the access profile.
Description	A description of the access profile.

Table 253: Fields on the Access Profiles Page (*continued*)

Field	Description
Authentication Servers	<p>RADIUS authentication servers configured for providing authentication service.</p> <p>To provide the authentication service, the switch accesses the servers in the listed order and in a round-robin fashion until a valid response is received from one of the servers or until all the configured retry limits are reached.</p>
Accounting Servers	<p>RADIUS accounting servers configured for providing accounting service.</p> <p>RADIUS accounting servers store statistical data about users logging in to or out from a LAN through a switch. The statistical data is used for general network monitoring, analyzing and tracking usage patterns, or billing a user based upon the amount of time or type of services accessed.</p> <p>The RADIUS accounting server you specify can be the same server used for RADIUS authentication, or it can be a separate RADIUS server. You can specify more than one RADIUS accounting server. If the primary server (the first one configured) is unavailable, the switch tries to access each RADIUS server in the list in the order in which they are configured.</p>
Revert Interval	<p>The number of seconds that the switch waits after a RADIUS server has become unreachable before rechecking the connection. If the server is still unreachable, the server next in the priority list is used.</p>

## RELATED DOCUMENTATION

[Add RADIUS Server Profiles | 757](#)

[Deploying an Access Profile on a Switch | 271](#)

[Dissociating an Access Profile | 272](#)

## Add Access Profiles

An access profile defines a list of RADIUS authentication servers and RADIUS accounting servers, and their priorities. Use the Add Access Profile page in Customer Portal to add access profiles to CSO.

To add an access profile:

- 1. Select **Configuration > SD-LAN > Access Profiles** in Customer Portal.

The Access Profiles page appears.

- 2. Click the **Add** icon (+) to add an access profile.

The Add Access Profiles page appears.

- 3. Complete the configuration according to the guidelines provided in [Table 254 on page 751](#).

**NOTE:** Fields marked with \* are mandatory.

- 4. Click **OK**.

An access profile is added. You are returned to the Access Profiles page where a confirmation message is displayed.

After you add an access profile, you can deploy it on a switch; see [“Deploying an Access Profile on a Switch” on page 271](#).

Table 254: Access Profile Settings

Setting	Guideline
<i>General</i>	
Profile Name	Enter a unique name for the access profile, which can contain only alphanumeric characters and hyphen (-); 64-character maximum.
Profile Description	Enter a description for the access profile.

Table 254: Access Profile Settings (*continued*)

Setting	Guideline
<b>Authentication Servers</b>	<p>Add authentication servers to the access profile.</p> <p>To add authentication servers:</p> <ol style="list-style-type: none"> <li>1. Click the <b>Add</b> icon (+). The Add Authentication Server(s) page appears.</li> <li>2. Select a server from the Available list and click the <b>Right Arrow</b> icon to move it to the Selected list.  Alternatively, if you want to add a new authentication server, click the <b>Add New RADIUS Server Profile</b> button and move it to the list of selected servers; see <a href="#">“Add RADIUS Server Profiles” on page 757</a> for details.</li> <li>3. Click <b>OK</b> to save the list of authentication servers.</li> </ol> <p>The authentication servers are used according to their priority. The priority is assigned in the order in which the servers are listed, with the highest priority being assigned to the server on the top of the list.</p> <p>To change the priority, reorder the servers in the list by dragging and dropping them.</p>
<b>Accounting Servers</b>	<p>Add accounting servers to the access profile.</p> <p>To add accounting servers:</p> <ol style="list-style-type: none"> <li>1. Click the <b>Add</b> icon (+). The Add Accounting Server(s) page appears.</li> <li>2. Select a server from the Available list and click the <b>Right Arrow</b> icon to move it to the Selected list.  Alternatively, if you want to add a new accounting server, click the <b>Add New RADIUS Server Profile</b> button and move it to the list of selected servers; see <a href="#">“Add RADIUS Server Profiles” on page 757</a> for details.</li> <li>3. Click <b>OK</b> to save the list of accounting servers.</li> </ol> <p>The accounting servers are used according to their priority. The priority is assigned in the order in which the servers are listed, with the highest priority being assigned to the server on the top of the list.</p> <p>To change the priority, reorder the servers in the list by dragging and dropping them.</p>



Table 254: Access Profile Settings (*continued*)

Setting	Guideline
<b>Revert Interval</b>	<p>Enter a revert interval, which is the amount of time the switch waits after a RADIUS server has become unreachable before rechecking the connection. If the server is still not reachable, the server next in the priority list is used for authentication and accounting.</p> <p>Range: 0 through 604,800 seconds</p> <p>Default: 60 seconds</p>

## RELATED DOCUMENTATION

[Add RADIUS Server Profiles | 757](#)
[Dissociating an Access Profile | 272](#)
[Add Port Profiles | 731](#)

## Edit, Clone, and Delete Access Profiles

### IN THIS SECTION

- [Edit Access Profiles | 753](#)
- [Clone an Access Profile | 754](#)
- [Delete Access Profiles | 755](#)

You can edit, clone, and delete access profiles from the Access Profiles page.

### Edit Access Profiles

**NOTE:** If you edit an access profile, you must redeploy the access profile on a switch for the changes to take effect on the switch. See [“Deploying an Access Profile on a Switch” on page 271](#) for details.

To edit an access profile:

**NOTE:** You cannot modify the name of an access profile.

1. Select **Configuration > SD-LAN > Access Profiles** in Customer Portal.

The Access Profiles page appears, displaying the configured access profiles.

2. Select the access profile that you want to edit and click the **Edit** icon (pencil).

The Edit Access Profile page appears, displaying the same fields that were presented when you added the access profile.

3. Edit the access profile fields as needed; see [“Add Access Profiles” on page 750](#) for details.

4. Click **OK** to save your changes.

You are taken to the Access Profiles page. A confirmation message appears indicating the status of the edit operation.

## Clone an Access Profile

To clone an access profile:

1. Select **Configuration > SD-LAN > Access Profiles** in Customer Portal.

The Access Profiles page appears, displaying the configured access profiles.

2. Select the access profile that you want to clone and click **Clone**.

The Clone Access Profile page appears. A default name is assigned for the access profile as *CLONE-Access Profile Name*.

3. (Optional) Edit the name for the cloned profile.

The name for the access profile should be unique and contain only alphanumeric characters and hyphen (-); 64-characters maximum.

4. Click **OK** to create a new profile.

The Access Profiles page appears. A confirmation message appears indicating the status of the clone operation.

5. (Optional) After you clone the profile, select the profile and click **Edit** to modify the parameters as needed. See [“Add Access Profiles” on page 750](#) to modify the parameters.

After you clone the access profile, you can deploy it on a switch. See [“Deploying an Access Profile on a Switch” on page 271](#) for details.

## Delete Access Profiles

**NOTE:** You cannot delete an access profile that is deployed on a switch. To delete such an access profile, first dissociate the access profile from the switch and then attempt deleting the access profile.

To delete an access profile:

1. Select **Configuration > SD-LAN > Access Profiles** in Customer Portal.

The Access Profiles page appears, displaying the existing access profiles.

2. Select an access profile that you want to delete and click the **Delete** icon (dustbin).

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected access profiles.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

---

[About the Access Profiles Page | 749](#)

---

[Dissociating an Access Profile | 272](#)

---

[Deploying an Access Profile on a Switch | 271](#)

## About the RADIUS Server Profiles Page

To access this page, select **Configuration > SD-LAN > RADIUS Server Profiles** in Customer Portal.

Use this page to view, clone, edit, and delete RADIUS server profiles. A RADIUS server profile defines the RADIUS server IP address, password, authorization and accounting ports, retry counts, and server timeout.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a RADIUS server profile—See [“Add RADIUS Server Profiles” on page 757](#).
- Edit, clone, or delete a RADIUS server profile—See [“Edit, Clone, and Delete RADIUS Server Profiles” on page 759](#).
- Clear the selected RADIUS server profiles—Click **Clear All Selections** to clear any RADIUS server profiles that you might have selected.
- Search for RADIUS server profiles using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.

### Field Descriptions

[Table 255 on page 756](#) describes the fields on the RADIUS Server Profiles page.

**Table 255: Fields on the RADIUS Server Profiles Page**

Field	Description
Server Name	Name of the RADIUS server profile.
Server Address	IPv4 address of the RADIUS server.
Authentication Port	The software port number used for authentication.
Authentication Retry	The number of times that the switch can contact an authentication server for authenticating a supplicant when no response is received from the server.
Authentication Timeout	The number of seconds that the switch can wait for a response from the RADIUS server for an authentication request before retrying authentication of a supplicant.
Accounting Port	The software port number used for accounting.
Accounting Retry	The number of times the switch can contact an accounting server when no response is received from the accounting server.

Table 255: Fields on the RADIUS Server Profiles Page (*continued*)

Field	Description
Accounting Timeout	The number of seconds the switch can wait for a response from the accounting server.

## RELATED DOCUMENTATION

[Add Access Profiles | 750](#)
[Dissociating an Access Profile | 272](#)
[Deploying an Access Profile on a Switch | 271](#)

## Add RADIUS Server Profiles

Use the Add RADIUS Server Profile page in Customer Portal to configure RADIUS server profiles. In a RADIUS server profile, you can define the RADIUS server IP address, password, authorization and accounting ports, retry counts, and server timeout.

To add a RADIUS server profile:

1. Select **Configuration > SD-LAN > RADIUS Server Profiles** in Customer Portal.

The RADIUS Server Profiles page appears.

2. Click the **Add** icon (+) to add a RADIUS server profile.

The Add RADIUS Server Profile page appears.

3. Complete the configuration according to the guidelines provided in [Table 256 on page 758](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **Finish**.

A RADIUS server profile is added to CSO. You are returned to the RADIUS Server Profiles page where a confirmation message is displayed.

After you add a RADIUS server profile, you can add an access profile by using the RADIUS server profile. See [“Add Access Profiles” on page 750](#) for details.

Table 256: RADIUS Server Profile Settings

Setting	Guideline
<i>General</i>	
<b>Server Name</b>	Enter a unique name for the RADIUS server, which can contain only alphanumeric characters and hyphen (-). 64-character maximum.
<b>Server Address</b>	Enter the IPv4 address of the RADIUS server.
<b>Secret</b>	<p>Configure the password to use with the RADIUS server. The secret password used by the local switch must match the one configured on the server.</p> <p>The length must be between 6 and 21 characters. You can include spaces if the character string is enclosed in quotation marks.</p>
<i>Advanced Settings</i>	
<b>Authentication Port</b>	<p>Enter the software port number that you want to use for authentication.</p> <p>Range: 1 through 65,535.</p> <p>Default: 1812.</p>
<b>Authentication Retry Count</b>	<p>Enter the number of times that the switch can contact a RADIUS server for authenticating a supplicant when no response is received from the authentication server.</p> <p>Range: 1 through 100.</p> <p>Default: 3.</p>
<b>Authentication Timeout</b>	<p>Enter the number of seconds that the switch can wait for a response from the RADIUS server for an authentication request before retrying authentication of a supplicant.</p> <p>Range: 1 through 1000 seconds.</p> <p>Default: 3 seconds.</p>
<b>Accounting Port</b>	<p>Enter the software port number that you want to use for accounting.</p> <p>Range: 1 through 65,535.</p> <p>Default: 1813.</p>

Table 256: RADIUS Server Profile Settings (*continued*)

Setting	Guideline
<b>Accounting Retry Count</b>	<p>Enter the number of times that the switch can contact an accounting server when no response is received from the accounting server.</p> <p>Range: 1 through 100.</p> <p>Default: 3.</p>
<b>Accounting Timeout</b>	<p>Enter the number of seconds that the switch can wait for a response from the accounting server before timing out.</p> <p>Range: 1 through 1000 seconds.</p> <p>Default: 3 seconds.</p>

## RELATED DOCUMENTATION

[Add Authentication Profiles | 741](#)
[Dissociating an Access Profile | 272](#)
[Deploying an Access Profile on a Switch | 271](#)

## Edit, Clone, and Delete RADIUS Server Profiles

### IN THIS SECTION

- [Edit RADIUS Server Profiles | 760](#)
- [Clone a RADIUS Server Profile | 760](#)
- [Delete RADIUS Server Profiles | 761](#)

You can edit, clone, and delete RADIUS server profiles from the RADIUS Server Profiles page.

## Edit RADIUS Server Profiles

**NOTE:** If you edit a RADIUS server profile that is used in an access profile deployed on a switch, you must redeploy the access profile on the switch for the changes to take effect.

To modify the parameters configured for a RADIUS server profile:

**NOTE:** You cannot edit the name of the RADIUS server profile.

1. Select **Configuration > SD-LAN > RADIUS Server Profiles** in Customer Portal.

The RADIUS Server Profiles page appears, displaying the configured profiles.

2. Select the RADIUS server profile that you want to edit and click the **Edit** icon (pencil).

The Edit RADIUS Server Profiles page appears, displaying the same fields that were presented when you added a RADIUS server profile.

3. Edit the RADIUS server profile fields as needed. See [“Add RADIUS Server Profiles” on page 757](#) for more information.

4. Click **OK** to save your changes.

You are taken to the RADIUS Server Profiles page. A confirmation message appears indicating the status of the edit operation.

## Clone a RADIUS Server Profile

To clone a RADIUS server profile:

1. Select **Configuration > SD-LAN > RADIUS Server Profiles** in Customer Portal.

The RADIUS Server Profiles page appears, displaying the configured access profiles.

2. Select the profile that you want to clone and click **Clone**.

The Clone RADIUS Server Profile page appears. A default name appears for the RADIUS server profile as *CLONE-RADIUS Server Profile Name*

3. (Optional) Edit the name for the cloned profile.



The name for the RADIUS Server profile should be unique and contain only alphanumeric characters and hyphen (-); 64-characters maximum.

4. Click **OK** to create a new profile.

The RADIUS Server Profiles page appears. A confirmation message appears indicating the status of the clone operation.

5. (Optional) After you clone the profile, select the profile and click **Edit** to modify the parameters as needed. See [“Add RADIUS Server Profiles” on page 757](#) topic to modify the parameters.

After you clone and modify the RADIUS server profile, you can create an access profile by using it or add it to an existing access profile.

## Delete RADIUS Server Profiles

**NOTE:** You cannot delete a RADIUS server profile that is used by one or more access profiles. To delete such a profile, first disassociate the RADIUS server profile from all the access profiles and then attempt to delete the RADIUS server profile again.

To delete a RADIUS Server profile:

1. Select **Configuration > SD-LAN > RADIUS Server Profiles** in Customer Portal.

The RADIUS Server Profiles page appears, displaying the configured RADIUS Server profiles.

2. Select the RADIUS server profile that you want to delete and click the **Delete** icon (dustbin).

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected RADIUS server profile.

A confirmation message appears, indicating the status of the delete operation.

## RELATED DOCUMENTATION

[Add Access Profiles | 750](#)

[Deploying an Access Profile on a Switch | 271](#)

[Dissociating an Access Profile | 272](#)

## Firewall Filters Overview

Firewall filters provide rules that define whether to permit or deny packets that are transiting a port on a Juniper Networks EX Series Ethernet Switch from a source endpoint to a destination endpoint. You configure firewall filters to determine whether to permit or deny traffic before it enters or exits a port to which the firewall filter is applied. To apply a firewall filter, you must first configure the filter and then apply it to a port, either while manually configuring a port or through port profiles.

### Firewall Filter

Each port or interface on the switch can have a maximum of only two filters:

- Ingress firewall filter—A filter that is applied to packets that are entering a network.
- Egress firewall filter—A filter that is applied to packets that are exiting a network.

You can configure firewall filters to subject packets to filtering, class-of-service (CoS) marking (grouping similar types of traffic together, and treating each type of traffic as a class with its own level of service priority), and traffic policing (controlling the maximum rate of traffic sent or received on an interface). You can create an ingress and an egress firewall filter and deploy the filter on a port.

**NOTE:** If you apply ingress and egress filters to the same interface, the ingress filter is processed first.

### Firewall Filter Components

In a firewall filter, you define one or more terms that specify the filtering criteria and the action to be taken if a match occurs. A firewall filter can have multiple terms.

Each term consists of the following components:

- Match conditions—Specify the values or fields that the packet must contain to be considered a match. You can define various match conditions, including the IP source address field, IP destination address field, MAC source address field, MAC destination address field, Transmission Control Protocol (TCP) or User Datagram Protocol (UDP) source port field, and IP protocol field.
- Action—Specifies what to do if a packet matches the match conditions. Possible actions are to accept or discard the packet. In addition, packets can be counted to collect statistical information.
- Action modifier—Specifies one or more actions for the switch if a packet matches the match conditions. You can specify action modifiers such as count, and log.

## Firewall Filter Processing

If there are multiple terms in a filter, the order of the terms is important. Packets are tested against each term in the order in which the terms are listed in the firewall filter configuration. If a packet matches the first term, the switch executes the action defined by that term, and no other terms are evaluated. If the switch does not find a match between the packet and the first term, it compares the packet to the next term. If no match occurs between the packet and the second term, the system continues to compare the packet to each successive term in the filter until a match is found. If the packet does not match any terms in the filter, the switch discards the packet by default.

## Configure a Firewall Filter for an EX Series Switch

You configure firewall filters on EX Series switches to control traffic that enters or exits the switch ports. To configure a firewall filter, you must first configure the filter and then apply it to a port.

The following workflow describes the steps that are required to configure a firewall filter and assign it to a switch port.

1. Create a firewall filter. See [“Add Firewall Filters” on page 764](#).
2. Create a term and associate the term to the firewall filter. See [“Add Terms to Firewall Filters” on page 767](#).
3. Assign the firewall filter to a port profile. See [“Add Port Profiles” on page 731](#).  
Or manually edit the port configurations. See [“Edit Configuration of Ports” on page 279](#).
4. Deploy the port profile to a port. See [“Deploy or Redeploy a Port Profile” on page 275](#).

## About the EX Firewall Filters Page

To access this page, select **Configuration > SD-LAN > Firewall Filters**.

Use this page to view, add, and delete firewall filters on EX Series switches.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details of the existing firewall filter. See [Table 257 on page 764](#).
- Add a firewall filter—See [“Add Firewall Filters” on page 764](#).

- Delete a firewall filter—See [“Delete Firewall Filters” on page 765](#).
- Add terms to a new firewall filter—See [“Add Terms to Firewall Filters” on page 767](#).

## Field Descriptions

[Table 257 on page 764](#) describes the fields on the EX Firewall Filters page.

**Table 257: Fields on the EX Firewall Filters page**

Field	Description
Name	Name of the firewall filter.
Description	Description of the firewall filter.
Number of Intents	Number of terms added to the firewall filter.

## Add Firewall Filters

Use the Add Firewall Filter page to add a new ingress or egress firewall filter.

To add a firewall filter:

1. Select **Configuration > SD-LAN > Firewall Filters**.

The EX Firewall Filters page appears.

2. Click the add icon (+) to add a new firewall filter.

The Add Firewall Filter page appears.

3. Complete the configuration according to the guidelines provided in [Table 258 on page 765](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK**.

The firewall filter is created. You are returned to the EX Firewall Filters page where a confirmation message is displayed.

Table 258: Fields on the Add Firewall Filter Page

Field	Description
Name	Enter a unique name for the firewall filter. The name can contain only alphanumeric characters and hyphen (-); the maximum length allowed is 15 characters.
Description	Enter a description for the firewall filter.

## WHAT'S NEXT

After creating a firewall filter, you must add terms to the firewall filter. See [Add Terms to Firewall Filters](#) | 767.

## Delete Firewall Filters

Before deleting a firewall filter, check whether the firewall filter is associated with a port profile or port(s). If it is associated, perform the following steps before deleting a firewall filter:

1. Disassociate the port profile from the port. See [“Dissociate a Profile from a Port”](#) on page 281.
2. Deploy the port profile. See [“Deploy or Redeploy a Port Profile”](#) on page 275.
3. Delete the port profile. See [“Edit, Clone, and Delete Port Profiles”](#) on page 736.

To delete a firewall filter:

1. Select **Configuration > SD-LAN > Firewall Filters**.

The EX Firewall Filters page appears, displaying the configured firewall filters.

2. Select the firewall filter that you want to delete and click the **Delete** icon.

An alert message appears, asking you to confirm the delete operation.

3. Click **Yes** to delete the selected firewall filter.

A confirmation message appears on top of the page indicating the status of the delete operation. If the delete operation is successful, the firewall filter is removed from the EX Firewall Filters page.

## About the < Firewall-Filters-Name> / Terms Page

To access this page, select **Configuration > SD\_LAN > Firewall Filters > Firewall-Filters-Name**.

Use the *Firewall-Filters-Name / Terms* page to manage terms for the firewall filters.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a firewall filter term—See [“Add Terms to Firewall Filters” on page 767](#).
- Edit, clone, or delete a firewall filter term—See [“Edit, Clone, and Delete Terms” on page 770](#).
- Search for terms by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Filter the firewall filter terms—Click the filter icon (funnel) and select **Show Hide Column Filters**. Specify one or more filtering criteria. The filtered results are displayed on the same page.

**NOTE:** Filtering is applicable only to some fields.

- Quickly filter the terms based on deployment status—Click the filter icon (funnel) and select **Undeployed Terms** to view the terms that are awaiting deployment.

### Field Descriptions

[Table 259 on page 766](#) describes the fields on the *Firewall-Filters-Name / Terms* page.

**Table 259: Fields on the <Firewall-Filters- Name> / Terms Page**

Field	Description
Name	Name of the firewall filter term.
Source	Displays the source endpoint such as IP address, MAC address, port, or protocol.
Destination	Displays the destination endpoint such as IP address, MAC address, port, or protocol..

### RELATED DOCUMENTATION

[About the EX Firewall Filters Page | 763](#)

## Add Terms to Firewall Filters

Use the *Firewall-Filter-Name* page to add a firewall term that controls the ingress and egress traffic. The traffic is classified by matching its source and destination IP addresses (for Layer 3), MAC addresses (for Layer 2), ports, or protocols.

To configure a firewall term:

1. Select **Configuration > SD-LAN > Firewall Filters**.

The EX Firewall Filters page appears.

2. Click the firewall filter to which you want to add the term.

The *Firewall-Filter-Term-Name* page appears.

3. Click the add icon (+).

The option to create firewall term appears inline on the *Firewall-Filter-Term-Name* page.

4. Complete the configuration according to the guidelines provided in [Table 260 on page 767](#).

5. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **Save**, a new firewall term with the provided configuration is added and a confirmation message is displayed.

If a firewall filter contains multiple terms, then, by default, the new term is always added at the top of the list of terms in the *Firewall-Filter-Term-Name* page. The term that is at the top of the list has higher priority than the others in the list. You can re-order the term by dragging and dropping the term at a different level in the list.

**Table 260: Fields on the <Firewall-Filter-Term-Name> Page**

Field	Description
Name	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 255 characters. If you do not enter a name, the term is saved with a default name assigned by CSO.
Description	Enter a description for the firewall filter term; maximum length is 1024 characters.

Table 260: Fields on the &lt;Firewall-Filter-Term-Name&gt; Page (continued)

Field	Description
Counter	<p>Click the toggle button to enable (default) or disable the counter. The counter counts the number of packets that pass this filter term.</p> <p><b>NOTE:</b> If you have enabled counter for the firewall filter, you cannot add the firewall filter as an egress filter.</p>
Logging	<p>Click the toggle button to enable (default) or disable logging. By enabling logging, CSO logs the packet's header information in the Routing Engine.</p> <p><b>NOTE:</b> If you have enabled logging for the firewall filter, you cannot add the firewall filter as an egress filter.</p>
Source	<p>Click the add icon (+) to select the source endpoints from the displayed list of IP addresses, MAC addresses, protocols, or ports to the firewall filter term. You can also select a source end point using the methods described in <a href="#">"Selecting Firewall Source" on page 441</a>.</p>
Destination	<p>Click the add icon (+) to select the destination endpoints from the displayed list of IP addresses, MAC addresses, protocols, or ports to the firewall filter term. You can also select a destination end point using the methods described in <a href="#">"Selecting Firewall Destination" on page 445</a>.</p>
Select Action	<p>Click the add icon (+) to choose whether you want to permit or deny the traffic between the source and destination endpoints.</p> <ul style="list-style-type: none"> <li>● <b>Allow</b>—Device permits the traffic.</li> <li>● <b>Deny</b>—Device silently drops all packets for the session.</li> </ul>



Table 260: Fields on the &lt;Firewall-Filter-Term-Name&gt; Page (continued)

Field	Description
Endpoints	<p>To add an endpoint to the source or destination:</p> <ol style="list-style-type: none"> <li>Click <b>Select Source</b> or <b>Select Destination</b> text box and then click the lesser-than icon on the right side of the page to open the End Points panel.  The End Points panel displays the endpoints from addresses, MAC, protocols, and ports relevant to the source or destination based on your selection.  <b>NOTE:</b> You can also search for a specific end point using the search option.</li> <li>Select the endpoint you want to add and click the check mark icon (✓) to add it the source or destination.  The selected endpoint is added to the source or destination.</li> </ol> <p>To add new source and destination end points:</p> <ol style="list-style-type: none"> <li>Click the less-than icon (&lt;) on the right side of the page to open the End Points panel.</li> <li>Click the add icon (+) on the top right of the End Points panel.  A list of endpoints that you can add is displayed.</li> <li>Select the endpoint you want to add.  You can add the following endpoints: <ul style="list-style-type: none"> <li>Address or address group. See <a href="#">“Creating Addresses or Address Groups” on page 786</a>.</li> <li>MAC address. See <a href="#">“Add a MAC Address Endpoint” on page 819</a>.</li> <li>Protocol. See <a href="#">“Add a Protocol Endpoint” on page 823</a>.</li> <li>Port. See <a href="#">“Add a Port Endpoint” on page 826</a>.</li> </ul> </li> <li>Click <b>Save</b> to add the new endpoint.  The endpoint that you created is listed in the <b>End Points</b> panel.</li> <li>Select the endpoint that you want to add to the source or destination, and click on the check mark icon (✓).  The endpoint is added to the source or destination as specified.</li> </ol>

WHAT'S NEXT

After adding terms to the firewall filter, assign the firewall filter as an ingress filter or egress filter in port profiles. See [Add Port Profiles | 731](#).

## Edit, Clone, and Delete Terms

### IN THIS SECTION

- [Edit a Firewall Filter Term | 770](#)
- [Clone a Firewall Filter Term | 771](#)
- [Delete a Firewall Filter Term | 772](#)

You can edit, clone, and delete firewall filter terms from the *Firewall-Filter-Name* page.

### Edit a Firewall Filter Term

Before editing a firewall filter term, check whether the respective firewall filter is associated with a port. If it is associated with a port, you must re-deploy the port profile after editing the firewall term. To deploy the port profile, see [“Deploy or Redeploy a Port Profile” on page 275](#).

To modify the parameters configured for a firewall filter term:

1. Select **Configuration > SD-LAN > Firewall Filter**.

The EX Firewall Filters page appears, displaying the list of firewall filters.

2. Click the firewall filter for which you want to edit the term.
3. Hover over the firewall filter term that you want to edit, and then click the ellipsis icon... that appears on the right side of the term.
4. Click **Edit**.

The *Firewall-Filter-Term-Name* page appears with the values that you provided while creating the firewall filter term.

5. Modify the parameters by following the guidelines provided in [“Add Terms to Firewall Filters” on page 767](#).

**NOTE:** You cannot modify the name of the firewall filter term.

6. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

A confirmation message appears, indicating the status of the edit operation.

## Clone a Firewall Filter Term

Before cloning a firewall filter term, check whether the respective firewall filter is associated with a port. If it is associated with a port, you must re-deploy the port profile after cloning the firewall term. To deploy the port profile, see [“Deploy or Redeploy a Port Profile” on page 275](#).

To clone a firewall filter term:

1. Select **Configuration > SD-LAN > Firewall Filter**.

The EX Firewall Filters page appears, displaying the list of firewall filters.

2. Click the firewall filter for which you want to clone the term.
3. Hover over the firewall filter term that you want to clone, and then click the ... icon that appears on the right side of the term.
4. Click **Clone**.

The *Firewall-Filter-Term-Name* page appears with the values that you provided while creating the firewall filter term.

5. Enter a new name for the term and modify the parameters following the guidelines provided in [“Add Terms to Firewall Filters” on page 767](#)
6. Click **OK** to save your changes.

A confirmation message appears indicating the status of the clone operation. If the operation is successful, the cloned term is listed in the *Firewall-Filters-Name* page.

## Delete a Firewall Filter Term

Before deleting a firewall filter term, check whether the respective firewall filter is associated with a port. If it is associated with a port, you must re-deploy the port profile after deleting the firewall term. To deploy the port profile, see [“Deploy or Redeploy a Port Profile” on page 275](#).

To delete a firewall filter term:

1. Select **Configuration > SD-LAN > Firewall Filter**.

The EX Firewall Filters page appears, displaying the list of firewall filters.

2. Click the firewall filter for which you want to delete the term.
3. Hover over the firewall filter term that you want to delete and then click the ... icon that appears on the right side of the term.
4. Select **Delete**.

A message requesting confirmation for the deletion appears.

5. Click **Yes** to delete the selected firewall filter term. If you want to discard your changes, click **Cancel** instead.

If you click **Yes**, the selected firewall filter term is deleted from the Firewall Filter page.

A confirmation message appears, indicating the status of the delete operation.

## Deploy or Redeploy a Port Profile

A port profile defines the authentication settings for the port and other port parameters such as flow control, link mode, storm control, MAC limit, and so on. The behavior of the port is defined by the values for parameters defined in the port profile. You can deploy a port profile on one or more ports at the same time.

You must redeploy a port profile when:

- the port profile that is assigned to a port is modified.
- the authentication profile or firewall filter that is assigned to the port profile is modified.

When a port profile or a profile associated with the port profile is modified, the deployment status of the port is changed to Pending Deployment.

The changes made to the port profile or the associated authentication profile or firewall filter are applied on the ports only when you redeploy the modified port profile.

To deploy or redeploy a port profile on one or more switch ports:

1. Select the port and click **More > Deploy**.

The Deploy page appears.

2. For the **Type** field, do one of the following:

- Click **Run now** to deploy the port profile immediately.
- Click **Schedule at a later time** to deploy the port profile later.

If you select this option, enter the date and time when you want to deploy in the Date and Time fields that appear.

3. Click **OK**.

If you select the Run now option, a job is created to deploy the profile immediately; otherwise, the job to deploy is created on the date and at the time that you scheduled.

When you deploy a port profile, the deployment status of the ports is set to Pending Deployment indicating that the profile is associated with the port. When the profile is in the process of being committed on the ports, the deployment status changes to In progress. If the deployment job completes successfully, the deployment status of the ports is set to Success and if the job fails, the deployment status is set to Failed.

## Enable Ports

You enable a port to allow traffic through the port. When you enable a port, the Admin status of the port is changed to Up.

**NOTE:** You can enable one or more ports at the same time.

To enable one or more ports:

1. Select the ports and click **More > Enable Port(s)**. Alternatively, right-click the ports and click **Disable Port(s)**.

A job to enable the ports is initiated.

After a port is enabled, the Admin Status is changed to Up.

**NOTE:** The device is monitored once every five minutes. Therefore, it takes upto five minutes for the change in the Admin Status to reflect on the CSO GUI.

## Disable Ports

You disable a port to block traffic through the port. When you disable a port, the Admin status and Link status of the port are changed to Down.

**NOTE:** You can disable one or more ports at the same time.

To disable one or more ports:

1. Select the ports and click **More > Disable Port(s)**. Alternatively, right-click the port and click **Disable Port(s)**

A job to disable the ports is initiated.

After a port is disabled, the Admin and Link statuses for the port are set to Down.

**NOTE:** The device is monitored once every five minutes. Therefore, it takes upto five minutes for the change in the Admin Status and Link Status to reflect on the GUI.

## Edit Configuration of Ports

You can edit the configuration of a port either by using a port profile or manually.

If a profile is already deployed, edit the profile, and then redeploy for the changes to take effect.

When using a port profile to edit ports, you can:

- assign a port profile or modify the profile assigned to the port
- modify the VLANs assigned to the port

To edit the configuration of one or more ports:

1. Select one or more ports and click **More > Edit Configuration**. Alternatively, right-click the ports and click **Edit Configuration**.

The Edit Port(s) page appears.

2. Do one of the following:

For **Options**, select one of the following:

- To edit the port configuration by using a port profile:

- a. Click **Use Port Profile**.

The Port Profile drop down list and an option to select VLAN appears.

- b. Select a port profile that you want to assign to the port from the **Port Profile** drop down list.

- c. In the VLAN field:

- If the port is configured as a trunk port in the port profile, assign multiple VLANs by selecting the VLANs in the Available column and clicking the right-arrow to move them to the Selected column.
- If the port is configured as an access port in the port profile, assign a single VLAN by selecting the VLAN in the Available column and clicking the right-arrow to move it to the Selected column.

- To edit the port configuration manually:

- a. Click **Manually edit port configurations**.

The port parameters such as port mode, link mode, flow control appear.

- b. Edit the parameters by referring to [Table 250 on page 731](#).

3. Click **Next**.

Deployment options appear.

4. (Optional) Select the **Do not deploy** option if you want to only save the edited configuration in CSO, but not push and commit the configuration to the switch.

5. For the **Type** field, do one of the following:

- Click **Run now** to save the edited configuration in CSO and commit the edited configuration on the switch.
- Click **Schedule at a later time** to schedule a time to commit the edited configuration on the switch.

If you select the Schedule at later time option, enter the date and time when you want to deploy, in the fields that appear when you select the option.

6. Click **Next**.

A summary of all the port profile parameter appears.

7. (Optional) Click **Edit** to revisit the settings and make further changes.

8. Click **OK**.

If you select the Run now option, a job is created to deploy the profile at once; otherwise, the job to deploy is created on the date and at the time that you scheduled.

During the deployment (that is when the deploy is executing), the Deployment status of the port is set to Pending Deployment, on the Ports tab of the *Devices* page.

If the deployment job completes successfully:

- A message appears on the top of the Ports page indicating that the deployment is successful.
- Deployment Status of the port is set to Deployed.
- The Port Profile column displays:
  - the profile name when a port profile is used for editing.
  - Manually Configured when the configuration is manually edited.



# 5

PART

## Managing Network Services and Shared Objects

---

Configuring Network Services in a Distributed Deployment | **778**

Managing Shared Objects | **783**

---

# Configuring Network Services in a Distributed Deployment

## IN THIS CHAPTER

- [Network Service Overview | 778](#)
- [About the Network Services Page | 779](#)
- [About the Service Instances Page | 781](#)

## Network Service Overview

A *network service* is a final product offered to end users with a full description of its functionality and specified performance.

Administrative users deploy network services between two locations in a virtual network, so that traffic traveling in a specific direction on that link is subject to action from that service. The term *network service* is defined in the ETSI Network Functions Virtualization (NFV) standard.

A network service consists of a *service chain* of one or more linked network functions, which are provided by specific virtualized network functions (VNFs), with a defined direction for traffic flow and defined ingress and egress points. The term service chain refers to the structure of a network service, and although not defined in the ETSI NFV standard, this term is regularly used in NFV and software-defined networking (SDN).

A network service designer creates network services in Network Service Designer. When the designer publishes the service to the network service catalog from Network Service Designer, administrators can see the network service in Administration Portal.

## RELATED DOCUMENTATION

[About the Network Services Page | 779](#)

# About the Network Services Page

To access this page, click **Configuration > Network Services**.

You can use the Network Services page to view the complete list of network services that service designers have published to the network service catalog from network service designer and to view information about the services. For an introduction to network services, see [“Network Service Overview” on page 778](#).

## Tasks You Can Perform

You can perform the following tasks from this page:

- Quickly view important data about network services and about instances of those services deployed at customers’ sites in the widgets that appear at the top of the page. See [Table 261 on page 779](#).
- View full information about a service and about instances of a service at customer sites. Click the name of a service in the list. See [“About the Service Instances Page” on page 781](#).

## Field Descriptions

[Table 261 on page 779](#) shows the descriptions of the widgets that appear at the top of the Network Services page.

**Table 261: Widgets on the Network Services Page**

Widget	Description
Top Network Services Instantiated	View the numbers of instances of the three services that are most used by tenants in the network.  This view helps you identify trends for network services, especially when you introduce a new service.
Services with Critical Alerts	View the top three network services receiving the maximum number of critical alerts.
Top Services by POP CPU Usage	View the top three network services using the largest percentage of CPU from the assigned CPU cores.

[Table 262 on page 780](#) shows the descriptions of the fields on the Network Services page.

Table 262: Fields on the Network Services Page

Field	Description
Name	View the name of the service.  Click the name to view full information about a service.
Tenants	View the names of the tenants that have access to the network service.
Sites	View the total number of sites at which the service is deployed for the tenant.  Example: 2
Instances	View the total number of occurrences of the service that administrative users have activated for the tenant.  Example: 1
Last Update	View the date on which the network service designer last modified the service.

Table 263 on page 780 shows the descriptions of the fields on the Detail for *network service name* page.

Table 263: Fields on the Network Service Detail Page

Field	Description
<i>General</i>	
Configuration	View the settings that the network service designer or you have configured for this service.
Version	View the version number of the network service.  Example: 1.1
State	View the status of the network service.  Example: Published
Performance Goals	View performance parameters of the network service that include bandwidth, number of sessions, latency, and license cost.

## RELATED DOCUMENTATION

Network Service Overview | 778

# About the Service Instances Page

To access this page, click **Services** > *Service Name* > **Instances**

You can use the Service Instances page to view information about occurrences of the service at specific customer sites.

## Tasks You Can Perform

You can perform the following tasks from this page:

- View details about a service instance. Click the details icon that appears when you hover over the name of a service. See [Table 265 on page 782](#).
- Enable or disable a network service or virtualized network function (VNF) recovery. Select a service instance and click **Enable Auto Healing** to enable automatic recovery of a network service or VNF.

## Field Descriptions

[Table 264 on page 781](#) shows the descriptions of the fields on the Service Instances page.

**Table 264: Fields on the Service Instances Page**

Field	Description
Name	View the name of the occurrence of a service at a specific tenant site.
Tenant	View the name of the tenant.
Status	View the state of the service at the customer site: <ul style="list-style-type: none"> <li>• Created—Administrative user for the tenant has enabled this service instance, which is active.</li> <li>• Blank—Administrative user for the tenant has disabled this service instance.</li> </ul>
Site	View the name of the site at which service occurrence is available.
POP	View the POP in which the site is located.
Functions	View network functions that the service offers; for example, Network Address Translation (NAT) or firewall.

[Table 265 on page 782](#) shows the descriptions of the fields on the Detail for *Service-Instance-Name* page.

Table 265: Fields on the Service Instance Details Page

Field	Description
<i>General</i>	
Description	View information about this service instance.  This information is generated from data in Customer Portal.

RELATED DOCUMENTATION

<a href="#">Network Service Overview   778</a>
<a href="#">About the Network Services Page   779</a>

# Managing Shared Objects

## IN THIS CHAPTER

- [Addresses and Address Groups Overview | 784](#)
- [About the Addresses Page | 785](#)
- [Creating Addresses or Address Groups | 786](#)
- [Editing, Cloning, and Deleting Addresses and Address Groups | 789](#)
- [Services and Service Groups Overview | 791](#)
- [About the Services Page | 792](#)
- [Creating Services and Service Groups | 793](#)
- [Creating Protocols | 795](#)
- [Editing and Deleting Protocols | 798](#)
- [Editing, Cloning, and Deleting Services and Service Groups | 800](#)
- [Application Signatures Overview | 802](#)
- [About the Application Signatures Page | 803](#)
- [Understanding Custom Application Signatures | 804](#)
- [Adding Application Signatures | 806](#)
- [Editing, Cloning, and Deleting Application Signatures | 811](#)
- [Adding Application Signature Groups | 813](#)
- [Editing, Cloning, and Deleting Application Signature Groups | 814](#)
- [About the Departments Page | 815](#)
- [Adding a Department | 816](#)
- [Deleting a Department | 817](#)
- [About the MAC Addresses Page | 818](#)
- [Add a MAC Address Endpoint | 819](#)
- [Edit or Delete MAC Address Endpoint | 820](#)
- [About the Protocols Page | 822](#)
- [Add a Protocol Endpoint | 823](#)
- [Edit or Delete Protocol Endpoint | 824](#)
- [About the Ports Page | 825](#)

- [Add a Port Endpoint | 826](#)
- [Edit or Delete Port Endpoint | 828](#)

## Addresses and Address Groups Overview

An address specifies an IP address or a hostname. You can create addresses that can be used across all policies. Addresses are used in firewall and NAT services and apply to the corresponding policies. If you know only the hostname, you enter it into the **Hostname** field and use the address resolution option to resolve it to an IP address. You can also resolve an IP address to the corresponding hostname.

After you create an address, you can combine it with other addresses to form an address group. Address groups are useful when you want to apply the same policy to multiple addresses.

Contrail Service Orchestration (CSO) manages its address book at the global level, assigning objects to devices that are required to create policies. An address book is a collection of addresses and address groups that are available in a security zone. If the device is capable of using a global address book, CSO pushes address objects used in the policies to the global address book of the device.

### RELATED DOCUMENTATION

---

[About the Addresses Page | 785](#)

---

[Creating Addresses or Address Groups | 786](#)

---

[Editing, Cloning, and Deleting Addresses and Address Groups | 789](#)



## About the Addresses Page

To access this page, select **Configuration > Shared Objects > Addresses**.

Use this page to create, edit, and delete addresses and address groups. Addresses and address groups are used in firewall and NAT services. After you create an address, you can combine it with other addresses to form an address group. Address groups are useful when you want to apply the same policy to multiple services.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create an address or address group. See [“Creating Addresses or Address Groups” on page 786](#).
- Modify, clone, or delete an address or address group. See [“Editing, Cloning, and Deleting Addresses and Address Groups” on page 789](#).
- View the configured parameters of an address or address group. Click the details icon that appears when you hover over the name of an address or address group or select **More > Detailed View**.
- Show or hide columns about the address or address group. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for an address or address group. Click the Search icon in the top right corner of the page to search for an address or address group.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

### Field Descriptions

[Table 266 on page 785](#) provides guidelines on using the fields on the Addresses page.

**Table 266: Fields on the Addresses Page**

Field	Description
Name	View the name of the address or address group.
Type	View the type of the address or address group.
Hostname	View the hostname of the address.
IP Address	View the IP address associated with the address.

Table 266: Fields on the Addresses Page (*continued*)

Field	Description
Description	View the description provided about the address or address group when it was created.

## RELATED DOCUMENTATION

---

[Addresses and Address Groups Overview | 784](#)


---

[Creating Addresses or Address Groups | 786](#)


---

[Editing, Cloning, and Deleting Addresses and Address Groups | 789](#)

## Creating Addresses or Address Groups

Use the **Addresses** page to create addresses and address groups. Addresses and address groups are used in firewall and NAT services. After you create an address, you can combine it with other addresses to form an address group. Address groups are useful when you want to apply the same policy to multiple services.

To create an address or address group:

1. Select **Configure > Shared Objects > Addresses**.

The **Addresses** page appears.

2. Click on the add icon (+).

The **Create Addresses** page appears.

3. Complete the configuration according to the guidelines provided in [Table 267 on page 787](#) and [Table 268 on page 789](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new address or address group with your configurations is created. You can use this object in firewall or NAT policies.

Table 267: Fields on the Create Addresses Page

Field	Description
Object Type	Select Address or Address Group. If you select Address Group, then the screen changes so you can select the addresses you want to include in your address group. <a href="#">Table 268 on page 789</a> describes address group configuration parameters.
Name	Enter a unique name for the address. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed.
Description	Enter a description for your address; maximum length is 1,024 characters. You should make this description as useful as possible for all administrators.

Table 267: Fields on the Create Addresses Page (*continued*)

Field	Description
Type	<p>Select a type of address and fill in the corresponding fields. Available types are:</p> <ul style="list-style-type: none"> <li>• <b>Host</b> <ul style="list-style-type: none"> <li>• <b>Host IP</b>—Enter the IPv4 or IPv6 host IP address. For example: 192.0.2.0 or 2001:db8:4136:e378:8000:63bf:3fff:fdd2. If you do not know the IP address, you can enter the hostname and click <b>Look up hostname</b>.</li> <li>• <b>Hostname</b>—Enter the hostname. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed. If you do not know the host name, you can enter the IP address and click <b>Look up IP address</b>. For example, enter www.company.com and click <b>Look up IP address</b>. Hostname lookup is supported for IPv4 and IPv6 addresses.</li> </ul> </li> <li>• <b>Range</b> <ul style="list-style-type: none"> <li>• <b>Start Address</b>—Enter a starting IPv4 or IPv6 address for the address range. For example: 192.0.2.0 or 2001:db8:4136:e378:8000:63bf:3fff:fdd2.</li> <li>• <b>End Address</b>—Enter an ending IPv4 or IPv6 address for the address range. The range is validated after you enter the address.</li> </ul> <p><b>NOTE:</b> An address range is configured on a managed device as an address set with one or more network address objects covering the specified address range.</p> </li> <li>• <b>Network</b> <ul style="list-style-type: none"> <li>• <b>Network</b>—Enter the network IP address. For example: 192.0.2.0. IPv6 is also supported. For example: 2001:db8:4136:e378:8000:63bf:3fff:fdd2.</li> <li>• <b>Subnet Mask</b>—Enter the subnet mask for the network range. For example, IPv4 netmask: 192.0.2.0/24. The subnet mask is validated as you enter it. You must enter the correct subnet mask in accordance with the network value. For example, IPv6 netmask: 2001:db8:4136:e378:8000:63bf:3fff:fdd2.</li> </ul> </li> <li>• <b>Wildcard</b> <ul style="list-style-type: none"> <li>• <b>Network</b>—Enter the network IPv4 or IPv6 address. For example: 192.0.2.0 or 2001:db8:4136:e378:8000:63bf:3fff:fdd2.</li> <li>• <b>Wildcard Mask</b>—Enter the wildcard mask for the network range. For example: 0.0.0.255.</li> </ul> </li> <li>• <b>DNS Host</b> <ul style="list-style-type: none"> <li>• <b>DNS Name</b>—Enter the DNS name. For example: company.com. Only alphanumeric characters, dashes, and periods are accepted. This name cannot exceed 69 characters in length, and must end with an alphanumeric character.</li> </ul> </li> </ul>

Table 268: Address Group Settings

Field	Description
Object Type	Select Address or Address Group. If you select Address Group, then the screen changes so you can select the addresses you want to include in your address group. <a href="#">Table 267 on page 787</a> describes address group configuration parameters.
Name	Enter a unique name for the address group. It must begin with an alphanumeric character and cannot exceed 63 characters. Dashes and underscores are allowed.
Description	Enter a description for your address group; maximum length is 1,024 characters. You should make this description as useful as possible for all administrators.
Addresses	Select the check box beside each address you want to include in the address group. Click the greater-than icon (>) to move the selected address or addresses from the <b>Available</b> column to the <b>Selected</b> column. Note that you can use the fields at the top of each column to search for addresses.

## RELATED DOCUMENTATION

[Addresses and Address Groups Overview | 784](#)
[About the Addresses Page | 785](#)
[Editing, Cloning, and Deleting Addresses and Address Groups | 789](#)

## Editing, Cloning, and Deleting Addresses and Address Groups

### IN THIS SECTION

- [Editing Addresses and Address Groups | 790](#)
- [Cloning Addresses and Address Groups | 790](#)
- [Deleting Addresses and Address Groups | 791](#)

You can edit, clone, and delete addresses and address groups from the **Addresses** page.

## Editing Addresses and Address Groups

To modify the parameters configured for an address or address group:

1. Select **Configuration > Shared Objects > Addresses**.

The **Addresses** page appears.

2. Select the address or address group that you want to edit, and then click **More > Edit**, or click the edit icon (pencil symbol) at the right top corner of the table, or right-click and select **Edit**.

The **Edit** page appears, showing the same options as displayed when you create a new address or address group.

3. Modify the parameters according to the guidelines provided in [“Creating Addresses or Address Groups” on page 786](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

When you click **OK**, the modified address or address group is displayed on the **Addresses** page.

**NOTE:** When you edit an address that is deployed as part of a policy, you will need to redeploy that policy in order for the changes to take effect. See [“Deploying Policies” on page 723](#) for more information.

## Cloning Addresses and Address Groups

To clone an address or address group:

1. Select **Configuration > Shared Objects > Addresses**.

The **Addresses** page appears.

2. Right-click the address or address group that you want to clone and then click **Clone**, or select **More > Clone**.

The **Clone** page appears with editable fields.

3. Modify the configured parameters of the address or address group, as required.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you select **OK**, the cloned address or address group is saved.

## Deleting Addresses and Address Groups

**NOTE:** Only addresses or address groups that have not been referenced in any policy can be deleted. If you try to delete such an address or address group, an error message will be displayed.

To delete an address or address group:

1. Select **Configuration > Shared Objects > Addresses**.

The **Addresses** page appears.

2. Select the address or address group you want to delete and then click the delete icon **(X)**.

An alert message appears verifying that you want to delete your selection.

3. Click **Yes** to delete the address or address group. If you do not want to delete, click **Cancel** instead.

If you select **Yes**, the selected address or address group is deleted, unless it is referenced in a policy.

## RELATED DOCUMENTATION

[Addresses and Address Groups Overview | 784](#)

[About the Addresses Page | 785](#)

[Creating Addresses or Address Groups | 786](#)

## Services and Service Groups Overview

A service refers to an application on a device. For example, Domain Name Service (DNS). Services are based on protocols and ports used by an application, and when added to a policy, a configured service can be applied across all devices. Services are candidates for firewall policy end-points. The protocols used to create a service include: TCP, UDP, MS-RPC, SUN-RPC, ICMP, and ICMPv6. Contrail Service Orchestration (CSO) also includes predefined, commonly used services, and you cannot modify or delete them.

Once you create a service, you can combine it with other services to form a service group. Service groups are useful when you want to apply the same policy to multiple services, as this enables you create fewer policies.

## RELATED DOCUMENTATION

About the Services Page   792
Creating Services and Service Groups   793
Editing, Cloning, and Deleting Services and Service Groups   800

## About the Services Page

To access this page, select **Configuration > Shared Objects > Services**.

Use the **Services** page to create, modify, clone and delete service or service groups. You can also create and manage protocols, that you use to create services.

A service refers to an application on a device, such as Domain Name Service (DNS). Services are based on protocols and ports used by an application. When added to a policy, a configured service can be applied across all devices. The protocols available to create a service include: TCP, UDP, SUN-RPC, MS-RPC, ICMP, ICMPv6, and so on.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Create a service or service group. See [“Creating Services and Service Groups” on page 793](#).
- Modify, clone or delete a service or service group. See [“Editing, Cloning, and Deleting Services and Service Groups” on page 800](#).
- View the configured parameters of a service or service group. Click the details icon that appears when you hover over the name of a service or service group, or click **More > Detailed View**.
- Show or hide columns about the services or service groups. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search a specific service or service group. Click the Search icon in the top right corner of the page to search for a service or service group.

You can enter partial text or full text of the keyword in the text box and press Enter.

The search results are displayed on the same page.

### Field Descriptions

[Table 269 on page 793](#) provides guidelines on using the fields on the **Services** page.



Table 269: Fields on the Service Page

Field	Description
Name	Name of the service or service group.
Type	Specifies whether the object is a service or service group.
Description	Description about the service or service group.
Predefined or Custom	List of predefined services and service groups, and a list of custom services or service groups that you created.

## RELATED DOCUMENTATION

- [Services and Service Groups Overview | 791](#)
- [Creating Services and Service Groups | 793](#)
- [Editing, Cloning, and Deleting Services and Service Groups | 800](#)

## Creating Services and Service Groups

Use the **Create Service** page to create a service. You can create services based on protocols and ports used by an application. The protocols used to create a service include: TCP, UDP, MS-RPC, SUN-RPC, ICMP, and ICMPv6. Once you create a service, you can combine it with other services to form a service group. Service groups are useful when you want to apply the same policy to multiple services.

You can also create or modify protocols that you base your services on, from the **Services** page.

To configure a service or service group:

1. Select **Configuration > Shared Objects > Services**.  
The **Services** page appears.
2. Click the add icon (+) to create service or service group.  
The **Create Services** page appears.
3. Complete the configuration of a service according to the guidelines provided in [Table 270 on page 794](#).

If you want to configure a service group, see [Table 271 on page 794](#).

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new service or service group with the configuration you provided is created. You can use this service or service group as an endpoint in firewall policies.

[Table 270 on page 794](#) provides guidelines on using the fields to create a service.

**Table 270: Service Settings**

Field	Description
Object Type	Select <b>Service</b> or <b>Service Group</b> . If you select <b>Service Group</b> , then the page changes so you can select the services you want to include in your service group.
Name	Enter a unique name for the service. It must begin with an alphanumeric character and cannot exceed 63 characters; dashes and underscores are allowed.
Description	Enter a description for your service. You should make this description as useful as possible for all administrators.
Protocols	<p>Select the protocol you want to associate with the service. You can use existing protocols that are listed in the <b>Protocols</b> table. You can also create a new protocol, or edit existing protocols:</p> <ul style="list-style-type: none"> <li>• To create a new protocol, click on the add icon (+). See <a href="#">“Creating Protocols” on page 795</a>.</li> <li>• To edit an existing protocol, click on the edit icon (pencil symbol). See <a href="#">“Editing and Deleting Protocols” on page 798</a>.</li> </ul>

[Table 271 on page 794](#) provides guidelines on using the fields to create a service group.

**Table 271: Service Group Settings**

Field	Description
Object Type	Select <b>Service</b> or <b>Service Group</b> . If you select <b>Service Group</b> , then the screen changes so you can select the services you want to include in your service group.
Name	Enter a unique name for the service. It must begin with an alphanumeric character and cannot exceed 63 characters; dashes and underscores are allowed.
Description	Enter a description for your service group. You should make this description as useful as possible for all administrators.

Table 271: Service Group Settings (continued)

Field	Description
Services	Select the service you want to include in the service group and click the greater-than icon (>) to move the selected service or services from the <b>Available</b> column to the <b>Selected</b> column. You can use the search field at the top of each column to search for listed services.

## RELATED DOCUMENTATION

- [Services and Service Groups Overview | 791](#)
- [About the Services Page | 792](#)
- [Editing, Cloning, and Deleting Services and Service Groups | 800](#)
- [Creating Protocols | 795](#)
- [Editing and Deleting Protocols | 798](#)

## Creating Protocols

Use the **Create Protocol** page to create TCP, UDP, MS-RPC, SUN-RPC, ICMP, and ICMPv6 protocols, that can be used in services. A service refers to an application on a device. Services are based on protocols and ports used by an application.

To create a protocol:

1. Select **Configuration > Shared Objects > Services**.  
The **Services** page appears.
2. Click the add icon (+) to create service or service group.  
The **Create Services** page appears.
3. Click the add icon (+) that appears about the **Protocols** table.  
The **Create Protocol** page appears.
4. Complete the configuration of the protocol according to the guidelines provided in [Table 272 on page 796](#) and [Table 273 on page 796](#).
5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new protocol with the configuration you provided is created. You can use this protocol to create services.

[Table 272 on page 796](#) provides guidelines on using the fields to create a protocol.

**Table 272: Fields on Create Protocol Page Settings**

Field	Description
<b>General Information</b>	
Name	Enter a unique name for the protocol. It must begin with an alphanumeric character and cannot exceed 63 characters; dashes and underscores are allowed.
Description	Enter a description for your protocol. It cannot exceed 1,024 characters.
Type	Select the type of the protocol you want to create and fill in the corresponding fields. The available types of protocols are: TCP, UDP, ICMP, SUN-RPC, MS-RPC, ICMPv6, and so on. If you select TCP, continue with this table. See <a href="#">Table 273 on page 796</a> for the other protocol types.
Destination Port	Enter a destination port number for TCP. The range is from 0 to 65,535.
<b>Advanced Settings</b>	
Enable Inactivity Timeout	Enabled by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds or 2,160 minutes.
ALG	Select an ALG (Application Layer Gateway) service option if applicable.
Source Ports and Port Ranges	Enter the source port or port range for the protocol.

[Table 273 on page 796](#) includes the settings and guidelines for the various protocol types.

**Table 273: Create Protocol Type Settings**

Field	Description
<b>UDP</b>	
Destination Port	Enter a destination port number for UDP. This is a value or value range from 0 through 65,535.
<b>Advanced Settings</b>	
Enable Inactivity Timeout	Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes.

Table 273: Create Protocol Type Settings (*continued*)

Field	Description
ALG	Select an ALG (Application Layer Gateway) service option if applicable.
Source Ports and Port Ranges	Enter a source port or port range for UDP. This is a value or value range from 0 through 65,535.
<b>ICMP</b>	
Enable Inactivity Timeout	Enabled by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes.
ICMP Type	Enter a value from 0 through 225 for the ICMP message type. For example, enter 1 for host unreachable. You can find these values in RFC 792.
ICMP Code	Enter a value from 0 through 225 for the ICMP code. For example, enter 0 for echo reply. You can find these values in RFC 792.
<b>SUN-RPC</b>	
Destination Port (available if Enable ALG is selected)	Enter a destination port for SUN-RPC. This is a value or value range from 0 through 65,535.
Enable Inactivity Timeout	Enabled by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes.
Enable ALG	Not selected by default. If you enable ALG for this protocol, you must enter a destination port in the field that becomes available.
RPC Program Number	Enter a value or value range for the RPC (remote procedure call) service. For example, enter 100,017 for remote execution. You can find these values in RFC 5531.
Protocol Type	Select TCP or UDP for the protocol type.
<b>MS-RPC</b>	
Destination Port (available if Enable ALG is selected)	Enter a destination port for MS-RPC. This is a value or value range from 0 through 65,535.
Enable Inactivity Timeout	Enabled by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes.
Enable ALG	Not selected by default. If you enable ALG for this protocol, you must enter a destination port number in the field that becomes available.

Table 273: Create Protocol Type Settings (*continued*)

Field	Description
UUID	Enter the corresponding UUID value for the MS-RPC service. For predefined values, refer to MS-RPC UUID Mappings.
Protocol Type	Select TCP or UDP for the protocol type.
<b>ICMPv6</b>	
Enable Inactivity Timeout	Selected by default. Enter a timeout value for this protocol in seconds or minutes. The maximum values are 129,600 seconds and 2,160 minutes.
ICMP Type	Enter a value from 0 through 225 for the ICMPv6 message type. You can find these values in RFC 4443.
ICMP Code	Enter a value from 0 through 225 for the ICMPv6 code. You can find these values in RFC 4443.
Destination Port	Use other to create protocols that do not match the provided type categories. Enter a destination port for the other protocol. This is a value or value range from 0 through 65,535.

## RELATED DOCUMENTATION

[Editing and Deleting Protocols | 798](#)
[About the Services Page | 792](#)
[Creating Services and Service Groups | 793](#)

## Editing and Deleting Protocols

### IN THIS SECTION

- [Editing Protocols | 799](#)

- [Deleting Protocols | 799](#)

You can edit and delete protocols through the **Services** page.

## Editing Protocols

To modify the parameters configured for a protocol:

1. Select **Configuration > Shared Objects > Services** .

The **Services** page appears.

2. Select the service to which the protocol you want to edit is associated, and click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit Service**.

The **Edit Service** page appears, listing the protocols associated with the service in **Protocols** table.

3. Select the protocol that you want to edit, and then click on the edit icon (pencil symbol) on the right top corner of the **Protocols** table, or right-click and select **Edit Protocol**.

The **Edit Protocol** page appears, showing the same fields as those seen when you create a new protocol.

4. Modify the parameters of the protocol according to the guidelines provided in [“Creating Protocols” on page 795](#).

5. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the modified protocol appears in the **Protocols** table.

## Deleting Protocols

To delete a protocol:

1. Select **Configuration > Shared Objects > Services**.

The **Services** page appears.

2. Select the service to which the protocol you want to delete is associated, and click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit Service**.

The **Edit Service** page appears, listing the protocols associated with the service in **Protocols** table.

3. Select the protocol you want to delete and then click the delete icon (X).

An alert message appears, verifying that you want to delete the protocol.

4. Click **Yes** to delete the protocol. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected protocol is deleted.

## RELATED DOCUMENTATION

[Services and Service Groups Overview | 791](#)

[About the Services Page | 792](#)

[Creating Services and Service Groups | 793](#)

[Editing, Cloning, and Deleting Services and Service Groups | 800](#)

[Creating Protocols | 795](#)

## Editing, Cloning, and Deleting Services and Service Groups

### IN THIS SECTION

- [Editing Services and Service Groups | 800](#)
- [Cloning Services or Service Groups | 801](#)
- [Deleting Services and Service Groups | 801](#)

You can edit, clone, and delete services and service groups from the **Services** page.

### Editing Services and Service Groups

To modify the parameters configured for a service or service group:

1. Select **Configuration > Shared Objects > Services**.

The **Services** page appears.

2. Select the service or service group that you want to edit, and click on the edit icon (pencil symbol) on the right top corner of the table, or right-click and select **Edit Service**.

The **Edit Service** page appears, displaying the same options that are displayed when creating a new service or service group.



3. Modify the parameters according to the guidelines provided in [“Creating Services and Service Groups” on page 793](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, you will see the modified service or service group in the **Services** page.

## Cloning Services or Service Groups

To clone a service or service group:

1. Select **Configuration > Shared Objects > Services**.

The **Services** page appears.

2. Right-click on the service or service group that you want to clone and then click **Clone**, or select **More > Clone**.

The **Clone Service** page appears with editable fields.

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

If you click **OK**, the cloned service or service group will appear beneath the selected service or service group.

## Deleting Services and Service Groups

To delete a service or service group:

1. Select **Configuration > Shared Objects > Services**.

The **Services** page appears.

2. Select the service or service group you want to delete and then click the delete icon (**X**).

An alert message appears, verifying that you want to delete the service or service group.

3. Click **Yes** to delete the service or service group. If you do not want to delete, click **Cancel** instead.

If you click **Yes**, the selected service or service group is deleted.

## RELATED DOCUMENTATION

---

[Services and Service Groups Overview | 791](#)

---

[About the Services Page | 792](#)

---

[Creating Services and Service Groups | 793](#)

---

## Application Signatures Overview

Juniper Networks regularly updates the predefined application signature database, making it available to subscribers on the Juniper Networks website. This database includes signature definitions of known application objects that can be used to identify applications for tracking, firewall policies, and quality-of-service prioritization.

Use the **Application Signatures** page to get an overall, high-level view of your application signature settings. You can filter and sort this information to get a better understanding of what you want to configure.

### RELATED DOCUMENTATION

---

[About the Application Signatures Page | 803](#)

---

[Adding Application Signatures | 806](#)

---

[Editing, Cloning, and Deleting Application Signatures | 811](#)

---

[Adding Application Signature Groups | 813](#)

---

[Editing, Cloning, and Deleting Application Signature Groups | 814](#)

---

[Signature Database Overview | 400](#)

---

## About the Application Signatures Page

To access this page, select **Configuration > Shared Objects > Application Signatures**.

Use the **Application Signatures** page to view application signatures that are already downloaded and to create, modify, clone, and delete custom application signature groups. The **Application Signatures** page displays the name, object type, category and subcategory, risk associated with, and characteristics of the signature. You can create custom application signature groups with a set of similar signatures for consistent reuse when defining policies.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add an application signature. See [“Adding Application Signatures” on page 806](#).
- Modify, clone, or delete an application signature. See [“Editing, Cloning, and Deleting Application Signatures” on page 811](#).
- Add an application signature group. See [“Adding Application Signature Groups” on page 813](#).
- Modify, clone, or delete an application signature group. See [“Editing, Cloning, and Deleting Application Signature Groups” on page 814](#).
- View the configured parameters of an application signature or application signature group. Click the details icon that appears when you hover over the name of an image or click **More > Details**.
- Show or hide columns in the **Application Signatures**. Click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for a specific application signature or application signature group. Click the Search icon in the top right corner of the page to search for an application signature or application signature group.
- Filter the application signature information based on select criteria. To do this, select the filter icon at the top right-hand corner of the table. The columns in the grid change to accept filter options. Select the filter options; the table displays only the data that fits the filtering criteria.

### Field Descriptions

[Table 274 on page 803](#) provides guidelines on using the fields on the **Application Signatures** page.

Table 274: Fields on the Application Signatures Page

Field	Description
Name	Name of the application signature or application signature group.

Table 274: Fields on the Application Signatures Page (*continued*)

Field	Description
Object Type	Signature type—either application signature or application signature group.
Category	UTM category of the application signature. For example, the value of <b>Category</b> can be Messaging, Web, Infrastructure, Remote-Access, Multimedia, and so on.
Subcategory	UTM subcategory of the application signature. For example, the value of <b>Subcategory</b> can be Wiki, File-Sharing, Multimedia, Social-Networking, News, and so on.
Risk	Level of risk associated with the application signature. For example, the value of <b>Risk</b> can be Low, High, unsafe, and so on.
Characteristic	One or more characteristics of the application signature.
Predefined or Custom	A list of predefined application signatures and application signature groups, and a list of custom application signature groups that you created.

## RELATED DOCUMENTATION

[Application Signatures Overview | 802](#)

[Adding Application Signatures | 806](#)

[Editing, Cloning, and Deleting Application Signatures | 811](#)

[Adding Application Signature Groups | 813](#)

[Editing, Cloning, and Deleting Application Signature Groups | 814](#)

[Signature Database Overview | 400](#)

[About the Signature Database Page | 401](#)

## Understanding Custom Application Signatures

Application identification supports user-defined custom application signatures to detect applications as they pass through the device. Custom application signatures are unique to your environment and are not included in the predefined application package. You use this custom application signature in SD-WAN policies and firewall policies to steer, and block traffic when a threat is detected.

Custom application signatures are required to:

- Control traffic particular to an environment.
- Bring visibility to unknown or unclassified applications.
- Identify Layer 7 applications or temporary applications, and to achieve further granularity of known applications.
- Perform QoS for your specific application.

CSO supports the following custom application signatures:

- **ICMP-Based Mapping**—The Internet Control Message Protocol (ICMP) mapping technique maps standard ICMP message types and optional codes to a unique application name. This mapping technique lets you differentiate between various types of ICMP messages.
- **IP Address-Based Mapping**—Layer 3 and Layer 4 address mapping defines an application by the IP address and optional port range of the traffic.

To ensure adequate security, use address mapping when the configuration of your private network predicts application traffic to or from trusted servers. Address mapping provides efficiency and accuracy in handling traffic from a known application.

With Layer 3 and Layer 4 address-based custom applications, you can match the IP address and port range to destination IP address and port range. When IP address and port range are configured, they must match the destination tuples (IP address and port range) of the packet.

For example, consider a Session Initiation Protocol (SIP) server that initiates sessions from its known port 5060. Because all traffic from this IP address and port is generated by only the SIP application, the SIP application can be mapped to an IP address of the server and port 5060 for application identification. In this way, all traffic with this IP address and port is identified as SIP application traffic.

- **IP Protocol-Based Mapping**—Standard IP protocol numbers can map an application to IP traffic. As with address mapping, to ensure adequate security, use IP protocol mapping only in your private network for trusted servers.
- **Layer 7-Based Signatures**—Layer 7 custom signatures define an application running over TCP or UDP or Layer 7 applications. Layer 7-based custom application signatures are required for the identification of multiple applications running on the same Layer 7 protocols. For example, applications such as Facebook and Yahoo Messenger can run over HTTP, but there is a need to identify them as two different applications running on the same Layer 7 protocol. The custom signature is cacheable for Layer 7 signatures only. You can create multiple signatures and each signature can contain multiple members (maximum 15 members).

Layer 7-based custom application signatures detect applications based on the patterns in HTTP contexts. However, some HTTP sessions are encrypted in SSL, also called Transport Layer Security (TLS). Application identification can extract the server name information or the server certification from the TLS or SSL sessions. It can also detect patterns in TCP or UDP payload in Layer 7 applications.

RELATED DOCUMENTATION

<a href="#">Adding Application Signatures   806</a>
<a href="#">Editing, Cloning, and Deleting Application Signatures   811</a>

## Adding Application Signatures

You can add custom application signatures for applications that are not included in Juniper Networks predefined application database. When you add custom application signatures, make sure that your application signatures are unique, by providing a unique and relevant name.

You can add custom application signatures by specifying a name, protocol, port number where the application runs, and match criteria.

To create a custom application signature:

1. Select **Configuration > Shared Objects > Application Signatures**.
2. Click **Create > Signature**.
3. Complete the configuration according to the guidelines provided in [Table 275 on page 806](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new application signature with your configurations is created. You use this application signature while creating SD-WAN policy intents.

[Table 275 on page 806](#) provides guidelines on using the fields on the **Create Application Signature** page.

Table 275: Fields on the Create Application Signature Page

Field	Description
Name	Enter a unique name that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters.
Description	Enter a description for the application signature.
Signature Order and Priority	

Table 275: Fields on the Create Application Signature Page (*continued*)

Field	Description
Order	<p>Enter the order for the custom application signature. A lower order value has higher priority. This option is used when multiple custom application signatures of the same type match the same traffic. However, you cannot use this option to prioritize among different type of applications such as TCP stream-based applications against TCP port-based applications or IP address-based applications against port-based applications.</p> <p>Range is 1-50000.</p>
Priority	Specify the application signature priority (high or low) over other application signatures.
<b>Signature Classification</b>	
Category	Enter the category of the application signature. For example, Messaging, Web, Infrastructure, Remote-Access, Multimedia, and so on.
Sub Category	Enter the subcategory of the application signature. For example, Wiki, File-Sharing, Multimedia, Social-Networking, News, and so on.
Risk	Select the level of risk associated with the application signature. For example, low, moderate, high, critical, unsafe, and so on.
Characteristics	Enter one or more characteristics of the application signature. For example, supports file transfer, loss of productivity, and so on.
<b>Application Criteria</b>	<p>Enable one or more application matching criteria:</p> <ul style="list-style-type: none"> <li>• ICMP Mapping</li> <li>• IP Protocol Mapping</li> <li>• Address Mapping</li> <li>• L7 Signature</li> </ul>
<i>ICMP Mapping</i>	<p>Click the toggle button to specify the Internet Control Message Protocol (ICMP) value for an application while configuring custom application signatures for application identification.</p> <p>The ICMP mapping technique maps standard ICMP message types and optional codes to a unique application name. The ICMP code and type provide additional specification, for packet matching in an application definition.</p>
ICMP Type	<p>Enter an ICMP value for the application. The ICMP mapping technique maps standard ICMP message types and optional codes to a unique application name.</p> <p>Range is 0-254.</p>

Table 275: Fields on the Create Application Signature Page (*continued*)

Field	Description
ICMP Code	<p>Enter an ICMP code for the application. The field provides further information (such as RFCs) about the ICMP type field.</p> <p>Range is 0-254.</p>
<i>IP Protocol Mapping</i>	<p>Click the toggle button to specify the IP protocol value for an application. This parameter is used to identify an application based on its IP protocol value and is intended only for IP traffic. To ensure adequate security, use IP protocol mapping only in your private network for trusted servers.</p>
IP Protocol	<p>Enter an IP Protocol number for the application. Standard IP protocol numbers map an application to IP traffic. To ensure adequate security, use IP protocol mapping only in your private network for trusted servers.</p> <p>Range is 0-254.</p> <p>You can find a complete list of industry standard protocol numbers at the <a href="#">IANA website</a>.</p> <p><b>NOTE:</b> You cannot use IP protocol numbers 1(ICMP), 6(TCP ) and 17(UDP) for custom application signature creation. Instead, we recommend you to use L7 signature policies for these protocols.</p>
<i>Address Mapping</i>	<p>Click the toggle button to specify address mapping information. Layer 3 and Layer 4 address mapping defines an application by matching the destination IP address or port range (optional) of the traffic. Use the address mapping option to configure custom applications signatures when the configuration of your private network predicts application traffic to or from trusted servers.</p> <p>Address mapping provides efficiency and accuracy while handling traffic from a known application. For more information, see <a href="#">Table 276 on page 809</a>.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• You must specify either IP address or TCP/UDP port range for address mapping.</li> <li>• If both IP address and TCP/UDP ports are configured, both should match destination tuples (IP address and port range) of the packet.</li> </ul>
<i>L7 Signature</i>	<p>Click the toggle button to specify the Layer 7-based custom application signatures that are required to identify the multiple applications running on the same L7 protocols. Configure a custom signature based on L7 applications. You create Layer 7-based custom application signatures for the identification of multiple applications running on the same L7 protocols. For example, applications such as Facebook and Yahoo Messenger can both run over HTTP, but there is a need to identify them as two different applications running on the same Layer 7 protocol. For more information, see <a href="#">Table 277 on page 809</a>.</p>



Table 275: Fields on the Create Application Signature Page (continued)

Field	Description
Cacheable	<p>Click the toggle button to enable caching of application identification results on the device.</p> <p>Enable this option to <b>True</b> only when L7 signatures are configured alone in a custom signature. This option is not supported for address-based, IP protocol-based, and ICMP-based custom application signatures.</p>

Table 276: Fields on the Add IP Address Mapping Page

Field	Description
Name	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed; maximum length is 63 characters.
IP Address	Enter the destination IPv4 or IPv6 address of the application.
CIDR	<p>Enter a CIDR value for the IP Address that you assign to the application.</p> <p>Range for IPv4 address is 1-32.</p> <p>Range for IPv6 address is 1-128.</p>
TCP Port range	<p>(Optional) Enter space-separated list of ports or port ranges to match a TCP destination port for Layer 3 and Layer 4 address-based custom applications.</p> <p>The range is 0-65535.</p> <p>Example: 80-82 443.</p>
UDP port range	<p>(Optional) Enter space-separated list of ports or port ranges ranges to match an UDP destination port for Layer 3 and Layer 4 address-based custom applications. The range is 0-65535.</p> <p>Example: 160-162 260.</p>

Table 277: Fields on the Add Signature Page

Field	Description
Over Protocol	<p>Displays the signature to match the application protocol.</p> <p>Example: HTTP.</p>
Signature Name	Enter a unique name that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters.

Table 277: Fields on the Add Signature Page (*continued*)

Field	Description
Port Range	<p>Enter the port range for the application.</p> <p>Range is 0-65535</p> <p>Example: 80-82,443</p>
<b>Add Members</b>	Click the plus icon (+) to add the member details.
Member No.	Enter the member name for a custom application signature. Custom signatures can contain multiple members that define attributes for an application. (The supported member name range is m01–m15.)
Context	<p>Select the service-specific context.</p> <ul style="list-style-type: none"> <li>For L7 Signatures over HTTP, select any of the following context: <ul style="list-style-type: none"> <li>http-get-url-parsed-param-parsed</li> <li>http-header-content-type</li> <li>http-header-cookie</li> <li>http-header-host</li> <li>http-header-user-agent</li> <li>http-post-url-parsed-param-parsed</li> <li>http-post-variable-parsed</li> <li>http-url-parsed</li> <li>http-url-parsed-param-parsed</li> </ul> </li> <li>For L7 Signatures over SSL, select the service-specific context as <b>ssl-server-name</b>.</li> <li>For L7 Signatures over TCP, select the service-specific context as <b>stream</b>.</li> <li>For L7 Signatures over UDP, select the service-specific context as <b>stream</b>.</li> </ul> <p>For possible combinations of context and direction for L7 application creation, refer <a href="#">context (Application Identification)</a>.</p>
Direction	<p>Select the direction of the packet flow to which the signature must be matched.</p> <ul style="list-style-type: none"> <li>any—The direction of packet flow can either be from client-side to server-side or from server-side to client-side.</li> <li>client-to-server—The direction of packet flow is from client-side to server-side.</li> <li>server-to-client—The direction of packet flow is from server-side to client-side.</li> </ul>
Pattern	Enter the deterministic finite automaton (DFA) pattern matched on the context. The DFA pattern specifies the pattern to be matched for the signature. Maximum length is 128.

## RELATED DOCUMENTATION

- [Understanding Custom Application Signatures | 804](#)
- [Editing, Cloning, and Deleting Application Signatures | 811](#)
- [Creating SD-WAN Policy Intents | 557](#)
- [Adding SLA-Based Steering Profiles | 572](#)
- [Adding Path-Based Steering Profiles | 583](#)

## Editing, Cloning, and Deleting Application Signatures

### IN THIS SECTION

- [Editing Application Signatures | 811](#)
- [Cloning Application Signatures | 812](#)
- [Deleting Application Signatures | 812](#)

You can edit, clone, and delete application signatures from the **Application Signatures** page.

### Editing Application Signatures

To modify the parameters configured for a cloned user-created (custom) application signature:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Select the application signature that you want to edit, and then click on the edit icon (pencil), on the top right corner of the table, or right-click and select **Edit Application Signature**.

The **Edit Application Signature** page appears, showing the same options as those displayed when you create a new application signature.

3. Modify the parameters according to the guidelines provided in *Adding Application Signatures*.
4. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified application signature appears on the **Application Signatures** page.

## Cloning Application Signatures

You can clone a custom application signature when you want to reuse an existing application signature, but with a few minor changes. This way, you can save time recreating the application signature from scratch.

To clone a custom application signature:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Select the application signature that you want to clone, and then select **More > Clone**, or right-click the application signature and then select **Clone**.

The **Clone** page appears with editable fields.

3. Modify the fields as required. Refer to the guidelines provided in *Adding Application Signatures*.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The cloned application signature is displayed on the **Application Signatures** page.

## Deleting Application Signatures

To delete a cloned user-created (custom) application signature:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Select the application signature you want to delete and then click the delete icon.

An alert message appears to verify that you want to delete the selected application signature.

3. Click **Yes** to delete the selected application signature. If you do not want to delete, click **Cancel** instead.

The deleted application signature is removed from the **Application Signatures** page.

## RELATED DOCUMENTATION

[Adding Application Signatures | 806](#)

[Editing, Cloning, and Deleting Application Signatures | 811](#)

## Adding Application Signature Groups

Application identification supports custom application signatures to detect applications as they pass through the device. When you add custom signature groups, make sure that your signature groups are unique, by providing a unique and relevant name.

To add an application signature group:

1. Select **Configure > Shared Objects > Application Signatures**.
2. Click the add icon (+).
3. Complete the configuration according to the guidelines provided in [Table 278 on page 813](#).
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

A new application signature group with your configurations is created. You can use this application signature group in firewall, NAT, and SD-WAN policies.

[Table 278 on page 813](#) provides guidelines on using the fields on the **Create Application Signature Group** page.

Table 278: Fields on the Create Application Signature Group Page

Field	Description
Name	Enter a unique name that is a string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters.
Group Members	Click the add icon (+) to add signatures to your application group. On the <b>Add Application Signatures</b> page, select the check boxes next to the signatures you want to add to the group.

### RELATED DOCUMENTATION

[Application Signatures Overview | 802](#)

[About the Application Signatures Page | 803](#)

[Editing, Cloning, and Deleting Application Signature Groups | 814](#)

[Signature Database Overview | 400](#)

[About the Signature Database Page | 401](#)

## Editing, Cloning, and Deleting Application Signature Groups

### IN THIS SECTION

- [Editing Application Signature Groups | 814](#)
- [Cloning Application Signature Groups | 814](#)
- [Deleting Application Signature Groups | 815](#)

You can edit, clone, and delete application signature groups from the **Application Signatures** page.

### Editing Application Signature Groups

To modify the parameters configured for an application signature group:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Select the application signature group that you want to edit, and then select **More > Edit**, or click on the edit icon (pencil symbol), on the top right corner of the table, or right-click and select **Edit**.

The **Edit** page appears, showing the same options as those displayed when you create a new application signature group.

3. Modify the parameters according to the guidelines provided in [“Adding Application Signature Groups” on page 813](#).
4. Click **Save** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified application signature group appears in the **Application Signatures** page.

### Cloning Application Signature Groups

You can clone an application signature group when you want to reuse an existing application signature group, but with a few minor changes. This way, you can save time recreating the application signature group from the start.

To clone an application signature group:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Right-click the application signature group that you want to clone and then select **Clone**, or select **More > Clone**.

The **Clone** page appears with editable fields.

3. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The cloned application signature group is displayed on the **Application Signatures** page.

## Deleting Application Signature Groups

To delete an application signature group:

1. Select **Configuration > Shared Objects > Application Signatures**.

The **Application Signatures** page appears.

2. Select the application signature group you want to delete and then click the delete icon **(X)**.

An alert message appears, verifying that you want to delete the selected item.

3. Click **Yes** to delete the selected application signature group. If you do not want to delete, click **Cancel** instead.

## RELATED DOCUMENTATION

---

[Application Signatures Overview | 802](#)

---

[About the Application Signatures Page | 803](#)

---

[Adding Application Signature Groups | 813](#)

---

[Signature Database Overview | 400](#)

## About the Departments Page

To access this page, click **Configuration > Shared Objects > Departments**.

You can use the Departments page to add, view, or delete departments. A department is a grouping of LAN segments within a site. You use departments to apply specific policies to LAN segments that are members of a department.

Tasks You Can Perform

You can perform the following tasks from this page:

- Add a Department. See [“Adding a Department” on page 816](#).
- Delete a department. See [“Deleting a Department” on page 817](#).

Field Descriptions

[Table 279 on page 816](#) shows the descriptions of the fields on the **Departments** page.

Table 279: Fields on the Departments Page

Field	Description
Name	Displays the name of the department.
Site/LAN Segments	Displays the sites and LAN segments that are associated with the department.
VPN	Displays the VPN to which the department is assigned.
Data Center	Displays whether the department is a data center department or not.
Description	Displays the description of the department.
UUID	Displays the Universally Unique Identifier (UUID) of the department.
Network UUID	Displays an internal UUID used by Contrail Service Orchestration (CSO).

RELATED DOCUMENTATION

<a href="#">Adding a Department   816</a>
<a href="#">Deleting a Department   817</a>

Adding a Department

You can add departments from the **Configuration > Shared Objects > Departments** page.



To add a department:

1. Click the add icon (+) on the **Departments** page.  
The **Add Department** page appears.
2. Complete the configuration settings according to the guidelines provided in [Table 280 on page 817](#).
3. Click **OK**.

You are taken to the **Departments** page where the department that you added is displayed.

Table 280: Fields on the Add Department Page

Field	Description
Name	Enter a unique name for the department, which can contain alphanumeric characters and some special characters (. -). No spaces are allowed and the maximum length is 15 characters.
Description	Enter a description of the department.
VPN	The default VPN to which the department is assigned is displayed.  <b>NOTE:</b> This field is displayed only if network segmentation is disabled for the tenant.
Data Center Department	Select whether the department is a data center department (True) or not (False).  A data center department can be attached (by using LAN segments) only to enterprise hubs.

RELATED DOCUMENTATION

<a href="#">About the Departments Page   815</a>
<a href="#">Deleting a Department   817</a>

## Deleting a Department

You can delete departments by clicking the delete icon (X) on the **Departments** page. You can delete only one department at a time. You cannot delete a department that is associated with one or more LAN segments. Before you delete the department, you must reassign the LAN segments assigned to that department.

To delete a department:

1. Click **Configuration > Shared Objects > Departments**.

The Departments page appears.

2. Select the department that you want to delete.

3. Click the delete icon (X).

The Delete Department page appears.

4. Click **OK** to confirm the deletion.

The department is deleted and you are returned to the Departments page

## RELATED DOCUMENTATION

[About the Departments Page | 815](#)

[Adding a Department | 816](#)

## About the MAC Addresses Page

To access this page, click **Configuration > Shared Objects > MAC**.

You can configure firewall filter terms with media access control (MAC) address as source and destination endpoints to permit or block packets to a port.

Use the MAC Addresses page to add, view, or delete MAC addresses.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a MAC Address. See [“Add a MAC Address Endpoint” on page 819](#).
- Edit or delete a MAC Address. See [“Edit or Delete MAC Address Endpoint” on page 820](#).

### Field Descriptions

[Table 281 on page 819](#) shows the descriptions of the fields on the **MAC Addresses** page.

Table 281: Fields on the MAC Addresses Page

Field	Description
MAC Address	Displays the MAC address of a Layer 2 packet.
Description	Displays the description of the MAC address.
UUID	Displays the Universally Unique Identifier (UUID) of the MAC address.

## RELATED DOCUMENTATION

[Add a MAC Address Endpoint | 819](#)

[Edit or Delete MAC Address Endpoint | 820](#)

## Add a MAC Address Endpoint

Use the MAC address page to add a MAC address, which you can specify as a source endpoint or destination endpoint in firewall filter terms.

To add a MAC address:

1. Select **Configuration > Shared Objects > MAC**.

The MAC address page appears.

2. Click the add icon (+) to add a new MAC address.

The Add MAC Endpoint page appears.

3. Complete the configuration according to the guidelines provided in [Table 282 on page 820](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The MAC address is created. You are returned to the MAC Addresses page where a confirmation message is displayed.

[Table 282 on page 820](#) provides guidelines on using the fields on the **Add MAC Endpoint** page.

Table 282: Fields on the Add MAC Endpoint Page

Field	Description
Name	<p>Enter a valid MAC address. MAC address must be 12 digit hexadecimal number.</p> <p>Format: ([0-9a-fA-F][0-9a-fA-F][:-.]){5}([0-9a-fA-F][0-9a-fA-F])</p> <p>Example: 00:11:22:33:44:55</p>
Description	Enter a description for the MAC address.

## WHAT'S NEXT

After adding MAC address, you can specify the MAC address as source endpoint or destination endpoint in firewall filter terms, see [Add Terms to Firewall Filters | 767](#).

## RELATED DOCUMENTATION

[About the MAC Addresses Page | 818](#)

[Edit or Delete MAC Address Endpoint | 820](#)

## Edit or Delete MAC Address Endpoint

## IN THIS SECTION

- [Edit MAC Address | 821](#)
- [Delete MAC Address | 821](#)

You can edit or delete MAC Addresses from the **MAC Addresses** page.

## Edit MAC Address

**NOTE:** You cannot modify the name of the MAC address.

To modify the parameters configured for a MAC address:

1. Select **Configuration > Shared Objects > MAC**.

The **MAC Address** page appears.

2. Select the MAC address that you want to edit, and then click on the edit icon (pencil), on the top right corner of the table.

The **Edit MAC Endpoint** page appears, showing the same options as those displayed when you create a new MAC address.

3. Modify the description for the MAC Endpoint.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified MAC endpoint description appears on the **MAC Addresses** page.

## Delete MAC Address

To delete a MAC address:

1. Select **Configuration > Shared Objects > MAC**.

The **MAC Addresses** page appears.

2. Select the MAC address that you want to delete and then click the delete icon.

An alert message appears to verify that you want to delete the selected MAC address.

3. Click **Yes** to delete the selected MAC address. If you do not want to delete, click **No** instead.

The deleted MAC address is removed from the MAC Addresses page.

## RELATED DOCUMENTATION

[About the MAC Addresses Page](#) | 818

## About the Protocols Page

To access this page, click **Configuration > Shared Objects > Protocols**.

You can configure firewall filter terms with protocols (name or value) as source and destination endpoints to permit or block traffic to a specific port.

Use the Protocols page to add, view, or delete protocols.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Add a protocol. See [“Add a Protocol Endpoint” on page 823](#).
- Edit or delete a protocol. See [“Edit or Delete Protocol Endpoint” on page 824](#).

### Field Descriptions

[Table 283 on page 822](#) shows the descriptions of the fields on the **Protocols** page.

Table 283: Fields on the Protocols Page

Field	Description
Protocol	Displays the IPv4 protocol (name or value) for the port.
Description	Displays the description of the protocol.
UUID	Displays the Universally Unique Identifier (UUID) of the protocol.

### RELATED DOCUMENTATION

- | [Add a Protocol Endpoint | 823](#)
- 
- | [Edit or Delete Protocol Endpoint | 824](#)

# Add a Protocol Endpoint

Use the Protocols page to add a new protocol, which you can specify as a source endpoint or destination endpoint in firewall filter terms.

To add a protocol:

1. Select **Configuration > Shared Objects > Protocols**.

The Protocols page appears.

2. Click the add icon (+) to add a new protocol.

The Add Protocol Endpoint page appears.

3. Complete the configuration according to the guidelines provided in [Table 284 on page 823](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The new protocol is created. You are returned to the Protocols page where a confirmation message is displayed.

[Table 284 on page 823](#) provides guidelines on using the fields on the **Add Protocol Endpoint** page.

Table 284: Fields on the Add Protocol Endpoint Page

Field	Description
Protocol Number	Enter a valid protocol number.  Range is 0-255.  Example: egp (8), esp (50), gre (47), icmp (1), igmp (2), ipip (4), ospf (89), pim (103), rsvp (46), tcp (6), udp (17)
Description	Enter a description for the protocol.

## WHAT'S NEXT

After adding protocol, you can specify the protocol as source endpoint or destination endpoint in firewall filter terms, see [Add Terms to Firewall Filters](#) | 767.

## RELATED DOCUMENTATION

[About the Protocols Page](#) | 822

[Edit or Delete Protocol Endpoint](#) | 824

## Edit or Delete Protocol Endpoint

### IN THIS SECTION

- [Edit Protocols](#) | 824
- [Delete Protocols](#) | 825

You can edit or delete protocols from the **Protocols** page.

### Edit Protocols

**NOTE:** You cannot modify the protocol number.

To modify the parameters configured for a protocol:

1. Select **Configuration > Shared Objects > Protocols**.

The **Protocols** page appears.

2. Select the protocols that you want to edit, and then click on the edit icon (pencil), on the top right corner of the table.

The **Edit Protocol Endpoint** page appears, showing the same options as those displayed when you create a new protocol.



3. Modify the description for the protocol.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified protocol endpoint description appears on the **Protocols** page.

## Delete Protocols

To delete a protocol:

1. Select **Configuration > Shared Objects > Protocols**.

The **Protocols** page appears.

2. Select the protocols that you want to delete and then click the delete icon.

An alert message appears to verify that you want to delete the selected protocols.

3. Click **Yes** to delete the selected protocols. If you do not want to delete, click **No** instead.

The deleted protocol is removed from the Protocols page.

## RELATED DOCUMENTATION

[About the Protocols Page](#) | 822

[Add a Protocol Endpoint](#) | 823

## About the Ports Page

To access this page, click **Configuration > Shared Objects > Ports**.

You can configure firewall filter terms with ports (name or value) as source and destination endpoints to permit or block traffic to a specific port.

Use the Ports page to add, view, or delete ports.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Add a port. See [“Add a Port Endpoint” on page 826](#).

- Edit or delete a port. See [“Edit or Delete Port Endpoint” on page 828](#).

Field Descriptions

[Table 285 on page 826](#) shows the descriptions of the fields on the **Ports** page.

Table 285: Fields on the Ports Page

Field	Description
Port	Displays the port name or value.
Description	Displays the description of the port.
UUID	Displays the Universally Unique Identifier (UUID) of the port.

RELATED DOCUMENTATION

<a href="#">Add a Port Endpoint   826</a>
<a href="#">Edit or Delete Port Endpoint   828</a>

Add a Port Endpoint

Use the Ports page to add a port, which you can specify as a source endpoint or destination endpoint in firewall filter terms.

To add a port:

1. Select **Configuration > Shared Objects > Ports**.  
The Ports page appears.
2. Click the add icon (+) to add a new port.  
The Add Port Endpoint page appears.
3. Complete the configuration according to the guidelines provided in [Table 286 on page 827](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.
- The Port is created. You are returned to the Ports page where a confirmation message is displayed.

[Table 286 on page 827](#) provides guidelines on using the fields on the **Add Port Endpoint** page.

**Table 286: Fields on the Add Port Endpoint Page**

Field	Description
Name	<p>Enter a TCP or UDP port field.</p> <p>Range is 0-65535.</p> <p>Typically, you specify the port match condition in conjunction with the protocol match condition to determine which protocol is used on the port. For number, you can specify one of the following text synonyms (the port numbers are also listed):</p> <p>Example: afs (1483), bgp (179), biff (512), bootpc (68), bootps (67), cmd (514), cvspserver (2401), dhcp (67), domain (53), eklogin (2105), ekshell (2106), exec (512), finger (79), ftp (21), ftp-data (20), http (80), https (443), ident (113), imap (143), kerberos-sec (88), klogin (543), kpasswd (761), krb-prop (754), krbupdate (760), kshell (544), ldap (389), login (513), mobileip-agent (434), mobilip-mn (435), msdp (639), netbios-dgm (138), netbios-ns (137), netbios-ssn (139), nfsd (2049), nntp (119), ntalk (518), ntp (123), pop3 (110), pptp (1723), printer (515), radacct (1813),radius (1812), rip (520), rkinit (2108), smtp (25), snmp (161), snmptrap (162), snpp (444), socks (1080), ssh (22), sunrpc (111), syslog (514), tacacs-ds (65), talk (517), telnet (23), tftp (69), timed (525), who (513), xdmcp (177), zephyr-clt (2103), zephyr-hm (2104)</p>
Description	<p>Enter a description for the port.</p>

WHAT'S NEXT

After adding port, you can specify the port as source endpoint or destination endpoint in firewall filter terms, see [Add Terms to Firewall Filters](#) | [767](#).

RELATED DOCUMENTATION

[Add a Port Endpoint](#) | [826](#)

## Edit or Delete Port Endpoint

### IN THIS SECTION

- [Edit Ports | 828](#)
- [Delete Ports | 829](#)

You can edit or delete ports from the **Ports** page.

### Edit Ports

**NOTE:** You cannot modify the name of the port.

To modify the parameters configured for a port:

1. Select **Configuration > Shared Objects > Ports**.

The **Ports** page appears.

2. Select the port that you want to edit, and then click on the edit icon (pencil), on the top right corner of the table.

The **Edit Port Endpoint** page appears, showing the same options as those displayed when you create a new port.

3. Modify the description for the port.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

The modified port endpoint description appears on the **Ports** page.

## Delete Ports

To delete a port:

1. Select **Configuration > Shared Objects > Ports**.

The **Ports** page appears.

2. Select the port that you want to delete and then click the delete icon.

An alert message appears to verify that you want to delete the selected port.

3. Click **Yes** to delete the selected port. If you do not want to delete, click **No** instead.

The deleted port is removed from the Ports page.

### RELATED DOCUMENTATION

---

[Add a Port Endpoint | 826](#)

[Edit or Delete Port Endpoint | 828](#)



## Monitoring Jobs and Audit Logs

---

[Managing Jobs](#) | **831**

[Managing Audit Logs](#) | **837**

---

# Managing Jobs

## IN THIS CHAPTER

- [About the Jobs Page | 831](#)
- [Editing and Deleting Scheduled Jobs | 833](#)
- [Viewing Job Details | 835](#)
- [Retrying a Failed Job on Devices | 836](#)

## About the Jobs Page

To access this page, click **Monitor > Jobs**.

A job is an action that is performed on any object that is managed by CSO, such as a device, tenant, site, or user. You can monitor the status of jobs that have run or are scheduled to run in CSO. You can run the job immediately or schedule it for a later date and time. You can view the status of the job whether it is completed or failed. You can retry tssm.ztp type jobs that are failed.

Use this page to view the list of all jobs and the jobs that are scheduled to be executed. You can view general information about the jobs and the overall progress and status of the jobs. You can also edit and delete scheduled jobs.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View details about a job. See [“Viewing Job Details” on page 835](#).
- Retry a job. See [“Retrying a Failed Job on Devices” on page 836](#).
- Edit and delete scheduled jobs. See [“Editing and Deleting Scheduled Jobs” on page 833](#).

### Field Descriptions

[Table 287 on page 832](#) provides guidelines on using the fields on the Jobs page.

Table 287: Fields on the Jobs Page

Field	Description
Job Name	View the name of the job. CSO automatically generates the job name.  Example: MSEC_DOWNLOAD_IPS/APPLICATION_SIGNATURES_08_Jul_17_124229_024
Resource Name	View the resource name of the job.  Example: Download IPS/Application Signatures
Status	View the status of the job to know whether the job succeeded, failed, or in progress.  Example: Success
Owner	View the name of the owner who created the job.  Example: cspadmin
Number of Tasks	View the number of tasks associated with the job.  Example: 2  For example, the tasks <b>site.ucpe-32</b> and <b>customer.sdwan</b> are associated with the job.
Job ID	When a job is initiated from a object in CSO, CSO assigns a unique ID to that job, which serves to identify the job (along with the job type) on the Jobs page. The following is a list of some of the job types supported in CSO: <ul style="list-style-type: none"> <li>• Configure Sites</li> <li>• Download Signature</li> <li>• Create Sites</li> <li>• Remove Site</li> </ul>
Start Date	View the start date and time of a task associated with the job.
End State	View the end date and time of a task associated with the job.

## Field Descriptions

[Table 288 on page 833](#) provides guidelines on using the fields on the Scheduled Jobs page.



Table 288: Fields on the Scheduled Jobs Page

Field	Description
Schedule ID	<p>View the unique ID of the scheduled job. The value is generated by the database when a new schedule record is inserted into the database.</p> <p>Example: 48</p>
Name	<p>View the unique name of the scheduled job.</p> <p>Example: Tenant Delete_csp.tssm_remove_site_e340354716ae43859fad5ba15669eee2</p>
Status	<p>View the status of the last triggered job.</p> <p>The default status is scheduled.</p>
Record Type	<p>View the job type.</p> <p>Example: tssm onboard tenant</p>
Owner	<p>View the name of the owner who scheduled the job.</p> <p>Example: cspadmin</p>
Next Run Time	<p>View the time when the job is scheduled to run next.</p>

RELATED DOCUMENTATION

| [Editing and Deleting Scheduled Jobs](#) | 833

**Editing and Deleting Scheduled Jobs**

IN THIS SECTION

- [Editing Scheduled Jobs](#) | 834
- [Deleting Scheduled Jobs](#) | 834

You can edit and delete scheduled jobs. This topic contains the following sections:

## Editing Scheduled Jobs

You can modify the date and time of deployment of scheduled jobs.

To modify a scheduled job:

1. Select **Monitor > Jobs > Scheduled Jobs**.

The Jobs page displays all scheduled jobs.

2. Select the job that you want to reschedule the deployment, and click the edit icon.

The Edit Schedule page appears. This page displays the option that you have selected initially.

3. Modify the deployment type.

To execute the job immediately, select the **Run now** option.

To reschedule the job for a later date and time, select the **Schedule at a later time** option and select the date and time of deployment.

4. Click **Save** to save the changes.

A success message is displayed indicating that the scheduled job is modified.

## Deleting Scheduled Jobs

You can delete one or more scheduled jobs.

To delete a scheduled job:

1. Select **Monitor > Jobs > Scheduled Jobs**.

The Jobs page displays all scheduled jobs.

2. Select the job that you want to delete and then click the delete icon (X). You can select one or more jobs

The Confirm Delete page appears.

3. Click **Yes** to confirm.

A success message is displayed indicating that the scheduled job is deleted.

## RELATED DOCUMENTATION

[About the Jobs Page | 831](#)[Viewing Job Details | 835](#)

## Viewing Job Details

You can use the Detail for *Job-Name* page to view all the parameters of a job. This page has the following two tabs:

- **Details**—Displays the overall progress of the job and lists general information about the job (for example, the Job ID, Request ID, Created By, and so on). For more information about the field description on this page, see [“About the Jobs Page” on page 831](#).
- **Tasks**—Displays the number of tasks associated with the job. A green check mark (success ) or a red cross mark (failed) is displayed next to each task indicating the status of the task. You can click the Detailed View icon to view the summary of the task.

To view details of a job:

- Right-click the job name that you want to see the detailed view for and select **Detail View**.
- Select the job and click **More > Detail View**.
- Alternatively, hover over the job name and click the Detailed View icon that appears before it.

The Detail for *Job-Name* page appears, showing the details of the job and the number of tasks associated with the job. Click **View Logs** to view the status of the jobs. See [“About the Jobs Page” on page 831](#) for a description of each fields on this page.

## RELATED DOCUMENTATION

[About the Jobs Page | 831](#)

## Retrying a Failed Job on Devices

As a tenant user with the Job Retry capability, you can retry a failed job instead of redoing the tasks involved in the job, to save time.

**NOTE:** Before you retry a failed job, identify the reason for the failure and then fix it, before retrying the job.

For example, if the bootstrap process failed because the device could not establish an outbound SSH connection, you must fix the problem and ensure that the outbound SSH connection is established before you retry the bootstrap job.

You can retry only the following jobs that did not complete successfully on your devices:

- ZTP jobs
- Bootstrap jobs
- Edit Site jobs

To retry a job that was not successful:

1. Select **Monitor > Jobs**.

The Jobs page appears.

2. Select the failed job that you want to retry.

3. Click the **Retry Job** button on the top-right corner of the page.

A retry job is created and executed.

If the job is successful, a confirmation message appears and the job status changes to **Success** on the Jobs page.

### RELATED DOCUMENTATION

[About the Jobs Page | 831](#)

[Editing and Deleting Scheduled Jobs | 833](#)

# Managing Audit Logs

## IN THIS CHAPTER

- [Audit Logs Overview | 837](#)
- [About the Audit Logs Page | 838](#)
- [Viewing the Details of an Audit Log | 839](#)
- [Exporting Audit Logs | 842](#)
- [Purging Audit Logs \(After Archiving or Without Archiving\) | 843](#)

## Audit Logs Overview

An audit log is a record of a sequence of activities that have affected a specific operation or procedure. Audit logs are useful for tracing events and for maintaining historical data.

Audit logs contain information about tasks initiated by using the Contrail Service Orchestration (CSO) GUI or APIs. In addition to providing information about the resources that were accessed, audit log entries usually include details about user-initiated tasks, such as the name, role, and IP address of the user who initiated a task, the status of the task, and date and time of execution.

**NOTE:** Device-driven tasks (that is, tasks not initiated by the user) are not recorded in audit logs.

Administrators can use audit logs to review events. For example, administrators can identify the user accounts associated with an event, determine the chronological sequence of events. For audit log entries that have an associated job, you can click the hyperlinked job ID to go to the Jobs page, where you can view the details of the job.

## RELATED DOCUMENTATION

[About the Audit Logs Page | 838](#)

[Exporting Audit Logs | 842](#)

# About the Audit Logs Page

To access this page, select **Administration > Audit Logs**.

Use the Audit Logs page to view tasks that you have initiated either by using the Contrail Service Orchestration (CSO) GUI or APIs. You can also export audit logs as a comma-separated values (CSV) file and purge audit logs after archiving them or without archiving them.

## Tasks You Can Perform

You can perform the following tasks from this page:

- View the details of various user-initiated tasks by selecting **More > Details**. You can also mouse over the audit log and click on the **Detailed View** icon. See [“Viewing the Details of an Audit Log” on page 839](#).
- Export audit logs as a CSV file—See [“Exporting Audit Logs” on page 842](#).
- Purge audit logs—See [“Purging Audit Logs \(After Archiving or Without Archiving\)” on page 843](#).
- Search for audit logs by using keywords—Click the search icon and enter the search term in the text box and press Enter. The search results are displayed on the same page.
- Sort and filter audit logs:

**NOTE:** Sorting and filtering is applicable only to some fields.

- Click a column name to sort the audit logs based on the column name.
- Click the filter icon and select whether you want to show or hide column filters or apply a quick filter. For example, you can use audit log filtering to track user accounts that were added on a specific date, track configuration changes across a particular type of device, view services that were provisioned on specific devices, monitor user login and logout activities over time, and so on.
- Show or hide columns—Click the **Show Hide Columns** icon at the top right corner of the page and select the columns that you displayed on the Audit Logs page.

[Table 289 on page 838](#) provides description of the fields on the Audit Logs page.

**Table 289: Fields on the Audit Logs Page**

Field	Description
Username	Displays the username of the user who initiated the task.

Table 289: Fields on the Audit Logs Page (*continued*)

Field	Description
User IP	Displays the IP address of the client from which the user initiated the task. For tasks that do not have an associated user IP address, this field is blank.
Object Name	Displays the name of the object on which the task was initiated. An object can be a tenant, site, device, device image, template, and so on.
Task	Displays the name of the task that triggered the audit log. For example, tenant.create, device.create, site.configure, site.provision, tenant.update, and so on.
Description	Displays details about the task.
Status	<p>Displays the status of the task that triggered the audit log:</p> <ul style="list-style-type: none"> <li>• Success—Job or task was completed successfully.</li> <li>• Failure—Job or task failed and was terminated.</li> <li>• Job Scheduled—Job is scheduled but has not yet started.</li> <li>• Recurring Job Scheduled—Recurring job is scheduled.</li> </ul>
End Time	Displays the date and time at which the execution of the task was completed. This timestamp is stored in UTC time in the database, but is mapped to the local time zone of the client computer.
Job ID	<p>For tasks that have associated jobs, displays the ID of the job associated with the task.</p> <p>You can click the job ID to go to the Jobs page, where you can view the status of the job.</p>

## RELATED DOCUMENTATION

[About the Jobs Page](#) | 831

## Viewing the Details of an Audit Log

Use the Audit Log Details pane to view details of an audit log.

To view the details of an audit log:

1. Select **Administration > Audit Logs**.

The Audit Logs page appears displaying the audit logs.

2. Select the audit log for which you want to view details and click **More > Details**. Alternatively, you can mouse over the audit log, and click on the **Detailed View** icon.

The Audit Log Details pane appears on the right side of the Audit Logs page. [Table 290 on page 840](#) provides descriptions the fields on the Audit Log Details pane.

3. Click the close icon (X) to close the Audit Log Details pane.

You are returned to the Audit Logs page.

[Table 290 on page 840](#) provides descriptions the fields on the Audit Log Details pane.

**Table 290: Fields on the Audit Log Details Pane**

Field	Description
<b>Details</b>	
<b>User</b>	
Username	Displays the user who initiated the task.
User IP	Displays the IP address of the client from which the user initiated the task. For tasks that do not have an associated user IP address, this field is blank.
<b>Task</b>	
Task	Displays the name of the task that triggered the audit log. For example, tenant.create, device.create, site.configure, site.provision, tenant.update, and so on.
Status	Displays the status of the task that triggered the audit log: <ul style="list-style-type: none"> <li>• Success—Job or task was completed successfully.</li> <li>• Failure—Job or task failed and was terminated.</li> <li>• Job Scheduled—Job is scheduled but has not yet started.</li> <li>• Recurring Job Scheduled—Recurring job is scheduled.</li> </ul>
Description	Displays details about the task.
<b>Affected Objects</b>	



Table 290: Fields on the Audit Log Details Pane (*continued*)

Field	Description
Object Name	Displays the name of the affected object on which the task was initiated. An affected object can be a tenant, site, device, device image, template, and so on.. Click the hyperlinked object name to view details of the object:  <b>NOTE:</b> If the object is deleted or if you do not have permissions to view it, an error message is displayed.
Object UUID	Displays the Universally Unique Identifier (UUID) of the affected object.
<b>Log Info</b>	
Audit Log ID	Displays the automatically-generated unique ID of the audit log associated with the task.
Job ID	For tasks that have associated jobs, displays the ID of the job associated with the task.  You can click the job ID to go to the Jobs page, where you can view the status of the job.
End Time	Displays the date and time at which the task completed execution. This timestamp is stored in UTC time in the database, but is mapped to the local time zone of the client computer.
<b>Raw Audit Log</b>	
Microservice	Displays the name of the microservice that initiated the task.
Raw Audit Log	Displays all the fields of the audit log that are stored in the database. The raw audit log typically contains additional details or parameters associated with the audit log.

## RELATED DOCUMENTATION

[Audit Logs Overview | 837](#)
[About the Audit Logs Page | 838](#)

## Exporting Audit Logs

You can export audit logs as a comma-separated values (CSV) file that can be opened or edited using an application such as Microsoft Excel. You can view and analyze the exported audit logs, as needed.

To export the audit logs:

1. Select **Administration > Audit Logs**.

The Audit Logs page appears displaying the audit logs.

2. Click **Export**.

The Export Audit Logs page appears.

3. Specify the time period for which you want to export the audit logs according to the guidelines provided in [Table 291 on page 842](#).

**NOTE:** You can export audit logs for a maximum of 30 days prior to the current date and time. For example, if the current date is May 31, 2018, you can export the audit logs starting from May 1, 2018.

4. Click **OK** to export the audit logs.

Depending on the settings of the browser that you are using, the CSV file containing the audit logs for the specified time period is either downloaded directly, or you are asked to open or save the file.

You are returned to the Audit Logs page.

After the file is downloaded, you can open the CSV file in an application such as Microsoft Excel and view and analyze the logs as required.

**Table 291: Fields on the Export Audit Logs Page**

Field	Description
Start Date and Time	Specify the date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) from when the audit logs should be exported.
End Date and Time	Specify the date and time (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) up to when the audit logs should be exported.

## RELATED DOCUMENTATION

[Audit Logs Overview | 837](#)[About the Audit Logs Page | 838](#)[Viewing the Details of an Audit Log | 839](#)

## Purging Audit Logs (After Archiving or Without Archiving)

You can manage the volume of audit log data stored by purging log files from the CSO database without archiving them or by purging log files after archiving them. You can purge audit logs immediately or schedule the purging for a later date and schedule the purging on a recurring basis.

**NOTE:** Audit logs related to a tenant are deleted automatically when the tenant is deleted from CSO.

To purge audit logs after archiving or without archiving them:

1. Select **Administration > Audit Logs**.

The Audit Logs page appears displaying the audit logs.

2. Click **Purge**.

The Purge Audit Logs page appears.

3. Complete the configuration according to the guidelines provided in [Table 292 on page 844](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **OK**.

You are returned to the Audit Logs page and one of the following operations occur:

- If you triggered a purge of the audit logs without archiving, a job to purge the audit logs is created.
- If you triggered a purge of the audit logs after archiving, a job is created to archive the audit logs and then purge the audit logs after archiving.

After the audit logs are purged successfully, the Audit Logs page refreshes automatically and displays only the audit logs that were not purged.

Table 292: Purge Audit Logs Settings

Field	Description
Purge Options	
Purge Logs	<p>Select one of the following options to purge audit logs:</p> <ul style="list-style-type: none"> <li>• Purge audit logs that were generated before a specified date and time—If you select this option, you must enter a date and time in the <b>Before</b> field.</li> <li>• Purge generated audit logs that are older than a specified number of days—If you select this option, you must specify the number of days in the <b>Older than</b> field.</li> </ul>
Before	<p>To purge audit logs before a specified date and time, enter the date (in MM/DD/YYYY format) and time (in HH:MM:SS 24-hour or AM/PM format)</p> <p>You specify the time in the local time zone of the client computer.</p>
Older than	<p>To purge generated audit logs older than a specified number of days, enter the number of days (from 1 through 90)</p>
Archive Logs Before Purging	<p>To archive audit logs <i>before</i> purging them, select this check box. By default, this check box is cleared, which means that audit logs are purged without archiving them.</p> <p><b>CAUTION:</b> If you choose not to archive the audit logs before purging, the audit logs are deleted from the CSO database and cannot be recovered.</p>
Archive Mode	<p>Specify whether you want to archive the log files locally (<b>local</b>) or on a remote server (<b>remote</b>).</p> <p>If you archive the logs on a remote server, which is the default option, you must enter access and login details for the remote server.</p> <p><b>NOTE:</b></p> <ul style="list-style-type: none"> <li>• Archived log files are saved in a single file in compressed comma-separated values (CSV) format (extension .zip).</li> <li>• When you archive data locally, the archived log files are saved on the central microservices virtual machine (VM).</li> </ul>
Username	Enter a valid username to access the remote server.
Password	Enter a valid password to access the remote server on which the audit logs will be archived.
Confirm Password	For confirmation, re-enter the password to access the remote server.
Remote Server IP Address	Enter the IPv4 address of the remote server; for example, 192.0.2.10.

Table 292: Purge Audit Logs Settings (*continued*)

Field	Description
<b>Remote Server Path</b>	Enter the directory path on the remote server on which to store the archived log files. The directory that you specify must already exist on the remote server.
<b>Schedule Purge</b>	
<b>Type</b>	<p>Specify whether the audit logs should be purged immediately (<b>Run now</b>) or schedule the purge for later (<b>Schedule at a later time</b>).</p> <p>If you schedule the purge for later, enter the date (in MM/DD/YYYY format) and time (in HH:MM:SS 24-hour or AM/PM format) that you want the purge to occur.</p> <p>You specify the time in the local time zone of the client computer.</p>
<b>Recurrence</b>	<p>To specify whether the purge operation should occur on a recurring basis, select this check box.</p> <p><b>NOTE:</b> This option is enabled only if you choose to archive and purge audit logs older than a specified number of days.</p>
<b>Repeat</b>	Specify the periodicity of the recurrence. Currently, a weekly periodicity is the only option supported.
<b>On</b>	For purges that recur every week, specify one or more days on which you want the purge to recur.
<b>Time</b>	<p>Enter the time (in HH:MM:SS 24-hour or AM/PM format) that you want the recurring purge to occur. By default, the purge recurs at 12.00 AM.</p> <p>You specify the time in the local time zone of the client computer.</p>
<b>Ends</b>	<p>Specify whether the recurring purge ends or not:</p> <ul style="list-style-type: none"> <li>• Select <b>Never</b> to continue (without an end date) the recurring purge operation at the specified recurrence interval.</li> <li>• Select <b>On</b> and enter the date (in MM/DD/YYYY format) and time (in HH:MM:SS 24-hour or AM/PM format) on which to stop the recurring purge operation.</li> </ul> <p>You specify the time in the local time zone of the client computer.</p>

## RELATED DOCUMENTATION



# 7

PART

## Monitoring Alarms, Events, and Threats

---

[Monitoring Security Alerts and Alarms | 848](#)

[Monitoring Security | 862](#)

[Monitoring SD-WAN Events | 892](#)

[Monitoring Applications | 895](#)

[Monitoring Threats | 914](#)

---

# Monitoring Security Alerts and Alarms

## IN THIS CHAPTER

- [About the Monitor Overview Page | 848](#)
- [Alerts Overview | 850](#)
- [About the Generated Alerts Page | 850](#)
- [About the Alert Definitions/Notifications Page | 852](#)
- [Managing Security Alerts Definitions | 853](#)
- [Creating Security Alert Definitions | 854](#)
- [Editing, Cloning, and Deleting Security Alert Definitions | 856](#)
- [About the Alarms Page | 858](#)
- [Enable E-mail Notifications for SD-LAN and SD-WAN Alarms | 859](#)

## About the Monitor Overview Page

To access this page, click **Monitor > Overview**.

You can use the Monitor Overview page to view information about the alarms and alerts for tenants, network services, connections, and sites on a geographical map. The network operator views the alarms and alerts, and then takes the necessary actions to resolve the issues.

You can also view the visual representation of the hub and link failure on this page.

- **Hub Failure** —The hub and the link connected to the hub appear in red color.
- **Link Failure** — The link connected to the hub appears in red color. However, the hub remains active and appears in green color.

## Tasks You Can Perform

You can perform the following tasks from this page:

- View on-premise spoke site details.
- View on-premise hub site details.



- View cloud spoke sites.
- View provider hub sites.
- View multiple sites.

Field Descriptions

Table 293 on page 849 shows the descriptions of the fields on the Monitor Overview page.

Table 293: Fields on the Monitor Overview Page

Field	Description
Sites	<p>View the sites at which the service is deployed.</p> <p>Click the <b>Sites</b> drop-down list and select <b>Show sites</b></p>
Connections	<p>View the connections in the network.</p> <p>Click the <b>Connections</b> drop-down list and select <b>Show connections</b>.</p>
Only the node with alerts	<p>View the nodes with issues with the service.</p> <p>Click the drop-down list located next to the <b>Only the nodes with alerts</b> check box and select the type of alerts.</p> <ul style="list-style-type: none"><li>• Critical—Issues that prevent the node from working and require action from the operator. The nodes with critical alerts are displayed in red.</li><li>• Major—Issues that prevent the node from working at this time, but they do not require action from the operator. The nodes with major alerts are displayed in orange.</li><li>• Minor—Issues that allow a node to continue working, but not optimally. The network operator may need to take action to resolve the issue. The nodes with minor alerts are displayed in yellow.</li></ul> <p><b>NOTE:</b> The nodes without any alerts are displayed in blue.</p>

RELATED DOCUMENTATION

<a href="#">Managing Security Alerts Definitions   853</a>
<a href="#">Creating Security Alert Definitions   854</a>

## Alerts Overview

Alerts and notifications are used to notify administrators about significant events within the system. Notifications can also be sent through e-mail. You will be notified when a predefined network traffic condition is met. The alert trigger threshold is the number of network traffic events crossing a predefined threshold within a period of time.

Alerts and notifications provide options for:

- Defining alert criteria based on a set of predefined filters. You can use the filters defined in the advanced search to create an alert. You can also save filters and add them to security alert definitions.
- Generating an alert message and notifying you when alert criteria are met.
- Searching for specific alerts on the Generated Alerts page based on alert ID, description, or alert type.
- Supporting event-based alerts.

For example, If you are an administrator, you can define a condition such that if the number of firewall-deny events crosses a predefined threshold in a given time range for a specific device, you will receive an e-mail alert.

**NOTE:** If a threshold is crossed and remains so for a long duration, new alerts are not generated. Alerts are generated again when the number of logs matching the alert criteria drops below the threshold and crosses the threshold again.

### RELATED DOCUMENTATION

---

[About the Generated Alerts Page | 850](#)

---

[About the Alert Definitions/Notifications Page | 852](#)

---

[Managing Security Alerts Definitions | 853](#)

## About the Generated Alerts Page

To access this page, click **Monitor > Alerts & Alarms > Alerts**.

Use this page to view the system event-based alerts in response to a configured alert definition. The generated alerts help you to identify problems that appear in your monitored network environment and

displays both security and CSO alerts. You can view statistics such as the number of critical and non-critical alerts.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Select the generated alert and then right-click or click **More > Jump to Events and Logs**. The corresponding events that triggered the alert are displayed.
- Select the generated alert and then right-click or click **More > Detail View**. The Alert Detail page appears displaying all the details of the alert.
- Select the generated alert and then right-click or click **More > Clear All Selections**.

## Field Descriptions

[Table 294 on page 851](#) provides guidelines on using the fields on the Generated Alerts page.

**Table 294: Fields on the Generated Alerts Page**

Field	Description
Severity	View the severity of the alert.
Time	View the date and time when the alert was generated.
Site	View the name of the tenant site.
Source	View the source of the alert. The source identifies whether an alert is a security alert or an SD-WAN alert.
Description	View the description of the alert.
Alert Type	View the type of alert.
ID	View the alert ID. Alert ID is a unique identification for each alert. For example, b4a3c027-7157-4861-8e3c-c872721cff2d.
Service Instance	View the service instance associated with the alert..
Object Type	View the object type.
Alert Name	View the name of the alert.
Tenant	View the name of the tenant.

## RELATED DOCUMENTATION

| [Managing Security Alerts Definitions](#) | 853

## About the Alert Definitions/Notifications Page

To access this page, select **Monitor > Alarms & Alerts > Definitions/Notifications** in the Customer Portal.

Use the Alert Definitions page to view alert definitions for SD-WAN, SD-LAN, and manage alert definitions for security. An alert definition consists of data criterion for triggering alerts about issues in the SD-WAN environment. Alert definitions also define the necessary action required to resolve issues based on the severity of the alert. An alert is triggered when the event threshold exceeds the data criteria that is defined. You can create an alert definition to monitor your data in real time and identify issues and attacks before they impact your network.

You can also enable or disable SD-WAN/SD-LAN alarm notification.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View SD-WAN alert definitions. The SD-WAN alert definitions are loading by default when the Alert Definitions page is loaded. See [Table 295 on page 853](#) for descriptions of the fields on the SD-WAN alert definitions pane.
- Manage Security alert definitions. See [“Managing Security Alerts Definitions” on page 853](#).
- Enable or disable the e-mail notification for alarms. See [“Enable E-mail Notifications for SD-LAN and SD-WAN Alarms” on page 859](#).
- Show or hide columns that contain information about security alert definitions. In the Security Alert Definitions tab, click the **Show Hide columns** icon in the top right corner of the page and select columns that you want to view on the page.
- Search for alert definitions using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

### Field Descriptions

[Table 295 on page 853](#) describes the fields on the SD-WAN Alert Definitions pane.

Table 295: Fields on the SD-WAN Alert Definitions Pane

Field	Description
Rule Priority	View the priority of the alert definition. A value of one (1) indicates highest priority.
Alert Description	View the description of the alert.
Filter	View the matching alert criteria to trigger the alert.
Action	View the action to be performed to resolve issues.
Context	View the additional configuration parameters that you can pass on to the rule action function.

## RELATED DOCUMENTATION

[Managing Security Alerts Definitions | 853](#)

[About the Generated Alerts Page | 850](#)

## Managing Security Alerts Definitions

Use the Security pane to generate alerts that warn you of problems in your monitored environment. An alert definition consists of data criteria for triggering an alert. An alert is triggered when the event threshold exceeds the data criteria that is defined.

### Tasks You Can Perform

You can perform the following tasks from this pane:

- Create security alert definition. See [“Creating Security Alert Definitions” on page 854](#).
- Edit, clone, and delete security alert definition. See [“Editing, Cloning, and Deleting Security Alert Definitions” on page 856](#).

### Field Descriptions

[Table 296 on page 854](#) provides guidelines on using the fields on the Security alert definitions pane.

Table 296: Fields on the Security Alert Definitions Pane

Field	Description
Alert Name	View the name of the alert.
Alert Description	View the description for the alert.
Filter	View filter values of the alert.
Recipients	View recipients' e-mail addresses where alert notifications are sent.
Status	View the status of the alert.
Alert Type	View the type of alert. Example: Event-based

RELATED DOCUMENTATION

<a href="#">Alerts Overview   850</a>
<a href="#">Creating Security Alert Definitions   854</a>

## Creating Security Alert Definitions

You can create an alert definition to monitor your data in real time. You can identify issues and attacks before they impact your network.

For example, if you are an administrator, you can define a condition such that if the number of firewall deny events crosses a predefined threshold in a given time frame for a specific device, you receive an e-mail alert.

To create a security alert definition:

1. Select **Monitor > Alerts & Alarms > Definitions/Notifications > Security Alerts Definitions**.

The Security alert definitions page appears.

2. Click the create icon (+) or add icon (+).

The Create an Alert Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 297 on page 855](#).
4. Click **OK**. If you want to discard the changes, click **Cancel** instead.

A new alert definition with the configured alert triggering condition is created. You can view the generated alerts from the alert definition to troubleshoot the issues with your system.

**Table 297: Fields on the Security Alert Definitions Page**

Field	Description
<b>General</b>	
Alert Name	Enter a unique string of alphanumeric characters, colons, periods, dashes, and underscores. No spaces are allowed and the maximum length is 63 characters.
Alert Description	Enter a description for the alerts; maximum length is 1024 characters.
Alert Type	Displays the type of alert that is system-based.
Status	Select the Active check box to view only the active alerts.
Severity	Select the severity level of the alert: info, minor, major, critical.
<b>Trigger</b>	
Use Data Criteria from Filters	<p>Specifies the data criteria from the list of default and user-created filters that are saved from the Event Viewer.</p> <p>To add saved filters:</p> <ul style="list-style-type: none"> <li>Click the <b>Use data criteria</b> from filters link. The Add Saved Filters page appears.</li> <li>Select the filters to be added.</li> <li>Click <b>OK</b>.</li> </ul>
Add Data Criteria	Specifies the data criteria based on the Time Span period, Group By, and Filter By option. Filtered data only displays the subset of data that meets the criteria that you specify.
<b>Recipient(s)</b>	
E-mail Address(es)	Specify the e-mail addresses for the recipients of the alert notification.
Custom Message	Enter a custom string for identifying the type of alert in the alert notification e-mail.

## RELATED DOCUMENTATION

[Managing Security Alerts Definitions | 853](#)

[Editing, Cloning, and Deleting Security Alert Definitions | 856](#)

## Editing, Cloning, and Deleting Security Alert Definitions

### IN THIS SECTION

- [Editing Security Alert Definitions | 856](#)
- [Cloning Security Alert Definitions | 856](#)
- [Deleting Security Alert Definitions | 857](#)

You can edit, clone, and delete security alert definitions.

### Editing Security Alert Definitions

To edit the security alert definition:

1. Select **Monitor > Alerts & Alarms > Definitions/Notifications > Security Alerts Definitions**.

The Security Alerts Definition page appears.

2. Select the check box of the security alert definition that you want to modify, and click the edit icon.

The Edit Alert Definition page appears. The options available on the Create Alert Definition page are available for editing.

3. Update the configuration as needed.
4. Click **OK** to save the changes. If you want to discard your changes, click **Cancel** instead.

### Cloning Security Alert Definitions

You can clone an alert definition when you want to quickly create a copy of an alert definition and modify its parameters including the name of the alert.



To clone an alert definition:

1. Select **Monitor > Alerts & Alarms > Definitions/Notifications > Security Alerts Definitions**.

The Security Alert Definitions page appears.

2. Select the alert definition that you want to clone, and click **More > Clone** at the top right corner of the page.

The Clone Alert Definition page appears. The options available on the Create Alert Definition page are available for editing.

3. Click **OK** to save the configuration.

A new alert definition is created.

## Deleting Security Alert Definitions

You can click the delete icon (X) to delete one or more alert definitions.

To delete the alert definition:

1. Select **Monitor > Alerts & Alarms > Definitions/Notifications > Security Alerts Definitions**.

The Security Alerts Definition page appears.

2. Select the alert definition that you want to delete and click the delete icon (X icon).

The Confirm Delete page appears.

3. Click **Yes** to delete the alert definition or **No** to cancel the deletion.

If you click **Yes**, then the alert definition is deleted from the main page.

## RELATED DOCUMENTATION

[Managing Security Alerts Definitions | 853](#)

[Creating Security Alert Definitions | 854](#)

## About the Alarms Page

To access this page, select **Monitor > Alerts & Alarms > Alarms**.

Use the Alarms page to view system-generated alarms. Alarms notify you of conditions that might prevent the device from operating normally. Alarm conditions for a system are preset and are based on the fault monitoring and performance monitoring (FMPM) being performed on a device. For example, conditions such as hardware issues, drop in throughput and latency of data, temperature variations, and capacity optimization issues automatically trigger an alarm.

**NOTE:** To generate alarms correctly, ensure that CSO and the devices are NTP enabled, and in sync. The time set on CSO must match with the time set on the devices.

The difference between alerts and alarms lies in the type of events that are being monitored. An alert is used to notify administrators about significant events within the system. For example, when a predefined network traffic condition is met. For more information about alerts, see [“Alerts Overview” on page 850](#).

### Tasks You Can Perform

You can perform the following tasks from this page:

- View alarm activity within a specific time range:
  - Select either 2 hours (2h), 4 hours (4h), 8 hours (8h), 16 hours (16h), 24 hours (24h), or 1 week (1w), or Custom as the time range to view alarm activity. By default, alarm activity is displayed for a time range of 1 week.

If you click Custom, the Custom Time Range Selection page appears.

You must specify the **From** date and time, and **To** date and time (in MM/DD/YYYY and HH:MM:SS formats).
- View details of an alarm—Select a generated alarm on the page and right-click to select **Detail View** or click **More > Detail View** to view more details (such as alarm type, severity, and so on) of the alarm.
- Delete an alarm—Select an alarm that you want to delete and click the **Delete** icon. The selected alarm is deleted from the page.
- Apply a filter to view specific alarms—Click the **Filter** icon and select the filter criteria from the list of available options, to view only specific alarms. You can filter the alarms based on severity (critical, major, minor, normal), tenant name, site name, and source of the alarm.

- Show or hide columns on the page—Click the **Show or Hide Columns** icon to select or clear columns that you want to display or hide on the page.
- Select the number of alarms that you want to view on the page—From the **Details** list, select either **20**, **50** or **100** as the number of alarms that you want to view on the page.

### Field Descriptions

Table 298 on page 859 describes the fields on the Alarms page.

**Table 298: Fields on the Alarms Page**

Field	Description
Severity	Severity of the alarm.
Time	Date and time when the alarm was generated.
Tenant	Name of the tenant.
Site	Name of the tenant site for which the alarm was generated.
Source	Source from where the alarm originated.
Description	Description of the alarm.
UUID	Universally Unique Identifier (UUID) of the alarm.  You can use the UUID to identify an alarm on the <b>Monitor &gt; Logs</b> page.
Link Name	Name of the link that generated the alarm.
Service Instance	Service instance associated with the alarm.
Object Type	Type of device from which the alarm originated.  Example: Hub

## Enable E-mail Notifications for SD-LAN and SD-WAN Alarms

Starting from CSO Release 5.1.1, you now notify the user (tenant administrators and tenant operators) about SD-WAN and SD-LAN alarms. You can also specify the minimum severity level of alarms that must

be notified to the users. Alarm notifications enable users to take action to ensure that the network runs smoothly.

**NOTE:** You can enable or disable the e-mail notification for SD-WAN and SD-LAN alarms if you are an SP administrator, or OpCo administrator, or tenant administrator.

To enable e-mails notification for SD-WAN and SD-LAN alarms:

1. Select **Monitor > Alerts & Alarms > Definitions/Notifications**.

The Definitions/Notifications page appears.

2. Select the **SD-WAN/SD-LAN Alarm Notifications** tab.

The SD-WAN/SD-LAN Alarm Notifications page appears.

3. Complete the configuration according to the guidelines provided in [Table 299 on page 860](#).

**NOTE:** Fields marked with an asterisk (\*) are mandatory.

4. Click **Save** to save the changes.

If you have enabled e-mail notifications, an e-mail will be sent to the user based on the severity level that you specified for an alarm.

If you have disabled e-mail notifications, the users will not receive e-mail notifications in case of alarms.

**Table 299: SD-WAN/SD-LAN Alarm Notifications Settings**

Field	Description
<b>Send Email Notifications</b>	<p>Click the toggle button to enable or disable the e-mail notifications of alarms to users. By default, e-mail notifications are disabled.</p> <p>After enabling this field, you must specify the minimum severity level of the alarm and select the e-mail addresses of the users.</p>

Table 299: SD-WAN/SD-LAN Alarm Notifications Settings (*continued*)

Field	Description
<b>Minimum Severity to Report</b>	<p>Select the minimum severity level (critical, major, minor) of the alarms to users through an e-mail.</p> <ul style="list-style-type: none"> <li>• <b>Critical</b>—If you select this option, e-mail notifications are sent to users only for alarms with the severity level critical.</li> <li>• <b>Major</b>—If you select this option, e-mail notifications are sent to users only for alarms with the severity levels major or critical.</li> <li>• <b>Minor</b>—If you select this option, e-mail notifications are sent to users only for alarms with the severity levels minor, major, or critical.</li> </ul>
<b>Recipients</b>	<p>Select one or more e-mail addresses of the users from the list. Only users with tenant administrator or tenant operator roles are listed.</p> <p>The e-mail addresses listed are based on the users that are listed in the Administration &gt; Users page.</p>

**Release History Table**

Release	Description
<a href="#">5.1.1</a>	Starting from CSO Release 5.1.1, you now notify the user (tenant administrators and tenant operators) about SD-WAN and SD-LAN alarms. You can also specify the minimum severity level of alarms that must be notified to the users. Alarm notifications enable users to take action to ensure that the network runs smoothly.

**RELATED DOCUMENTATION**

| [About the Alert Definitions/Notifications Page](#) | **852**

# Monitoring Security

## IN THIS CHAPTER

- [About the All Security Events Page | 862](#)
- [About the Firewall Events Page | 867](#)
- [About the Web Filtering Events Page | 870](#)
- [About the IPsec VPNs Events Page | 873](#)
- [About the Content Filtering Events Page | 875](#)
- [About the Antispam Events Page | 877](#)
- [About the Antivirus Events Page | 879](#)
- [About the IPS Events Page | 882](#)
- [About the Screen Events Page | 885](#)
- [About the Traffic Logs Page | 889](#)

## About the All Security Events Page

To access this page, click **Monitoring > Security Events > All Events**.

Use this page to get an overall, high-level view of your network environment. You can view abnormal events, attacks, viruses, or worms when log data is correlated and analyzed.

This page provides administrators with an advanced filtering mechanism and provides visibility into actual events collected by the Log Collector. Using the time-range slider, you can instantly focus on areas of unusual activity by dragging the time slider to the area of interest to you. The slider and the Custom button under Time Range remain at the top of each tab. Users select the time range, and then they can decide how to view the data, using the summary view or detail view tabs.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all events in your network. See [“Summary View” on page 863](#).

- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 863](#).

## Summary View

You can view a brief summary of all the events in your network. At the center of the page is critical information, including total number of events, viruses found, total number of interfaces that are down, number of attacks, CPU spikes, and system reboots. This data is refreshed automatically based on the selected time range. At the bottom of the page is a swim lane view of different events that are happening at a specific time. The events include firewall, web filtering, VPN, content filtering, antispam, antivirus, and IPS. Each event is color-coded, with darker shades representing a higher level of activity. Each tab provides deep information like type, and number of events occurring at that specific time.

[Table 300 on page 863](#) describes the widgets on the All Events Summary View page.

**Table 300: Widgets on the All Events Summary View Page**

Field	Description
Total Events	View the total number of all the events that includes firewall, web filtering, IPS, IPSec VPNs, content filtering, antispam, and antivirus events.
Virus Instances	View the total number of virtual instances running in the system.
Attacks	View the total number of attacks on the firewall.
Interface Down	View the total number of interfaces that are down.
CPU Spikes	View the total number of times a CPU utilization spike has occurred.
Reboots	View the total number of system reboots.
Sessions	View the total number of sessions established through firewall.

## Detail View

Click **Detail View** for comprehensive details of events in a tabular format that includes sortable columns. You can sort the events using the Group By option. For example, you can sort the events based on severity. The table includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected.

## Advanced Search

You can perform advanced search of all events using the text field present above the tabular column. It includes the logical operators as part of the filter string. Enter the search string in the text field and based on your input, a list of items from the filter context menu is displayed. . You can select a value from the list and then select a valid logical operator to perform the advanced search operation Press Enter to display the search result in the tabular column below.

To delete the search string in the text field, click the delete icon (X icon).

Examples of event log filters are shown in the following list:

- Specific events originating from or landing within United States

Source Country = United States OR Destination Country = United States AND Event Name = IDP\_ATTACK\_LOG\_EVENT, IDP\_ATTACK\_LOG\_EVENT\_LS, IDP\_APPDDOS\_APP\_ATTACK\_EVENT\_LS, IDP\_APPDDOS\_APP\_STATE\_EVENT, IDP\_APPDDOS\_APP\_STATE\_EVENT\_LS, AV\_VIRUS\_DETECTED\_MT, AV\_VIRUS\_DETECTED, ANTISPAM\_SPAM\_DETECTED\_MT, ANTISPAM\_SPAM\_DETECTED\_MT\_LS, FWAUTH\_FTP\_USER\_AUTH\_FAIL, FWAUTH\_FTP\_USER\_AUTH\_FAIL\_LS, FWAUTH\_HTTP\_USER\_AUTH\_FAIL, FWAUTH\_HTTP\_USER\_AUTH\_FAIL\_LS, FWAUTH\_TELNET\_USER\_AUTH\_FAIL, FWAUTH\_TELNET\_USER\_AUTH\_FAIL\_LS, FWAUTH\_WEBAUTH\_FAIL, FWAUTH\_WEBAUTH\_FAIL\_LS

- User wants to filter all RT flow sessions originating from IP addresses in specific countries and landing on IPs in specific countries

Event Name = RT\_FLOW\_SESSION\_CREATE, RT\_FLOW\_SESSION\_CLOSE AND Source IP = 177.1.1.1, 220.194.0.150, 14.1.1.2, 196.194.56.4 AND Destination IP = 255.255.255.255, 10.207.99.75, 10.207.99.72, 223.165.27.13 AND Source Country = Brazil, United States, China, Russia, Algeria AND Destination Country = Germany, India, United States

- Traffic between zone pairs for policy – IDP2

Source Zone = trust AND Destination Zone = untrust, internal AND Policy Name = IDP2

- UTM logs coming from specific source country, destination country, source IP addresses with or without specific destination IP addresses.

Event Category = antispam, antivirus, contentfilter, webfilter AND Source Country = Australia AND Destination Country = Turkey, United States, Australia AND Source IP = 1.0.0.0, 1.1.1.3 OR Destination IP = 74.125.224.47, 5.56.17.61

- Events with specific sources IPs or events hitting HTP, FTP, HTTP, and unknown applications coming from host DC-SRX1400-1 or VSRX-75.

Application = tftp, ftp, http, unknown OR Source IP = 192.168.34.10, 192.168.1.26 AND Hostname = dc-srx1400-1, vsrx-75

[Table 301 on page 865](#) describes the fields on the All Events Detail View Page.



Table 301: Fields on the All Events Detail View Page

Field	Description
Time	View the time when the log was received.
Event Name	View the event name of the log.
Site	View the name of the tenant site.
Source Country	View the source country name.
Source IP	View the source IP address from where the event occurred.
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event.
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.
Description	View the description of the log.
Attack Name	View the attack name of the log: Trojan, worm, virus, and so on.
Threat Severity	View the severity level of the threat.
Policy Name	View the policy name in the log.
UTM Category or Virus Name	View the UTM category of the log.
URL	View the accessed URL name that triggered the event.
Event Category	View the event category of the log.
User Name	View the username of the log.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source.
Application	View the application name from which the events or logs are generated
Hostname	View the hostname in the log.

Table 301: Fields on the All Events Detail View Page (*continued*)

Field	Description
Service Name	The name of the application service. For example, FTP, HTTP, SSH, and so on.
Nested Application	View the nested application in the log.
Source Zone	View the source zone of the log.
Destination Zone	View the destination zone of the log.
Protocol ID	View the protocol ID in the log.
Roles	View the role name associated with the log.
Reason	View the reason for the log generation. For example, a connection tear down may have an associated reason such as “authentication failed”.
NAT Source Port	View the translated source port.
NAT Destination Port	View the translated destination port.
NAT Source Rule Name	View the NAT source rule name.
NAT Destination Rule Name	View the NAT destination rule name.
NAT Source IP	View the translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses.
NAT Destination IP	View the translated (also called natted) destination IP address.
Traffic Session ID	View the traffic session ID of the log.
Path Name	View the path name of the log.
Logical system Name	View the name of the logical system.
Rule Name	View the name of the rule.
Profile Name	View the name of the All events profile that triggered the event.

## RELATED DOCUMENTATION

---

[About the Firewall Events Page | 867](#)

---

[About the Web Filtering Events Page | 870](#)

---

[About the IPsec VPNs Events Page | 873](#)

---

[About the Content Filtering Events Page | 875](#)

---

[About the Antispam Events Page | 877](#)

---

[About the Antivirus Events Page | 879](#)

---

[About the IPS Events Page | 882](#)

## About the Firewall Events Page

To access this page, click **Monitor > Security Events > Firewall**.

Use the Firewall Events page to view information about security events based on firewall policies. Analyzing firewall logs yields useful security management information, such as attempts to breach your network and observing the inherent characteristics of your traffic in real-time. Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the firewall events in your network. See [“Summary View” on page 867](#)
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 868](#).

### Summary View

The data presented in the line graph (also known as swim lanes) is refreshed automatically based on the selected time range. The line graph shows light blue lanes that represent all firewall events and dark blue lanes represent blocked firewall events.

Below the swim lanes are widgets displaying critical information such as top sources, top destinations, top users, and top reporting devices.

[Table 302 on page 868](#) describes the widgets on the Summary View page.

**Table 302: Widgets on the Summary View Page**

Widget	Description
Top Sources	View the top source IP addresses of the network traffic; sorted by event count.
Top Destinations	View the top destination IP addresses of the network traffic; sorted by event count.
Top Users	View then top users of the network traffic; sorted by event count.
Top Reporting Devices	View the top reporting devices in the network; sorted by event count.

## Detail View

Detail view includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected

[Table 303 on page 868](#) provides guidelines on using the fields on the Detail View page.

**Table 303: Fields on the Detail View Page**

Field	Description
Time	View the time when the log was received.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred.
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event.
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.
Description	View the description of the log.
Policy Name	View the policy name in the log.

Table 303: Fields on the Detail View Page (*continued*)

Field	Description
User Name	View the username of the log.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Application	View the application name from which the events or logs are generated.
Hostname	View the hostname in the log.
Service Name	The name of the application service. For example, FTP, HTTP, SSH, and so on.
Nested Application	View the nested application in the log.
Source Zone	View the user traffic received from the zone.
Destination Zone	View the destination zone of the log.
Protocol ID	View the protocol ID in the log.
Roles	View the role names associated with the event.
NAT Source Port	View the translated source port.
NAT Destination Port	View the translated destination port.
NAT Source Rule Name	View the NAT source rule name.
NAT Destination Rule Name	View the NAT destination rule name.
NAT Source IP	View the translated (or natted) source IP address. It can contain IPv4 or IPv6 addresses.
NAT Destination IP	View the translated (also called natted) destination IP address.
Traffic Session ID	View the traffic session ID of the log.
Rule Name	View the rule name of the log.

## RELATED DOCUMENTATION

---

[About the All Security Events Page | 862](#)

---

[About the Web Filtering Events Page | 870](#)

---

[About the IPsec VPNs Events Page | 873](#)

---

[About the Content Filtering Events Page | 875](#)

---

[About the Antispam Events Page | 877](#)

---

[About the Antivirus Events Page | 879](#)

---

[About the IPS Events Page | 882](#)

---

## About the Web Filtering Events Page

To access this page, click **Monitor > Security Events > Web Filtering**.

Use the Web Filtering page to view information about security events based on Web filtering policies. Web filtering allows you to permit or block access to specific websites by URL or by URL category using cloud-based lookups, a local database, or an external Websense server. Analyzing Web filtering logs yields useful security management information such as users detected accessing restricted URLs and actions taken by the system. Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the Web filtering events in your network. See [“Summary View” on page 870](#).
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 871](#).

### Summary View

The top of the page has a swim lane graph of all the Web filtering events against the blocked events.

Below the swim lanes are widgets displaying critical information such as top sources, top destinations, top users, and top reporting devices.

You can use the widgets at the bottom of the page to view critical information such as top URLs blocked, top matched profiles, top sources, and top destinations.

[Table 304 on page 871](#) describes the widgets on the Summary View page.

**Table 304: Widgets on the Summary View Page**

Widget	Description
Top URLs blocked	View the URL names that are blocked; sorted by event count.
Top Matched Profiles	View the web filtering profile names; sorted by event count.
Top Sources	View the top source IP addresses of the network traffic; sorted by event count.
Top Destinations	View the top destination IP addresses of the network traffic; sorted by event count.

## Detail View

You can aggregate the events using the Group By option. For example, you can group the events based on source country. The table includes information such as the event name, UTM category, source IP address, source country, and so on.

[Table 305 on page 871](#) provides guidelines on using the fields on the Detail View page.

**Table 305: Fields on the Detail View Page**

Fields	Description
Time	View the time when the event occurred.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred (IPv4 or IPv6).
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event (IPv4 or IPv6).
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.

Table 305: Fields on the Detail View Page (*continued*)

Fields	Description
Description	View the description of the log.
UTM category or Virus Name	View the UTM category of the log: enhanced, local, and redirect.
URL	View the accessed URL name that triggered the event.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Host Name	View the hostname in the log.
Source Zone	View the user traffic received from the zone.
Roles	View the role names associated with the event.
Reason	View the reason for the log generation. For example, unrestricted access.
Path Name	View the path name of the log.
Profile Name	View the name of the Web filtering profile that triggered the event.

## RELATED DOCUMENTATION

[About the All Security Events Page | 862](#)
[About the Firewall Events Page | 867](#)
[About the IPsec VPNs Events Page | 873](#)
[About the Content Filtering Events Page | 875](#)
[About the Antispam Events Page | 877](#)
[About the Antivirus Events Page | 879](#)
[About the IPS Events Page | 882](#)



## About the IPsec VPNs Events Page

To access this page, click **Monitor > Security Events > IPsec VPNs**.

Use this page to view information about security events based on IPsec VPN policies. The event viewer provides a view of all IPsec VPN events.

Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the IPsec VPN events in your network. See [“Summary View” on page 873](#).
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 874](#).

### Summary View

The top of the page has a swim lane graph of all the VPN events. You can use the widgets at the bottom of the page to view critical information such as top sources, top destinations, and top reporting devices.

[Table 306 on page 873](#) describes the widgets on the Summary View page.

**Table 306: Widgets on the Summary View Page**

Widget	Description
Top Sources	View the top source IP addresses of the network traffic; sorted by event count.
Top Destinations	View the top destination IP addresses of the network traffic; sorted by event count.
Top Reporting Devices	View the top reporting device IP addresses; sorted by event count.

## Detail View

You can aggregate the events using the Group By option. For example, you can group the events based on source country. The table includes information such as the event name, log source, host name, source country, and so on.

[Table 307 on page 874](#) provides guidelines on using the fields on the Detail View page.

**Table 307: Fields on the Detail View Page**

Fields	Description
Time	View the time when the event occurred.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Destination Country	View the destination country name from where the event occurred.
Destination Port	View the destination port of the event.
Description	View the description of the log.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Host Name	View the hostname in the log.
Rule Name	View the name of the antivirus profile that triggered the event.

## RELATED DOCUMENTATION

[About the All Security Events Page | 862](#)

[About the Firewall Events Page | 867](#)

[About the Web Filtering Events Page | 870](#)

[About the Content Filtering Events Page | 875](#)

[About the Antispam Events Page | 877](#)

[About the Antivirus Events Page | 879](#)

[About the IPS Events Page | 882](#)

## About the Content Filtering Events Page

To access this page, click **Monitor > Security Events > Content Filtering**.

Use this page to view information about security events based on content filtering policies. The event viewer provides a view of all content filtering events and how the events are handled by content filter. This page can be used to view traffic on the network in real time or as a debugging tool to view how content filtering is operating.

Content filtering provides basic data loss prevention functionality. Content filtering screens traffic based on MIME type, file extension, protocol commands, and embedded object type. It either permits or blocks specific commands or extensions on a protocol-by-protocol basis.

Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the content filtering events in your network. See [“Summary View” on page 875](#).
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 876](#).

### Summary View

The top of the page has a swim lane graph of all the content filtering events against the blocked events. You can use the widgets at the bottom of the page to view critical information such as top blocked protocol commands, top reasons, and top sources.

[Table 308 on page 875](#) describes the widgets on the Summary View page.

Table 308: Widgets on the Summary View Page

Widget	Description
Top Blocked Protocol commands	View the top command names or file extensions blocked on a protocol-by-protocol basis.
Top Reasons	View the top reasons for blocking the content. For example: Inappropriate or harmful communication.

Table 308: Widgets on the Summary View Page (*continued*)

Widget	Description
Top Sources	View the top source IP addresses of the network traffic; sorted by event count.

## Detail View

You can aggregate the events using the Group By option. For example, you can group the events based on source country. The table includes information such as the event name, UTM category, source IP address, source country, and so on.

[Table 309 on page 876](#) provides guidelines on using the fields on the Detail View page.

Table 309: Fields on the Detail View Page

Fields	Description
Time	View the time when the event occurred.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred (IPv4 or IPv6).
Description	View the description of the log.
UTM Category or Virus Name	View the UTM category of the log: enhanced, local, and redirect.
URL	View the accessed URL name that triggered the event.
Argument	View the type of traffic. For example, FTP and HTTP.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Host Name	View the hostname in the log.
Source Zone	View the user traffic received from the zone.
Roles	View the role names associated with the event.
Reason	View the reason for the log generation. For example, unrestricted access

Table 309: Fields on the Detail View Page (*continued*)

Fields	Description
Profile Name	View the name of the content filtering profile that triggered the event.

## RELATED DOCUMENTATION

- [About the All Security Events Page | 862](#)
- [About the Firewall Events Page | 867](#)
- [About the Web Filtering Events Page | 870](#)
- [About the IPsec VPNs Events Page | 873](#)
- [About the Antispam Events Page | 877](#)
- [About the Antivirus Events Page | 879](#)
- [About the IPS Events Page | 882](#)

## About the Antispam Events Page

To access this page, click **Monitor > Security Events > Antispam**.

Use this page to view information about security events based on antispam policies. The event viewer provides a view of all antispam events and the action taken by the antispam scanner.

The antispam scanner inspects and block spam by scanning inbound and outbound SMTP e-mail traffic. The filtering can be server-based using an external spam block list server or local-based using local lists (blocklists and allowlists) for matching.

Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the antispam events in your network. See [“Summary View” on page 878](#).

- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 878](#).

### Summary View

The top of the page has a swim lane graph of all antispam events. You can use the widget at the bottom of the page to view source IP addresses of the network traffic, sorted by event count.

### Detail View

You can aggregate the events using the Group by option. For example, you can group the events based on source country. The table includes information such as the event name, UTM category, source IP address, source country, and so on.

[Table 310 on page 878](#) provides guidelines on using the fields on the Detail View page.

**Table 310: Fields on the Detail View Page**

Fields	Description
Time	View the time when the event occurred.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred (IPv4 or IPv6).
Description	View the description of the log.
UTM Category or Virus Name	View the UTM category of the log: enhanced, local, and redirect.
URL	View the accessed URL name that triggered the event.
Argument	View the type of traffic. For example, FTP and HTTP.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Host Name	View the hostname in the log.
Source Zone	View the user traffic received from the zone.
Roles	View the role names associated with the event.

Table 310: Fields on the Detail View Page (*continued*)

Fields	Description
Reason	View the reason for the log generation. For example, unrestricted access
Profile Name	View the name of the content filtering profile that triggered the event.

## RELATED DOCUMENTATION

[About the All Security Events Page | 862](#)

[About the Firewall Events Page | 867](#)

[About the Web Filtering Events Page | 870](#)

[About the IPsec VPNs Events Page | 873](#)

[About the Content Filtering Events Page | 875](#)

[About the Antivirus Events Page | 879](#)

[About the IPS Events Page | 882](#)

## About the Antivirus Events Page

To access this page, click **Monitor > Security Events > Antivirus**.

Use this page to view information about security events based on antivirus policies. The event viewer provides a view of all antivirus events and the action taken by the virus scanner.

The antivirus scanner inspects files transmitted over several protocols to determine if the files exchanged are malicious (for example, viruses, Trojans, rootkits, and worms).

Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the Custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the antivirus events in your network. See [“Summary View” on page 880](#).

- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 880](#).

Summary View

The top of the page has a swim lane graph of all the antivirus events against the blocked events. You can use the widgets at the bottom of the page to view critical information such as top blocked protocol commands, top reasons, and top sources.

[Table 311 on page 880](#) provides guidelines on using the widgets on the Detail View page.

Table 311: Widgets on the Summary Page

Field	Description
Top Sources	View the top source IP addresses of the network traffic; sorted by event count.
Top Destinations	View the top destination IP addresses of the network traffic; sorted by event count.
Top Reporting/Attacked Devices	View the top reporting/attacked device IP addresses; sorted by event count.
Top Viruses	View the top virus names detected; sorted by event count.
Top Source Countries	View the top source country names where the events originated; sorted by event count.
Top Destination Countries	View the top destination country names where the events occurred; sorted by event count.

Detail View

You can aggregate the events using the Group By option. For example, you can group the events based on source country. The table includes information such as the event name, UTM category, source IP address, source country, and so on.

[Table 312 on page 880](#) provides guidelines on using the fields on the Detail View page.

Table 312: Fields on the Detail View Page

Fields	Description
Time	View the time when the event occurred.



Table 312: Fields on the Detail View Page (*continued*)

Fields	Description
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred (IPv4 or IPv6).
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event (IPv4 or IPv6).
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.
Description	View the description of the log.
UTM Category or Virus Name	View the UTM category of the log: enhanced, local, and redirect.
URL	View the accessed URL name that triggered the event.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source (IPv4 or IPv6).
Host Name	View the hostname in the log.
Source Zone	View the user traffic received from the zone.
Roles	View the role names associated with the event.
Reason	View the reason for the log generation. For example, unrestricted access.
Profile Name	View the name of the antivirus profile that triggered the event.

## RELATED DOCUMENTATION

[About the All Security Events Page | 862](#)
[About the Firewall Events Page | 867](#)

[About the Web Filtering Events Page | 870](#)

[About the IPsec VPNs Events Page | 873](#)

[About the Content Filtering Events Page | 875](#)

[About the Antispam Events Page | 877](#)

[About the IPS Events Page | 882](#)

## About the IPS Events Page

To access this page, click **Monitor > Security Events > IPS**.

Use the IPS Events page to view information about security events based on IPS policies. Analyzing IPS logs yields useful security management information, such as abnormal events, attacks, viruses, or worms.

Using the time-range slider, you can quickly focus on the area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the custom button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the all the IPS events in your network. See [“Summary View” on page 882](#).
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 883](#).

### Summary View

The data presented in the area graph is refreshed automatically based on the selected time range. You can use widgets to view critical information such as IPS severities, top sources, top destinations, top reporting devices, top IPS attacks, top source countries, and top destination countries.

[Table 313 on page 882](#) provides guidelines on using the widgets on the Detail View page.

**Table 313: Widgets on the Summary Page**

Field	Description
IPS Severities	View the top IPS severities of the events based on the severity level: high, medium, low.

Table 313: Widgets on the Summary Page (continued)

Field	Description
Top Sources	View the top source IP addresses of the network traffic; sorted by the number of event occurrences.
Top Destinations	View the top destination IP addresses of the network traffic; sorted by the number of event occurrences.
Top Reporting/Attacked Devices	View the top devices that are attacked by IPS events; sorted by the number of times users are active on the network.
Top IPS attacks	View the top IPS attacks in the network traffic; sorted by the times devices are attacked.
Top Source Countries	View the top source countries from where the event source originated; sorted by the number of IP addresses.
Top Destination Countries	View the top source countries from where the event source originated; sorted by the number of IP addresses.

## Detail View

You can sort the events using the Group By option. For example, you can sort the events based on severity. The table includes information such as the rule that caused the event, severity for the event, event ID, traffic information, and how and when the event was detected.

[Table 314 on page 883](#) provides guidelines on using the fields on the Detail View page.

Table 314: Fields on the Detail View Page

Column	Description
Time	View the time when the log was received.
Event Name	View the event name of the log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred.
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event.

Table 314: Fields on the Detail View Page (*continued*)

Column	Description
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.
Description	View the description of the log.
Attack name	View the attack name of the log: Trojan, worm, virus, and so on.
Threat Severity	View the threat severity of the event.
Policy Name	View the policy name in the log.
Action	View the action taken for the event: warning, allow, and block.
Log Source	View the IP address of the log source.
Application	View the application name from which the events or logs are generated.
Hostname	View the host name in the log.
Service Name	View the name of the application service. For example, FTP, HTTP, SSH, and so on.
Nested Application	View the nested application name in the log.
Source Zone	View the source zone of the log.
Destination Zone	View the destination zone of the log.
Protocol ID	View the protocol ID in the log.
NAT Source Port	View the translated source port.
NAT Destination Port	View the translated destination port
NAT Source IP	View the NAT source IP address of the log.
NAT Destination IP	View the NAT destination IP address of the log.
Rule Name	View the name of the rule.

## RELATED DOCUMENTATION

---

[About the All Security Events Page | 862](#)

---

[About the Firewall Events Page | 867](#)

---

[About the Web Filtering Events Page | 870](#)

---

[About the IPsec VPNs Events Page | 873](#)

---

[About the Content Filtering Events Page | 875](#)

---

[About the Antispam Events Page | 877](#)

---

[About the Antivirus Events Page | 879](#)

---

## About the Screen Events Page

To access this page, click **Monitor > Security Events > Screen**.

Use this page to view information about screen events that occur as a result of the screen options configured on SRX Series or vSRX security devices. Screen options are a detection and defense mechanism configured to filter the connection attempts bound towards a security zone. Screen options are used to prevent attacks, such as IP address sweeps, port scans, denial of service (DOS) attacks, Internet Control Message Protocol (ICMP), UDP, and SYN (Synchronize) floods.

You can view information related to screen events, including ICMP screening, IP screening, TCP screening, and UDP screening.

Using the time-range slider, you can quickly focus on the time and area of activity that you are most interested in. Once the time range is selected, all of the data presented in your view is refreshed automatically. You can also use the **Custom** button to set a custom time range.

There are two ways to view your data. You can select either the **Summary View** tab or the **Detail View** tab.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a brief summary of all the screen events in your network. See [“Summary View” on page 886](#).
- View the comprehensive details of events in a tabular format that includes sortable columns. See [“Detail View” on page 886](#).

## Summary View

The top of the page has a swim lane graph of all the screen events. You can use the widgets at the bottom of the page to view critical information such as, top sources, top source countries, top destinations, and top destination countries.

[Table 315 on page 886](#) describes the widgets on the Detail View page.

**Table 315: Widgets on the Summary Page**

Field	Description
Top Sources	Top five source IP addresses with highest network traffic.
Top Destinations	Top five destination IP addresses with highest network traffic.
Top Source Countries	Top five countries from which the traffic that triggered the highest number of events originated and the number of events per country.
Top Destination Countries	Top five countries to which the traffic that triggered the highest number events was sent and the number of events per country.

## Detail View

You can group the events using the **Group By** option. For example, you can group the events based on source country. The table includes information such as the event name, UTM category, source IP address, source country, and so on.

[Table 316 on page 886](#) describes the fields on the Detail View page.

**Table 316: Fields on the Detail View Page**

Fields	Description
Log Generated Time	Time when the event occurred.
Log Received Time	Time the log was received at the log collector.
Site	Name of the tenant site from which the event originated.
Event Name	Name of the device event in the log.
Source Country	Country from which the traffic that triggered the event originated.
Source IP	Source IP address for the traffic that triggered the event (IPv4 or IPv6).

Table 316: Fields on the Detail View Page (*continued*)

Fields	Description
Destination Country	Country to which the traffic that triggered the event was sent.
Destination IP	Destination IP address for the traffic that triggered the event (IPv4 or IPv6).
Source Port	Source TCP/UDP port number of the traffic that triggered the event.
Destination Port	Destination TCP/UDP port number of the traffic that triggered the event.
Attack Name	Name of the attack in the log for threat event. For example, trojan, worm, virus, and so on.
Description	Brief description of the event.
Threat Severity	Level of severity of the threat. For example, minor, major, critical, and so on.
Policy Name	Name of the policy which generates the log. The policy is configured on the SRX Series or vSRX device.
Virus Name	This field is not applicable for screen events.
URL	Accessed URL that triggered the event.
Event Category	Event category in the log. For example, screen.
User Name	User name identified by the SRX Series or vSRX device, if user identity is enabled on the device.
Argument	Type of traffic. For example, FTP and HTTP.
Action	Action taken for the event. For example, warning, allow, and block.
Log Source	IP address of the device where the log is received (IPv4 or IPv6).
Application	Name of the application associated with the traffic that triggered the event.
Host Name	Hostname of the device where the log was generated.
Service Name	Name of the application service used for the traffic that triggered the event. For example, FTP, HTTP, SSH, and so on.
Nested Application	Nested application associated with the traffic that triggered the event.

Table 316: Fields on the Detail View Page (*continued*)

Fields	Description
Source Zone	Source security zone of the traffic that triggered the event.
Destination Zone	Destination security zone of the traffic that triggered the event.
Protocol ID	Protocol ID of the traffic that triggered the event.
Roles	Roles of the user as defined in the Active Directory, if available.
Reason	Reason for the log generation. For example, unrestricted access.
NAT Source Port	Translated source port.
NAT Destination Port	Translated destination port.
NAT Source Rule Name	NAT source rule name configured on the SRX Series or vSRX device.
NAT Destination Rule Name	NAT destination rule name configured on the SRX Series or vSRX device.
NAT Source IP	Translated source IP address for the traffic that triggered the event (IPv4 or IPv6).
NAT Destination IP	Translated destination IP address for the traffic that triggered the event (IPv4 or IPv6).
Traffic Session ID	Traffic session ID of the log.
Path Name	This field is not applicable for screen events.
Logical System Name	Name of the logical system which received the log.
Rule Name	Name of the rule which generates the log. This rule is configured on the SRX Series or vSRX device.
Profile Name	Name of the profile which filters the traffic that triggered the event.
Client Host Name	Hostname of the client associated with the traffic that triggered the event. For example, if a specific computer is infected, the name of that computer is displayed.
Malware info	Information about the malware causing the event.



## RELATED DOCUMENTATION

[About the All Security Events Page | 862](#)

[About the Firewall Events Page | 867](#)

[About the Web Filtering Events Page | 870](#)

[About the IPsec VPNs Events Page | 873](#)

[About the Content Filtering Events Page | 875](#)

[About the Antispam Events Page | 877](#)

[About the Antivirus Events Page | 879](#)

[About the IPS Events Page | 882](#)

## About the Traffic Logs Page

To access this page, click **Monitor > Traffic Logs**.

You can use the Traffic Logs page to view the details of the traffic logs that are generated by managed devices. You can view the traffic logs that are generated in the past 24 hours. These traffic logs are used to debug certain events such as, session create, session delete, and session update and so on. You can view the traffic logs for SD-WAN and Next-Generation firewall deployments.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View a graphical representation of Traffic logs in a specified time range (Time Range widget).

The x-axis represents the defined time and the y-axis represents number of traffic logs.

Use the slider to decrease or increase the time range within which you want to view the traffic logs. You can also select from pre-defined time ranges such as 5m, 10m, 20m, 30m, 1h, 2h, 4h, 8h, 16h, 24h, or Custom.

If you select Custom, you must specify the dates and times (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) from when and up to when you want the traffic logs displayed.

- View information related to traffic logs; see [Table 317 on page 890](#).
- View similar traffic logs. Select a traffic log and Click **Show exact match** to view similar log.
- Group the traffic logs based on the options available in the **Group by** field. For example, you can group the traffic logs based on destination country, destination IP, and so.
- Show or hide the columns displayed on the page—Click the Show Hide Columns icon at the top right corner of the page and select the columns that you want displayed in the grid.

- View the traffic logs in non tabular format or raw text by clicking the **More > Show raw log** option.
- Create an alert for a specific traffic by clicking the **More > Create Alert** option.
- Create a report for a specific traffic by clicking the **More > Create Report** option.
- Export a traffic log to a comma-separated values (CSV) file by clicking the **More > Export to CSV** option.

[Table 317 on page 890](#) provides information related to traffic logs.

**Table 317: Columns on the Traffic Logs Page**

Fields	Description
Log Generated Time	View the time when the traffic log was generated.
Log Received Time	View the time when the traffic log was received by CSO.
Site	View the site name when the traffic log was generated.
Event Name	View the event name of the traffic log.
Source Country	View the source country name from where the event originated.
Source IP	View the source IP address from where the event occurred (IPv4 or IPv6).
Destination Country	View the destination country name from where the event occurred.
Destination IP	View the destination IP address of the event (IPv4 or IPv6).
Source Port	View the source port of the event.
Destination Port	View the destination port of the event.
Description	View the description of the log.
Policy Name	View the name of the policy for which the traffic log was generated.
URL	View the accessed URL name that triggered the traffic log.
Event Category	View the event category of the traffic log (For example firewall or apptrack).
User Name	View the user name.
Action	View the action taken for the event: warning, allow, and block.
Host Name	View the hostname in the log.

Table 317: Columns on the Traffic Logs Page (*continued*)

Fields	Description
Service Name	View the name of the Layer 4 service.
Nested Application	View the name of the Layer 7 application.
Source Zone	View the source zone of the site.
Destination zone	View the destination zone of the site.
Roles	View the role names associated with the event.
Reason	View the reason for the log generation. For example, unrestricted access.
NAT Source Port	View the source port of traffic after NAT.
NAT Destination Port	View the destination port of traffic after NAT.
NAT Source Rule Name	View the source NAT rule name.
NAT Destination Rule Name	View the destination NAT rule name.
NAT Source IP	View the source IP address after the IP address translation.
NAT Destination ID	View the destination IP address after the IP address translation.
Traffic Session ID	View the Session ID mapped by site to an event.
Path Name	View the path name of the log.
Logical System Name	View the logical system name.
Rule Name	View the rule name.
Profile Name	View the name of the Web filtering profile that triggered the log.

## RELATED DOCUMENTATION

[About the All Security Events Page](#) | 862

# Monitoring SD-WAN Events

## IN THIS CHAPTER

- [SD-WAN Events Overview | 892](#)
- [About the SD-WAN Events Page | 893](#)

## SD-WAN Events Overview

Service-level agreements (SLAs) define the expected class of service (CoS) for all applications and application groups in a site. The network operator needs tools to measure and monitor the performance metrics for all applications to determine the quality of the network and adherence to an assured CoS. To ensure compliance with SLAs, the network operator also needs tools to take remedial action when network performance deteriorates and SLAs are not being met. SD-WAN link-switch events enable the network to switch WAN links to meet the site's SLA requirements when the network-designated WAN link is unable to meet the site's SLA requirements.

Because SLA parameters override the path preference, in dynamic SD-WAN policies, the SD-WAN network chooses the best possible WAN link for traffic management. The WAN link is chosen based on the SLA parameters defined in the SLA profile. If multiple links match the SLA profile, the least loaded link is chosen. When a policy intent is deployed on a site, if the WAN link chosen by the SD-WAN network is unable to meet the SLA requirements in runtime, then the site switches WAN links to meet the SLA requirements. This link switching is called an SD-WAN event. Link switching also takes into account the priority defined in the SLA profile and SLA profiles with higher priority are given precedence while finding alternate WAN links. The ability of a site to switch WAN links ensures that SLA requirements are met and instances of not meeting the SLA requirements are minimized.

In static policies, link switching cannot occur even if the designated WAN link is unable to meet the SLA requirements, because path preference is defined.

## RELATED DOCUMENTATION

[About the SD-WAN Events Page | 893](#)

[SLA Profiles and SD-WAN Policies Overview | 552](#)

# About the SD-WAN Events Page

To access this page, click **Monitor > Link Switch Events** in the Customer Portal.

You can use the SD-WAN Events page to view information about SD-WAN events. An SD-WAN event is triggered when the SLA requirements for a site are not met on its network-designated WAN link and the site switches WAN links to meet the SLA requirements.

## Tasks You Can Perform

You can perform the following tasks from this page:

- View a graphical representation of SD-WAN events in a specified time range (Time Range widget)  
The x-axis represents the defined time and the y-axis represents number of SD-WAN events.  
Use the slider to decrease or increase the time range within which you want to view SD-WAN events. You can also select from pre-defined time ranges such as 2h, 4h, 8h, 16h, 24h, or Custom.  
If you select Custom, you must specify the dates and times (in MM/DD/YYYY and HH:MM:SS 24-hour or AM/PM formats) from when and up to when you want the SD-WAN events displayed.
- View the SD-WAN events that occurred and information related to the events; see [Table 318 on page 894](#).
- Show or hide the columns displayed on the page—Click the Show Hide Columns icon at the top right corner of the page and select the columns that you want displayed in the grid.
- Sort and filter SD-WAN events:

**NOTE:** Sorting and filtering is applicable only to some fields.

- Click a column name to sort the SD-WAN events based on the column name.
- Click the filter icon (funnel) to toggle the filtering. You can enter the filter parameters in one or more fields and press Enter to display the filtered results.
- Search for SD-WAN events using keywords. Click the search icon. Enter partial text or full text of the keyword in the search bar and press Enter. The search results are displayed.

## Field Descriptions

[Table 318 on page 894](#) describes the fields on the SD-WAN Events page.

Table 318: Fields on the SD-WAN Events Page

Field	Description
Time Range	<p>View a graphical representation of SD-WAN events against a defined time range. The x-axis represents the defined time and the y-axis represents SD-WAN events.</p> <p>Use the slider to decrease or increase the time range within which you want to view SD-WAN events. You can also choose from pre-defined time ranges such as 2h, 4h, 8h, 16h, 24h, or Custom. For custom time, you must enter from and to dates in MM/DD/YYYY format and the time in HH:MM:SS format. By default, Previous 1 day is selected.</p>
SLA Violation Time	Date and time at which the SLA violation occurred.
Link Switch Time	Date and time at which the link was switched.
Site	Name of the site for which the link was switched.
Connected To	Displays the name of the destination spoke or hub site to which the traffic is being sent.
SLA Profile	Name of the SLA-based steering profile associated with the site.
Reason	<p>Indicates the reason for the link switch.</p> <p>Mouse over the reason to view details of the SLA metrics violated.</p>
Apps	Name of the applications for which the SLA violation occurred.
Department	Name of the department for which the SLA violation occurred.
Source Tunnel	Overlay tunnel of the device <i>from</i> which the link switch took place.
Destination Tunnel	Overlay tunnel of the device <i>to</i> which the link switch took place.
Duration (Sec)	<p>Duration (in seconds) for which the SLA requirement for a site was not met before the site switched WAN links.</p> <p>A duration of 0 indicates that the site switched WAN links before it failed to meet the SLA requirements, and the SLA requirements were met immediately on the new WAN link with no loss in meeting SLA requirements.</p>

## RELATED DOCUMENTATION

[SD-WAN Events Overview](#) | 892

# Monitoring Applications

## IN THIS CHAPTER

- [About the SLA Performance of a Single Tenant Page | 895](#)
- [Viewing the SLA Performance of a Site | 898](#)
- [Viewing the SLA Performance of an Application or Application Group | 902](#)
- [Application Visibility Overview | 904](#)
- [About the Application Visibility Page | 905](#)
- [About the User Visibility Page | 908](#)
- [Viewing Application or User Visibility Data for Specific Sites | 911](#)

## About the SLA Performance of a Single Tenant Page

To access this page, select **Monitor > Application SLA Performance > *Tenant-Name* SLA Performance** in the Customer Portal.

You can use the *Tenant-Name* SLA Performance page to view performance reports for all sites in a tenant. You can view the SLA performance of all sites that have met and all the sites that have not met the defined SLA target values for the specified time range. You can customize your view and also the time range for which you want to view the SLA performance.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View the SLA performance for all sites in the tenant that have met the defined SLA target values, without switching WAN links, for the specified time range.
- View the SLA performance for all sites in the tenant that have met the defined SLA target values, after switching WAN links, for the specified time range.
- View the SLA performance for all sites in a tenant that have not met the defined SLA target values for the specified time range.
- View the SLA performance for all sites in a tenant in grid or card views.

Select card view or grid view at the top right of the page. By default, card view is selected.

- Customize the time range to view the SLA performance for all sites in a tenant.
- View the SLA performance for multiple departments within a single tenant.

Select the specific department for which you want to view the SLA performance from the drop-down list at the top right of the page.

## Field Descriptions

Table 319 on page 896 describes the fields on the *Tenant-Name* SLA Performance page.

**Table 319: Fields on the SLA Performance of a Single Tenant Page**

Field	Description
Time range	The time range for which you want to view the SLA performance. You can choose from Previous 1 hour, Previous 1 day, Previous 1 week, Previous 1 month, and Custom. For custom time, you must enter from and to dates in MM/DD/YYYY format and the time in HH:MM:SS format. By default, <b>Previous 1 day</b> is selected.
View	The view in which you want to display the SLA performance for all sites in the tenant. You can choose between card and grid views. By default, card view is selected.
Sites Not Meeting SLAs	<p>The sites that did not meet the defined SLA target values in the selected time range.</p> <p>Click each site to view more information about the SLA performance of the applications and application groups in the site. See <a href="#">“Viewing the SLA Performance of a Site” on page 898</a>.</p>
Sites Meeting SLAs With Switch	<p>The sites that switched WAN links to meet the defined SLA target values in the selected time range.</p> <p>Click each site to view more information about the SLA performance of the applications and application groups in the site. See <a href="#">“Viewing the SLA Performance of a Site” on page 898</a>.</p>
Sites Meeting SLAs Without Switch	<p>The sites that met the defined SLA target values in the selected time range without switching WAN links.</p> <p>Click each site to view more information about the SLA performance of the applications and application groups in the site. See <a href="#">“Viewing the SLA Performance of a Site” on page 898</a>.</p>



Table 320 on page 897 describes the fields in the card and grid views.

**Table 320: Fields on the SLA Performance of a Single Tenant Page in Card and Grid Views**

Field	View	Description
Name	Card and Grid	View the name of the site.
SLA not met (Time)	Card and Grid	View the average time (in %) during which all the sites in a tenant did not meet the defined SLA target values.
Profiles	Card	View the time (in %) during which defined SLA target values were not met for each SLA profile. The top two profiles with highest priority and the percentage of time during which SLA target values were not met are listed. The remaining profiles and their combined sum of time (in %) for which SLA target values were not met are listed under <b>Others</b> . The SLA profile priority is indicated inside a circle. You can define priority of the SLA profile when you create an SLA profile.  Hover over the profile priority to view the SLA profile name.
Profile SLA Not Met	Grid	
App - Groups	Card and Grid	View the total number of applications and application groups in the site.
Switch Events	Card and Grid	View the number of times the site switched WAN links over the number of designated WAN links. A switch event, also called SD-WAN event, occurs when a site switches WAN links to meet the SLA requirements.
Switch Events Per Profile	Card and Grid	View the number of times the site switched WAN links for each profile. You can view the switch events for the top two SLA profiles in the decreasing order of switch events for each profile.

## RELATED DOCUMENTATION

[Viewing the SLA Performance of a Site | 898](#)

[Viewing the SLA Performance of an Application or Application Group | 902](#)

[SD-WAN Events Overview | 892](#)

[Adding SLA-Based Steering Profiles | 572](#)

[Adding Path-Based Steering Profiles | 583](#)

## Viewing the SLA Performance of a Site

### IN THIS SECTION

- [SLA Not Met by SLA Profiles | 898](#)
- [Applications SLA Performance by Throughput | 899](#)
- [SLA Performance for ALL | 901](#)

You can use the **Monitor > Applications > Tenant\_name SLA Performance > Site\_name SLA Performance** page in the Customer Portal to view the SLA performance for all applications and application groups in a site. You can view the SLA performance for all applications and application groups in a site for a specified time range and in graph or grid views.

The **Site\_name SLA Performance** page is divided into the following sections:

### SLA Not Met by SLA Profiles

You can use the **SLA Not Met by SLA Profiles** section on the **Site\_name SLA Performance** page to view the SLA profiles for which SLA requirements were not met and the time at which they were not met. The y-axis represents the SLA profiles and the x-axis represents the specified time range. The **SLA Not Met by SLA Profiles** section can be viewed and remains the same in both graph and grid views.

To view a graphical representation of SLA profiles for which SLA target values were not met:

1. Select the time range for which you want to view the SLA profiles for which SLA target values were not met. You can choose from Previous 1 hour, Previous 1 day, Previous 1 week, Previous 1 month, and Custom. For custom time, you must enter from and to dates in MM/DD/YYYY format and the time in HH:MM:SS format. By default, Previous 1 day is selected.

The graphical representation of SLA profiles for which SLA target values were not met is displayed for the selected time range.

2. (Optional) You can use the sliders at the sides of the graph to further customize the time range.

The graphical representation of SLA profiles for which SLA target values were not met is refreshed and displayed for the customized time range. The graphical representation of SLA performance data in the subsequent sections on the page is also refreshed and displayed for the customized time range.

## Applications SLA Performance by Throughput

You can use the **Applications SLA Performance by Throughput** section on the **Site\_name SLA Performance** page to view average throughput performance of all applications and application groups in a site. You can also customize your view by selecting graph or grid views. In the graph view, you can further select scatter plot or tree map.

To view a graphical representation of average throughput performance of all applications and application groups in a site:

1. Select **Graph View** at the top right of the page. By default, Graph View is selected.

A graphical representation of average throughput performance of all applications and application groups in a site against the target throughput is displayed in the **Scatter Plot** view. The y-axis represents the average throughput. 0% on the x-axis represents the target throughput (in %) defined in the SLA profiles, while the regions on the left and right of the target represent percentages below and above the target throughput, respectively.

A carousel at the bottom of the section also displays the list of all applications and application groups with their SLA profiles, target throughput, and average throughput values.

2. Click **Legend** at the bottom right of the section to view the plotting legend.

The items described in the **Legend** are:

- A single application is represented by a blue circle.
- An application group is represented by a blue square.
- An application or application group whose target throughput value in the SLA profile was modified during runtime is represented by an uncolored circle and uncolored square, respectively.
- The SLA profiles are represented by their priority numbers within the colored or uncolored circles and squares.

3. (Optional) You can use the sliders at the sides of the graph further to customize the time range.

The carousel is refreshed for the customized time range.

4. Click the circles or squares to view more information about the application or application groups. See [“Viewing the SLA Performance of an Application or Application Group” on page 902](#).
5. Select **Tree Map** at the top right of the section to view a list of all applications and application groups in a site and their average throughput values.

A list of all applications and application groups in a site along with their associated SLA profiles and the average throughput values is displayed.

To view a tabular representation of average throughput performance of all applications and application groups in a site:

1. Select **Grid View** at the top right of the page.

A list of all applications and application groups along with their SLA profiles, average throughput, and target throughput values is displayed in a tabular format.

[Table 321 on page 900](#) describes the fields on the Applications SLA Performance by Throughput grid view.

**Table 321: Fields on the Applications SLA Performance by Throughput Grid View**

Field	Description
Name	View name of the application or application group.
SLA Profile	View the SLA profile associated with the application or application group.
Type	View the type—application or application group
Category	View the category of the application or application group. The value of Category can be Messaging, Web, Infrastructure, Remote-Access, Multimedia, Video, and so on.
Sessions	View number of sessions consumed by the application or application group.
Throughput Avg. Performance	View the average throughput performance value (in %) of the application or application group. The upward triangle on the left of the average throughput performance value indicates that the average throughput is higher than the target throughput configured in the SLA profile of the application or application group. The value (in %) denotes the percentage above the target throughput value. Similarly, the downward triangle on the left of the average throughput performance value indicates that the average throughput is lower than the target throughput configured in the SLA profile of the application or application group. The value (in %) denotes the percentage below the target throughput value.

2. (Optional) Click the details icon to the left of the application or application group name to view more information about the application or application group. See [“Viewing the SLA Performance of an Application or Application Group” on page 902](#).

## SLA Performance for ALL

View a graphical representation of the performance of the SLA parameters such as round-trip time (RTT), latency, packet loss, and jitter for the specified time range for MPLS and Internet WAN links for all SLA profiles. The y-axis represents the SLA parameters and the x-axis represents the specified time range. You can also view the respective target SLA parameters in the graphs.

**NOTE:** The graphical representation of the performance of all SLA parameters for the WAN links is available only in the graph view.

To view a graphical representation of the performance of all SLA parameters for the WAN links:

- Select **All** at the top right of the section. By default, All is selected.

A graphical representation of the performance of the SLA parameters such as RTT, latency, packet loss, and jitter for the specified time range for all WAN links is displayed.

- Select **wan\_0**, **wan\_1**, and so on at the top right of the section to view the performance of the SLA parameters for the MPLS and Internet WAN links. You can enable and configure **wan\_0**, **wan\_1**, and so on and map them to MPLS or Internet links when you create a site.

The graphical representation of the performance of the SLA parameters such as RTT, latency, packet loss, and jitter for the specified time range is refreshed and only the performance for the selected WAN link is displayed.

- (Optional) Click **Legend** at the bottom right of the section to view the plotting legend for the horizontal dotted lines parallel to the x-axis in the graphs. The horizontal dotted lines represent the respective target SLA parameters of the SLA profiles.

## RELATED DOCUMENTATION

[About the SLA Performance of a Single Tenant Page | 895](#)

[Viewing the SLA Performance of an Application or Application Group | 902](#)

# Viewing the SLA Performance of an Application or Application Group

You can use the **Monitor > Applications > Tenant-Name SLA Performance > Site-Name SLA Performance** page in the Customer Portal to view the SLA performance for individual applications and application groups in a site. You can also view the SLA performance of the associated SLA profile for all SLA parameters.

To view SLA performance of an application or application groups:

- Click one of the circles or squares in the **Applications SLA Performance by Throughput** section on the **Site-Name SLA Performance** page.

The page that appears displays SLA performance details of the application or application group.

[Table 322 on page 902](#) describes the fields on the application or application group SLA Performance details page.

**Table 322: Fields on the Application or Application Group Details Page**

Field	Description
Category and Description	View the category of the application or application group. The category can be Messaging, Web, Infrastructure, Remote-Access, Multimedia, Video, and so on.  You can also view a description of the application or application group.
SLA	View the name of the SLA profile associated with the application or application group.
Target	View the current target throughput defined in the SLA profile associated with the application or application group. If the target throughput was modified during runtime, the date and time when the throughput was modified and the previously defined throughput value are also displayed.
Avg. Performance	View the average throughout performance (in %) above or below the configured target throughput. The average throughput (in Mbps) is displayed within parentheses.
SLA Metrics by Throughput	View a graphical representation of the SLA metrics by throughput during the specified time range for that application or application group. The y-axis represents the throughput (in Mbps). The x-axis represents the specified time range. Hover over the graph to view the throughput value and time at any specified point. You can also view the sessions consumed by the WAN links for the application or application group time range.

Table 322: Fields on the Application or Application Group Details Page (*continued*)

Field	Description
Global SLA Profile Performance	<p>View the performance for all the SLA parameters of the SLA profile associated with the application or application group. The SLA performance is represented by a color-coded donut chart. The section in blue in the donut chart indicates the percentage of time during which SLA requirements for the SLA profile were met. The section in red in the donut chart indicates the percentage of time during which SLA requirements for the SLA profile were not met.</p> <p>Click the red colored section of the donut chart to view more information about when SLA requirements for the SLA profile were not met. The <b>SLA Profile Performance</b> page appears. The SLA Profile Performance page displays the following fields:</p> <ul style="list-style-type: none"> <li>• SLA Profile—SLA profile associated with the application or application group</li> <li>• Target—Target throughput configured in the SLA profile</li> <li>• SLAs Not Met—Percentage of time SLA requirements were not met for the SLA profile</li> <li>• Sessions—Number of sessions consumed by the application or application group</li> <li>• Start Time—Time at which the WAN links associated with the application or application groups started to fail meeting the SLA requirements</li> <li>• End Time—Time at which SLA profile requirements started to be met again</li> <li>• Avg Val—Average throughput (in Mbps) when the SLA requirements started to fail</li> <li>• Duration—Total duration (in seconds) during which SLA requirements were not met</li> <li>• From—Source WAN link</li> <li>• To—Destination WAN link</li> </ul>

## RELATED DOCUMENTATION

[About the SLA Performance of a Single Tenant Page | 895](#)

[Viewing the SLA Performance of a Site | 898](#)

## Application Visibility Overview

Contrail Service Orchestration (CSO) supports application visibility, a feature that enables you to protect your network against application-level threats.

The feature provides security management information such as the type, bandwidth consumption, and behavior of applications running on your network. As the SP administrator, OpCo administrator, or tenant administrator with the required tenant-level privileges to access the Application Visibility page, you can use this information to identify application-level threats to your network. For example, you can identify threats posed by applications that consume excess bandwidth and cause data loss due to network bandwidth congestion. You can also control the applications at a granular level by managing the type of traffic allowed to enter or exit the network.

You require application visibility because it helps you overcome the various challenges faced by your network. For example:

- Web-based applications use nonstandard ports and encryption, which make effective management of traffic flows challenging.
- Applications such as social networking, peer-to-peer file sharing, and Webmail change their communication ports and protocols dynamically, or tunnel within other commonly used services such as HTTP or HTTPS, to avoid traditional security mechanisms. This makes the implementation of access control challenging.

### Benefits of Application Visibility

- Traffic management—Application visibility provides insight into applications running on the network. You can analyze applications running on the network for performance and assurance. In addition, you can define application policies to steer and control applications, on a granular level, to meet Service-level Agreements (SLAs).
- Network threat protection—Use application visibility to identify application-level threats based on the risk level of each application running on the network. You can then mitigate these threats by adding appropriate firewall policy intents to allow, restrict, or block network access to applications.
- Effective bandwidth management—Application visibility provides information about the bandwidth consumption of each application running on the network. You can use this information and rate-limit applications that consume excess bandwidth.

### RELATED DOCUMENTATION

[About the Application Visibility Page | 905](#)

[About the User Visibility Page | 908](#)



# About the Application Visibility Page

To access this page, select **Monitor > Applications > Visibility**.

There are two ways in which you can view your application visibility data—**Chart View** or **Grid View**. By default, the data is displayed in **Chart View**.

## Tasks You Can Perform

You can perform the following tasks from this page:

- View application visibility data in **Chart View**. See [“Chart View” on page 905](#).
- View application visibility data in **Grid View**. See [“Grid View” on page 906](#).
- Select a device to which the application visibility settings are applicable. See [“Viewing Application or User Visibility Data for Specific Sites” on page 911](#).

## Chart View

Click the **Chart View** link for a brief summary of the top 50 applications consuming the maximum bandwidth in your network. The data can be presented graphically as a bubble graph, heat map, or a zoomable bubble graph. The data is refreshed automatically based on the selected time range. You can also use the **Custom** button to set a custom time range.

You can hover over your applications to view critical information such as total number of sessions, total number of blocks, category, bandwidth consumed, risk levels, and characteristics. You can also view the top five users accessing your application.

[Table 323 on page 905](#) provides guidelines on using the fields on the **Chart View** of the **Application Visibility** page.

Table 323: Fields on the Chart View

Field	Description
All Devices	Displays application visibility data for all the sites managed by CSO. Click <b>Edit</b> to select individual devices for which you want to view the data.
Show By	Select from the following options to view a user’s data: <ul style="list-style-type: none"><li>• Bandwidth—Shows data based on the amount of bandwidth the application has consumed for a particular time range.</li><li>• Number of Sessions—Shows data based on the number of sessions consumed by the application.</li></ul>

Table 323: Fields on the Chart View *(continued)*

Field	Description
Time Span	<p>Select the required time range to view a user's data.</p> <p>Use the custom option to choose the time range if you want to view data for more than one day. The time range is from 00:00 through 23:59.</p>
Select graph	<p>Select from the following graphical representations to view an application's data:</p> <ul style="list-style-type: none"> <li>• Bubble Graph</li> <li>• Heat Map</li> <li>• Zoomable Bubble Graph</li> </ul> <p>By default, data is shown in the Bubble Graph format.</p>
Group By	<p>Select from the following options to view the application's data:</p> <ul style="list-style-type: none"> <li>• Risk—Grouped by critical, high, unsafe, and so on.</li> <li>• Category—Grouped by categories such as web, infrastructure, and so on.</li> </ul>
Number of Sessions	Displays the total number of application sessions.
Number of Blocks	Displays the total number of times the application was blocked.
Bandwidth	Displays the bandwidth usage of the application.
Risk Level	Displays the risk associated with the application. For example, critical, high, unsafe, and so on.
Category	Displays the category of the application. For example, web, infrastructure, and so on.
Characteristics	Displays the characteristics of the application. For example, prone to misuse, bandwidth consumer, capable of tunneling, and so on.

## Grid View

Click the **Grid View** link to obtain comprehensive details about applications. You can view top users by volume, top applications by volume, top category by volume, top characteristics by volume, and sessions by risk. You can also view the data in a tabular format that includes sortable columns. You can sort the applications in ascending or descending order based on application name, risk level, and so on.

[Table 324 on page 907](#) describes the widgets in this view. Use these widgets to get an overall, high-level view of your applications, users, and the content traversing your network.

[Table 324 on page 907](#) provides guidelines on using the fields on the **Grid View** of the **Application Visibility** page.

Table 324: Widgets on the Grid View

Field	Description
Top Users By Volume	Top users of the application; sorted by bandwidth consumption.
Top Apps By Volume	Top applications using the network traffic, such as Amazon, Facebook, and so on, sorted by bandwidth consumption.
Top Category By Volume	The top category of the application, such as Web, infrastructure, and so on; sorted by bandwidth consumption.
Top Characteristics By Volume	Top behavioral characteristics of the application, such as whether it is highly prone to misuse, the top bandwidth consumer, and so on.
Sessions By Risk	Number of events or sessions received; grouped by risk.

[Table 325 on page 907](#) describes the fields in the table below the widgets. Users are displayed by usernames or IP addresses. When you click a link, the **User Visibility** page appears in a grid view, with the correct filter applied. Sessions are also displayed as links and when you click a link, the **All Events** page appears with all security events.

Table 325: Detailed View of Applications

Field	Description
Application Name	Name of the application, such as Amazon, Facebook, and so on.
Risk Level	Risk associated with the application: critical, high, unsafe, moderate, low, and unknown.
Users	Total number of users accessing the application.
Volume	Bandwidth used by the application.
Total Sessions	Total number of application sessions.
No of Rejects	Total number of sessions blocked.
Category	Category of the application, such as Web, infrastructure, and so on.
Sub Category	Subcategory of the application. For example, social networking, news, and advertisements.
Characteristics	Characteristics of the application. For example, prone to misuse, bandwidth consumer, capable of tunneling.

## RELATED DOCUMENTATION

[Application Visibility Overview](#) | 904

[Viewing Application or User Visibility Data for Specific Sites](#) | 911

[About the SLA Performance of a Single Tenant Page](#) | 895

## About the User Visibility Page

To access this page, select **Monitor > User Visibility**.

Use the User Visibility page to view information about devices (such as top 50 devices accessing high bandwidth-consuming applications and establishing higher number of sessions) on your network. Based on this information, network administrators can choose to rate-limit a device that is accessing applications which consume large bandwidth or create maximum traffic.

### Tasks You Can Perform

You can perform the following tasks from this page:

- View user visibility data in **Chart View**. See [“Chart View” on page 908](#).
- View user visibility data in **Grid View**. See [“Grid View” on page 910](#).
- Select one or more sites for which you want to view the user visibility data. See [“Viewing Application or User Visibility Data for Specific Sites” on page 911](#).

### Chart View

Click the **Chart View** tab to view the data graphically as a bubble graph, heat map, or a zoomable bubble graph. The data is refreshed automatically based on the selected time span.

You can hover over the chart to view critical information (such as the total number of sessions established and bandwidth consumed) about each user.

Users are represented by the IP address or usernames of their devices on the network.

You can also view the top five applications of each user, based on either their bandwidth consumption or number of sessions established.

[Table 326 on page 909](#) provides guidelines on using the fields on the **Chart View** tab of the **User Visibility** page.

Table 326: Fields on the Chart View

Field	Description
All Sites	<p>By default, the chart displays user visibility data for all the sites managed by CSO.</p> <p>Click <b>Edit</b> to select one or more sites for which you want to view the user visibility data.</p> <p>See <a href="#">“Viewing Application or User Visibility Data for Specific Sites” on page 911</a> for more information.</p>
Show By	<p>Select the criterion to display information regarding the bandwidth consumed and number of sessions established by applications in the selected time span:</p> <ul style="list-style-type: none"> <li>• <b>Bandwidth</b>—Displays users based on their bandwidth consumption. Users running applications that consume larger bandwidth are represented by larger bubbles or matrices.</li> <li>• <b>Number of Sessions</b>—Displays users based on the number of sessions established. Users running applications that have higher number of sessions established are represented by larger bubbles or matrices.</li> </ul>
Time Span	<p>Select the duration (last 15 minutes, last 30 minutes, last 45 minutes, last 1 hour, last 4 hours, last 8 hours, last 12 hours, last 1 day, or custom) for which you want to view the user visibility data.</p> <p>Select <b>Custom</b> to view data for more than one day.</p> <p>The <b>Custom Time</b> page appears.</p> <p>Specify the <b>From date</b> and <b>To date</b> (in MM/DD/YYYY format).The time span is from 00:00 through 23:59.</p>
Select Graph	<p>Select one of the following options to view data graphically:</p> <ul style="list-style-type: none"> <li>• Bubble Graph (default)</li> <li>• Heat Map</li> <li>• Zoomable Bubble Graph</li> </ul>

[Table 327 on page 909](#) describes the parameters that are displayed when you hover your cursor over the chart.

Table 327: Parameters on the Chart

Parameter	Description
Number of Sessions	Total number of application sessions established by the user (device).
Bandwidth	Total Bandwidth consumed by the user (device).

Table 327: Parameters on the Chart (*continued*)

Parameter	Description
View All Applications	<p>Click the <i>View All Applications</i> link to view details (such as risk level and category) of all the applications on the network.</p> <p>The Application Visibility page in grid view appears. See <a href="#">“About the Application Visibility Page” on page 905</a> for more information.</p>

## Grid View

Click the **Grid View** tab to view high-level details of the users on your network. You can view widgets that provide information about top users by volume and top applications that create network traffic by volume. The data is also displayed in a tabular format with sortable columns.

[Table 324 on page 907](#) describes the widgets on the **Grid View** of the **User Visibility** page.

Table 328: Widgets on the Grid View

Field	Description
Top Users by Volume	Top users of applications, based on bandwidth consumption, for the selected time span.
Top Apps by Volume	<p>Top applications accessed by users on the network, based on bandwidth consumption, for the selected time span.</p> <p>For example: Amazon</p>

[Table 329 on page 911](#) describes the fields in the table below the widgets.

The table includes sortable columns, with the users (devices) represented by usernames or IP addresses.

Click the Search icon to enter the search text that can include a specific application or user name, or IP address of a device on the network.

The search results are displayed. Click **Clear All** to clear the search results.

Table 329: Detailed View of Users

Field	Description
Applications	<p>Name of the application accessed by a specific user (device).</p> <p>For example: Google</p> <p><b>NOTE:</b> By default, this column lists only one application per user. If a user accesses more than one application, a +&lt;integer&gt;icon (for example: +2) appears to the right of the application name. The integer indicates the number of additional applications accessed by the user. Click the integer to view all applications accessed by a user.</p>
User Name	IP address or username of the user (device) accessing the applications.
Volume	Bandwidth consumed by a user (who is represented by a user name or IP address).
Total Sessions	Total number of application sessions established by a specific user (device).

## Viewing Application or User Visibility Data for Specific Sites

### IN THIS SECTION

- [Viewing Application Visibility Data for Specific Sites | 911](#)
- [Viewing User Visibility Data for Specific Sites | 912](#)

You can select one or more sites for which you want to view application visibility or user visibility data (such as bandwidth consumption and number of sessions). By default, the application visibility and user visibility data is displayed for all sites in a tenant.

### Viewing Application Visibility Data for Specific Sites

To select the sites for which you want to view the application visibility data:

1. Select **Monitor > Application Visibility**.  
The **Application Visibility** page appears.
2. Click the **Edit** link (next to the Show By field).

The **Select Sites** page appears.

3. From the Sites field:

- Click **Selective** to select the sites for which you want to view the application visibility data:

The available sites are displayed in the **Available** column.

- Click **All** to view application visibility data for all sites in the tenant.

If you click All, proceed to step 5.

4. Select the sites from the **Available** column and click the right arrow to move them to the **Selected** column.

5. Click **OK** to save your changes.

You are returned to the Application Visibility page and the application visibility data is displayed for the sites that you selected.

To view application visibility data for other sites, repeat step 2.

## Viewing User Visibility Data for Specific Sites

To select the sites for which you want to view the user visibility data:

1. Select **Monitor > User Visibility**.

The **User Visibility** page appears.

2. Click the **Edit** link (next to the Show By field).

The **Select Sites** page appears.

3. From the Sites field:

- Click **Selective** to select the sites for which you want to view the user visibility data.

The available sites are displayed in the **Available** column.

- Click **All** to view user visibility data for all sites in the tenant.

If you click All, proceed to step 5.

4. Select the sites from the **Available** column and click the right arrow to move them to the **Selected** column.

5. Click **OK** to save your changes.

You are returned to the User Visibility page and the user visibility data is displayed for the sites that you selected.



To view user visibility data for other sites, repeat step [2](#).

# Monitoring Threats

## IN THIS CHAPTER

- [About the Threats Map \(Live\) Page | 914](#)

## About the Threats Map (Live) Page

## IN THIS SECTION

- [Tasks You Can Perform | 915](#)
- [Field Descriptions | 916](#)
- [Threat Types | 917](#)

To access this page, select **Monitor > Threats Map (Live)** in Customer Portal.

Use this page to visualize incoming and outgoing threats between geographic regions. You can view blocked and allowed threat events based on feeds from intrusion prevention systems (IPS), antivirus, and antispam engines, unsuccessful login attempts, and screen options. You can also click a specific geographical location to view the event count and the top five inbound and outbound IP addresses.

The threat data is displayed starting from 12:00 AM (midnight) up to the current time (in your time zone) on that day and is updated every 30 seconds. The current date and time is displayed at the top right and a legend is displayed at the bottom left of the page.

If a threat occurs when you are viewing the page, an animation shows the country from which the threat originated (source) and the country in which the threat occurred (destination).

**NOTE:** For threats with unknown geographical IP addresses (private IP addresses), the animation shows the threat originating from the bottom center of the geographical map.

### Tasks You Can Perform

You can perform the following tasks from this page:

- Toggle between updating the data and allowing live updates—Click the **Pause** icon to stop the page from updating the threat map data and to stop animations. Click the **Play** icon to update the page data and resume animations.
- Zoom in and out of the page—Click the zoom in (+) and zoom out (–) icons to zoom in and out of the page.
- Pan the page—Click and drag the mouse to pan the page.
- View country-specific details:
  - Click a country on the threat map to view threat information specific to that country. A *Country-Name* pop-up appears displaying country-specific information.
  - Click the **View Details** link in the *Country-Name* pop-up to view additional details. The *Country-Name* (Details) panel appears.

For more information, see [Table 330 on page 915](#).

**Table 330: Country-Specific Threat Information**

Field	Description	Displayed In
<b><i>Number-of-threat-events</i></b> <b>Threat Events since 12:00 am</b>	Displays the total number of threat events (inbound and outbound) since midnight for that country.  Click the hyperlinked number to go to the All Events page, where you can view more information about the events.	<i>Country-Name</i> pop-up
<b>Inbound</b> <b>(<i>Number-of-threat-events</i>)</b>	Displays the total number of inbound threats for the country and the IP address and the number of events for that IP address for the top five inbound events.	<i>Country-Name</i> pop-up
<b>Outbound</b> <b>(<i>Number-of-threat-events</i>)</b>	Displays the total number of outbound threats for the country and the IP address and the number of events for that IP address for the top five outbound events.	<i>Country-Name</i> pop-up
<b><i>Number-of-threat-events</i></b> <b>Events since 12:00 am</b>	Displays the total number of threat events (inbound and outbound) since midnight for that country.  Click the hyperlinked number to go to the All Events page, where you can view more information about the events.	<i>Country-Name</i> (Details) panel

Table 330: Country-Specific Threat Information (*continued*)

Field	Description	Displayed In
<b>Number-of Inbound Events</b>	<p>Displays the total number of inbound threats for the country and the number of inbound threat events for each of the following categories:</p> <ul style="list-style-type: none"> <li>• IPS Threats</li> <li>• Virus</li> <li>• Spam</li> <li>• Device Authentication</li> <li>• Screen</li> </ul> <p>Click the hyperlinked number for a category to go to the page for that category, where you can view more information about that category. For example, clicking the hyperlinked number for IPS threats takes you to the IPS Events page.</p> <p>Click the <b>Top 5 IP Addresses (Inbound)</b> to view the IP address and the number of events for that IP address for the top five inbound events.</p>	<i>Country-Name</i> (Details) panel
<b>Number-of Outbound Events</b>	<p>Displays the total number of outbound threats for the country and the number of outbound threat events for each of the following categories:</p> <ul style="list-style-type: none"> <li>• IPS Threats</li> <li>• Virus</li> <li>• Spam</li> <li>• Device Authentication</li> <li>• Screen</li> </ul> <p>Click the hyperlinked number for a category to go to the page for that category, where you can view more information about that category. For example, clicking the hyperlinked number for screens takes you to the Screen Events page.</p> <p>Click the <b>Top 5 IP Addresses (Outbound)</b> to view the IP address and the number of events for that IP address for the top five outbound events.</p>	<i>Country-Name</i> (Details) panel

## Field Descriptions

Table 331 on page 917 displays the fields the Threats Map (Live) page.

Table 331: Fields on the Threats Map (Live) Page

Field	Description
<b>Total Threats Blocked &amp; Allowed</b>	Displays the total number of threats blocked and allowed. Click the hyperlinked number to go to the All Events page (filtered view of the Detail View tab), where you can view more information about the IPS, virus, spam, device authentication, and screen events.
<b>Threats Blocked &amp; Allowed</b>	<p>Displays the total number of threats blocked and allowed by the following categories:</p> <ul style="list-style-type: none"> <li>• IPS Threats</li> <li>• Virus</li> <li>• Spam</li> <li>• Device Authentication</li> <li>• Screen</li> </ul> <p>Click the hyperlinked number for a category to go to the page for that category, where you can view more information about that category. For example, clicking the hyperlinked number for IPS threats takes you to the IPS Events page (filtered view of the Detail View tab).</p>
<b>Top Target Devices</b>	Displays the top five targeted devices and the number of threats per device. Click the hyperlink for a device to go to the All Events page (filtered view of the Detail View tab), where you can view more information about the IPS, virus, spam, device authentication, and screen events for that device.
<b>Top Destination Countries</b>	Displays the top five destination countries and the number of threats per country. Click the hyperlink for a country to go to the All Events page (filtered view of the Detail View tab), where you can view more information about the IPS, virus, spam, device authentication, and screen events for that country.
<b>Top Source Countries</b>	<p>Displays the top five source countries and the number of threats per country. Click the hyperlink for a country to go to the All Events page (filtered view of the Detail View tab), where you can view more information about the IPS, virus, spam, device authentication, and screen events for that country.</p> <p><b>NOTE:</b> For threats with unknown geographical IP addresses (private IP addresses), the country name is displayed as <i>Undefined</i>. So, when you click the hyperlinked threat count and go to the All Events page, the filter query uses <b>Undefined</b> as the source country.</p>

## Threat Types

The Threats Map (Live) page displays blocked and allowed threat events based on feeds from IPS, antivirus, and antispam engines, unsuccessful login attempts, and screen options. [Table 332 on page 918](#) describes different types of threats blocked and allowed.

Table 332: Types of Threats

Attack	Description
IPS threat events	<p>Intrusion detection and prevention (IDP) attacks detected by the IDP module.</p> <p>The information reported about the attack (displayed on the IPS Events page) includes information about:</p> <ul style="list-style-type: none"> <li>• Source of attack</li> <li>• Destination of attack</li> <li>• Type of attack</li> <li>• Session information</li> <li>• Severity</li> <li>• Policy information that permitted the traffic.</li> <li>• Action: traffic permitted or dropped.</li> </ul>
Virus events	<p>Virus attacks detected by the antivirus engine.</p> <p>The information reported about the attack (displayed on the Antivirus Events page) includes information about:</p> <ul style="list-style-type: none"> <li>• Source of the infected file</li> <li>• Destination</li> <li>• Filename</li> <li>• URL used for accessing the file</li> </ul>
Spam events	<p>E-mail spam that is detected based on the blocklist spam e-mails.</p> <p>The information reported about the attack (displayed on the Antispam Events page) includes information about:</p> <ul style="list-style-type: none"> <li>• Source</li> <li>• Action: E-mail is rejected or allowed.</li> <li>• Reason for identifying as e-mail spam.</li> </ul>
Device authentications	<p>The firewall authentication messages generated due to unauthorized attempts to access the network. The reported information (displayed on the All Events page) contains the reason for authentication failure and the source of the request.</p>

Table 332: Types of Threats (*continued*)

Attack	Description
Screen events	<p>Events that are detected based on screen options.</p> <p>The information reported about the attack (displayed on the Screen Events page) includes information about:</p> <ul style="list-style-type: none"><li>• Internet Control Message Protocol (ICMP) screening</li><li>• IP screening</li><li>• TCP screening</li><li>• UDP screening</li></ul>

## RELATED DOCUMENTATION

[About the All Security Events Page](#) | 862

# 8

PART

## Managing Reports

---

[Security Reports](#) | **921**

[SD-WAN Reports](#) | **945**

---



# Security Reports

## IN THIS CHAPTER

- [Reports Overview | 921](#)
- [About the Security Report Definitions Page | 922](#)
- [Scheduling, Generating, Previewing, and Sharing Security Reports | 925](#)
- [About the Security Generated Reports Page | 928](#)
- [Creating Log Report Definition | 929](#)
- [Creating Bandwidth Report Definition | 933](#)
- [Creating ANR Report Definition | 935](#)
- [Editing, Deleting, and Cloning Log Report Definitions | 938](#)
- [Editing, Deleting, and Cloning Bandwidth Report Definitions | 940](#)
- [Editing, Deleting, and Cloning ANR Report Definitions | 942](#)

## Reports Overview

Reports are generated based on the summary of network activity (such as top web applications or viruses detected) and overall network status. To generate reports, you can use the predefined report definitions as is, or you can create custom report definitions that meet your needs for specific data.

The generated report contains a table of contents (TOC) with links to each section of the report. The designated recipients, whose e-mail addresses are included in the report definition, receive the report in PDF format.

You can generate two categories of reports:

Security reports—Provide information about network activity and network status.

SD-WAN reports—Provide information about SLA performance of all sites or specific sites in a tenant.

The following are the types of security reports:

- **Log Reports**—Enable you to analyze event history based on the data criteria (such as filters, aggregation criteria, time span, etc.) that you select.

- **Bandwidth Reports**—Enable you to analyze the bandwidth usage of an application or a user.
- **ANR Reports**—Enable you to analyze business risks in the network, based on application usage and resource usage.

The following are the types of SD-WAN reports:

- **SD-WAN Tenant Performance Reports**—Enable you to analyze tenant performance based on the parameters (top applications by bandwidth, top sites not meeting the SLA, top sites meeting the SLA with switching, sites meeting the SLA without switching, top sites by highest packet loss, and top sites by highest latency, top sites by highest jitter, and current active tunnels) that measure the SLA performance across all sites in a tenant.
- **SD-WAN Site Performance Reports**—Enable you to analyze site performance based on the parameters (top 10 applications and link utilization, top profiles not meeting the SLA, top SLA profiles switching links, top applications by highest packet loss, top applications by highest latency, top applications by highest jitter, SLA performance between two sites, and tunnels created and deleted) that measure the SLA performance of specific sites in a tenant. You can select a maximum of five sites for which you want to generate the report.

## RELATED DOCUMENTATION

[About the Security Report Definitions Page | 922](#)

[About the SD-WAN Report Definitions Page | 945](#)

## About the Security Report Definitions Page

To access this page, click **Customer Portal > Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

The Security Report Definitions page displays a list of predefined and custom report definitions. To generate reports, you can use the predefined report definitions as is, or you can create custom report definitions.

**NOTE:** From CSO Release 4.1.0 onward, an Application and Network Risk (ANR) report is the only predefined report definition available on the Security Report Definitions page.

The ANR report provides information about data usage and network risks. The information is consolidated from various predefined report definitions available in the release prior to CSO Release 4.1.0.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Create a report definition:
  - To create a log report definition, see [“Creating Log Report Definition” on page 929](#).
  - To create a bandwidth report definition, see [“Creating Bandwidth Report Definition” on page 933](#).
  - To create an application and network risk report definition, see [“Creating ANR Report Definition” on page 935](#)
- Edit, delete, or clone report definitions:
  - To edit, delete, or clone a log report definition, see [“Editing, Deleting, and Cloning Log Report Definitions” on page 938](#).
  - To edit, delete, or clone a bandwidth report definition, see [“Editing, Deleting, and Cloning Bandwidth Report Definitions” on page 940](#).
  - To edit, delete, or clone an application and network risk report definition, see [“Editing, Deleting, and Cloning ANR Report Definitions” on page 942](#).
- To schedule, generate reports, preview reports as PDF, and send the reports through e-mail, see [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).
- To view all the parameters of a report definition, right click the report definition that you want to see the detailed view for and select **Detailed View**, or select the report definition and click **More > Detailed View**. Alternatively, hover over the report definition name and click the Detailed View icon that appears before it.

The Report Definition Details page appears, displaying the same values that you specified for each parameter in the selected report definition.

- To search for a report definition from the list of available report definitions, click the **Search** icon in the top right corner of the page.

Enter the name of the report definition in the search bar and click the Search icon.

The search results are displayed.

Click **Clear All** to clear the search results.

## Field Descriptions

[Table 333 on page 924](#) describes the fields on the Security Report Definitions page.

Table 333: Fields on the Security Report Definitions Page

Field	Description
Name	Name of the report definition.
Description	Description of the report definition.  For example: Report of data usage by application and network risk.
Type	Type of report definition—ANR, Bandwidth, or Log.
Definition Type	Indicates whether the report definition is predefined (system-generated) or custom (user-created).
Report Content	Details of the sections in the report.  For example: Count, Time Duration.
Schedule	Indicates whether the report generation is scheduled at the current time (Now) or for a later date and time (Once).
Recipients	E-mail addresses of recipients to whom the generated report is sent.
Last Generated	Date and time when the report was last generated.
Job ID	Use the job ID to view the status of the task on the Jobs (Monitor > Jobs) page.

## RELATED DOCUMENTATION

[Reports Overview | 921](#)
[Creating Log Report Definition | 929](#)
[Creating Bandwidth Report Definition | 933](#)
[Creating ANR Report Definition | 935](#)

## Scheduling, Generating, Previewing, and Sharing Security Reports

### IN THIS SECTION

- [Editing Report Generation Schedule | 925](#)
- [Generating Reports | 926](#)
- [Previewing Reports in PDF | 927](#)
- [Sharing Reports through E-mail | 927](#)

You can schedule report generation, generate reports, preview reports as PDF, and share the reports through e-mail.

To perform these actions on a report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Select or right-click the report definition on which you want to perform an action and click **More**.

A list of actions that you can perform on the report definition is displayed.

3. Select the appropriate action from the list:

### Editing Report Generation Schedule

You can edit the report generation schedule of the selected report definition from the Security Report Definitions page:

1. Select the report definition for which you want to edit the report generation schedule.
2. Click **More > Edit Schedule**. Alternatively, right-click on the selected report definition and select **Edit Schedule**.

The Edit Report Schedule page appears.

3. Specify whether you want to generate the report at the current time or schedule it for a later date and time:

- **Run now**—Select this option to schedule the report generation at the current time.

- Schedule at a later time—Select this option to schedule the report generation for a later date and time in MM/DD/YYYY and HH:MM:SS formats.

4. Click **OK** to save your changes.

You are returned to the Security Report Definitions page on which a confirmation message, indicating that the report generation schedule is updated successfully, appears.

## Generating Reports

You can generate a report at the current time, with either saved settings or custom settings. You can select **Saved Settings** to generate a report based on the values specified in the report definition for the selected report or select **Custom Settings** to modify the values for the Number of Top Logs and the Time Span settings, and generate a report based on the modified values.

**NOTE:** The modified values are applicable only for the report that is being generated and are not saved in the report definition.

To generate a report:

1. From the Security Report Definitions page, select the report definition based on which you want to generate the report.
2. Click **Run Now** on the Security Report Definitions page. Alternatively, click **More > Run Now** or right-click on the report definition and click **Run Now**.

The Run Report page appears.

3. Do one of the following:
  - Select **Saved Settings** to generate a report based on the values already specified in the report definition.
  - Select **Custom Settings** to modify the values for the Number of Top Logs and Time Span settings, and generate a report based on the modified values.

**NOTE:** The values that you modify are applicable only for the report that is being generated and are not saved in the report definition.

4. Click **OK** to save your changes.

The Run Report page appears indicating the progress of the report generation. After the report is generated, the **Download PDF Report** link appears on the Run Report page.

5. Click **Download PDF Report**.

Follow your browser instructions to view or save the report in PDF.

## Previewing Reports in PDF

You can preview and download the selected report in PDF:

1. Select the report definition based on which you want to generate the PDF of the report.
2. Click **More > Preview as PDF**. Alternatively, right-click on the report definition and select **Preview as PDF**.

The Preview as PDF page appears.

3. Click **Download PDF Report** to view the report in PDF. or click **Cancel** to cancel previewing the report.

The Security Report Definitions page appears.

## Sharing Reports through E-mail

You can share the generated report through e-mail:

1. Select the report definition based on which the report is to be generated and shared through e-mail.
2. Click **More > Send Report**. Alternatively, right-click on the report definition and select **Send Report**.

The Edit Recipients page appears:

- **Recipients**—Enter or select one or more e-mail addresses of users to whom you want to send the report.

By default, you can search by first name and select registered users. You can also enter external e-mail addresses.

- **Subject**—Enter the subject line for the e-mail. The maximum length is 2048 characters.
- **Comments**—Enter the text to be included in the body of the e-mail.

The maximum length allowed is 2048 characters.

3. Click **OK** to save your changes.

The Security Report Definitions page appears.

RELATED DOCUMENTATION

| [About the Security Report Definitions Page | 922](#)

About the Security Generated Reports Page

To access this page, click **Customer Portal > Reports > Generated Reports > Security**.

Use this page to view the list of reports that are generated from the Security Report Definitions page. You must click on the report to view the report in PDF.

You can also delete one or more generated reports.

Field Descriptions

[Table 334 on page 928](#) describes the fields on the Generated Reports page.

Table 334: Fields on the Generated Reports Page

Field	Description
Report PDF Name	Type of the report (user created or predefined).
Generated Time	Date and time when the report was generated.
Description	Description of the report.
Definition Name	Name of the report definition.
Generated By	Name of the user who generated the report.
Recipients	Recipients of the generated report.

RELATED DOCUMENTATION

| [Reports Overview | 921](#)

---

| [About the Security Report Definitions Page | 922](#)



# Creating Log Report Definition

Use the Create Log Report Definition page to create log report definitions and generate the corresponding log reports.

Log reports are generated based on the data criteria, which are derived from one or more filters that you select. These reports help you to analyze business risks based on logs from services such as unified threat management (UTM) and firewalls.

To create a log report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Click **Add > Log Report Definitions**.

The Create Log Report Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 335 on page 929](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the log report definition.

The report definition is saved and the Security Report Definitions page appears.

A confirmation message appears on this page, indicating that the log report definition was successfully created.

You can perform various actions on the report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).

**Table 335: Fields on the Create Log Report Definition Page**

Field	Description
<b>General</b>	
Report Name	<p>Enter a unique name for the report definition.</p> <p>The name can contain a string of alphanumeric characters and some special characters (colons, periods, dashes, and underscores); no spaces are allowed and the maximum length allowed is 63 characters.</p>

Table 335: Fields on the Create Log Report Definition Page (*continued*)

Field	Description
Description	Enter a description for the report definition; the maximum length (including spaces) allowed is 1024 characters.
<b>Content</b>	
Data Criteria	<p>Click <b>Filters</b> to select one or more filters.</p> <p>The <b>Use Data Criteria From Filter</b> page appears.</p> <p>The list of default and custom filters, which are saved from the Security Events page, is displayed in a tabular format. The table displays the Filter Name, Filter Description, Time Span, and Grouping and Filtering criteria for each filter.</p> <p>Select one or more filters from the list as per your requirement, and click <b>OK</b>.</p> <p>The Create Log Report Definition page appears.</p> <p>When you select one or more filters, new fields appear on the Create Log Report Definition page. The fields are populated with values from the filters. You can either retain the values or change the values if needed. See <a href="#">Table 336 on page 931</a> for an explanation of the fields.</p>
<b>Schedule</b>	
Schedule Report	<p>Click <b>Add Schedule</b> to schedule the report generation.</p> <p>The <b>Add Report Schedule</b> page appears.</p> <p>Specify whether you want to generate the report immediately or schedule it for a later date and time:</p> <ul style="list-style-type: none"> <li>• <b>Run now</b>—Select this option to schedule the report generation at the current time, and click <b>OK</b>.</li> <li>• <b>Schedule at a later time</b>—Select this option to schedule the report generation for a later date and time (in MM/DD/YYYY and HH:MM:SS formats) and click <b>OK</b>.</li> </ul> <p>The Create Log Report Definition page appears with details of the report generation schedule.</p>
<b>E-Mail</b>	

Table 335: Fields on the Create Log Report Definition Page (continued)

Field	Description
E-Mail Recipients	<p>Click <b>Add Email Recipients</b> to add e-mail addresses of recipients to whom you want to send the log report.</p> <p>The Add Recipients page appears.</p> <ul style="list-style-type: none"> <li>• <b>Recipients</b>—Enter or select one or more e-mail addresses of users to whom you want to send the report. By default, you can search by first name and select registered users. You can also enter external e-mail addresses (e-mail addresses that are not registered with CSO).</li> <li>• <b>Subject</b>—Enter the subject line for the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> <li>• <b>Comment</b>—Enter the text to be included in the body of the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> </ul>

Table 336 on page 931 displays the additional fields that appear on the Create Log Report Definition page when you select one or more filters.

Table 336: Additional Fields on the Create Log Report Definition Page

<b>Section</b>	<p>Section number in the log report for a selected filter.</p> <p>Click <b>Delete Section</b> to remove the section and the corresponding filter.</p>
<b>Section Title</b>	<p>Name of the section in the log report.</p> <p>The section title is based on the selected filter.</p>
<b>Section Description</b>	<p>Description for the section in the log report.</p>
<b>Group By</b>	<p>Criteria, such as <b>Nested Application</b>, based on which logs are aggregated.</p> <p>You can select a maximum of two data criteria from the <b>Group By</b> drop-down list.</p>
<b>Time Span (Last)</b>	<p>Duration for which the report is to be generated.</p> <p>The default time span is 3 hours.</p> <p>You can specify the duration in minutes, hours, days, weeks, months, or specify a custom duration.</p>

Table 336: Additional Fields on the Create Log Report Definition Page (*continued*)

	<p>If you select <b>Custom</b>, the <b>Custom Time Range Selection</b> page appears. You must specify the <b>From</b> date and time, and <b>To</b> date and time (in MM/DD/YYYY and HH:MM:SS formats).</p>
<b>Filter By</b>	<p>Filter criteria (such as filtering applications based on http and https protocols) based on which the log report is to be generated.</p> <p>You can use AND, OR, Equal to (=), and Not Equal to (!=) logical operators as values to generate the report.</p> <p>For example: If you want to generate a report with the event category as antivirus and event name as AV_VIRUS_Detected_MT, then the value must be:</p> <p>Event Category = antivirus AND Event Name = AV_VIRUS_DETECTED_MT</p>
<b>Chart</b>	<p>Type of chart to graphically present data on the report.</p> <p>The available options are Bar (default), Comparison Bar, Timeline, Grid, Grouped Grid, Donut, and Bubble chart.</p>
<b>Number of Top Logs</b>	<p>Specify the number of records that you want to retrieve and display for each section in the report.</p> <p>Range: 1 through 20.</p> <p>Default: 10.</p>

## RELATED DOCUMENTATION

[About the Security Report Definitions Page | 922](#)
[Creating Bandwidth Report Definition | 933](#)
[Creating ANR Report Definition | 935](#)

## Creating Bandwidth Report Definition

You can use the Create Bandwidth Report Definition page to create bandwidth report definitions and generate the corresponding bandwidth reports. Bandwidth reports are used to analyze the bandwidth usage of an application or a user.

To create a bandwidth report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Click **Add > Bandwidth Report Definitions**.

The Create Bandwidth Report Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 337 on page 933](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the bandwidth report definition.

The report definition is saved and the Security Report Definitions page appears.

A confirmation message appears on this page, indicating that the bandwidth report definition was successfully created.

You can perform various actions on the report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).

**Table 337: Fields on the Create Bandwidth Report Definition Page**

Field	Description
<b>General</b>	
Report Name	Enter a unique name for the report definition.  The name can contain a string of alphanumeric characters and some special characters (colons, periods, dashes, and underscores); no spaces are allowed and the maximum length allowed is 63 characters.
Description	Enter a description for the report definition; the maximum length (including spaces) allowed is 1024 characters.

Table 337: Fields on the Create Bandwidth Report Definition Page (*continued*)

Field	Description
<b>Content</b>	
Number of Top Logs	<p>Specify the number of records that you want to retrieve and display for each section in the report.</p> <p>Range: 1 through 20.</p> <p>Default: 10.</p>
Time Span (Last)	<p>Specify the duration (Custom, last 3 hours, last 6 hours, last 12 hours, or last 24 hours) for which you want the report to be generated.</p> <p>If you select <b>Custom</b>, the <b>Custom Time Range Selection</b> page appears. You must specify the <b>From</b> date and time, and <b>To</b> date and time (in MM/DD/YYYY and HH:MM:SS formats).</p>
<b>Schedule</b>	
Add Schedule	<p>Click <b>Add Schedule</b> to schedule the report generation.</p> <p>The <b>Add Report Schedule</b> page appears.</p> <p>Specify whether you want to generate the report immediately or schedule it for a later date and time:</p> <ul style="list-style-type: none"> <li>• <b>Run now</b>—Select this option to schedule the report generation at the current time, and click <b>OK</b>.</li> <li>• <b>Schedule at a later time</b>—Select this option to schedule the report generation for a later date and time (in MM/DD/YYYY and HH:MM:SS formats), and click <b>OK</b>.</li> </ul> <p>The Create Bandwidth Report Definition page appears with details of the report generation schedule.</p>
<b>E-Mail</b>	

Table 337: Fields on the Create Bandwidth Report Definition Page (continued)

Field	Description
Add E-Mail Recipients	<p>Click <b>Add Email Recipients</b> to add e-mail addresses of recipients to whom you want to send the Bandwidth report.</p> <p>The Add Recipients page appears.</p> <ul style="list-style-type: none"> <li>Recipients—Enter or select one or more e-mail addresses of users to whom you want to send the report. By default, you can search by first name and select registered users. You can also enter external e-mail addresses.</li> <li>Subject—Enter the subject line for the e-mail that is sent with the generated report. The maximum length is 2048 characters.</li> <li>Comment—Enter the text to be included in the body of the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> </ul>

#### RELATED DOCUMENTATION

[About the Security Report Definitions Page | 922](#)

[Creating Log Report Definition | 929](#)

[Creating ANR Report Definition | 935](#)

## Creating ANR Report Definition

You can use the Create ANR Report Definition page to create Application and Network Risk (ANR) report definitions and generate the corresponding ANR reports. ANR reports help you to analyze business risks in a network, based on application usage and resource usage.

To create an ANR report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Click **Add > ANR Report Definition**.

The Create ANR Report Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 338 on page 936](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the ANR report definition.

The report definition is saved and the Security Report Definitions page appears.

A confirmation message appears on this page, indicating that the ANR report definition is successfully created.

You can perform various actions on the report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).

Table 338: Fields on the Create ANR Report Definition Page

Field	Description
<b>General</b>	
Report Name	Enter a unique name for the report definition.  The name can contain a string of alphanumeric characters and some special characters (colons, periods, dashes, and underscores); no spaces are allowed and the maximum length allowed is 63 characters.
Description	Enter a description for the report definition; the maximum length (including spaces) allowed is 1024 characters.
<b>Content</b>	
Number of Top Logs	Specify the number of records that you want to retrieve and display for each section in the report.  Range: 1 through 20.  Default: 10.
Time Span (Last)	Specify the duration (Custom, last 3 hours, last 6 hours, last 12 hours, or last 24 hours) for which you want the report to be generated.  If you select <b>Custom</b> , the <b>Custom Time Range Selection</b> page appears. You must specify the <b>From</b> date and time, and <b>To</b> date and time (in MM/DD/YYYY and HH:MM:SS formats).
<b>Schedule</b>	



Table 338: Fields on the Create ANR Report Definition Page (*continued*)

Field	Description
Schedule Report	<p>Click <b>Add Schedule</b> to schedule the report generation.</p> <p>The <b>Add Report Schedule</b> page appears.</p> <p>Specify whether you want to generate the report immediately or schedule it for a later date and time:</p> <ul style="list-style-type: none"> <li>• <b>Run now</b>—Select this option to schedule the report generation at the current time, and click <b>OK</b>.</li> <li>• <b>Schedule at a later time</b>—Select this option to schedule the report generation for a later date and time (in MM/DD/YYYY and HH:MM:SS formats), and click <b>OK</b>.</li> </ul> <p>The Create ANR Report Definition page appears with details of the report generation schedule.</p>
<b>E-Mail</b>	
E-Mail Recipients	<p>Click <b>Add Email Recipients</b> to add e-mail addresses of recipients to whom you want to send the ANR report.</p> <p>The Add Recipients page appears.</p> <ul style="list-style-type: none"> <li>• <b>Recipients</b>—Enter or select one or more e-mail addresses of users to whom you want to send the report. By default, you can search by first name and select registered users. You can also enter external e-mail addresses.</li> <li>• <b>Subject</b>—Enter the subject line for the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> <li>• <b>Comment</b>—Enter the text to be included in the body of the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> </ul>

## RELATED DOCUMENTATION

[About the Security Report Definitions Page | 922](#)
[Creating Bandwidth Report Definition | 933](#)
[Creating Log Report Definition | 929](#)

## Editing, Deleting, and Cloning Log Report Definitions

### IN THIS SECTION

- [Editing the Log Report Definition | 938](#)
- [Deleting Log Report Definitions | 938](#)
- [Cloning Log Report Definitions | 939](#)

You can edit, delete, and clone log report definitions.

### Editing the Log Report Definition

You can edit custom log report definitions from the Security Report Definitions page.

To edit a custom log report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Select the log report definition that you want to edit, and click the edit icon (pencil).

The **Edit Log Report Definition** page appears, displaying the same fields that are presented when you create a log report definition.

3. Modify the log report definition fields as needed.

4. Click **OK** to save the changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

### Deleting Log Report Definitions

You can use the Security Report Definitions page to delete one or more custom log report definitions.

To delete one or more log report definitions:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Select the log report definitions that you want to delete, and click the delete icon. Alternatively, right click on the report definitions that you want to delete and select **Delete Report**.

The **Delete Report Definition** page appears.

3. Click **Yes** to delete the selected log report definitions or click **No** to cancel the deletion.

The Security Report Definitions page appears.

If you click Yes, the selected log report definitions are deleted and a confirmation message appears on top of this page.

## Cloning Log Report Definitions

Cloning enables you to create a new log report definition based on an existing one.

**NOTE:** You can clone predefined and custom log report definitions.

To clone a log report definition:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Right-click the log report definition that you want to clone and select **Clone**. Alternatively, select the log report definition and then select **More > Clone**.

The **Clone log Report Definition** page appears, displaying the same fields that are presented when you create a log report definition.

3. Modify the log Report Definition fields as needed.

4. Click **OK** to save your changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

You can perform various actions on the cloned report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).

## RELATED DOCUMENTATION

[Creating Log Report Definition](#) | 929

## Editing, Deleting, and Cloning Bandwidth Report Definitions

### IN THIS SECTION

- [Editing Bandwidth Report Definitions | 940](#)
- [Deleting Bandwidth Report Definitions | 940](#)
- [Cloning Bandwidth Report Definitions | 941](#)

You can edit, delete, and clone bandwidth report definitions.

### Editing Bandwidth Report Definitions

You can edit custom bandwidth report definitions from the Security Report Definitions page.

To edit a custom bandwidth report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Select the bandwidth report definition that you want to edit, and click the edit icon (pencil).

The **Edit Bandwidth Report Definition** page appears, displaying the same fields that are presented when you create a bandwidth report definition.

3. Modify the bandwidth report definition fields as needed.

4. Click **OK** to save the changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

### Deleting Bandwidth Report Definitions

You can use the Security Report Definitions page to delete one or more custom bandwidth report definitions.

To delete one or more bandwidth report definitions:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Select the bandwidth report definitions that you want to delete, and click the delete icon. Alternatively, right click on the report definitions that you want to delete and select **Delete Report**.

The **Delete Report Definition** page appears.

3. Click **Yes** to delete the selected bandwidth report definitions or click **No** to cancel the deletion.

If you click Yes, the selected log report definitions are deleted and the Security Report Definitions page appears.

A confirmation message appears on top of this page.

## Cloning Bandwidth Report Definitions

Cloning enables you to create a new bandwidth report definition based on an existing one.

**NOTE:** You can clone predefined and custom bandwidth report definitions.

To clone a bandwidth report definition:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Right-click on the bandwidth report definition that you want to clone and select **Clone**. Alternatively, select the bandwidth report definition and then select **More > Clone**.

The **Clone Bandwidth Report Definition** page appears, displaying the same fields that are presented when you create a bandwidth report definition.

3. Modify the bandwidth report definition fields as needed.
4. Click **OK** to save your changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

You can perform various actions on the cloned report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#).

## RELATED DOCUMENTATION

[About the Security Report Definitions Page | 922](#)

[Creating Bandwidth Report Definition | 933](#)

## Editing, Deleting, and Cloning ANR Report Definitions

### IN THIS SECTION

- [Editing ANR Report Definitions | 942](#)
- [Deleting ANR Report Definitions | 943](#)
- [Cloning ANR Report Definitions | 943](#)

You can edit, delete, and clone ANR report definitions.

### Editing ANR Report Definitions

You can edit custom ANR report definitions from the Security Report Definitions page.

To edit the custom ANR report definition:

1. Select **Reports > Report Definitions > Security**.

The Security Report Definitions page appears.

2. Select the ANR report definition that you want to edit, and click the edit icon (pencil).

The **Edit ANR Report Definition** page appears, displaying the same fields that are presented when you create an ANR report definition.

3. Modify the ANR Report Definition fields as needed.

4. Click **OK** to save the changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

## Deleting ANR Report Definitions

You can use the Security Report Definitions page to delete one or more custom ANR report definitions.

To delete one or more ANR report definitions:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Select the ANR report definitions that you want to delete, and click the delete icon. Alternatively, right click on the report definitions that you want to delete and select **Delete Report**.

The **Delete Report Definition** page appears.

3. Click **Yes** to delete the selected ANR report definitions or click **No** to cancel the deletion.

If you click Yes, the selected ANR report definitions are deleted and the Security Report Definitions page appears.

A confirmation message appears on top of this page.

## Cloning ANR Report Definitions

Cloning enables you to create a new ANR report definition based on an existing one.

**NOTE:** You can clone predefined and custom ANR report definitions.

To clone an ANR report definition:

1. Select **Reports > Report Definitions > Security**.

The **Security Report Definitions** page appears.

2. Right-click on the ANR report definition that you want to clone and select **Clone**. Alternatively, select the ANR report definition and then select **More > Clone**.

The **Clone ANR Report Definition** page appears, displaying the same fields that are presented when you create an ANR report definition..

3. Modify the ANR Report Definition fields as needed.

4. Click **OK** to save your changes or click **Cancel** to discard the changes.

The Security Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

You can perform various actions on the cloned report definition. See [“Scheduling, Generating, Previewing, and Sharing Security Reports”](#) on page 925.

#### RELATED DOCUMENTATION

[About the Security Report Definitions Page](#) | 922

[Creating ANR Report Definition](#) | 935



# SD-WAN Reports

## IN THIS CHAPTER

- [About the SD-WAN Report Definitions Page | 945](#)
- [Editing, Deleting, and Cloning SD-WAN Report Definitions | 947](#)
- [Creating SD-WAN Tenant Performance Report Definitions | 949](#)
- [Creating SD-WAN Site Performance Report Definitions | 953](#)
- [About the SD-WAN Generated Reports Page | 956](#)

## About the SD-WAN Report Definitions Page

To access this page, click **Customer Portal > Reports > Report Definitions > SD-WAN**.

The **SD-WAN Report Definitions** page appears.

The SD-WAN Report Definitions page displays a list of predefined and custom report definitions. To generate reports, you can use the predefined report definitions as is, or you can create custom report definitions.

**NOTE:** The SD-WAN Performance Report Definition is the only predefined report definition available on the SD-WAN Report Definitions page.

## Tasks You Can Perform

You can perform the following tasks from this page:

- Create SD-WAN tenant performance report definitions. See [“Creating SD-WAN Tenant Performance Report Definitions” on page 949](#)
- Create SD-WAN site performance report definitions. See [“Creating SD-WAN Site Performance Report Definitions” on page 953](#)

- Run a report immediately, edit a schedule, edit e-mail recipients, preview a report in PDF, send reports, and clone reports. See [“Scheduling, Generating, Previewing, and Sharing Security Reports” on page 925](#)
- View details about an SD-WAN report definition—Right-click a report definition and then select **Detailed View** or select the report definition and click **More > Detailed View**. Alternatively, hover over the report definition name and click the Detailed View icon that appears before it.

The Report Definition Details page appears, displaying the same values that you specified for each parameter in the selected report definition.

- To search for a report definition from the list of available report definitions, click the **Search** icon in the top right corner of the page.

Enter the name of the report definition in the search bar and click the search icon.

The search results are displayed.

Click **Clear All** to clear the search results.

## Field Descriptions

[Table 339 on page 946](#) describes the fields on the SD-WAN Report Definitions page.

**Table 339: Fields on the SD-WAN Report Definitions Page**

Field	Description
Name	Name of the SD-WAN report definition.
Description	Description of the SD-WAN report definition.
Type	Type of SD-WAN report definition—Tenant Performance or Site Performance.
Definition Type	Indicates whether the report definition is predefined (system-generated) or custom (user-created).
Schedule	Indicates whether the report generation is scheduled at the current time (Now) or for a later date and time (Once).
Recipients	E-mail addresses of recipients to whom the generated report is sent.
Job ID	Use the job ID to view the status of the task on the Jobs (Monitor > Jobs) page.

## RELATED DOCUMENTATION

[Editing, Deleting, and Cloning SD-WAN Report Definitions](#) | 947

## Editing, Deleting, and Cloning SD-WAN Report Definitions

### IN THIS SECTION

- [Editing the SD-WAN Report Definition | 947](#)
- [Deleting SD-WAN Report Definitions | 947](#)
- [Cloning SD-WAN Report Definitions | 948](#)

You can edit, delete, and clone SD-WAN report definitions from the SD-WAN Report Definitions page.

### Editing the SD-WAN Report Definition

You can edit custom SD-WAN report definitions from the SD-WAN Report Definitions page.

To edit an SD-WAN report definition:

1. Select **Reports > Report Definitions > SD-WAN**.

The SD-WAN Report Definitions page appears.

2. Select the SD-WAN report definition that you want to modify, and click the edit icon (pencil).

The Update SD-WAN Performance Report Definition page appears, displaying the same fields that are presented when you create an SD-WAN report definition.

3. Modify the report definition fields as needed.

4. Click **OK** to save the changes or click **Cancel** to discard the changes

The SD-WAN Report Definitions page appears.

If you click OK, a confirmation message appears on top of this page.

### Deleting SD-WAN Report Definitions

You can use the SD-WAN Report Definitions page to delete one or more custom SD-WAN report definitions.

To delete one or more SD-WAN report definitions:

1. Select **Reports > Report Definitions > SD-WAN**.

The SD-WAN Report Definitions page appears.

2. Select the SD-WAN report definitions that you want to delete and click the Delete icon. Alternatively, right click the report definitions that you want to delete and select **Delete Report**.

The Confirm Delete page appears.

3. Click **Yes** to delete the selected SD-WAN report definitions or **No** to cancel the deletion.

The SD-WAN report definitions page appears.

If you click Yes, the selected SD-WAN report definitions are deleted and a confirmation message **Successfully deleted report template** appears on top of this page.

## Cloning SD-WAN Report Definitions

Cloning enables you to create a new SD-WAN report definition based on an existing one.

**NOTE:** You can clone predefined and custom SD-WAN report definitions.

To clone an SD-WAN report definition:

1. Select **Reports > Report Definitions > SD-WAN**.

The SD-WAN Report Definitions page appears.

2. Right-click on the SD-WAN report definition that you want to clone and select **Clone**. Alternatively, select the SD-WAN report definition and then select **More > Clone**.

The **Clone SD-WAN Performance Report Definition** page appears, displaying the same fields that are presented when you create an SD-WAN report definition.

3. Modify the SD-WAN Report Definition fields as needed.
4. Click **OK** to save your changes or click **Cancel** to discard the changes.

You are returned to the SD-WAN Report Definitions page.

If you click OK, a confirmation message appears on top of this page.

## RELATED DOCUMENTATION

[About the SD-WAN Report Definitions Page](#) | 945

## Creating SD-WAN Tenant Performance Report Definitions

Use the SD-WAN Report Definitions page to create SD-WAN tenant performance report definitions for all sites in a tenant and generate reports based on the definitions. SD-WAN tenant performance reports enable you to analyze tenant performance based on the following parameters that measure the SLA performance across all sites in a tenant:

- Top applications by bandwidth
- Top sites not meeting SLA
- Top sites meeting SLA with switching
- Sites meeting SLA without switching
- Top sites by current active tunnels
- Top sites by highest packet loss
- Top sites by highest latency
- Top sites by highest jitter

**NOTE:** Only users with the Tenant Administrator role can create SD-WAN tenant performance report definitions.

To create an SD-WAN tenant performance report definition:

1. Select **Reports > Report Definitions > SD-WAN**.

The SD-WAN Report Definitions page appears.

2. Click **Add > Tenant Performance**.

The Add SD-WAN Tenant Performance Report Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 340 on page 950](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the report definition.

The report definition is saved and the SD-WAN Report Definitions page appears.

A confirmation message appears on top of this page, indicating that the report definition is successfully created.

**Table 340: Fields on the Create Tenant Performance Report Definition**

Field	Description
<b>General</b>	
Report Name	<p>Enter a unique name for the report definition.</p> <p>The name can contain a string of alphanumeric characters and some special characters (colons, periods, dashes, and underscores); no spaces are allowed and the maximum length allowed is 63 characters.</p>
Description	Enter a description for the report definition; maximum length allowed is 1024 characters.
<b>Content</b>	
Time Span	<p>Specify the duration (last 24 hours, last 7 days, last 30 days, or custom) for which you want the report to be generated.</p> <p>If you select <b>Custom</b>, the <b>From</b> and <b>To</b> fields appear:</p> <ul style="list-style-type: none"> <li>• From—Specify the start date and time from which the report should be generated.</li> <li>• To—Specify the end date and time up to which the report should be generated.</li> </ul>
Number of Top Logs	Enter the number top of SLA records (1 through 20) that you want to retrieve and display for each section in the report.

Table 340: Fields on the Create Tenant Performance Report Definition (*continued*)

Field	Description
Report Content	<p>Select the content that you want to view in the report.</p> <ul style="list-style-type: none"> <li>• <b>Top Applications By Bandwidth</b>—Displays a report on top applications by bandwidth.</li> <li>• <b>Top Sites Not Meeting SLA</b>—Displays a report on top sites not meeting the SLA performance.</li> <li>• <b>Top Sites Meeting SLA with Switching</b>—Displays a report on top sites meeting SLA performance with link switching.</li> <li>• <b>Sites Meeting SLA without Switching</b>—Displays report on sites meeting SLA performance without switching.</li> <li>• <b>Current Active Tunnels</b>—Displays a report on top 10 sites that have the maximum number of active dynamic mesh tunnels.</li> <li>• <b>Top Sites by Highest Packet Loss</b>—Displays a report on top 10 sites based on the highest cumulative average packet loss across all the links.</li> <li>• <b>Top Sites by Highest Latency</b>—Displays report on top 10 sites based on the highest cumulative average latency across all the links.</li> <li>• <b>Total Sites by Highest Jitter</b>—Displays report on top 10 sites based on the highest cumulative average jitter across all the links.</li> </ul> <p>For more information about SLA parameters and dynamic mesh tunnels, see <a href="#">“SLA Profiles and SD-WAN Policies Overview” on page 552</a> and <a href="#">“Dynamic Mesh Tunnels Overview” on page 249</a>.</p>
<b>Schedule Report</b>	
Add Schedule	<p>Click <b>Add Schedule</b> to schedule the report generation.</p> <p>The Add Report Schedule page appears.</p> <p>Specify whether you want to generate the report immediately or schedule it for a later date and time.</p> <ul style="list-style-type: none"> <li>• <b>Run now</b>—Select this option to generate the report immediately.</li> <li>• <b>Schedule at a later time</b>— Select this option to generate the report at a later date and time (in MM/DD/YYYY and HH:MM:SS format).</li> </ul>
<b>Email Recipients</b>	

Table 340: Fields on the Create Tenant Performance Report Definition (*continued*)

Field	Description
Add Email Recipients	<p>Click <b>Add Email Recipients</b> to add e-mail addresses of recipients to whom you want to send the SD-WAN reports.</p> <p>The Add Recipients page appears.</p> <ul style="list-style-type: none"> <li>• <b>Recipients</b>—Select e-mail addresses of users to whom you want to send the report. You can select more than one e-mail address.</li> <li>• <b>Subject</b>—Enter the subject line for the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> <li>• <b>Comment</b>—Enter the text to be included in the body of the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> </ul>

## RELATED DOCUMENTATION

---

[Creating SD-WAN Site Performance Report Definitions | 953](#)


---

[About the SD-WAN Report Definitions Page | 945](#)


---

[Editing, Deleting, and Cloning SD-WAN Report Definitions | 947](#)


---



## Creating SD-WAN Site Performance Report Definitions

Use the SD-WAN Report Definitions page to create SD-WAN site performance report definitions for specific sites of a tenant and generate the report based on the definitions.

SD-WAN site performance reports enable you to analyze site performance based on the following parameters that measure the SLA performance of specific sites in a tenant:

- Top 10 applications and link utilization for site
- Top profiles not meeting SLA
- Top profiles switching links
- Top applications by highest packet loss
- Top applications by highest latency
- Top applications by highest jitter
- SLA performance between two sites

**NOTE:** Only users with the Tenant Administrator role can create SD-WAN site performance report definitions.

To create an SD-WAN site performance report definition:

1. Select **Reports > Report Definitions > SD-WAN**.

The SD-WAN Report Definitions page appears.

2. Click **Add > Site Performance**.

The Add SD-WAN Site Performance Report Definition page appears.

3. Complete the configuration according to the guidelines provided in [Table 341 on page 954](#).

**NOTE:** Fields marked with \* are mandatory.

4. Click **OK** to save the report definition.

The report definition is saved and the SD-WAN Report Definition page appears.

A confirmation message appears on top of this page.

Table 341: Fields on the Site Performance Report Definition Page

Field	Description
<b>General</b>	
Report Name	Enter a unique string of alphanumeric characters and some special characters (: . -). No spaces are allowed and the maximum length allowed is 63 characters.
Description	Enter a description for the report definition; maximum length allowed is 1024 characters.
<b>Content</b>	
Time Span	<p>Specify the duration (last 24 hours, last 7 days, last 30 days, or custom) for which you want the report to be generated.</p> <p>If you select <b>Custom</b>, the <b>From</b> and <b>To</b> fields appear:</p> <ul style="list-style-type: none"> <li>• <b>From</b>—Specify the start date and time from which the report should be generated.</li> <li>• <b>To</b>—Specify the end date and time up to which the report should be generated.</li> </ul>
Number of Top Logs	Enter the number of top SLA events (1 through 20) that you want to retrieve and display for each section in the report.
Sites	Select one or more sites for which you want to generate the report. You can select up to five sites.
Report Content	<p>Select the content that you want to view in the report.</p> <ul style="list-style-type: none"> <li>• <b>Top 10 Applications and Link Utilization</b>—Displays a report on top 10 applications and link utilization for the selected sites.</li> <li>• <b>Top Profiles Not Meeting SLA</b>—Displays a report on top SLA profiles not meeting SLA for the selected sites.</li> <li>• <b>Top Profiles Switching Links</b>—Displays a report on top SLA profiles switching links for the selected sites.</li> <li>• <b>Top Applications by Highest Packet Loss</b>—Displays report on top 10 applications based on the selected site that has the highest average packet loss across SLA profiles.</li> <li>• <b>Top Applications by Highest Latency</b>—Displays report on top 10 applications based on the selected site that has the highest average latency across SLA profiles.</li> <li>• <b>Total Applications by Highest Jitter</b>—Displays report on top 10 applications based on the selected site that has the highest average jitter across SLA profiles.</li> <li>• <b>SLA Performance Between Two Sites</b>—Displays report on top 20 applications based on the performance of SLA parameters (latency, jitter, and packet loss) between the source and destination site that you have selected.</li> </ul> <p>For more information about SLA parameters and dynamic mesh tunnels, see <a href="#">“SLA Profiles and SD-WAN Policies Overview” on page 552</a> and <a href="#">“Dynamic Mesh Tunnels Overview” on page 249</a>.</p>

Table 341: Fields on the Site Performance Report Definition Page (*continued*)

Field	Description
Sites	Select one or more sites, from the list of available sites, for which you want to generate the report.
<b>Schedule</b>	
Schedule Report Generation	<p>Click <b>Add Schedule</b> to schedule the report generation.</p> <p>The <b>Add Report Schedule</b> page appears.</p> <p>Specify whether you want to generate the report immediately or schedule it for a later date and time:</p> <ul style="list-style-type: none"> <li>• <b>Run now</b>—Select this option to schedule the report generation at the current time, and click <b>OK</b>.</li> <li>• <b>Schedule at a later time</b>—Select this option to schedule the report generation for a later date and time (in MM/DD/YYYY and HH:MM:SS formats), and click <b>OK</b>.</li> </ul> <p>The Add SD-WAN Tenant Performance Report Definition page appears with details of the report generation schedule.</p>
<b>E-Mail</b>	
E-Mail Recipients	<p>Click <b>Add Email Recipients</b> to add e-mail addresses of recipients to whom you want to send the SD-WAN report.</p> <p>The Add Recipients page appears.</p> <ul style="list-style-type: none"> <li>• <b>Recipients</b>—Enter or select one or more e-mail addresses of users to whom you want to send the report.</li> </ul> <p>By default, you can search by first name and select registered users. You can also enter external e-mail addresses.</p> <ul style="list-style-type: none"> <li>• <b>Subject</b>—Enter the subject line for the e-mail that is sent with the generated report. The maximum length allowed is 2048 characters.</li> <li>• <b>Comments</b>—Enter the text to be included in the body of the e-mail that is sent with the generated report.</li> </ul> <p>The maximum length allowed is 2048 characters.</p>

## RELATED DOCUMENTATION

[Creating SD-WAN Tenant Performance Report Definitions | 949](#)
[About the SD-WAN Report Definitions Page | 945](#)
[Editing, Deleting, and Cloning SD-WAN Report Definitions | 947](#)

## About the SD-WAN Generated Reports Page

To access this page, click **Customer Portal > Reports > Generated Reports > SD-WAN**.

Use this page to view the list of tenant and site performance reports that are generated from the SD-WAN Report Definitions page.

You must click on the report to view the report in PDF. You can view the generated report for up to 30 days and the report will be deleted after 30 days.

You can also delete one or more generated reports.

### Field Descriptions

[Table 342 on page 956](#) describes the fields on the SD-WAN Generated Reports page.

**Table 342: Fields on the SD-WAN Generated Reports Page**

Field	Description
Name	Name of the SD-WAN report.
Description	Description of the report.
Generated Time	Date and time when the report was generated.
Definition Name	Name of the report definition.
Generated By	Name of the tenant administrator who generated the report.
Recipients	Recipients of the generated report.

### RELATED DOCUMENTATION

[Reports Overview | 921](#)

[About the SD-WAN Report Definitions Page | 945](#)