

# QFX5200 Switch Hardware Guide

Published  
2026-01-07

Juniper Networks, Inc.  
1133 Innovation Way  
Sunnyvale, California 94089  
USA  
408-745-2000  
[www.juniper.net](http://www.juniper.net)

Juniper Networks, the Juniper Networks logo, Juniper, and Junos are registered trademarks of Juniper Networks, Inc. in the United States and other countries. All other trademarks, service marks, registered marks, or registered service marks are the property of their respective owners.

Juniper Networks assumes no responsibility for any inaccuracies in this document. Juniper Networks reserves the right to change, modify, transfer, or otherwise revise this publication without notice.

*QFX5200 Switch Hardware Guide*

Copyright © 2026 Juniper Networks, Inc. All rights reserved.

The information in this document is current as of the date on the title page.

## YEAR 2000 NOTICE

Juniper Networks hardware and software products are Year 2000 compliant. Junos OS has no known time-related limitations through the year 2038. However, the NTP application is known to have some difficulty in the year 2036.

## END USER LICENSE AGREEMENT

The Juniper Networks product that is the subject of this technical documentation consists of (or is intended for use with) Juniper Networks software. Use of such software is subject to the terms and conditions of the End User License Agreement ("EULA") posted at <https://support.juniper.net/support/eula/>. By downloading, installing or using such software, you agree to the terms and conditions of that EULA.

# Table of Contents

**About This Guide | ix**

1

## **Fast Track: Initial Installation**

**Fast Track to Rack Installation and Power | 2**

    Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit on a Square Hole Rack | 2

    Connect to Power | 7

    Connecting AC Power to a QFX5200 | 8

**Onboard, Configure, and Monitor QFX5200 | 11**

2

## **Overview**

**QFX5200 System Overview | 14**

    QFX5200 Switch Description | 14

    QFX5200 Component Redundancy | 19

    QFX5200 Field-Replaceable Units | 20

**QFX5200 Port Panels | 21**

    QFX5200-32C and QFX5200-32C-L Port Panel | 21

    QFX5200-48Y Port Panel | 25

**QFX5200 Switch Management | 30**

    QFX5200 Management Panel Overview | 30

    QFX5200 Chassis Status LEDs | 36

**QFX5200 Cooling System | 40**

    QFX5200 Cooling System Description | 41

    QFX5200-32C and QFX5200-32C-L Fan Module LED | 48

**QFX5200 Power System | 50**

    QFX5200 AC Power Supply Description | 50

    QFX5200 AC Power Specifications | 53

QFX5200 Power Cord Specifications | 54

QFX5200 AC Power Supply LEDs | 56

QFX5200 DC Power Supply Description | 58

QFX5200 DC Power Specifications | 61

QFX5200 DC Power Supply LEDs | 62

3

## Site Planning, Preparation, and Specifications

QFX5200 Site Preparation Checklist | 66

Planning a Virtual Chassis Deployment using QFX Devices | 68

QFX5200 Site Guidelines and Requirements | 74

QFX5200 Environmental Requirements and Specifications | 75

General Site Guidelines | 76

QFX5200 Grounding Cable and Lug Specifications | 77

QFX5200 Clearance Requirements for Airflow and Hardware Maintenance | 77

QFX5200 Chassis Physical Specifications | 79

Site Electrical Wiring Guidelines | 79

QFX5200 Rack Requirements | 80

QFX5200 Cabinet Requirements | 82

QFX5200 Network Cable and Transceiver Planning | 84

Determining QFX5200 Optical Interface Support | 84

Cable Specifications for QSFP+, QSFP28, and QSFP-DD Transceivers | 85

Understand QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion | 87

Calculate Power Budget and Power Margin for Fiber-Optic Cables | 89

Calculate Power Budget for Fiber-Optic Cables | 89

How to Calculate Power Margin for Fiber-Optic Cables | 89

QFX5200 Management Cable Specifications and Pinouts | 91

Cable Specifications for Console and Management Connections for the QFX Series | 92

RJ-45 Management Port Connector Pinout Information | 93

Console Port Connector Pinouts for the QFX Series | 93

RJ-45 Port, SFP Port, SFP+ Port, QSFP+ Port, and QSFP28 Port Connector Pinout Information | 95

USB Port Specifications for the QFX Series | 101

4

## Initial Installation and Configuration

**QFX5200 Installation Overview | 104**

Overview of Installing the QFX5200 | 104

QFX5200 Installation Safety Guidelines | 105

**Unpacking and Mounting the QFX5200 | 105**

Unpacking a QFX5200 | 106

Update Base Installation Data | 108

Mounting a QFX5200 in a Rack or Cabinet | 108

Before You Begin Rack Installation | 109

Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the EX-4PST-RMK Rack Mount Kit | 110

Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the JNP-4PST-RMK-1U-E Rack Mount Kit | 112

Mount a QFX5200-48Y in a Rack or Cabinet by Using the QFX520048Y-RMKT Rack Mount Kit | 122

**Connecting the QFX5200 to External Devices | 125**

Connect a Device to a Network for Out-of-Band Management | 126

Connect a Device to a Management Console Using an RJ-45 Connector | 126

**Connecting the QFX5200 to Power | 128**

Connect the QFX5200 to Earth Ground | 129

Alternate Method to Ground QFX5200-32C-DC Systems | 130

Connecting AC Power to a QFX5200 | 132

Connecting DC Power to a QFX5200 | 135

Before You Begin | 135

Connecting DC Power to a QFX5200-32C-DC | 136

Connecting DC Power to a QFX5200-48Y | 140

**Register Products—Mandatory to Validate SLAs | 142**

## Performing the Initial Software Configuration for QFX5200 Switches | 142

5

### Maintaining Components

#### Maintaining QFX5200 Cooling System | 147

    Removing a Fan Module from a QFX5200 | 147

    Installing a Fan Module in a QFX5200 | 149

#### Maintaining QFX5200 Power System | 150

    Removing a Power Supply from a QFX5200 | 151

    Installing a Power Supply in a QFX5200 | 153

#### Maintaining Transceivers and Fiber Optic Cables on QFX5200 | 154

    QFX5200-32C-L Time Allowance | 155

    Remove a Transceiver | 155

    Install a Transceiver | 157

    Disconnect a Fiber-Optic Cable | 160

    Connect a Fiber-Optic Cable | 161

    How to Handle Fiber-Optic Cables | 162

#### Powering Off a QFX5200 | 163

6

### Troubleshooting Hardware

#### Troubleshooting the QFX5200 | 168

    QFX5200 Troubleshooting Resources Overview | 168

    QFX Series Alarm Messages Overview | 169

    Chassis Alarm Messages | 169

### Contacting Customer Support and Returning the Chassis or Components

#### Contact Customer Support to Obtain a Return Material Authorization | 177

#### Returning the QFX5200 Chassis or Components | 178

    Locating the Serial Number on a QFX5200 Device or Component | 178

    Listing the Chassis and Component Details Using the CLI | 179

    Locating the Chassis Serial Number ID Label on a QFX5200 | 181

7

|  |
|--|
| Locating the Serial Number ID Labels on FRU Components   182       |
| How to Return a Hardware Component to Juniper Networks, Inc.   182 |
| Guidelines for Packing Hardware Components for Shipment   183      |
| Packing a QFX5200 Device or Component for Shipping   184           |
| Packing a QFX5200 Switch for Shipping   184                        |
| Packing QFX5200 Components for Shipping   185                      |

## 8

## Safety and Compliance Information

|  |
|--|
| General Safety Guidelines and Warnings   188                     |
| Definitions of Safety Warning Levels   189                       |
| Qualified Personnel Warning   191                                |
| Warning Statement for Norway and Sweden   191                    |
| Fire Safety Requirements   192                                   |
| Installation Instructions Warning   193                          |
| Chassis and Component Lifting Guidelines   194                   |
| Restricted Access Warning   194                                  |
| Ramp Warning   196   |
| Rack-Mounting and Cabinet-Mounting Warnings   196                |
| Grounded Equipment Warning   200                                 |
| Laser and LED Safety Guidelines and Warnings   201               |
| Radiation from Open Port Apertures Warning   204                 |
| Maintenance and Operational Safety Guidelines and Warnings   205 |
| General Electrical Safety Guidelines and Warnings   211          |
| Action to Take After an Electrical Accident   212                |
| Prevention of Electrostatic Discharge Damage   213               |
| AC Power Electrical Safety Guidelines   214                      |
| AC Power Disconnection Warning   215                             |

|   |
|---|
| <b>DC Power Electrical Safety Guidelines   216</b>                                  |
| <b>DC Power Copper Conductors Warning   217</b>                                     |
| <b>DC Power Disconnection Warning   218</b>   |
| <b>DC Power Grounding Requirements and Warning   219</b>                            |
| <b>DC Power Wiring Sequence Warning   220</b>                                       |
| <b>DC Power Wiring Terminations Warning   221</b>                                   |
| <b>Multiple Power Supplies Disconnection Warning   223</b>                          |
| <b>TN Power Warning   224</b>   |
| <b>Agency Approvals and Compliance Statements for the QFX5200 and QFX5220   224</b> |
| Agency Approvals for the QFX Series   225   |

# About This Guide

Use this guide to plan, install, perform initial software configuration, perform routine maintenance, and to troubleshoot QFX5200 switches.

After completing the installation and basic configuration procedures covered in this guide, refer to the Junos OS documentation for further software configuration.

## RELATED DOCUMENTATION

---

[QFX5200-32C Quick Start](#)

---

[QFX5200-48Y Quick Start](#)

# 1

CHAPTER

## Fast Track: Initial Installation

---

### IN THIS CHAPTER

- Fast Track to Rack Installation and Power | [2](#)
- Onboard, Configure, and Monitor QFX5200 | [11](#)

---

# Fast Track to Rack Installation and Power

## SUMMARY

This procedure walks you through the most basic steps for installing your QFX5200 switch in a rack and connecting it to power.

## IN THIS SECTION

- [Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit on a Square Hole Rack | 2](#)
- [Connect to Power | 7](#)
- [Connecting AC Power to a QFX5200 | 8](#)

You can install the QFX5200-32C/QFX5200-32C-L switch in a four-post rack or cabinet using the JNP-4PST-RMK-1U-E partial tool less rack mount kit (RMK). We'll walk you through the steps to install the switch in a four-post square hole rack using the JNP-4PST-RMK-1U-E RMK.

You can install the QFX5200-48Y on four posts in a rack by using the QFX520048Y-RMKT rack mount kit. See ["Mounting a QFX5200 in a Rack or Cabinet" on page 108](#).

**Before you install the switch, review:**

- ["QFX5200 Site Guidelines and Requirements" on page 74](#).
- [General Safety Guidelines and Warnings](#).
- ["Unpacking a QFX5200" on page 106](#).

## Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit on a Square Hole Rack


Ensure that you have the following tools and parts available:

- An ESD grounding strap—not provided
- Number 2 Phillips (+) screwdriver—not provided
- A pair of front and rear mounting rails that attach to the rack posts—provided with the RMK
- A pair of mounting brackets and 16 flat head M4 x 6 mm Phillips screws. These brackets attach to the device if not pre-installed—provided with the RMK.

To mount the device on four posts in a rack by using the JNP-4PST-RMK-1U-E RMK:


1. Wrap and fasten the ESD grounding strap to your bare wrist and connect the other end of the strap to the ESD point on the device.
2. Assemble the mounting rails.
  - a. Slide the rear floating bracket into the front bracket. See [Figure 1 on page 3](#).

**Figure 1: Assemble the Mounting Rails**

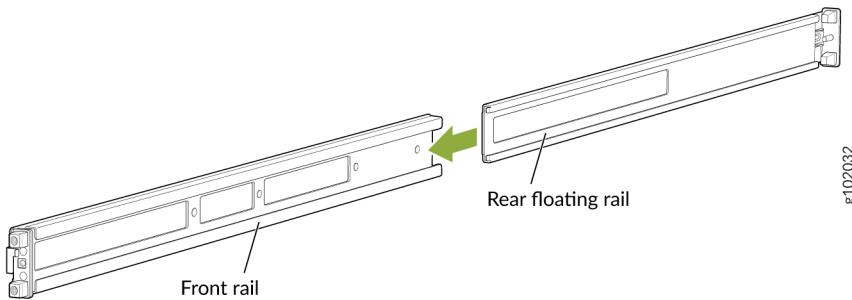


- b. Mounting rails assembled. See [Figure 2 on page 3](#).

**Figure 2: Front and Rear Rails Assembled**

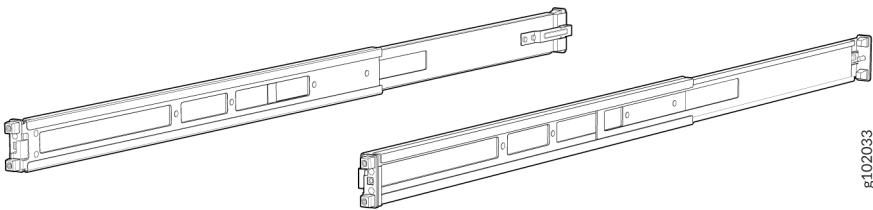


3. Attach the mounting rails to the rack.
  - a. Align the guide blocks of the rear mounting rails with the rear-post holes. Pull the rear mounting rails toward the front of the rack to lock the rails in place. You will hear a click sound when the latch locks into the corresponding rack holes. See [Figure 3 on page 4](#).

**Figure 3: Install the Rear Floating Rails**

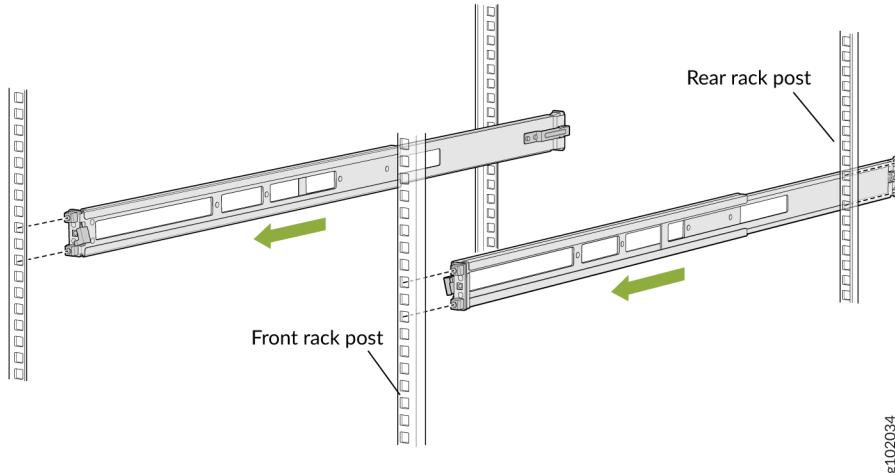


- b. Move the latch lock on the front mounting rails to open position, slide the front mounting rails, and insert the guide blocks into the front rack posts. See [Figure 4 on page 4](#).

**Figure 4: Install the Front Mounting Rails**

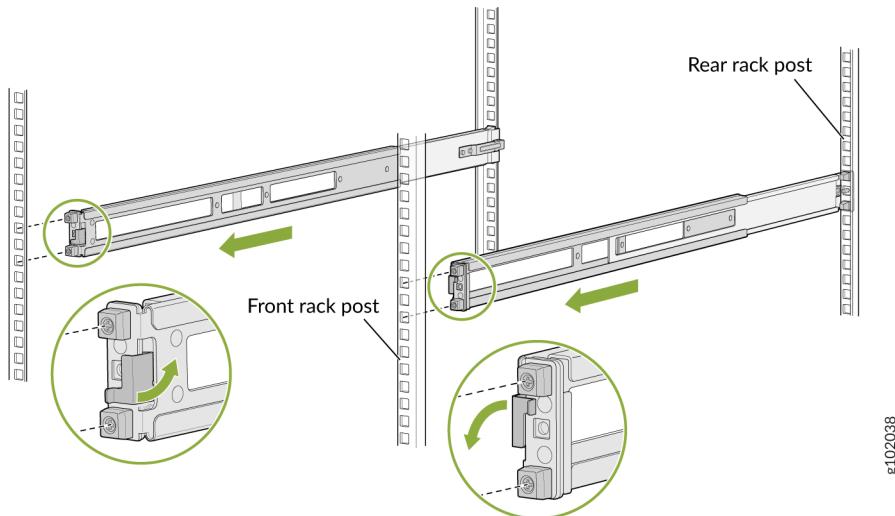


- c. Push the lock latch to the locked position. See [Figure 5 on page 5](#).

**Figure 5: Front Mounting Rails Lock Latch**

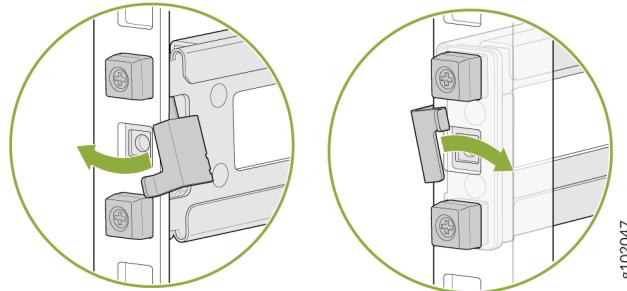

d. Visually ensure that the front and rear latches are locked into place on the mounting rails. See [Figure 6 on page 5](#).


**Figure 6: Mounting Rails Installed and Locked**

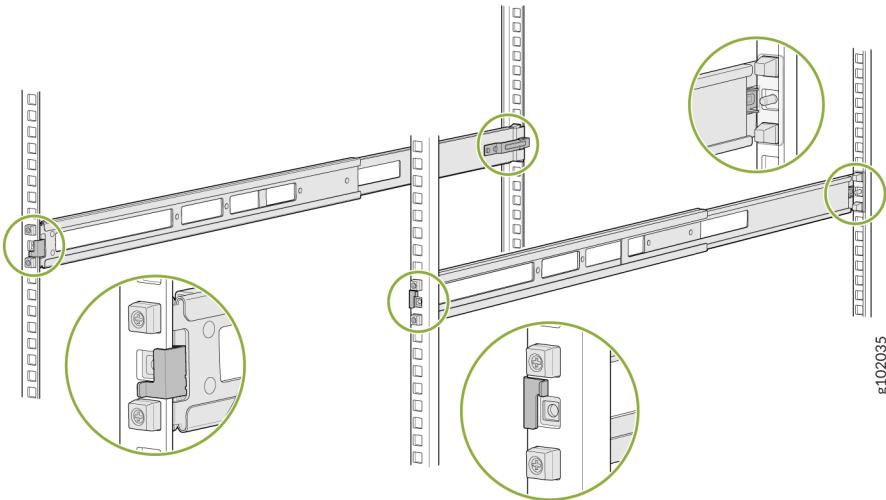

4. Attach mounting brackets to the device if not pre-installed. If your device already has the mounting brackets pre-installed than skip this step and move to the next step.


- Align the holes on the mounting bracket with the screw holes on the side panel of the chassis.
- Insert the flat head M4 x 6mm Phillips screws to attach the mounting bracket into the aligned holes on the chassis (see [Figure 7 on page 6](#)). Tighten the screws.

Figure 7: Attach the Mounting Brackets to the Device

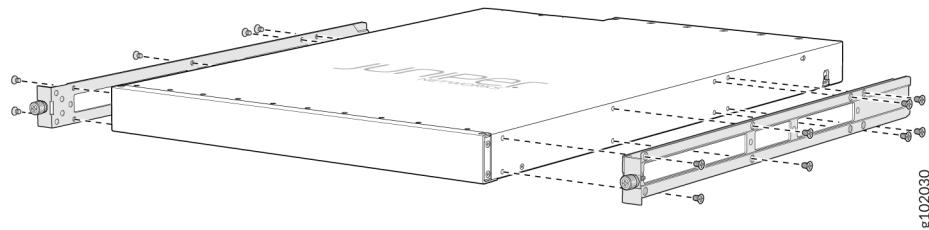


5. Position the device in such a manner that the **AIR OUT** labels on components are next to the hot aisle.
6. Grasp both sides of the device, lift it, and position the device such that the mounting rails slide into the channels of the mounting brackets. See [Figure 8 on page 6](#).

Figure 8: Slide the Device into the Rack

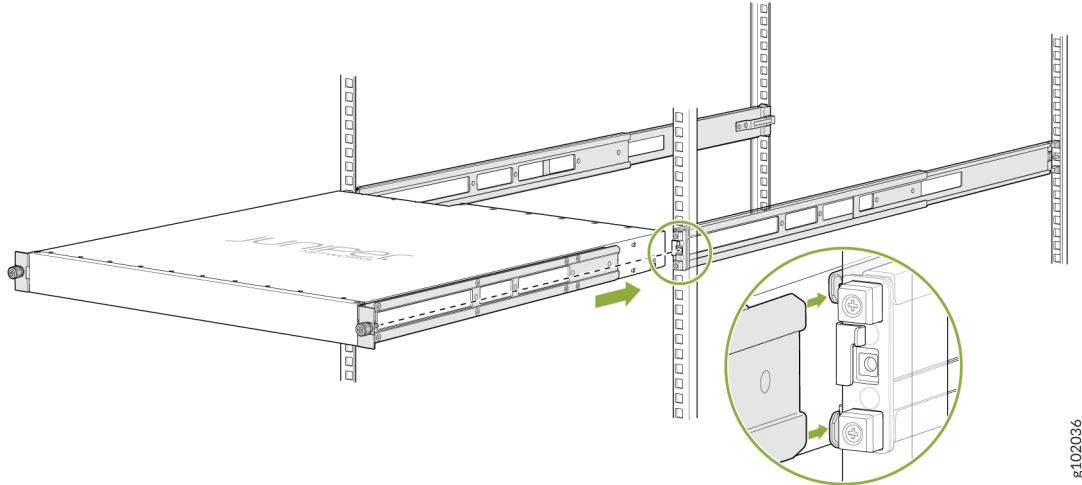

7. Tighten the two thumbscrews to secure the device. See [Figure 9 on page 7](#).

Figure 9: Tighten the Thumb Screws

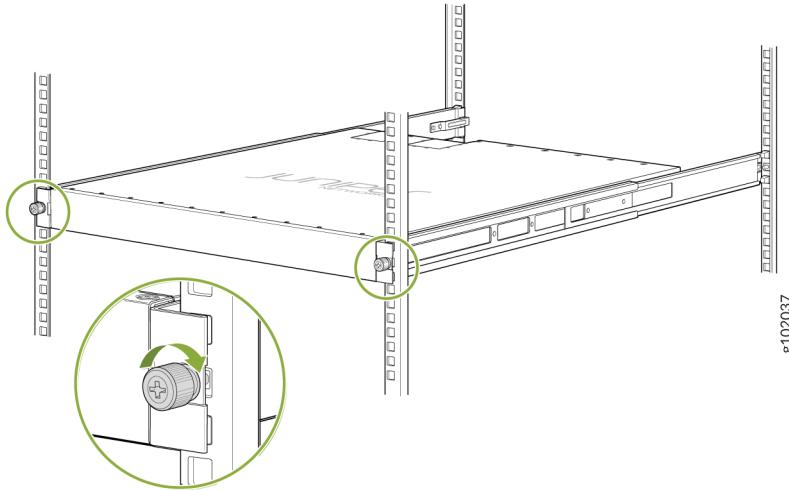

## Connect to Power

### IN THIS SECTION


- Ground the QFX5200 Switch | [7](#)

## Ground the QFX5200 Switch

To ground the QFX5200-32C or QFX5200-32C-L switch:

1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
2. Place the grounding lug attached to the grounding cable over the protective earthing terminal.
3. Secure the grounding lug to the protective earthing terminal with two screws and washers. See [Figure 10 on page 8](#)

Figure 10: Connecting a Grounding Cable to a QFX5200-32C and QFX5200-32C-L

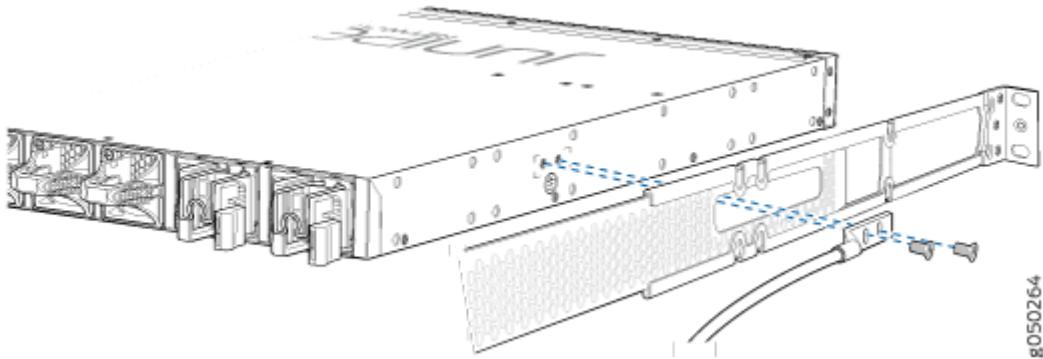

4. Dress the grounding cable and ensure that it does not touch or block access to other device components and that it does not drape where people could trip over it.

To connect earth ground to a QFX5200-48Y switch:

1. Ensure the rack is properly grounded and is in compliance with ETSI ETS 300 253.
2. Ensure a good electrical connection to the grounding point on the rack.
3. Attach the ring terminals to each end of the #14 AWG grounding wire.
4. Connect one of the ring terminals to the grounding point on the FRU panel.
5. Connect the other ring terminal to the rack ground.



**CAUTION:** Do not remove the earth connection until all power supply connections are disconnected.

## Connecting AC Power to a QFX5200

Ensure that you have a power cord appropriate for your geographical location available to connect AC power to the switch.

Before you begin connecting AC power to the switch:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).
- Ensure that you have connected the switch chassis to earth ground.



**CAUTION:** Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit). To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground before you connect it to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see "[Connect the QFX5200 to Earth Ground](#)" on page 129. The switch gains additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using the AC power cord appropriate for your geographical location (see "[QFX5200 Power Cord Specifications](#)" on page 54).

- Install the power supply in the chassis. For instructions on installing a power supply in a QFX5200, see "[Installing a Power Supply in a QFX5200](#)" on page 153.

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.



**NOTE:** Each power supply must be connected to a dedicated power source outlet.

To connect AC power to a QFX5200:


1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Ensure that the power supplies are fully inserted in the chassis and the latches are secure. If only one power supply is installed, ensure a blank cover panel is installed over the second power supply slot.
3. Locate the power cord or cords shipped with the switch; the cords have plugs appropriate for your geographical location.




**WARNING:** Ensure that the power cord does not block access to device components or drape where people can trip on it.

4. Connect each power supply to the power sources. Insert the coupler end of the power cord into the AC power cord inlet on the AC power supply faceplate.
5. For QFX5200-32C and QFX5200-32C-L models, push the power cord retainer onto the power cord (see [Figure 11 on page 10](#)). Power cord retainers are not available for QFX5200-48Y PSUs.

**Figure 11: Connecting an AC Power Cord to an AC Power Supply in a QFX5200-32C and QFX5200-32C-L**

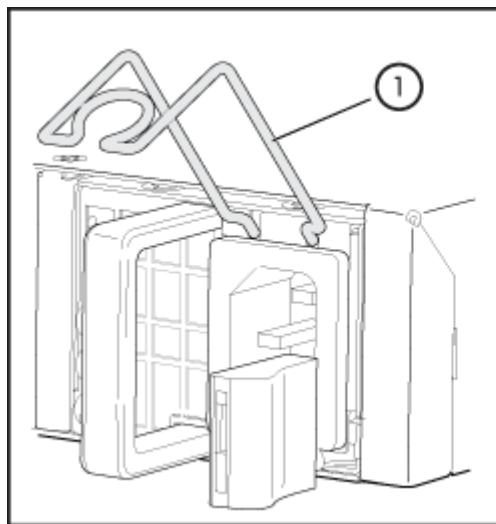

1– Power cord retainer

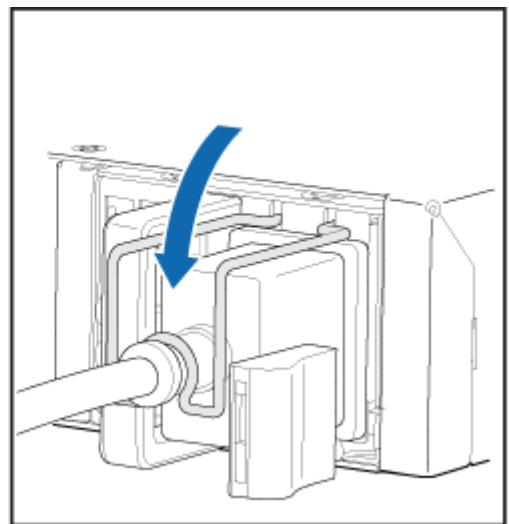

8050296

6. If the AC power source outlet has a power switch, set it to the OFF (O) position.



**NOTE:** The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.

7. Insert the power cord plug into an AC power source outlet.
8. If the AC power source outlet has a power switch, set it to the ON (I) position.
9. Verify that the AC and DC LEDs on each power supply are lit green.

If the amber fault LED is lit, remove power from the power supply, and replace the power supply (see "Removing a Fan Module from a QFX5200" on page 147). Do not remove the power supply until you have a replacement power supply ready: the power supplies or a blank cover panel must be installed in the switch to ensure proper airflow.



**CAUTION:** Replace a failed power supply with a blank panel or new power supply within 1 minute of removal to prevent chassis overheating.



**CAUTION:** A system reboot with Routing Engine FPGA version 7.1 might not successfully boot the Junos OS software. In case of a system reboot failure, you need to power cycle the switch. To check the current FPGA version, issue the `show chassis firmware` command.

# Onboard, Configure, and Monitor QFX5200

---

## SUMMARY

This topic provides you with pointers to onboard, configure, and monitor QFX5200 switches using Juniper Apstra, Juniper Routing Director (formerly Juniper Paragon Automation) or CLI (configure only).

---

You can use Juniper Apstra to onboard, configure, and monitor the QFX5200 switch. See [Table 1 on page 11](#) for more information. You can also use Juniper Routing Director (formerly Juniper Paragon Automation) to onboard, manage, and monitor QFX5200. See the [Juniper Routing Director Documentation](#) page for more information.

**Table 1: Onboard, Configure, and Monitor QFX5200 Using Juniper Apstra**

| If You Want To                                     | Then   |
|--|--|
| Install and configure Juniper Apstra               | See <a href="#">Juniper Apstra Quick Start Guide</a> |
| Use Juniper Apstra                                 | See <a href="#">Juniper Apstra User Guide</a>        |
| See all documentation available for Juniper Apstra | See <a href="#">Juniper Apstra Documentation</a>     |

You can configure the QFX5200 switch using the CLI. See [Table 2 on page 11](#) for more information.

**Table 2: Configure QFX5200 Using the CLI**

| If You Want To                                   | Then   |
|--|--|
| Customize the basic configuration                | See <a href="#">"Performing the Initial Software Configuration for QFX5200 Switches" on page 142</a> |
| Configure supported software features on QFX5200 | See <a href="#">Software Documentation</a>   |

**Table 2: Configure QFX5200 Using the CLI *(Continued)***

| If You Want To  | Then   |
|---|--|
| Stay up-to-date about new and changed features, and known and resolved issues | See <a href="#">Junos OS Evolved Release Notes</a> |

# 2

CHAPTER

## Overview

---

### IN THIS CHAPTER

- QFX5200 System Overview | **14**
- QFX5200 Port Panels | **21**
- QFX5200 Switch Management | **30**
- QFX5200 Cooling System | **40**
- QFX5200 Power System | **50**

---

# QFX5200 System Overview

## IN THIS SECTION

- [QFX5200 Switch Description | 14](#)
- [QFX5200 Component Redundancy | 19](#)
- [QFX5200 Field-Replaceable Units | 20](#)

## QFX5200 Switch Description

### IN THIS SECTION

- [QFX5200 Hardware | 14](#)
- [Benefits of QFX5200 Switches | 16](#)
- [QFX5200-32C Channelization | 17](#)
- [QFX5200-32C-L Channelization | 17](#)
- [QFX5200-48Y Channelization | 17](#)
- [System Software | 17](#)
- [QFX5200 Hardware Component Overview | 18](#)

The QFX5200 line offers line-rate, low-latency 10/25/40/50/100GbE switches for building large IP fabrics. QFX5200 Switches are an optimal choice for spine-and-leaf IP fabric deployments as well as metro use cases.

This topic covers:

### QFX5200 Hardware

QFX5200 line of switches offer compact 1 U models that provide a line rate configuration packet performance, very low latency, and a rich set of Layer 3 features.


## QFX5200-32C and QFX5200-32C-L Hardware

The QFX5200-32C and QFX5200-32C-L are compact 1 U standalone switches that provides a line rate configuration packet performance, very low latency, and a rich set of Layer 3 features. The routing engine and control plane are driven by the 1.8 Ghz quad-core Intel CPU with 16 GB of memory and two 32 GB solid-state drives (SSD) for storage. The QFX5200-32C models run standard Junos Operating System (OS); the QFX5200-32C-L models run Junos OS Evolved.

As shown in [Figure 12 on page 15](#), the QFX5200-32C and QFX5200-32C-L are 100 Gigabit Ethernet top-of-rack switches that support both quad small form-factor pluggable (QSFP+), 100-Gbps QSFP+ (QSFP28) transceivers, and break out cables in the 32 QSFP28 sockets. The ports **0** through **31** can be configured as either uplinks or as access ports. The QSFP28 ports are configured as 100-Gigabit Ethernet ports by default, but can also be configured to speeds of 50, 40, 25, or 10-Gigabit Ethernet.

The QFX5200-32C and QFX5200-32C-L comes standard with redundant fans and redundant power supplies. Switches can be ordered with either ports-to-FRUs or FRUs-to-ports airflow. The QFX5200-32C is available with AC or DC power supplies; the QFX5200-32C-L is available only with AC power supplies.

**Figure 12: QFX5200-32C Port Panel**

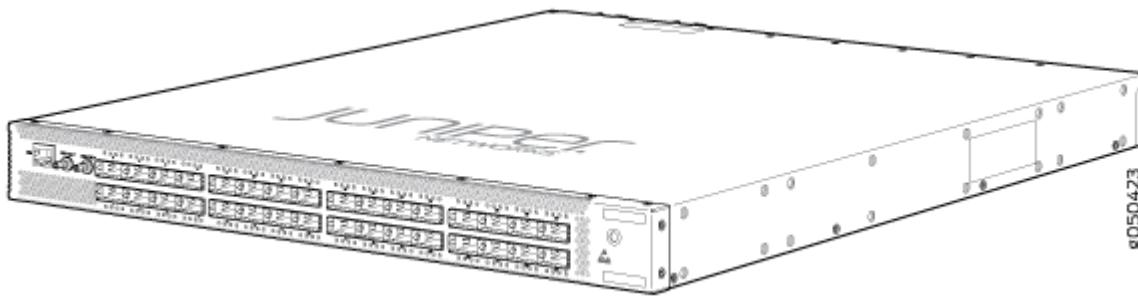

The QFX5200-32C-L is supported as a standalone switch (Junos OS Evolved Release 18.3R1 only).

The QFX5200-32C can be used as:

- A standalone switch (Junos OS Release 15.1X53-D30 and later).
- A member in an all QFX5200-32C Virtual Chassis (Junos OS Release 17.3R2 and later).

You can create an all QFX5200-32C Virtual Chassis with up to three members. The QFX5200-32C is used in all three member roles: primary RE, backup RE, and line card.

- A satellite device in a Junos Fusion Provider Edge system (Junos OS Release 18.1R2 and later). A switch in standalone mode must be converted to a satellite device.

## QFX5200-48Y Hardware

The QFX5200-48Y is a flexible switch for environments with the need for native 25 Gbps port speeds. The 48 small form-factor pluggable 28 (SFP28) ports support 10 Gbps or native 25 Gbps speeds, and the 6 QSFP28 support either 40 Gbps or 100 Gbps speeds. The 48 SFP28 default to 10 Gigabit Ethernet and must be configured in groups of four ports to support 25 Gigabit Ethernet. You can alternate each group of four ports with either 10 Gbps or 25 Gbps across the 48 ports. For details on configuring the SFP28 ports, see ["QFX5200-48Y Port Panel" on page 25](#).


The 6 QSFP28 ports auto-detect the optic speed of transceivers and set the port speed accordingly. The six QSFP28 ports can be channelized when configured to 40 Gigabit Ethernet to 4 independent 10 Gigabit Ethernet ports.

The routing engine and control plane of the switch are driven by the 2.20 Ghz quad-core Intel CPU with 16 GB of memory and a 32 GB solid-state drive (SSD) for storage. The QFX5200-48Y provides an aggregate throughput of 3.6 Tbps (full duplex).

As shown in [Figure 13 on page 16](#), the QFX5200-48Y has a 1 U form factor and comes standard with redundant fans and redundant power supplies. The switch can be ordered with either ports-to-FRUs or FRUs-to-ports airflow and with AC or DC power supplies.

The QFX5200-48Y is supported on Junos OS Release 18.1R1 and later.

**Figure 13: QFX5200-48Y Port Panel**

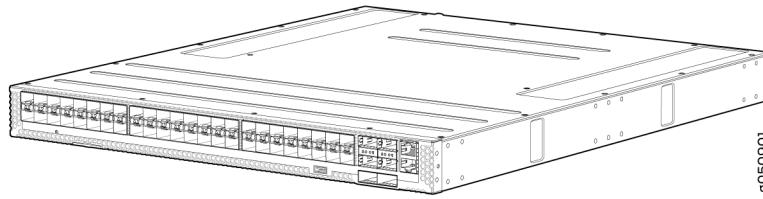

## Benefits of QFX5200 Switches

QFX5200 switches offer:

- Future proof and investment protection
- Open and standards based for multi-vendor networks
- Support for Zero Touch Provisioning (ZTP) for simplified operation

## **QFX5200-32C Channelization**

Starting from Junos OS Release 17.2R1, ports are channelized automatically by detecting the cable type. The mode and number of channels are set based on the channel link status:

- When the port is configured for 40-Gigabit Ethernet and a 4x10G breakout cable is detected, the system converts the port into 4 independent 10-Gigabit Ethernet ports
- When the port is configured for 100-Gigabit Ethernet and a 2x50G breakout cable is detected, the system converts the port into 2 independent 50-Gigabit Ethernet ports
- When the port is configured for 100-Gigabit Ethernet and a 4x25G breakout cable is detected, the system converts the port into 4 independent 25-Gigabit Ethernet ports

## **QFX5200-32C-L Channelization**

Starting in Junos OS Evolved Release 18.3R1, ports can be channelized by configuration.

- When the port is configured for 40-Gigabit Ethernet and a 4x10G breakout cable is detected, the system converts the port into 4 independent 10-Gigabit Ethernet ports
- When the port is configured for 100-Gigabit Ethernet and a 4x25G breakout cable is detected, the system converts the port into 4 independent 25-Gigabit Ethernet ports

## **QFX5200-48Y Channelization**

When one of the 6 QSFP28 ports are configured for 40-Gigabit Ethernet and a 4x10G breakout cable is detected, the system converts the port into 4 independent 10-Gigabit Ethernet ports. Channelization is not supported on the 48 SFP28 ports.

## **System Software**

Customers who purchase a QFX5200-32C or QFX5200-48Y may either enable the Junos OS by purchasing a Junos OS Base Services license. Customers purchasing a QFX5200-32C-L enable Junos OS Evolved by purchasing a Junos OS Evolved Base Services license.

QFX Series devices use the Junos OS, which provides Layer 2 and Layer 3 switching, routing, and security services. The Junos image is installed on one of the 32 GB solid state drives. The Junos OS Evolved software running on the QFX5200-32C-L does not support Layer 2 features.

For more information about which features are supported on QFX Series devices, see [Feature Explorer](#).

You manage the switch using the Junos OS command-line interface (CLI), accessible through the console and out-of-band management ports on the device. In addition to the device CLI, the QFX5200 switch

can also be managed and monitored by using Juniper Routing Director (formerly Juniper Paragon Automation).

## QFX5200 Hardware Component Overview

The QFX5200 supports the components listed in alphabetic order.

**Table 3: QFX5200 Hardware Components**

| Component      | Chassis Model                       | Spare Juniper Model Number                 | CLI Output  |
|----------------|-------------------------------------|--|---|
| Chassis        | QFX5200-32C                         | Not available                              | QFX5200-32C-32Q                                   |
|                | QFX5200-32C-L                       | QFX5200-32C-CHAS                           | QFX5200-32C-L                                     |
|                | QFX5200-48Y                         | QFX5200-48Y-CHAS                           | QFX5200-48Y                                       |
| Fan module     | QFX5200-32C<br>and<br>QFX5200-32C-L | QFX5200-32C-FANAFI (FRUs to ports airflow) | Fan tray $n$ fan- $n$ Back to Front Airflow - AFI |
|                |                                     | QFX5200-32C-FANAFO (Ports to FRUs airflow) | Fan tray $n$ fan- $n$ Front to Back Airflow - AFO |
|                | QFX5200-48Y                         | QFX520048Y-FAN-AI (FRUs to ports airflow)  | Fan tray $n$ fan- $n$ Back to Front Airflow - AFI |
|                |                                     | QFX520048Y-FAN-AO (Ports to FRUs airflow)  | Fan tray $n$ fan- $n$ Front to Back Airflow - AFO |
| Power supplies | QFX5200-32C<br>and<br>QFX5200-32C-L | JPSU-850W-AC-AFI (FRUs to ports airflow)   | AC AFI 850W PSU                                   |
|                |                                     | JPSU-850W-AC-AFO (Ports to FRUs airflow)   | AC AFO 850W PSU                                   |
|                | QFX5200-32C                         | JPSU-850W-DC-AFI (FRUs to ports airflow)   | DC AFI 850W PSU                                   |
|                |                                     | JPSU-850W-DC-AFO (Ports to FRUs airflow)   | DC AFO 850W PSU                                   |

**Table 3: QFX5200 Hardware Components (*Continued*)**

| Component | Chassis Model | Spare Juniper Model Number   | CLI Output   |
|-----------|---------------|--|--|
|           | QFX5200-48Y   | QFX520048Y-APSU-AI (FRUs to ports airflow)<br>QFX520048Y-APSU-AO (Ports to FRUs airflow)<br>QFX520048Y-DPSU-AI (FRUs to ports airflow)<br>QFX520048Y-DPSU-AO (Ports to FRUs airflow) | AC AFI 650W PSU<br>AC AFO 650W PSU<br>DC AFI 650W PSU<br>DC AFO 650W PSU |

**SEE ALSO**[QFX5200 Port Panels | 21](#)[QFX5200 Cooling System | 40](#)

## QFX5200 Component Redundancy

The following hardware components provide redundancy on a QFX5200 switch:

- Power supplies—The QFX5200 switches have one or two power supplies. Each power supply provides power to all components in the switch. If two power supplies are installed, the two power supplies provide full power redundancy to the device. If one power supply fails or is removed, the second power supply balances the electrical load without interruption.

To provide power redundancy to the system both power supplies must be installed. Connect power source feed A to one power supply and power source feed B to the second power supply.



**CAUTION:** Do not connect feed A and feed B to the same power supply input terminal.

- Cooling system—The QFX5200-32C and QFX5200-32C-L switch models have five fan modules. The QFX5200-48Y switch models has six fan modules. If a fan module fails and is unable to keep the QFX5200 switch within the desired temperature thresholds, chassis alarms occur and the QFX5200 switch can shut down.

## QFX5200 Field-Replaceable Units

Field-replaceable units (FRUs) are components that you can replace at your site. The QFX5200 device FRUs are hot-insertable and hot-removable: you can remove and replace one of them without powering off the switch or disrupting the switching function.



**CAUTION:** Replace a failed power supply with a new power supply within one minute of removal to prevent chassis overheating. The switch continues to operate with only one power supply running. Replace a failed fan module with a new fan module within one minute of removal to prevent chassis overheating. Do not operate the switch with missing FRUs for longer than one minute.

Table 4 on page 20 lists the FRUs for the QFX5200 device and actions to take before removing them.

**Table 4: FRUs in a QFX5200 Switch**

| FRU                  | Required Action   |
|----------------------|---|
| Power supplies       | None.   |
| Fan modules          | None.   |
| Optical transceivers | None. We recommend that you disable the interface using the <code>set interfaces <i>interface-name</i> disable</code> command before you remove the transceiver. See <a href="#">"Disconnect a Fiber-Optic Cable" on page 160</a> |



**NOTE:** If you have a Juniper Care service contract, register any addition, change, or upgrade of hardware components at <https://www.juniper.net/customers/support/tools/updateinstallbase/>. Failure to do so can result in significant delays if you need replacement parts. This note does not apply if you replace existing components with the same type of component.

### RELATED DOCUMENTATION

[Installing and Removing QFX5200 Hardware Components](#)

[QFX5200 Cooling System | 40](#)

[QFX5200 Power System | 50](#)

# QFX5200 Port Panels

## IN THIS SECTION

- [QFX5200-32C and QFX5200-32C-L Port Panel | 21](#)
- [QFX5200-48Y Port Panel | 25](#)

## QFX5200-32C and QFX5200-32C-L Port Panel


### IN THIS SECTION

- [Network Ports | 22](#)
- [Channelizing Interfaces | 22](#)
- [Network Port LEDs | 23](#)

The port panel of the QFX5200-32C and QFX5200-32C-L supports port configuration speeds of 100, 50, 40, 25, or 10 Gigabit Ethernet. The QFX5200-32C and QFX500-32C-L uses 28-Gbps quad small-form factor pluggable plus (QSFP28) sockets that are configured as 100 Gigabit Ethernet ports by default. Any of the 32 ports **0** through **31** can be configured as uplinks or as access ports.

[Figure 14 on page 21](#) shows the port panel of the QFX5200-32C and QFX5200-32C-L.

**Figure 14: QFX5200-32C and QFX5200-32C-L Port Panel**

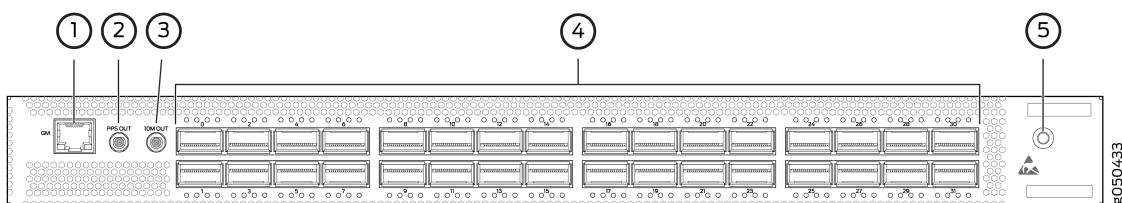

1– RJ45 connection to grand master clock

4– 32 QSFP28 ports

|   |   |
|---|---|
| 2– 1 pulse per second (PPS) output connection for clocking messages | 5– Electrostatic discharge (ESD) terminal |
| 3– Output clock at 10 Mhz   |   |

This topic describes:

## Network Ports

The QFX5200-32C and QFX5200-32C-L network ports, ( 0 to 31) support:

- 100 Gbps QSFP28 transceivers
- 40 Gbps QSFP+ transceivers
- 100 Gbps active optical cables (AOC)



**NOTE:** For interoperability with other QFX Series switches, ensure auto-speed-detection on the QFX5200-32C is disabled.

- 40 Gbps AOC
- QSFP28 direct attach copper (DAC) cables
- QSFP+ DAC cables
- (QFX5200-32C only) QSFP+ to QSFP+ direct attach copper break out (DACBO) cables (100 Gbps breaks out to 50 Gbps or 25 Gbps)
- (QFX5200-32C only) QSFP+ to SFP+ DACBO cables (40 Gbps breaks out to 10 Gbps)

Starting in Junos OS Release 19.3R1, you can also use a QSFP+ to SFP+ adapter (QSA) in the QSFP+ ports to provide either 40 Gigabit Ethernet or 4x10 Gigabit Ethernet speeds.

## Channelizing Interfaces

For downstream traffic, the QFX5200-32C has 32 physical or 128 logical ports (32 x 4) that can be used for port channelization. The 100 Gigabit Ethernet ports can be channelized using breakout cables either to 2 independent downstream 50 Gigabit Ethernet or to 4 independent 25 Gigabit Ethernet ports. The default 100 Gigabit Ethernet ports can also be configured as 40 Gigabit Ethernet and in this configuration can either operate as dedicated 40 Gigabit Ethernet ports or can be channelized to 4 independent 10 Gigabit Ethernet ports using breakout cables.


The QFX5200-32C ports support auto-channelization starting in Junos OS Release 15.1X53-D230.

The QFX5200-32C-L supports channelization by configuration starting in Junos OS Evolved Release 18.3R1.

## Network Port LEDs

The Link/Activity LED configuration for QFX5200-32C and QFX5200-32C-L switches use bi-colored LEDs. The link LED indicates link activity or a fault. See [Table 5 on page 23](#).

**Table 5: QFX5200-32C and QFX5200-32C-L Access Port and Uplink LED Locations**
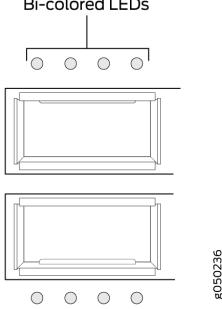
| Port Type        | Indicators                                | Location  |
|------------------|---|---|
| QSFP28 and QSFP+ | Speed<br>Link<br>Status<br>Channelization | <p><b>Figure 15: QFX5200-32C and QFX5200-32C-L Port LEDs</b></p>  |

[Table 6 on page 23](#) describes how to interpret the QSFP28 port LEDs.

**Table 6: Network Port LEDs on QSFP28 Ports on a QFX5200-32C and QFX5200-32C-L Switch**

| Color | State       | QFX5200-32C and QFX5200-32C-L Description  |
|-------|-------------|--|
| Unlit | Off         | <p>The port is administratively disabled, there is no power, the link is down, or there is a fault.</p> <p>When configured for 25-Gigabit Ethernet, the LED remains unlit only if all four of the 25-Gigabit Ethernet QSFP+ breakout links are down.</p> |
| Green | On steadily | A link is established, but there is no link activity.  |

**Table 6: Network Port LEDs on QSFP28 Ports on a QFX5200-32C and QFX5200-32C-L Switch**  
*(Continued)*

| Color | State    | QFX5200-32C and QFX5200-32C-L Description  |
|-------|----------|--|
|       | Blinking | When configured for 25-Gigabit Ethernet, the LED is lit green when at least one of the four 25-Gigabit Ethernet QSFP+ breakout links is established. |
|       |          | A link is established, and there is link activity.   |
|       |          | When configured for 25-Gigabit Ethernet, the LED is lit green when at least one of the four 25-Gigabit Ethernet QSFP+ breakout links is established. |
| Amber | Blinking | The beacon is enabled on the port.   |

As shown in [Table 7 on page 24](#), there are four bi-color LEDs for each QSFP+ port. The first LED is used and the remaining LEDs are not used when the interface is configured for 100-Gigabit Ethernet and connected to a QSFP28 transceiver. All four LEDs are used when the interface is configured for 25-Gigabit Ethernet and the port is connected using an optical splitter cable or a copper DACBO cable.

[Table 7 on page 24](#) describes how to interpret the QSFP+ LEDs.

**Table 7: Network Port Link/Activity LEDs on QSFP+ Ports on a QFX5200-32C and QFX5200-32C-L**

| Color | State       | Description  |
|-------|-------------|--|
| Unlit | Off         | <p>The port is administratively disabled, there is no power, the link is down, or there is a fault.</p> <p><b>NOTE:</b> When configured for 10-Gigabit Ethernet, the LED remains unlit only if all four of the 10-Gigabit Ethernet SFP+ breakout links are down.</p> |
| Green | On steadily | <p>A link is established, but there is no link activity.</p> <p><b>NOTE:</b> When configured for 10-Gigabit Ethernet, the LED is lit green when at least one of the four 10-Gigabit Ethernet SFP+ breakout links is established.</p>                                 |

**Table 7: Network Port Link/Activity LEDs on QSFP+ Ports on a QFX5200-32C and QFX5200-32C-L (Continued)**

| Color | State    | Description   |
|-------|----------|---|
|       | Blinking | <p>A link is established, and there is link activity.</p> <p><b>NOTE:</b> When configured for 10-Gigabit Ethernet, the LED is lit green when at least one of the four 10-Gigabit Ethernet SFP+ breakout links is established.</p> |
| Amber | Blinking | All four LEDs blink to indicate the beacon function was enabled on the port.  |


## QFX5200-48Y Port Panel

### IN THIS SECTION

- [Network Ports | 26](#)
- [Port Groups | 26](#)
- [Network Port LEDs | 28](#)

The port panel of the QFX5200-48Y supports port configuration speeds of 100 or 40 Gigabit Ethernet, and 25 or 10 Gigabit Ethernet. The QFX5200-48Y has 48 small form-factor pluggable 28 (SFP28) ports (0 through 47) that can be configured as either 10 Gigabit Ethernet or 25 Gigabit Ethernet. The QFX5200-48Y also has six quad small form-factor pluggable (QSFP28) ports (48 through 53 that can be configured as either 100 Gigabit Ethernet or 40 Gigabit Ethernet. The SFP28 ports default to 10 Gigabit Ethernet but can be configured in groups of four ports to 25 Gbps speeds. The QSFP28 ports auto-sense the speed of inserted optics and configure the port to the appropriate speed for that transceiver. See [Figure 16 on page 26](#).

Figure 16: Port Panel of QFX5200-48Y

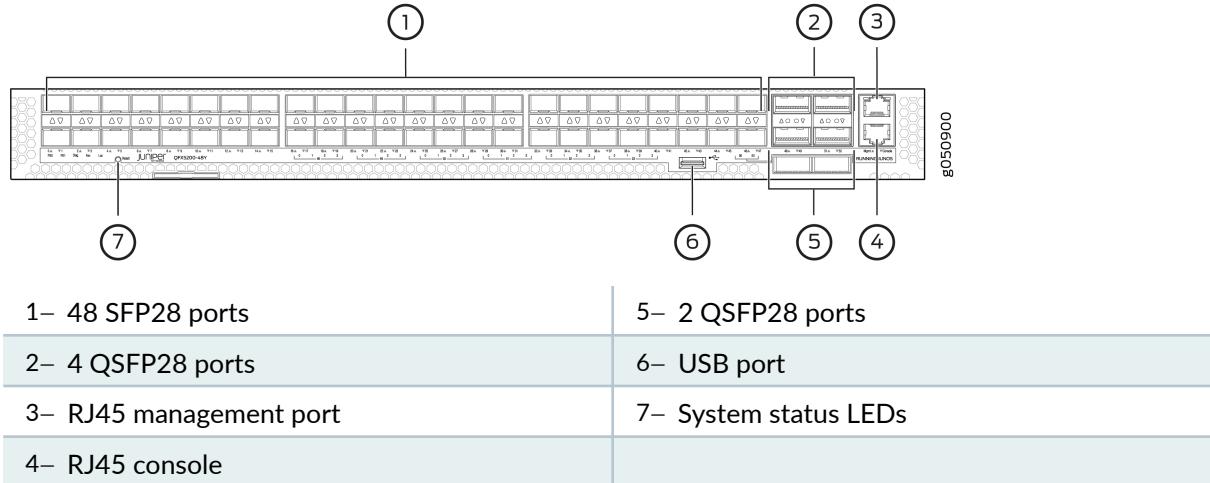

## Network Ports

The QFX5200-48Y ports, (0 to 47) are normally used as access ports. They support:

- 10 Gbps SFP+ transceivers
- 10 Gbps direct attach copper (DAC) cables
- 25 Gbps SFP28 transceivers
- 25 Gbps SFP28 DAC cables

The QFX5200-48Y ports, (48 to 53) are normally used as uplinks. They support:

- 25 Gbps active optical cables (AOC)
- 40 Gbps QSFP+ transceivers
- 40 Gbps DACBO cables (40 Gbps to 10 Gbps)
- 100 Gbps QSFP28 transceivers
- 100 Gbps AOC

## Port Groups

The 48 SFP28 ports default to 10 Gigabit Ethernet but can be configured to 25 Gigabit Ethernet by port groups. The SFP28 ports are divided into 12 port groups, with four contiguous ports in each port group. Each port group can be configured to either 10 Gbps or 25 Gbps speeds, but mixing port speeds within a port group is not allowed. See [Table 8 on page 27](#)

**Table 8: Available Port Groups for QFX5200-48Y**

| Port Groups |
|-------------|
| 0 – 3       |
| 4 – 7       |
| 8 – 11      |
| 12 – 15     |
| 16 – 19     |
| 29 – 23     |
| 24 – 27     |
| 28 – 31     |
| 32 – 35     |
| 36 – 39     |
| 40 – 43     |
| 44 – 47     |

Use the `set chassis fpc` command to set an SFP28 port group to either 10 Gbps or 25 Gbps speeds. You will receive a warning message that you are changing the port configuration for the four ports.

Committing the change does cause the FPC to reboot. For example, to change ports **0** through **3** to 25 Gbps from the default 10 Gbps, issue the following command:

```
[edit]
user@host# set chassis fpc 0 pic 0 port 0 speed 25g
```

```

user@host# commit

warning: 25g config will be applied to ports 0 to 3

{master:0}[edit]
root@sw-symphony-03# commit
configuration check succeeds
commit complete

```

## Network Port LEDs

The QFX5200-48Y uses bi-colored LEDs to indicate link and activity on the port. SFP28 ports have a single green/amber LED. QSFP28 ports have four blue/amber ports. Only the first (left-most) LED is used. See [Table 9 on page 28](#) and [Table 10 on page 29](#).



**NOTE:** The up and down arrow LEDs for QSFP28 ports 48, 49, 51, and 52 are not used.

**Table 9: QFX5200-48Y Access Port and Uplink LED Locations**

| Port Type | Indicators              | Location   |
|-----------|-------------------------|--|
| QSFP28    | Speed<br>Link<br>Status | <b>Figure 17: QFX5200-48Y QSFP28 Port LEDs</b><br> |

**Table 9: QFX5200-48Y Access Port and Uplink LED Locations (*Continued*)**

| Port Type | Indicators              | Location   |
|-----------|-------------------------|--|
| SFP28     | Speed<br>Link<br>Status | <p><b>Figure 18: QFX5200-48Y SFP28 Port LEDs</b></p> |

**Table 10: Network Port LEDs on a QFX5200-48YSwitch**

| Transceivers Supported | Color | State       | LED Description  |
|------------------------|-------|-------------|--|
| SFP28                  | Unlit | Off         | The port is administratively disabled, there is no power, the link is down, or there is a fault. |
|                        | Amber | On steadily | A link is established for 10 Gbps or 25 Gbps, but there is no activity.                          |
|                        |       | Blinking    | A link is established for 10 Gbps or 25 Gbps and there is link activity.                         |

**Table 10: Network Port LEDs on a QFX5200-48YSwitch (*Continued*)**

|        |       |     |  |
|--------|-------|-----|--|
| QSFP28 | Unlit | Off | The port is administratively disabled, there is no power, the link is down, or there is a fault. |
|--------|-------|-----|--|

|       |             |   |
|-------|-------------|---|
| Green | On steadily | A link is established for 40 Gbps or 100 Gbps, but there is no activity.  |
|       | Blinking    | A link is established for 40 Gbps or 100 Gbps and there is link activity. |

## RELATED DOCUMENTATION

[QFX5200 Field-Replaceable Units | 20](#)

*Channelizing Interfaces on QFX5200-32C Switches*

[Installing and Removing QFX5200 Hardware Components](#)

# QFX5200 Switch Management

## IN THIS SECTION

- [QFX5200 Management Panel Overview | 30](#)
- [QFX5200 Chassis Status LEDs | 36](#)

## QFX5200 Management Panel Overview

### IN THIS SECTION

- [QFX5200-32C and QFX5200-32C-L Management Panel | 31](#)
- [QFX5200-32C and QFX5200-32C-L Management Port and Console Port LEDs | 33](#)
- [QFX5200-48Y Management Panel | 34](#)
- [QFX5200-48Y Management Port LEDs | 35](#)


The management panel allows you to have a management channel into the switch that is separate from production traffic. The management panel is found on the Field Replaceable Unit (FRU) end of the QFX5200-32C and QFX5200-32C-L and on the port panel of the QFX5200-48Y.

This topic covers:

### **QFX5200-32C and QFX5200-32C-L Management Panel**


The management panel of the QFX5200-32C and QFX5200-32C-L is found on the Field Replaceable Unit (FRU) end of the switch next to the fan modules. See [Figure 19 on page 31](#) to locate the management panel.

**Figure 19: QFX5200-32C and QFX5200-32C-L, FRU End**

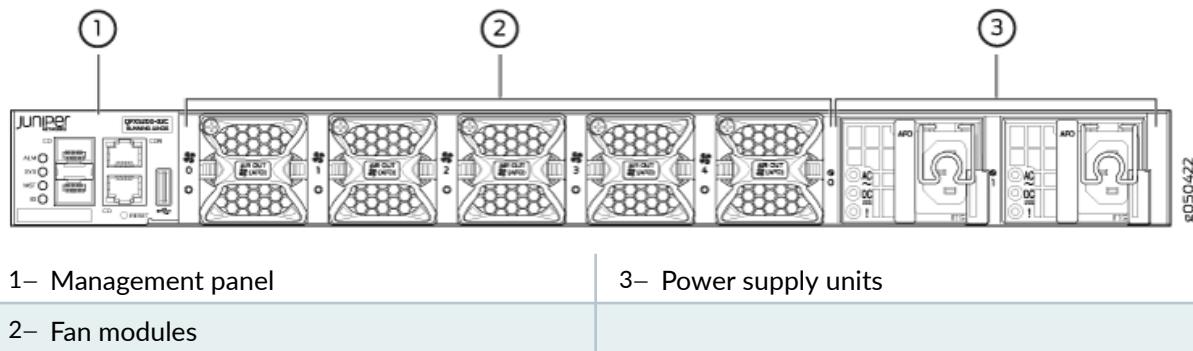

[Figure 20 on page 32](#) describes the connections and components of the QFX5200-32C and QFX5200-32C-L management panel.

Figure 20: Management Panel Components on QFX5200-32C and QFX5200-32C-L

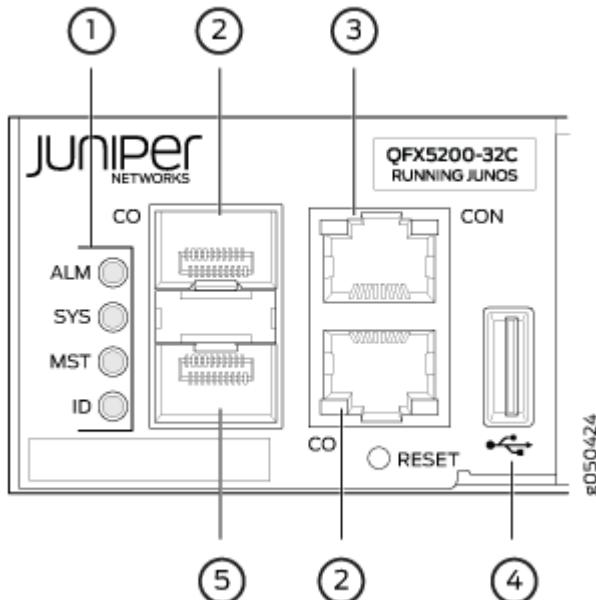

|   |  |
|---|--|
| 1– Status LEDs  | 4– USB port  |
| 2– QFX5200-32C—Use <b>C0</b> for the em0 interface using either RJ-45 (1000 Base-T) or fiber SFP connections. QFX5200-32C-L –use <b>C0</b> for the re0:mgmt-0 management interface. | 5– For QFX5200-32C only—em1-SFP management Ethernet port ( <b>C1</b> ) Cage (socket for either 1 GbE copper SFP or fiber SFP). QFX5200-32C-L does not support a second management interface. |
| 3– RJ-45 console port ( <b>CON</b> )  |  |

The management panel consists of the following components:

- Chassis status LEDs
- Switch product number
- Management Ports C0 and C1
  - C0—Use the RJ-45 connectors for 10/100/1000 BaseT or to cable a virtual management Ethernet (VME) interface for spine members in a VCF. See ["Connect a Device to a Network for Out-of-Band Management" on page 126](#).



**NOTE:** For product SKUs with C0 available in both copper and fiber, the copper C0 has priority over fiber C0.

- C1—Use the SFP connector for 1000 BaseX on QFX5200-32C only.
- USB port for image updates.

- Console port (RJ-45) to support RS-232 serial ports. The LEDs above the port indicate status and link.

## QFX5200-32C and QFX5200-32C-L Management Port and Console Port LEDs

The management ports and console port on a QFX5200-32C and QFX5200-32C-L have two LEDs that indicate link status and link activity. The management ports are labeled **C0** for 10/100/1000 BASE-T and **C1** for 10/100/1000 BASE-T and SFP 1000 BASE-X connections. The left LED indicates status; the right LED indicates link/activity.

[Table 11 on page 33](#) describes the management ports and [Table 12 on page 33](#) the console LED.

**Table 11: Management Ports LEDs on a QFX5200-32C and QFX5200-32C-L**

| LED           | Color | State                  | Description  |
|---------------|-------|------------------------|--|
| Link/Activity | Unlit | Off                    | No link is established, there is a fault, or the link is down. |
|               | Green | On steadily            | A link is established, but there is no link activity.          |
|               |       | Blinking or flickering | A link is established, and there is link activity.             |
| Status        | Unlit | Off                    | Either the port speed is 10 M or the link is down.             |
|               | Green | On steadily            | The port speed is 1000 M.                                      |
|               | Amber | On steadily            | The port speed is 100 M.                                       |


**Table 12: Console Port LED on a QFX5200-32C and QFX5200-32C-L**

| LED    | Color | State       | Description         |
|--------|-------|-------------|---------------------|
| Status | Unlit | Off         | The console is off. |
|        | Green | On steadily | The console is on.  |

## QFX5200-48Y Management Panel

The management panel of the QFX5200-48Y is found on the port panel next to right of the quad small-form factor pluggable plus (QSFP28) ports. See [Figure 21 on page 34](#) to locate the management panel.


[Figure 21: QFX5200-48Y Port Panel](#)

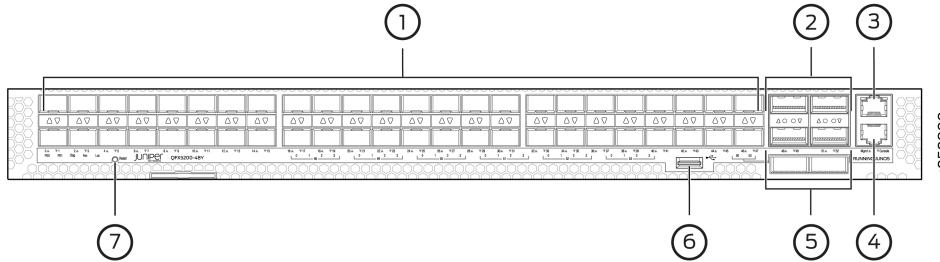

|                         |                       |
|-------------------------|-----------------------|
| 1– 48 SFP28 ports       | 5– 2 QSFP28 ports     |
| 2– 4 QSFP28 ports       | 6– USB port           |
| 3– RJ45 management port | 7– System status LEDs |
| 4– RJ45 console         |                       |

[Figure 22 on page 34](#) describes the connections and components of the QFX5200-48Y management panel.

[Figure 22: Management Panel Components on QFX5200-48Y](#)

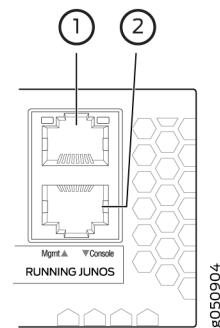

|   |  |
|---|--|
| 1– em0-RJ-45 (1000 BASE-T) management Ethernet port ( <b>Mgmt</b> ) | 2– RJ-45 console port ( <b>Console</b> ) |
|---|--|

## QFX5200-48Y Management Port LEDs

The management port and console port on a QFX5200-48Y have two LEDs that indicate link status and link activity. The management port is labeled **Mgmt** for 10/100/1000 BASE-T connections. The left LED indicates status; the right LED indicates link/activity.

[Table 13 on page 35](#) describes the management port LEDs.

**Table 13: Management Port LEDs on a QFX5200-48Y Switch**

| LED           | Color | State                  | Description  |
|---------------|-------|------------------------|--|
| Link/Activity | Unlit | Off                    | No link is established, there is a fault, or the link is down. |
|               | Green | On steadily            | A link is established, but there is no link activity.          |
|               |       | Blinking or flickering | A link is established, and there is link activity.             |
| Status        | Unlit | Off                    | The link is down.  |
|               | Green | On steadily            | The link is up.  |

**Table 14: Console Port LED on a QFX5200-48Y**

| LED    | Color | State       | Description         |
|--------|-------|-------------|---------------------|
| Status | Unlit | Off         | The console is off. |
|        | Green | On steadily | The console is on.  |

## QFX5200 Chassis Status LEDs

### IN THIS SECTION

- [QFX5200-32C and QFX5200-32C-L Chassis Status LEDs | 36](#)
- [QFX5200-48Y Chassis Status LEDs | 38](#)


The QFX5200 has a series of LEDs that indicate system status. The QFX5200-32C and QFX5200-32C-L have four chassis status LEDs on the management panel; the QFX5200-48Y has five chassis status LEDs on the port panel.

This topic includes:

### QFX5200-32C and QFX5200-32C-L Chassis Status LEDs

The QFX5200-32C and QFX5200-32C-L have four status LEDs on the FRU side of the chassis, next to the management ports (see [Figure 23 on page 36](#)).

**Figure 23: Locating Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L**

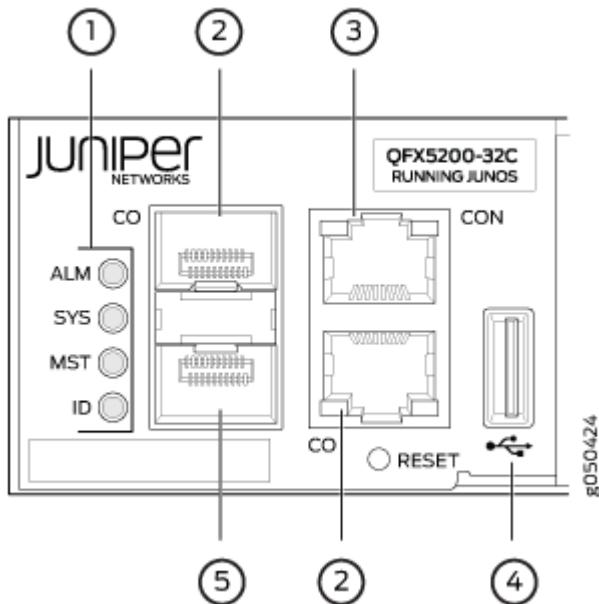

1– Status LEDs

4– USB port

|  |   |
|--|---|
| 2– em0-RJ-45 (10/100/1000 BASE-T)<br>management Ethernet port (C0) | 5– em1-SFP management Ethernet port (C1)<br>Cage (socket for either 10/100/1000 Base-T<br>RJ45 SFP or 1GbE fiber SFP) |
| 3– RJ-45 console port (CON) )                                      |   |

Table 15 on page 37 describes the chassis status LEDs on a QFX5200-32C and QFX5200-32C-L, their colors and states, and the status they indicate. You can view the colors of the three LEDs remotely through the CLI by issuing the operational mode command `show chassis lcd`.

**Table 15: Interpreting Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L**

| Name                | Color | State       | Description  |
|---------------------|-------|-------------|--|
| ALM—Alarm or beacon | Unlit | Off         | The switch is halted or there is no alarm.   |
|                     | Red   | On steadily | A major hardware fault has occurred, such as a temperature alarm or power failure, and the switch has halted. Power off the QFX5200-32C or QFX5200-32C-L by setting the AC power source outlet to the OFF (O) position, or unplugging the AC power cords. Correct any voltage or site temperature issues, and allow the switch to cool down. Power on the QFX5200-32C and QFX5200-32C-L. Monitor the power supply and fan LEDs to help determine where the error is occurring. |
|                     | Amber | On steadily | A minor alarm has occurred, such as a software error. Power off the QFX5200 or QFX5200-32C-L by setting the AC power source outlet to the OFF (O) position, or unplugging the AC power cords. Power on the QFX5200-32C or QFX5200-32C-L and monitor the status LEDs to ensure that Junos OS boots properly.  |


**Table 15: Interpreting Chassis Status LEDs on a QFX5200-32C and QFX5200-32C-L (Continued)**

| Name  | Color | State       | Description  |
|---|-------|-------------|--|
| SYS-System                                      | Unlit | Off         | The switch is powered off or halted.   |
|   | Green | On steadily | Junos OS for QFX Series is loaded on the switch.   |
| MST-Primary RE in a QFX5200-32C Virtual Chassis | Unlit | Off         | The switch is standalone.  |
|   | Green | On steadily | The switch is operating as the primary RE in a QFX5200-32C Virtual Chassis.  |
| ID-Identification                               | Unlit | Off         | The beacon feature is not enabled on the switch. This feature is enabled using the request chassis beacon command. |
|   | Blue  | Blinking    | The beacon feature is enabled on the switch. This feature is enabled using the request chassis beacon command.     |

## QFX5200-48Y Chassis Status LEDs

The QFX5200-48Y switch has five status LEDs on the port side of the chassis, (see [Figure 24 on page 39](#).)

Figure 24: Locating Chassis Status LEDs on QFX5200-48Y

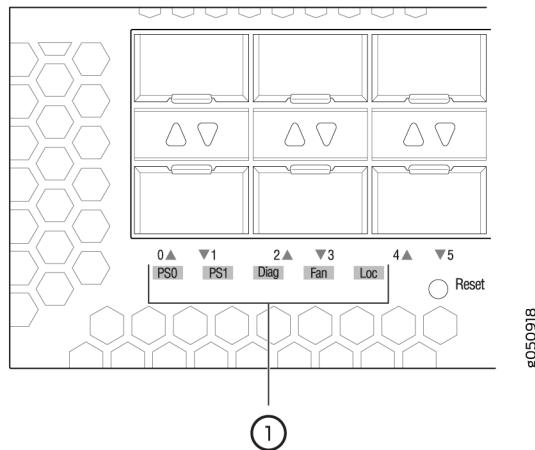

1– Chassis status LEDs

Table 16 on page 39 describes the chassis status LEDs on a QFX5200-48Y, their colors and states, and the status they indicate.

Table 16: Interpreting Chassis Status LEDs on a QFX5200-48Y

| Name                  | Color | State           | Description   |
|-----------------------|-------|-----------------|---|
| (Power Supply Status) | Unlit | Off             | Power supply not present.                               |
|                       | Green | On steadily     | Power supply is working correctly.                      |
|                       | Amber | On steadily     | Power supply is faulty                                  |
| (Power Supply Status) | Unlit | Off             | Power supply not present.                               |
|                       | Green | On steadily     | Power supply is working correctly.                      |
|                       | Amber | On steadily     | Power supply present but faulty.                        |
| Diag<br>(Diagnostic)  | Green | Always in Green | This LED is always on, with green. You can ignore this. |

**Table 16: Interpreting Chassis Status LEDs on a QFX5200-48Y (Continued)**

| Name | Color | State       | Description  |
|------|-------|-------------|--|
| FAN  | Unlit | Off         | The switch is powered off.   |
|      | Green | On steadily | Fan operating normally.  |
|      | Amber | On steadily | Fan present but faulty.  |
| LOC  | Unlit | Off         | Not a switch to trace its location.  |
|      | Amber | Flashing    | Flashing by remote management command. Assists the technician in finding the right device for service in the rack. |

## RELATED DOCUMENTATION

*show chassis alarms*

*request chassis beacon*

## QFX5200 Cooling System

### IN THIS SECTION

- [QFX5200 Cooling System Description | 41](#)
- [QFX5200-32C and QFX5200-32C-L Fan Module LED | 48](#)

## QFX5200 Cooling System Description

### IN THIS SECTION

- [Fan Modules | 42](#)
- [Do Not Install Components with Different Airflow or Wattage in the Switch | 47](#)


The cooling system in an QFX5200-32C and QFX5200-32C-L consists of five fan modules and a single fan in each power supply; QFX5200-48Y cooling system consists of six fan modules and a single fan in each power supply, see [Figure 25 on page 41](#) and [Figure 26 on page 42](#). The switch can be set up to work in one of two airflow directions:

- Airflow In-Air comes into the switch through the vents in the field-replaceable units (FRUs).
- Airflow Out-Air comes into the switch through the vents in the port panel.



**CAUTION:** Airflow In and Airflow Out fans and power supplies cannot be mixed in the same chassis.

**Figure 25: QFX5200-32C and QFX5200-32C-L FRU Panel**

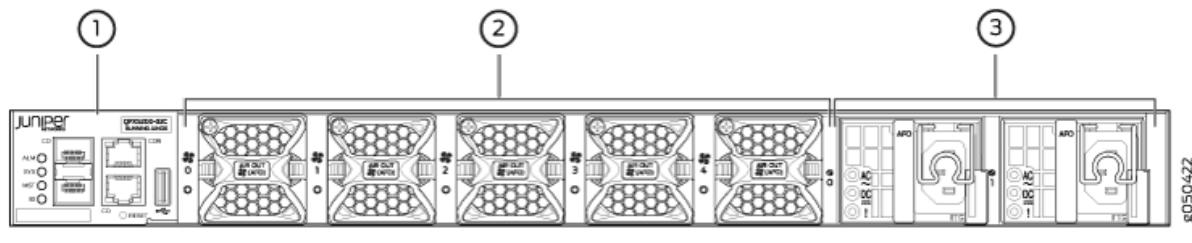


1– Management panel

2– Fan modules

3– Power supplies

Figure 26: QFX5200-48Y FRU Panel

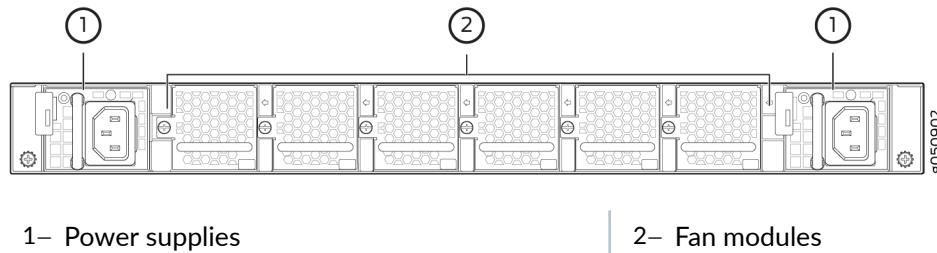

## Fan Modules


The fan modules in QFX5200 devices are hot-insertable and hot-removable field-replaceable units (FRUs). These fan modules are designed for one of the two available airflow directions (Airflow In or Airflow Out). The fan modules are also color-coded for the airflow direction as well. The fan modules are installed in the fan module slots on the FRU panel.

The QFX5200-32C and QFX5200-32C-L fan modules have five fan modules numbered **0** through **4** when counting from left to right.


The QFX5200-48Y fan modules have six fan modules numbered **0** through **5** when counting from left to right.

[Figure 27 on page 42](#) and [Figure 28 on page 43](#) shows the fan modules.

Figure 27: QFX5200-32C and QFX5200-32C-L Fan Modules

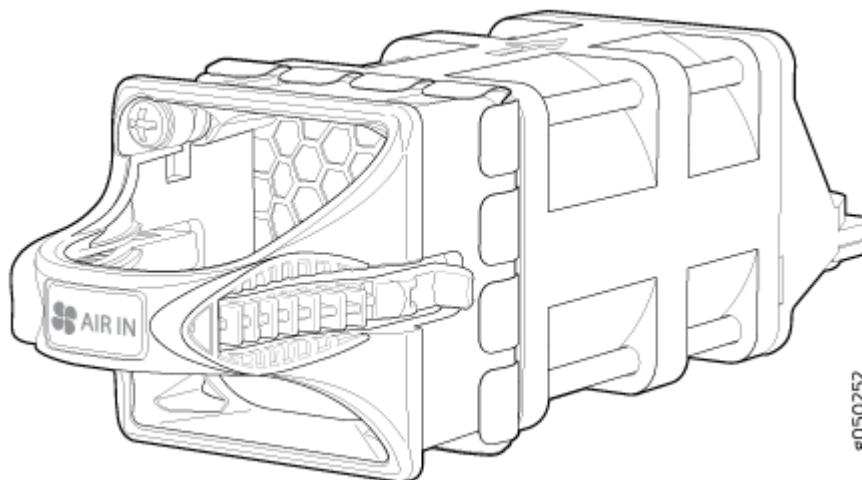

**Figure 28: QFX5200-48Y Fan Module**

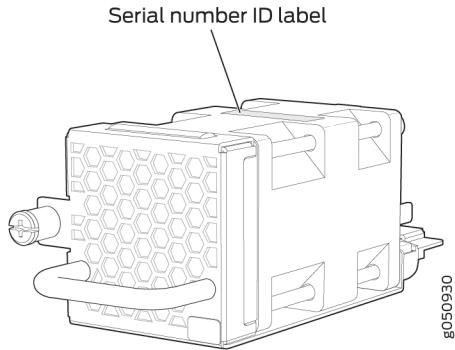

You remove and replace a fan module from the FRU end of the chassis. The switch continues to operate for a limited period of time (30 seconds) during the replacement of the fan module without thermal shutdown.



**NOTE:** All fan modules must be installed for optimal operation of the switch.

The fan modules are available in four product SKUs that have different airflow directions—FRU-to-port airflow and port-to-FRU airflow. On legacy switches or switches with LCDs, this airflow is also called front-to-back and back-to-front. [Table 17 on page 43](#) lists the available fan module product SKUs and the direction of airflow in them:

**Table 17: Fan Modules in QFX5200 Switches**

| Fan Module   | Airflow Diagram                             | Label on the Fan Module | Color of Fan Module       | Direction of Airflow in the Fan Module   | Power Supplies   |
|--|---|-------------------------|---------------------------|--|--|
| <p>QFX5200-32C-FANAFI</p> <p><b>NOTE:</b> Used for both QFX5200-32C-AFI and QFX5200-32C-LAFI</p> | <p><a href="#">Figure 29 on page 45</a></p> | <p>AIR IN</p>           | <p>Juniper Azure Blue</p> | <p>FRU-to-port, that is, air comes in from the end of the switch with the fans; air exhausts from the switch end with ports (also known as back-to-front airflow).</p> | <p>You must install only power supplies that have <b>AIR IN</b> labels in switches in which the fan modules have <b>AIR IN</b> labels.</p> |

**Table 17: Fan Modules in QFX5200 Switches (Continued)**

| Fan Module  | Airflow Diagram                      | Label on the Fan Module | Color of Fan Module | Direction of Airflow in the Fan Module  | Power Supplies  |
|---|--------------------------------------|-------------------------|---------------------|---|---|
| QFX5200-32C-FANAFO<br><br><b>NOTE:</b> Used for both QFX5200-32C-AFO and QFX5200-32C-LAFO | <a href="#">Figure 30 on page 46</a> | <b>AIR OUT</b>          | Juniper Gold        | Port-to-FRU, that is, air comes in through vents on the end with ports; air exhausts out the end with the fans (also known as front-to-back airflow).           | You must install only power supplies that have <b>AIR OUT</b> labels in switches in which the fan modules have <b>AIR OUT</b> labels. |
| QFX5200-48Y-FAN-AFI   | <a href="#">Figure 31 on page 46</a> | <b>AIR IN</b>           | Blue                | FRU-to-port, that is, air comes in from the end of the switch with the fans; air exhausts from the switch end with ports (also known as back-to-front airflow). | You must install only power supplies that have <b>AIR IN</b> labels in switches in which the fan modules have <b>AIR IN</b> labels.   |
| QFX5200-48Y-FAN-AFO   | <a href="#">Figure 32 on page 47</a> | <b>AIR OUT</b>          | Red                 | Port-to-FRU, that is, air comes in through vents on the end with ports; air exhausts out the end with the fans (also known as front-to-back airflow).           | You must install only power supplies that have <b>AIR OUT</b> labels in switches in which the fan modules have <b>AIR OUT</b> labels. |

In data center deployments, position the switch in such a manner that the **AIR IN** labels on switch components are next to the cold aisle, and **AIR OUT** labels on switch components are next to the hot aisle.

Figure 29: Air In Airflow Through QFX5200-32C and QFX5200-32C-L

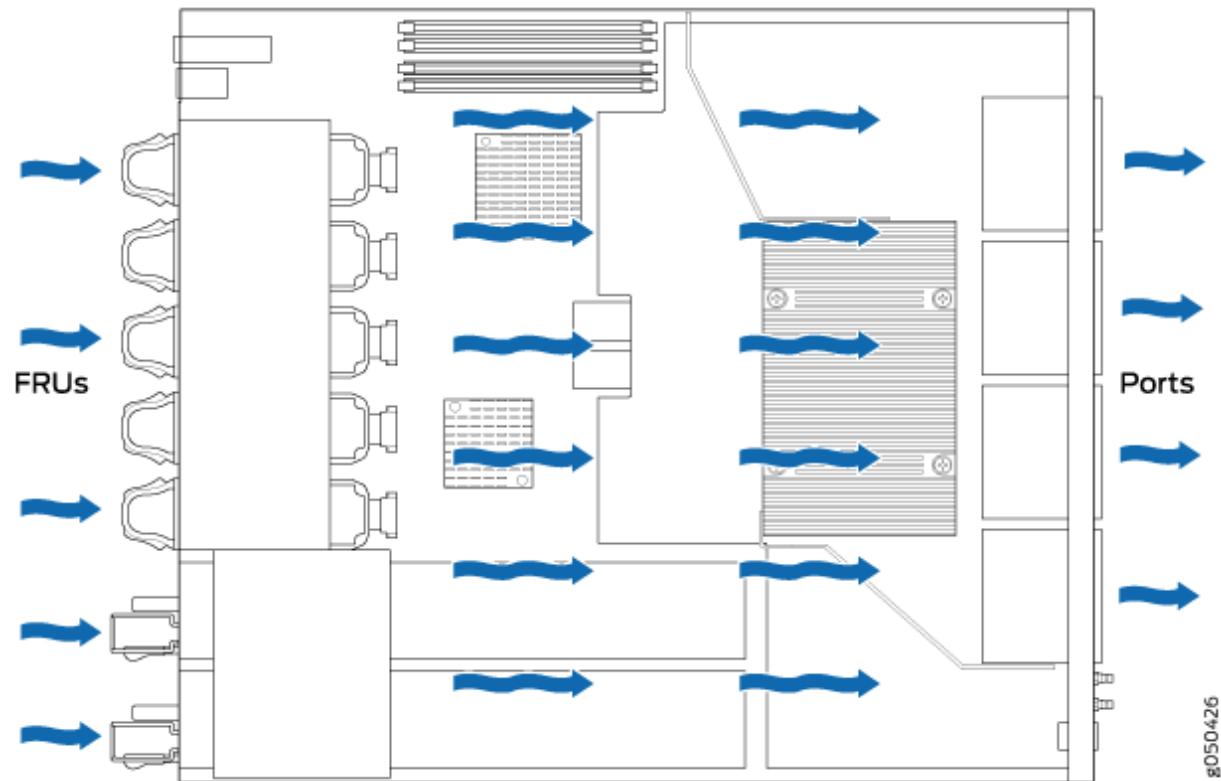


Figure 30: Air Out Airflow Through QFX5200-32C and QFX5200-32C-L

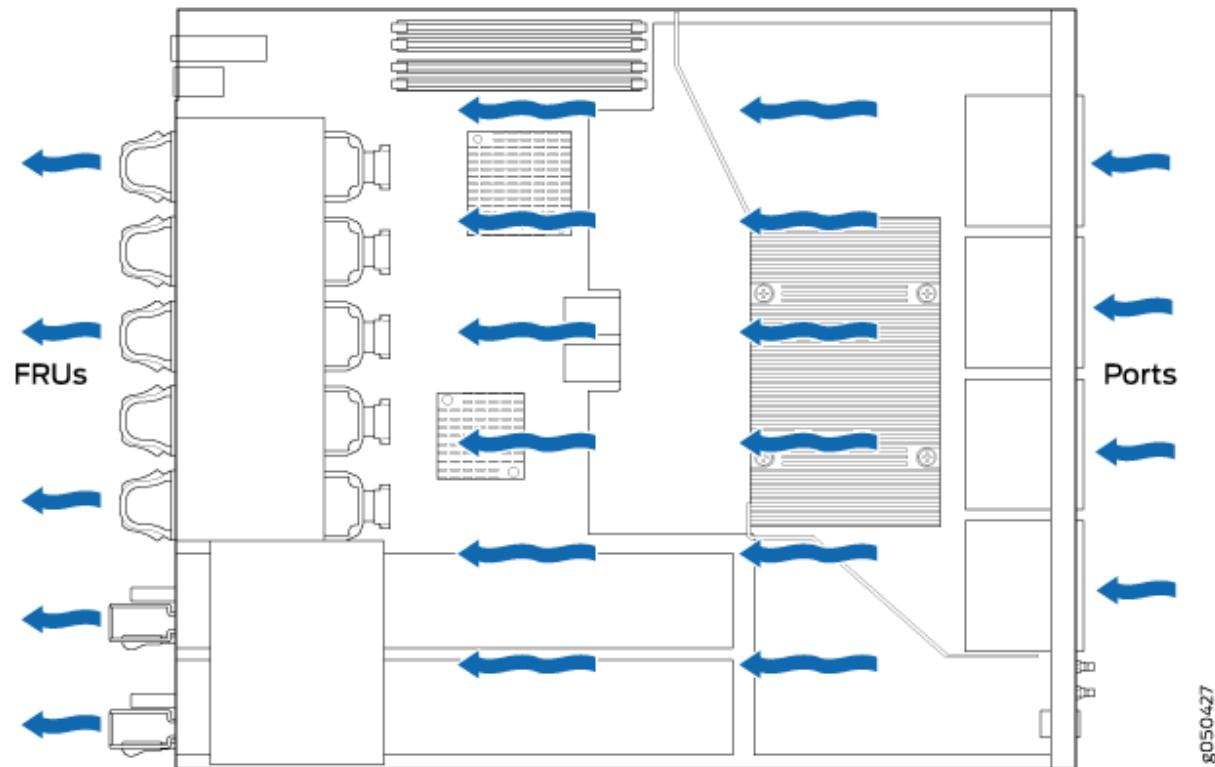


Figure 31: Air In Airflow Through QFX5200-48Y


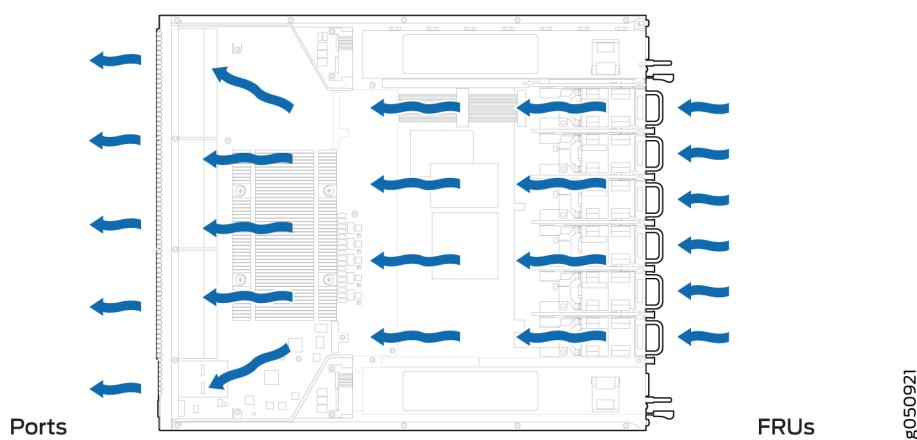


Figure 32: Air Out Airflow Through QFX5200-48Y

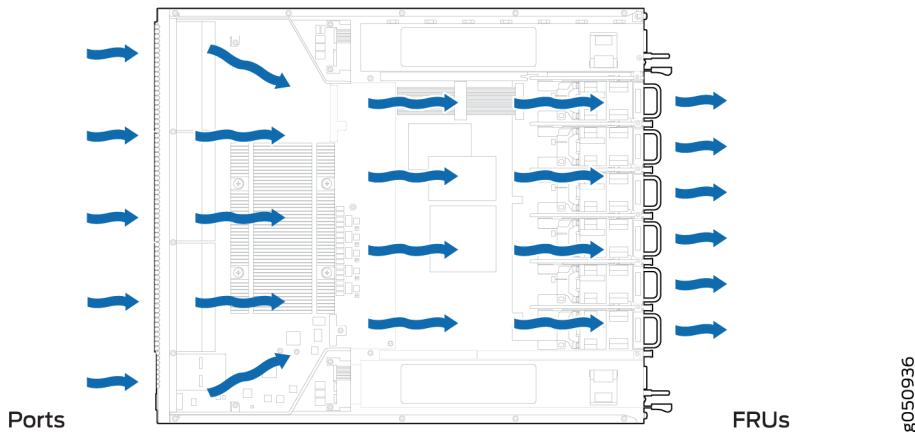

## Do Not Install Components with Different Airflow or Wattage in the Switch

Do not mix power supplies with different airflow. If the power supplies are color-coded, ensure they are either all match. Likewise, ensure that all fan modules have the same airflow and match the airflow of the power supplies. Fan modules are also color-coded that match the power supplies.

Mixing components with different airflows in the same chassis hampers the performance of the cooling system of the switch and leads to overheating of the chassis.



**CAUTION:** The system raises an alarm if a fan module fails or if the ambient temperature inside the chassis rises above the acceptable range. If the temperature inside the chassis rises above the threshold temperature, the system shuts down automatically.

Do not mix fan modules with different wattage. Only use the replacement fan modules that are designed for use with your product number. See [Table 17 on page 43](#) for the correct part number for your QFX5200 device.



**CAUTION:** Do not mix AC and DC power supplies in the same QFX5200-32C or QFX5200-32C-L chassis. You may mix AC and DC power supplies in the same QFX5200-48Y chassis, but the fans and power supplies must have the same airflow direction. Also note that load sharing is not the same for AC and DC power supplies.


However if you need to convert a QFX5200 device to have a different airflow, you can change the airflow pattern. To convert an **AIR IN** product SKU to an **AIR OUT** product SKU or an **AIR OUT** product

SKU to a **AIR IN** product SKU, you must replace all of the fans and power supplies at one time to use the new direction. The system raises an alarm when the system is converted, which is normal.

## QFX5200-32C and QFX5200-32C-L Fan Module LED

On the QFX5200-32C and QFX5200-32C-L switches the fan module LEDs are located on the chassis next to the fan module slot. QFX5200-48Y fan modules do not have LED indicators. [Figure 33 on page 48](#) shows the location of the fan module LEDs next to the fan module on a QFX5200-32C and QFX5200-32C-L switch.

**Figure 33: Fan Module LED in a QFX5200-32C or QFX5200-32C-L Switch**

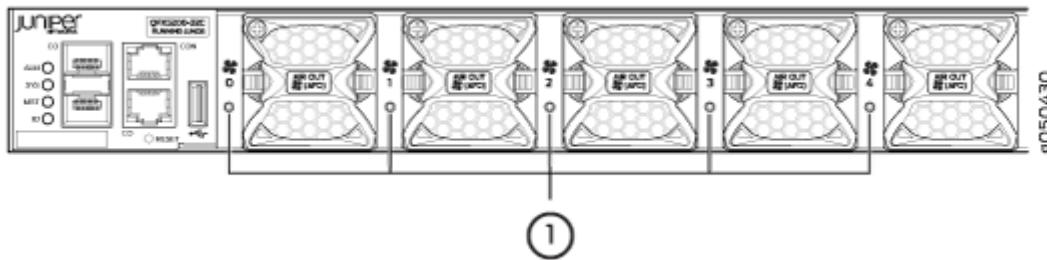

1– Fan module LED

[Table 18 on page 48](#) describes the function of the fan tray LED.

**Table 18: Fan Tray LED in a QFX5200-32C or QFX5200-32C-L Switch**

| Name | Color | State       | Description  |
|------|-------|-------------|--|
| Fan  | Green | On steadily | The fan module is operating normally. The system has verified that the module is engaged, that the airflow is in the correct direction, and that the fan is operating correctly. |

**Table 18: Fan Tray LED in a QFX5200-32C or QFX5200-32C-L Switch (Continued)**

| Name | Color | State    | Description   |
|------|-------|----------|---|
|      | Amber | Blinking | An error has been detected in the fan module. Replace the fan module as soon as possible. Either the fan has failed or it is seated incorrectly. To maintain proper airflow through the chassis, leave the fan module installed in the chassis until you are ready to replace it. |

Under normal operating conditions, the fan modules operate at a moderate speed. Temperature sensors in the chassis monitor the temperature within the chassis.

The system raises an alarm if a fan module fails or if the ambient temperature inside the chassis rises above the acceptable range. If the temperature inside the chassis rises above the threshold temperature, the system shuts down automatically. Use the `show chassis fan` and on Junos OS Evolved systems the `show system alarms` operational CLI command. For example:

```
user@host> show chassis fan
Item          Status  % RPM     Measurement
Fan Tray 0 Fan 1  0k    104%    19081 RPM
Fan Tray 0 Fan 2  0k    107%    22500 RPM
Fan Tray 1 Fan 1  0k    105%    19217 RPM
Fan Tray 1 Fan 2  0k    103%    21686 RPM
Fan Tray 2 Fan 1  0k    104%    19014 RPM
Fan Tray 2 Fan 2  0k    104%    21951 RPM
Fan Tray 3 Fan 1  0k    104%    18947 RPM
Fan Tray 3 Fan 2  0k    102%    21428 RPM
Fan Tray 4 Fan 1  0k    101%    18556 RPM
Fan Tray 4 Fan 2  0k    101%    21259 RPM
```

For Junos OS Evolved systems only:

```
user@host> show system alarms
8 alarms currently active
Alarm time          Class  Description
2018-10-11 15:55:58 UTC  Major  Fan Tray 0 Failure
2018-10-11 15:55:58 UTC  Major  Fan Tray 1 Failure
2018-10-11 15:55:58 UTC  Major  Fan Tray 2 Failure
```

2018-10-11 15:55:58 UTC Major Fan Tray 3 Failure  
2018-10-11 15:55:58 UTC Major Fan Tray 4 Failure

## RELATED DOCUMENTATION

[Maintaining QFX5200 Cooling System | 147](#)

# QFX5200 Power System

## IN THIS SECTION

- [QFX5200 AC Power Supply Description | 50](#)
- [QFX5200 AC Power Specifications | 53](#)
- [QFX5200 Power Cord Specifications | 54](#)
- [QFX5200 AC Power Supply LEDs | 56](#)
- [QFX5200 DC Power Supply Description | 58](#)
- [QFX5200 DC Power Specifications | 61](#)
- [QFX5200 DC Power Supply LEDs | 62](#)

## QFX5200 AC Power Supply Description

The two power supplies in QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs). The power supplies are installed in the switch at the factory. You can install replacement power supplies from the management panel without powering off the switch or disrupting the switching function. QFX5200 switches can operate with one PSU, but two power supplies are required to run without error messages and to have redundancy. See [Figure 34 on page 51](#) and [Figure 35 on page 51](#) for examples of QFX5200 AC power supplies.


The AC power supply in QFX5200-32C and QFX5200-32C-L switches is 850 W; the AC power supply in QFX5200-48Y switches is 650 W. Be sure to use the correct power supply for your chassis product SKU (see [Table 19 on page 52](#)).



**CAUTION:** Do not mix power supplies with different airflow or different wattage. The system raises an alarm when a power supply having a different airflow or wattage is inserted into the chassis.

You may mix AC and DC power supplies with the same airflow in QFX5200-48Y, but load sharing is different between the two designs.

Figure 34: 850 W AC Power Supply for QFX5200-32C and QFX5200-32C-L

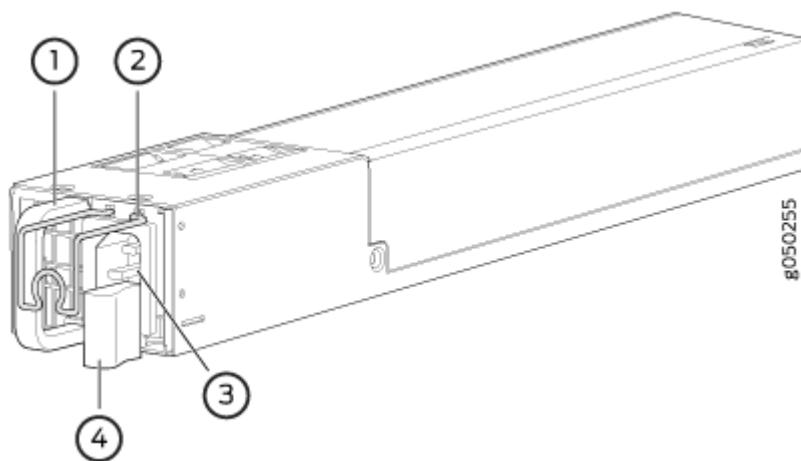


1– Handle

3– AC appliance inlet

2– Security latch

4– Ejector lever


Figure 35: 650 W AC Power Supply for QFX5200-48Y

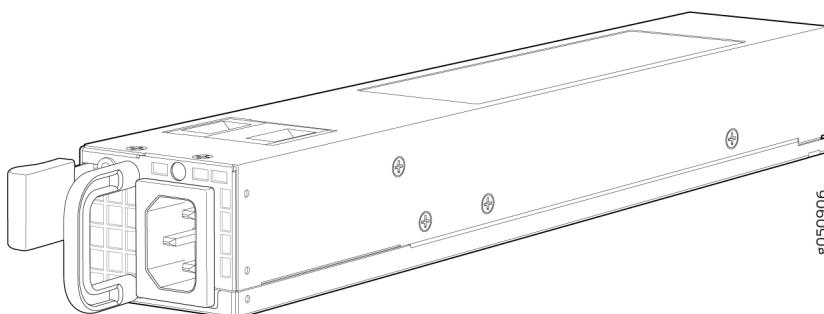

The power supply provides FRU-to-port or port-to-FRU airflow depending on the product SKU you purchase. The power supplies have color-coded indicators to indicate the airflow direction. Either the PSU handle or the panel behind the handle are color-coded. See [Figure 36 on page 52](#) for an example

of the QFX5200-32C and QFX5200-32C-L power supplies and [Table 19 on page 52](#) to determine the airflow of the PSU.

**Figure 36: Power Supply Handle Detail**

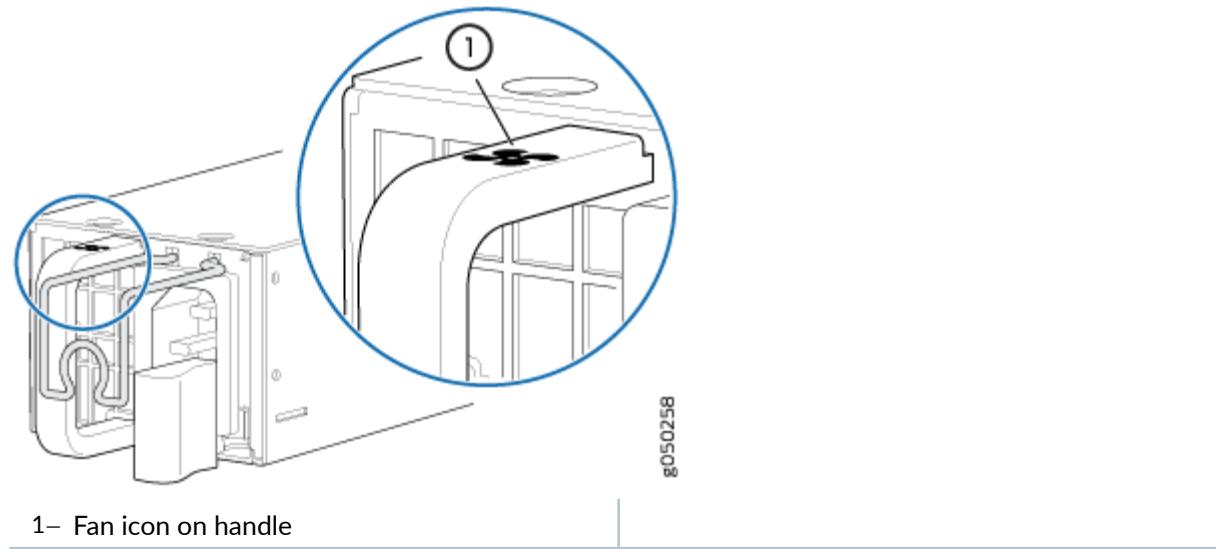

**Table 19: Color Indicators for Airflow Direction**

| Model                         | Part Number        | Airflow Direction         | Color Indicator           |
|-------------------------------|--------------------|---------------------------|---------------------------|
| QFX5200-32C and QFX5200-32C-L | JPSU-850W-AC-AFI   | Airflow In (FRU-to port)  | Juniper Azure Blue handle |
|                               | JPSU-850W-AC-AFO   | Airflow Out (port-to-FRU) | Juniper Gold handle       |
| QFX5200-48Y                   | QFX520048Y-APSU-AI | Airflow In                | Blue panel                |
|                               | QFX520048Y-APSU-AO | Airflow Out               | Red panel                 |



**CAUTION:** Verify that the airflow direction on the power supply handle matches the direction of airflow in the chassis. Ensure that each power supply you install in the chassis has the same airflow direction. If you install power supplies with two different airflow directions, Junos OS raises an alarm. If you need to convert the airflow pattern

on a chassis, you must change out all the fans and power supplies at one time to use the new direction.

To supply sufficient power, terminate the DC input wiring on a facility DC source that is capable of supplying a minimum of 7 A at -48 VDC.

To avoid electrical injury, carefully follow instructions in ["Connecting AC Power to a QFX5200" on page 132](#).

## QFX5200 AC Power Specifications

[Table 20 on page 53](#) describes the AC power specifications for a QFX5200.

**Table 20: AC Power Specifications for a QFX5200**

| Item                      | Specification                       |  |
|---------------------------|-------------------------------------|--|
| AC input voltage          | Operating range:<br>• 100 / 240 VAC |  |
| AC input line frequency   | 50–60 Hz                            |  |
| AC input current rating   | QFX5200-32C and QFX5200-32C-L       | 4.5 A at 100–120 VAC<br>2.0 A at 200–240 VAC |
|                           | QFX5200-48Y                         | 7.8 A at 100–120 VAC<br>3.8 A at 200–240 VAC |
| Typical power consumption | QFX5200-32C                         | 200 W  |
|                           | QFX5200-32C-L                       | 195 W  |
|                           | QFX5200-48Y                         | 382 W  |

**Table 20: AC Power Specifications for a QFX5200 (Continued)**

| Item                      | Specification                 |       |
|---------------------------|-------------------------------|-------|
| Maximum power consumption | QFX5200-32C and QFX5200-32C-L | 312 W |
|                           | QFX5200-48Y                   | 430 W |

## QFX5200 Power Cord Specifications


Detachable AC power cords are shipped with the chassis, if you include them as part of your order. The coupler is type C13 as described by International Electrotechnical Commission (IEC) standard 60320. The plug end of the power cord fits into the power source outlet that is standard for your geographical location.



**NOTE:** In North America, AC power cords must not exceed 14.75 feet (approximately 4.5 meters) in length, to comply with National Electrical Code (NEC) Sections 400-8 (NFPA 75, 5-2.2) and 210-52, and Canadian Electrical Code (CEC) Section 4-010(3). The cords that can be ordered for the QFX Series switches are in compliance.

[Table 21 on page 54](#) lists AC power cord specifications provided for each country or region.


**Table 21: AC Power Cord Specifications**
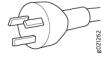
| Country/Region | Electrical Specifications | Plug Standards      | Shipped Juniper Model Number | Spare Juniper Model Number | Graphic   |
|----------------|---------------------------|---------------------|------------------------------|----------------------------|---|
| Australia      | 250 VAC, 10 A, 50 Hz      | AS/NZ 3109-1996     | CG_CBL-C13-06-AU             | CBL-EX-PWR-C13-AU          |  |
| Brazil         | 250 VAC, 10 A, 50 Hz      | NBR 14136 Type BR/3 |                              | CBL-PWR-C15M-HITEMP-BR     |  |

**Table 21: AC Power Cord Specifications (*Continued*)**

| Country/Region   | Electrical Specifications  | Plug Standards                               | Shipped Juniper Model Number | Spare Juniper Model Number                                   | Graphic  |
|--|--|--|------------------------------|--|--|
| China  | 250 VAC, 10 A, 50 Hz   | GB 1002-1996                                 | CG_CBL-C13-06-CH             | CBL-EX-PWR-C13-CH  |  602063   |
| Europe (except Italy, Switzerland, and United Kingdom) | 250 VAC, 10 A, 50 Hz   | CEE (7) VII                                  | CG_CBL-C13-06-EU             | CBL-EX-PWR-C13-EU  |  602064   |
| Israel   | 250 VAC, 10 A, 50 Hz   | SI 32/1971 Type IL/3G                        | CBL_CBL-C13-06-IL            | CBL-EX-PWR-C13-IL  |  602065   |
| Italy  | 250 VAC, 10 A, 50 Hz   | CEI 23-16/VII                                | CG_CBL-C13-06-IT             | CBL-EX-PWR-C13-IT  |  602066 |
| Japan  | 125 VAC, 12 A, 50 Hz or 60 Hz  | JIS C8303                                    | CG_CBL-C13-06-JP             | CBL-EX-PWR-C13-JP  |  602072 |
| North America  | 125 VAC, 13 A, 60 Hz<br>250 VAC, 13 A, 60 Hz<br>250 VAC, 13 A, 60 Hz | CAN/CSA No. 49-92<br>NEMA L6-15<br>NEMA 6-15 | CG_CBL-C13-06-US             | CBL-EX-PWR-C13-US<br>CBL-PW-C13-250-US<br>CBL-PWR-C13-250-US |  602075 |
| South Africa and India                                 | 250 VAC, 10 A, 50 Hz   | SABS 164/1:1992 Type ZA/3                    |                              | CBL-PWR-C15M-HITEMP-SA                                       |  602077 |

**Table 21: AC Power Cord Specifications (*Continued*)**
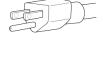
| Country/Region | Electrical Specifications     | Plug Standards                  | Shipped Juniper Model Number | Spare Juniper Model Number | Graphic  |
|----------------|-------------------------------|---------------------------------|------------------------------|----------------------------|--|
| South Korea    | 250 VAC, 10 A, 60 Hz          | KSC 8305; K60884-1              | CG_CBL-C13-06-KR             | CBL-EX-PWR-C13-KR          | <br>#02104  |
|                | 250 VAC, 13 A, 60 Hz          |                                 |                              |                            |  |
| Switzerland    | 250 VAC, 10 A, 50 Hz          | SEV 1011 SEV 1991; EN 60320 C13 | CG_CBL-C13-06-SZ             | CBL-EX-PWR-C13-SZ          | <br>#02050  |
| Taiwan         | 125 VAC, 11 A and 15 A, 50 Hz | NEMA 5-15P Type N5-15P          | CG_CBL-C13-06-TW             | CBL-EX-PWR-C13-TW          | <br>#02051  |
| United Kingdom | 250 VAC, 10 A, 50 Hz          | BS 1363/A                       | CG_CBL-C13-06-UK             | CBL-EX-PWR-C13-UK          | <br>#02077 |

## QFX5200 AC Power Supply LEDs

The QFX5200-32C and QFX5200-32C-L uses three LEDs to indicate power status, while the QFX5200-48Y has a single bi-colored LED for power status. [Figure 37 on page 56](#) shows the location of the LEDs on the QFX5200-32C power supply. [Figure 38 on page 57](#) shows the LED location on a QFX5200-48Y power supply.


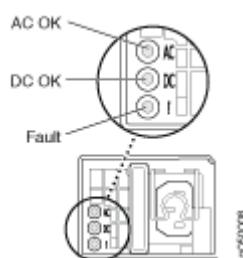
**Figure 37: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L Switches**

Figure 38: AC Power Supply LED on a QFX5200-48Y Switch

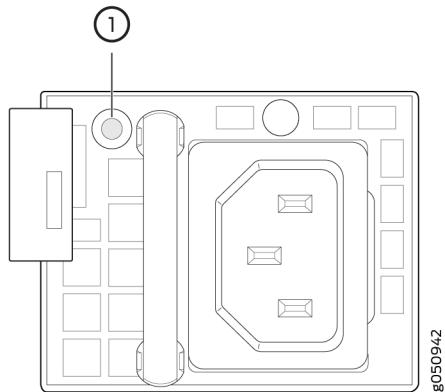

1– Bi-colored LED

[Table 22 on page 57](#) and [Table 23 on page 58](#) describe the LED behavior on the AC power supplies.

**Table 22: AC Power Supply LEDs on QFX5200-32C and QFX5200-32C-L**

| LED   | Color | State       | Description  |
|-------|-------|-------------|--|
| AC OK | Unlit | Off         | The power supply is disconnected from power, or power is not coming into the power supply.   |
|       | Green | On steadily | Power is coming into the power supply.   |
| DC OK | Unlit | Off         | The power supply is disconnected from power, or the power supply is not sending out power correctly.   |
|       | Green | On steadily | The power supply is sending out power correctly.   |
| Fault | Amber | On steadily | An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it. |



**NOTE:** If the **AC OK** LED and the **DC OK** LED are unlit, either the AC power cord is not installed properly or the power supply fuse has failed. If the **AC OK** LED is lit and the **DC OK** LED is unlit, the AC power supply is installed properly, but the power supply has an internal failure.

**Table 23: AC Power Supply LED on a QFX5200-48Y**

| Color                 | State       | Description   |
|-----------------------|-------------|---|
| Unlit                 | Off         | The power supply is disconnected from power, or power is not coming into the power supply.  |
| Green                 | Blinking    | The PSU is in standby mode. Power is coming into the power supply at +5V..  |
|                       | On steadily | The power supply is sending out power correctly.  |
| Alternating red/green | Blinking    | Power supply warning. Check the logs for related messages.  |
| Red                   | On steadily | An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.  |
|                       | Blinking    | The internal fan in the power supply has failed. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it. |

## QFX5200 DC Power Supply Description

The power supplies in QFX5200 switches (see [Figure 39 on page 59](#) and [Figure 40 on page 59](#)) are hot-removable and hot-insertable field-replaceable units (FRUs). You can install the power supplies without powering off the switch or disrupting the switching function. QFX5200 switches can operate with one PSU, but two power supplies are required to run without error messages and to have redundancy.

The DC power supply in QFX5200-32C is 1100 W with dual feeds for power resiliency.

Figure 39: QFX5200-32C DC Power Supply



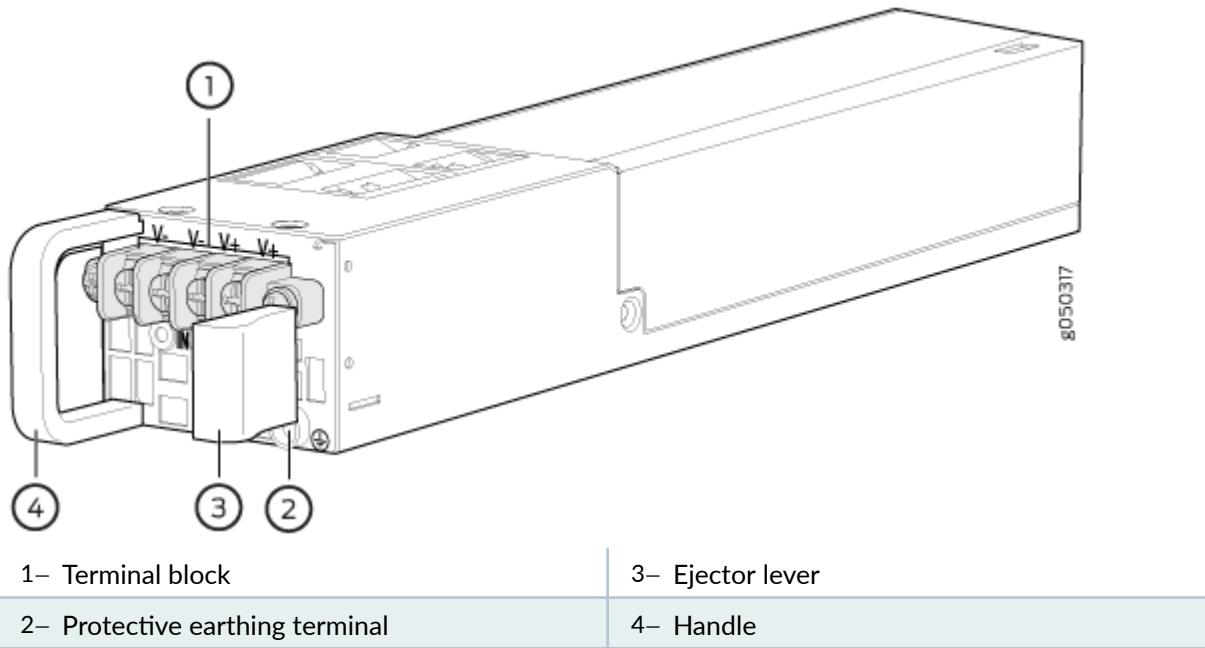


Figure 40: QFX5200-48Y DC Power Supply

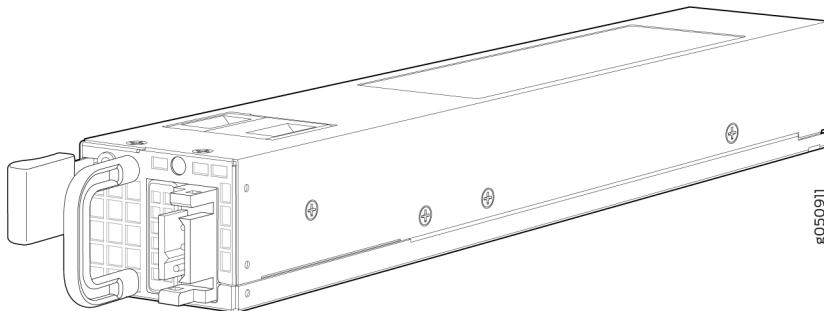


**NOTE:** The DC power supply in the switch has four terminals labeled V-, V-, V+, and V+ (see [Figure 41 on page 60](#) and [Figure 42 on page 60](#)) for connecting DC power source cables labeled positive (+) and negative (-).

Figure 41: QFX5200-32C DC Power Supply Faceplate

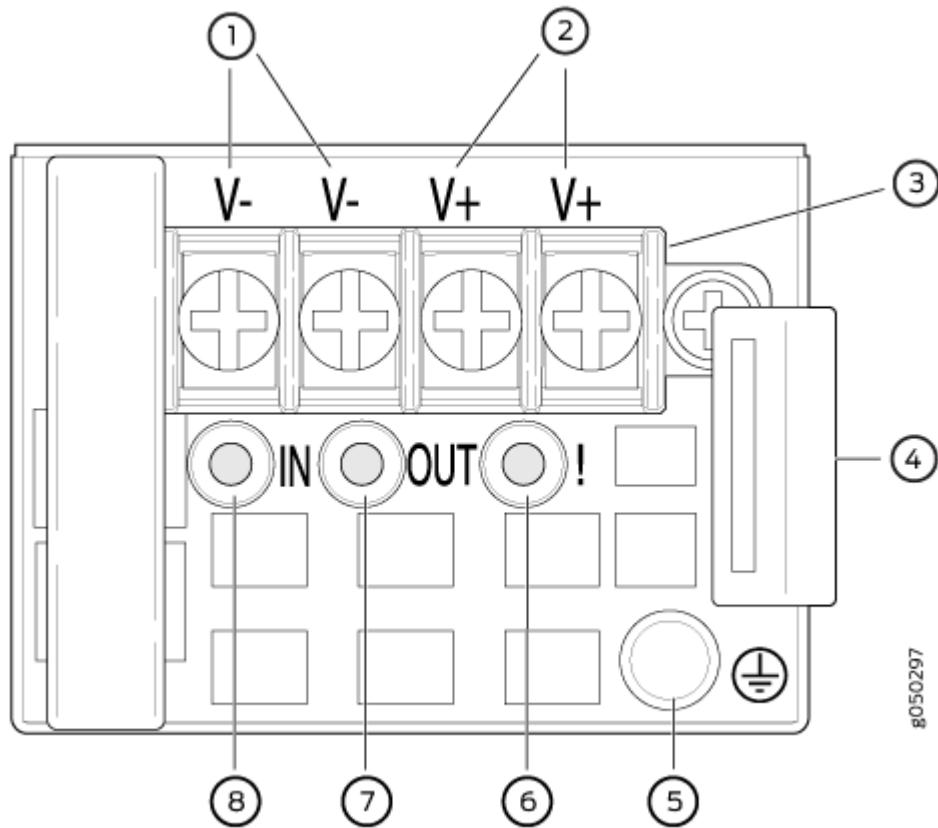

|  |                                 |
|--|---------------------------------|
| 1– Shunt negative input terminals (-48V) | 5– Protective earthing terminal |
| 2– Shunt positive input terminals (+RTN) | 6– Fault LED                    |
| 3– Terminal block                        | 7– Output LED                   |
| 4– Ejector lever                         | 8– Input LED                    |

Figure 42: QFX5200-48Y DC Power Supply Faceplate

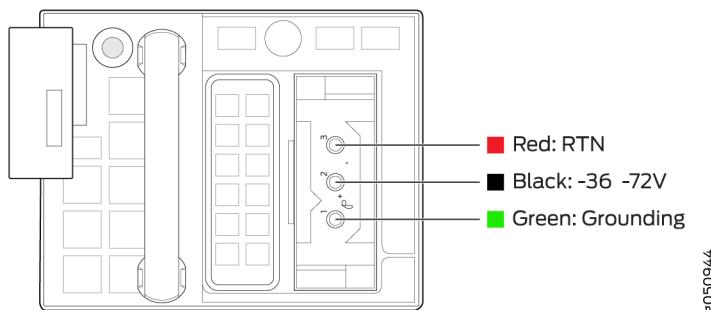

To avoid electrical injury, carefully follow instructions in "Maintaining QFX5200 Power System" on page [150](#).

## QFX5200 DC Power Specifications

[Table 24 on page 61](#) describes the QFX5200 DC power specifications.

**Table 24: DC Power Specifications for a QFX5200**

| Item                      | Model       | Specifications  |
|---------------------------|-------------|---|
| DC input voltage          | QFX5200-32C | <ul style="list-style-type: none"> <li>Rated operating voltage: -48 VDC to -60 VDC</li> <li>Operating voltage range: -40 VDC through -72 VDC</li> </ul> |
|                           | QFX5200-48Y | Rated operating voltage: -48 VDC to -60 VDC   |
| DC input current rating   | QFX5200-32C | 10 A maximum  |
|                           | QFX5200-48Y | -48 VDC to -60 VDC: 21A<br>-36 VDC to -72 VDC: 25A to 11A   |
| Typical power consumption | QFX5200-32C | 200 W   |
|                           | QFX5200-48Y | 315 W   |
| Maximum power consumption | QFX5200-32C | 312 W   |
|                           | QFX5200-48Y | 470 W   |

## QFX5200 DC Power Supply LEDs

Figure 43 on page 62 and Figure 44 on page 62 show the location of the LEDs on the QFX5200-32C DC power supply.

Figure 43: DC Power Supply Faceplate on a QFX5200-32C


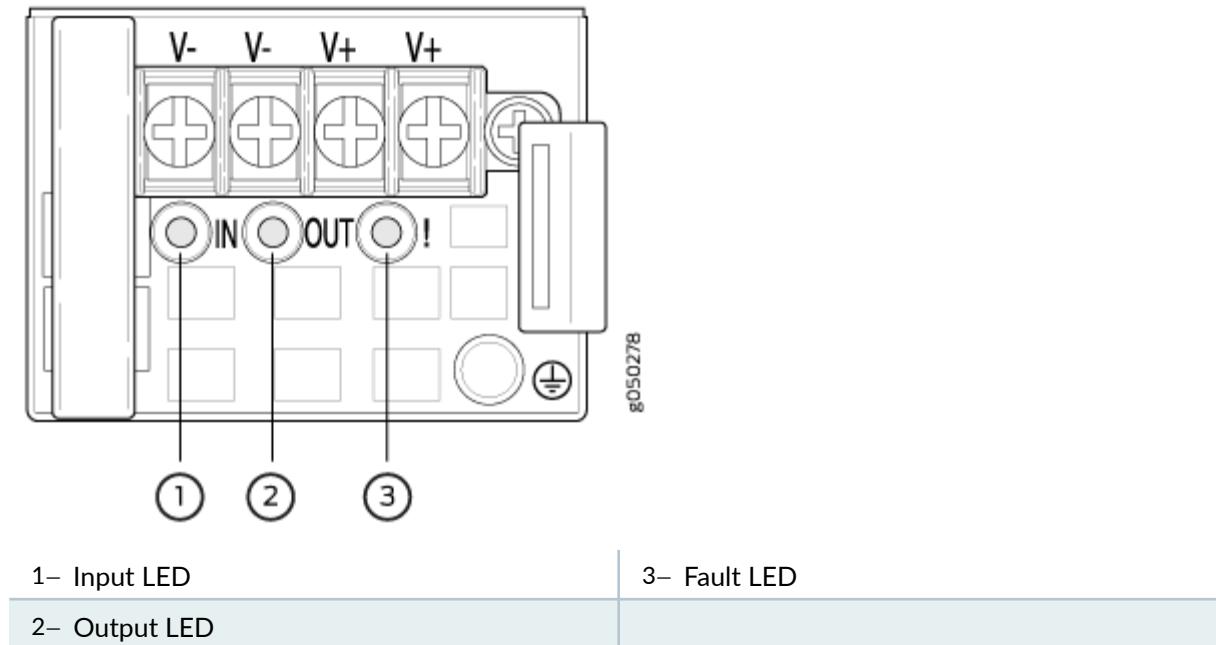


Figure 44: DC Power Supply Faceplate on a QFX5200-48Y



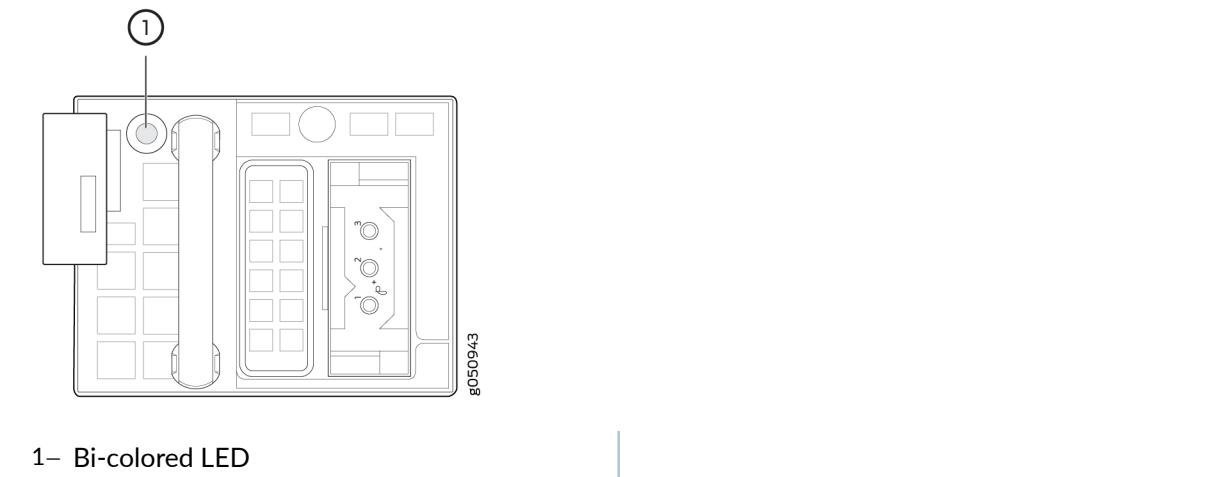

**CAUTION:** The V+ terminals are shunted internally together, as are the V- terminals. The same polarity terminal can be wired together from the same source to provide an additional current path in a higher power chassis. Do not connect the terminals to different sources.

Table 25 on page 63 and Table 26 on page 63 describe the LEDs on the DC power supplies.

**Table 25: DC Power Supply LEDs on a QFX5200-32C**

| Name   | Color | State       | Description  |
|--------|-------|-------------|--|
| Input  | Unlit | Off         | The power supply is disconnected from power, or power is not coming into the power supply.   |
|        | Green | On steadily | Power is coming into the power supply.   |
| Output | Unlit | Off         | The power supply is disconnected from power, or the power supply is not sending out power correctly.   |
|        | Green | On steadily | The power supply is sending out power correctly.   |
| Fault  | Amber | On steadily | An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it. |

**Table 26: DC Power Supply LED on a QFX5200-48Y**

| Color | State | Description  |
|-------|-------|--|
| Unlit | Off   | The power supply is disconnected from power, or power is not coming into the power supply. |

**Table 26: DC Power Supply LED on a QFX5200-48Y (Continued)**

| Color                 | State       | Description   |
|-----------------------|-------------|---|
| Green                 | Blinking    | The PSU is in standby mode. Power is coming into the power supply at +5V.   |
|                       | On steadily | The power supply is sending out power correctly.  |
| Alternating red/green | Blinking    | Power supply warning. Check the logs for related messages.  |
| Red                   | On steadily | An error has been detected in the power supply. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it.  |
|                       | Blinking    | The internal fan in the power supply has failed. Replace the power supply as soon as possible. To maintain proper airflow through the chassis, leave the power supply installed in the chassis until you are ready to replace it. |

## RELATED DOCUMENTATION

[Maintaining QFX5200 Power System | 150](#)

# 3

CHAPTER

## Site Planning, Preparation, and Specifications

---

### IN THIS CHAPTER

- QFX5200 Site Preparation Checklist | **66**
- Planning a Virtual Chassis Deployment using QFX Devices | **68**
- QFX5200 Site Guidelines and Requirements | **74**
- QFX5200 Network Cable and Transceiver Planning | **84**
- QFX5200 Management Cable Specifications and Pinouts | **91**

---

# QFX5200 Site Preparation Checklist

The checklist in [Table 27 on page 66](#) summarizes the tasks you need to perform when preparing a site for a QFX5200 installation.

**Table 27: Site Preparation Checklist**

| Item or Task   | For More Information   | Performed By | Date |
|--|--|--------------|------|
| <b>Architecture</b>  |  |              |      |
| Determine whether the QFX5200-32C will operate as a standalone switch or as a member in a Virtual Chassis.<br><br>QFX5200-48Y and QFX5200-32C-L are supported only as a standalone switches. | <a href="#">"Planning a Virtual Chassis Deployment using QFX Devices" on page 68</a> |              |      |
| <b>Environment</b>   |  |              |      |
| Verify that environmental factors such as temperature and humidity do not exceed switch tolerances.  | <a href="#">"QFX5200 Environmental Requirements and Specifications" on page 75</a>   |              |      |
| <b>Power</b>   |  |              |      |
| Measure the distance between external power sources and switch installation site.  |  |              |      |
| Calculate the power consumption and requirements.  | <a href="#">"QFX5200 Power System" on page 50</a>                                    |              |      |
| <b>Rack or Cabinet</b>   |  |              |      |

**Table 27: Site Preparation Checklist (Continued)**

| Item or Task   | For More Information  | Performed By | Date |
|--|---|--------------|------|
| Verify that your rack or cabinet meets the minimum requirements for the installation of the switch.  | <a href="#">"QFX5200 Rack Requirements" on page 80</a><br><a href="#">"QFX5200 Cabinet Requirements" on page 82</a><br><a href="#">"Determining QFX5200 Optical Interface Support" on page 84</a> |              |      |
| Plan rack or cabinet location, including required space clearances.  | <a href="#">"QFX5200 Clearance Requirements for Airflow and Hardware Maintenance" on page 77</a>  |              |      |
| Secure the rack or cabinet to the floor and building structure.  |   |              |      |
| <b>Cables</b>  |   |              |      |
| Acquire cables and connectors: <ul style="list-style-type: none"> <li data-bbox="230 1163 670 1284">• Determine the number of cables needed based on your planned configuration.</li> <li data-bbox="230 1311 670 1495">• Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected.</li> </ul> | <a href="#">"Determining QFX5200 Optical Interface Support" on page 84</a>  |              |      |
| Plan the cable routing and management.   |   |              |      |

## RELATED DOCUMENTATION

[General Safety Guidelines and Warnings | 188](#)

[QFX5200 Installation Overview | 104](#)

# Planning a Virtual Chassis Deployment using QFX Devices

## IN THIS SECTION

- [Valid Configurations for a QFX Virtual Chassis | 69](#)
- [Valid Configurations for a QFX5110 Virtual Chassis | 69](#)
- [Valid Configurations for a QFX5200 Virtual Chassis | 70](#)
- [VC Deployment Checklist | 70](#)

You can deploy QFX Series switches as members in three types of Virtual Chassis:

- QFX Virtual Chassis (QFX3500, QFX3600, QFX5100, and EX4300)
- QFX5110 Virtual Chassis (QFX5110 and QFX5100)
- QFX5200 Virtual Chassis (QFX5200-32C only)

QFX Virtual Chassis and QFX5110 Virtual Chassis allow you to interconnect a mixture of up to ten switches into one logical device and manage the device as a single chassis. QFX5200 Virtual Chassis is limited to three QFX5200-32C members.

A Virtual Chassis configuration has two Routing Engines—the primary switch and the backup switch. All other participating switches operate as line cards. You create a Virtual Chassis by cabling the switches in a ring topology and configuring SFP+, QSFP+, or QSFP28 interfaces into Virtual Chassis ports (VCPs). VCPs are responsible for passing all data and control traffic between member switches in the Virtual Chassis. All non-channelized QSFP28 or QSFP+ uplink interfaces on the switches can be configured into VCPs. All fixed SFP+ interfaces can also be configured into VCPs.

All members of the Virtual Chassis are required to run the same Junos OS Release. You can check the version and release by issuing the `show chassis version` CLI command.

This topic covers:

## Valid Configurations for a QFX Virtual Chassis

Valid configurations are:

- All QFX5100 members (homogenous)–Supported QFX5100 models are:
  - QFX5100-24Q
  - QFX5100-48S
  - QFX5100-48T
  - QFX5100-96S
- All QFX3600 members (homogenous)
- All QFX3500 members (homogenous)
- A mixture of QFX3600 and QFX3500 members (heterogeneous)
- A mixture of QFX5100, QFX3600, and QFX3500 members (heterogeneous)–use the QFX5100 switches as primary RE and backup RE whenever possible.
- A mixture of QFX5100, QFX3600, QFX3500, and EX4300 members (heterogeneous). EX4300 switches as the primary RE or backup RE is not supported; use QFX5100 switches in these roles whenever possible.

An all EX4300 member is simply considered an EX4300 Virtual Chassis. See [Understanding EX Series Virtual Chassis](#).

If the QSFP+ interfaces are not available for VCP, 10-Gigbit interfaces can be used.

## Valid Configurations for a QFX5110 Virtual Chassis

Valid configurations are:

- All QFX5110 members (homogenous)–Supported QFX5110 models are:
  - QFX5110-32Q
  - QFX5110-48S
- A mixture of QFX5110 and QFX5100 members (homogenous)–use the QFX5110 models as the primary RE and backup RE. Use the following QFX5100 switches in the line card role:
  - QFX5100-24Q

- QFX5100-48S
- QFX5100-48T
- QFX5100-96S

## Valid Configurations for a QFX5200 Virtual Chassis

You can create an all QFX5200-32C Virtual Chassis with up to three members. Use the QFX5200-32C in all three member roles: primary RE, backup RE, and line card. Configure the Virtual Chassis Ports (VCPs) as 40-Gigabit Ethernet only. QFX5200-48Y is not supported in a QFX5200 Virtual Chassis.

## VC Deployment Checklist

Use [Table 28 on page 70](#) to plan your deployment:

**Table 28: Deployment Checklist**

| Item or Task   | For More Information   | Performed By | Date |
|--|--|--------------|------|
| <b>Components</b>  |  |              |      |
| Determine the number of devices in the Virtual Chassis and the role of each device (primary RE, backup RE, or linecard).<br><br><b>NOTE:</b> A Virtual Chassis is not constrained to a single building; the limits for the optic cable are the only consideration. | <a href="#">Understanding QFX Series Virtual Chassis</a><br><br><a href="#">Understanding Virtual Chassis Components</a> |              |      |
| <b>Environment</b>   |  |              |      |

**Table 28: Deployment Checklist (*Continued*)**

| Item or Task  | For More Information   | Performed By | Date |
|---|--|--------------|------|
| Evaluate the provisioning options and determine the configuration method that applies to your deployment. | <i><a href="#">Configuring an EX4650 or a QFX Series Virtual Chassis</a></i>   |              |      |
| <b>Power</b>  |  |              |      |
| Measure the distance between external power sources and switch installation site.                         |  |              |      |
| Calculate the power consumption and requirements.   | <i><a href="#">QFX5110 AC Power Specifications</a></i><br><i><a href="#">AC Power Specifications for a QFX5100 Device</a></i><br><i><a href="#">AC Power Specifications for a QFX3600 or QFX3600-I Device</a></i><br><i><a href="#">AC Power Specifications for a QFX3500 Device</a></i><br><i><a href="#">AC Power Specifications for an EX4600 Switch</a></i><br><i><a href="#">AC Power Supply Specifications for EX4300 Switches</a></i> |              |      |
| <b>Rack or Cabinet</b>  |  |              |      |

**Table 28: Deployment Checklist (*Continued*)**

| Item or Task  | For More Information   | Performed By | Date |
|---|--|--------------|------|
| Verify that your rack or cabinet meets the minimum requirements for the installation of the switch. | <p><i><a href="#">QFX5110 Rack Requirements</a></i></p> <p><i><a href="#">Rack Requirements for a QFX5100 Device</a></i></p> <p><i><a href="#">Cabinet Requirements for a QFX5100 Device</a></i></p> <p><i><a href="#">Rack Requirements for a QFX3600 or QFX3600-I Device</a></i></p> <p><i><a href="#">Cabinet Requirements for a QFX3600 or QFX3600-I Device</a></i></p> <p><i><a href="#">Rack Requirements for a QFX3500 Device</a></i></p> <p><i><a href="#">Cabinet Requirements for a QFX3500 Device</a></i></p> <p><i><a href="#">Rack Requirements for an EX4600 Switch</a></i></p> <p><i><a href="#">Cabinet Requirements for an EX4600 Switch</a></i></p> <p><i><a href="#">Rack Requirements for a EX4300 Device</a></i></p> <p><i><a href="#">Cabinet Requirements for a EX4300 Device</a></i></p> |              |      |

**Table 28: Deployment Checklist (Continued)**

| Item or Task   | For More Information   | Performed By | Date |
|--|--|--------------|------|
| Plan rack or cabinet location, including required space clearances.  | <p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX5100 Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX3600 or QFX3600-I Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for a QFX3500 Device</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for an EX4600 Switch</i></p> <p><i>Clearance Requirements for Airflow and Hardware Maintenance for EX4300 Switches</i></p> |              |      |
| Secure the rack or cabinet to the floor and building structure.  |  |              |      |
| <b>Cables</b>  |  |              |      |
| Acquire cables and connectors: <ul style="list-style-type: none"> <li>Determine the number of cables needed based on your planned configuration.</li> <li>Review the maximum distance allowed for each cable. Choose the length of cable based on the distance between the hardware components being connected.</li> </ul> | <ul style="list-style-type: none"> <li><i>Cable Specifications for QSFP+ and QSFP28 Transceivers</i></li> <li><i>Cable Specifications for Console and Management Connections for the QFX Series</i></li> <li><i>Understanding EX Series Switches Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion</i></li> <li><i>Understanding QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion</i></li> </ul>   |              |      |

**Table 28: Deployment Checklist (*Continued*)**

| Item or Task                           | For More Information | Performed By | Date |
|--|----------------------|--------------|------|
| Plan the cable routing and management. |                      |              |      |

## RELATED DOCUMENTATION

*[QFX5110 Site Preparation Checklist](#)*

*[Site Preparation Checklist for a QFX5100 Device](#)*

*[Site Preparation Checklist for a QFX3600 or QFX3600-I Device](#)*

*[Site Preparation Checklist for a QFX3500 Device](#)*

*[Site Preparation Checklist for EX4300 Switches](#)*

# QFX5200 Site Guidelines and Requirements

## IN THIS SECTION

- [QFX5200 Environmental Requirements and Specifications | 75](#)
- [General Site Guidelines | 76](#)
- [QFX5200 Grounding Cable and Lug Specifications | 77](#)
- [QFX5200 Clearance Requirements for Airflow and Hardware Maintenance | 77](#)
- [QFX5200 Chassis Physical Specifications | 79](#)
- [Site Electrical Wiring Guidelines | 79](#)
- [QFX5200 Rack Requirements | 80](#)
- [QFX5200 Cabinet Requirements | 82](#)

## QFX5200 Environmental Requirements and Specifications

The switch must be installed in a rack or cabinet. It must be housed in a dry, clean, well-ventilated, and temperature-controlled environment.

Follow these environmental guidelines:

- The site must be as dust-free as possible, because dust can clog air intake vents and filters, reducing the efficiency of the switch cooling system.
- Maintain ambient airflow for normal switch operation. If the airflow is blocked or restricted, or if the intake air is too warm, the switch might overheat, leading to the switch temperature monitor shutting down the device to protect the hardware components.

[Table 29 on page 75](#) provides the required environmental conditions for normal switch operation.

**Table 29: QFX5200 Switch Environmental Tolerances**

| Description                  | Model                         | Tolerance  |
|------------------------------|-------------------------------|--|
| Altitude                     | QFX5200-32C and QFX5200-32C-L | No performance degradation to 6,562 feet (2000 meters)   |
|                              | QFX5200-48Y                   | No performance degradation to 13,000 feet (3,962 meters)   |
| Relative humidity, operating | QFX5200-32C and QFX5200-32C-L | <p>Normal operation ensured in relative humidity range of 5% through 90%, noncondensing</p> <ul style="list-style-type: none"> <li>• Short-term operation ensured in relative humidity range of 5% through 93%, noncondensing</li> </ul> <p><b>NOTE:</b> As defined in NEBS GR-63-CORE, Issue 3, short-term events can be up to 96 hours in duration but not more than 15 days per year.</p> |
|                              | QFX5200-48Y                   | Normal operation ensured in relative humidity range of 5% through 93%, noncondensing for airflow out (AFO) models and 10% through 93%, noncondensing for airflow in (AFI) models   |

**Table 29: QFX5200 Switch Environmental Tolerances (*Continued*)**

| Description | Model                         | Tolerance  |
|-------------|-------------------------------|--|
| Temperature | QFX5200-32C and QFX5200-32C-L | <ul style="list-style-type: none"> <li>Normal operation ensured in temperature range of 32° F through 104° F (0° C through 40° C)</li> <li>Nonoperating storage temperature in shipping container: -40° F through 158° F (-40° C through 70° C)</li> </ul>   |
|             | QFX5200-48Y                   | <ul style="list-style-type: none"> <li>Normal operation ensured in temperature range of 32° F through 113° F (0° C through 45° C) for AFO models, 32° F through 104° F (0° C through 40° C) for AFI models</li> <li>Nonoperating storage temperature in shipping container: -40° F through 158° F (-40° C through 70° C) for both AFO and AFI</li> </ul> |
| Seismic     | QFX5200 all models            | Designed to comply with Zone 4 earthquake requirements per NEBS GR-63-CORE, Issue 3.   |



**NOTE:** Install QFX Series devices only in restricted areas, such as dedicated equipment rooms and equipment closets, in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code, ANSI/NFPA 70.

## General Site Guidelines

Efficient device operation requires proper site planning. For the device to operate properly, you must ensure maintenance and proper layout of the equipment, rack or cabinet, and wiring closet.

To plan and create an acceptable operating environment for your device and prevent environmentally caused equipment failures:

- Keep the area around the chassis free from dust and conductive material, such as metal flakes.
- Follow the prescribed airflow guidelines to ensure that the cooling system functions properly. Ensure that the exhaust from other equipment does not blow into the intake vents of the device.

- Follow the prescribed electrostatic discharge (ESD) prevention procedures to prevent damaging the equipment. Static discharge can cause components to fail completely or intermittently over time.
- Install the device in a secure area, so that only authorized personnel can access the device.

## QFX5200 Grounding Cable and Lug Specifications

To ground a QFX5200, connect a grounding cable to earth ground and then attach it to the chassis protective earthing terminals. See ["Connect the QFX5200 to Earth Ground" on page 129](#).



**WARNING:** To comply with GR-1089 requirements, all intra-building copper cabling used for SFP+ and QSFP+ ports must be shielded and grounded at both ends.



**CAUTION:** Before switch installation begins, a licensed electrician must attach a cable lug to the grounding cables that you supply. A cable with an incorrectly attached lug can damage the switch.

Before connecting the switch to earth ground, review the following information:

- The grounding lug required for a QFX5200-32C or a QFX5200-32C-L is a Panduit LCD10-10A-L or equivalent (not provided). The grounding lug should accommodate 14–10 AWG (2–5.3 mm<sup>2</sup>) stranded wire. The grounding lug required for a QFX5200-48Y is tin-plated brass 4.3 mm ring terminal that supports 18–14 AWG (0.8–2 mm<sup>2</sup>) and an M4 screw.
- The grounding cable that you provide for a QFX5200 must be 14 AWG (2 mm<sup>2</sup>), minimum 90° C wire, or as permitted by the local code. If you are using the alternate method of grounding the chassis on a QFX5200-32C-DC system, the recommended grounding cable is 12 AWG (2.5 mm<sup>2</sup>) standard wire, 90° C wire or heavier.
- For QFX5200-32C or a QFX5200-32C-L, ensure you have two SAE 10-32 washers and screws to attach the cable and bracket (not provided).

## QFX5200 Clearance Requirements for Airflow and Hardware Maintenance

When planning the site for installing a QFX5200, you must allow sufficient clearance around the installed chassis (see [Figure 45 on page 78](#) and [Figure 46 on page 78](#)).

Figure 45: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-32C and QFX5200-32C-L


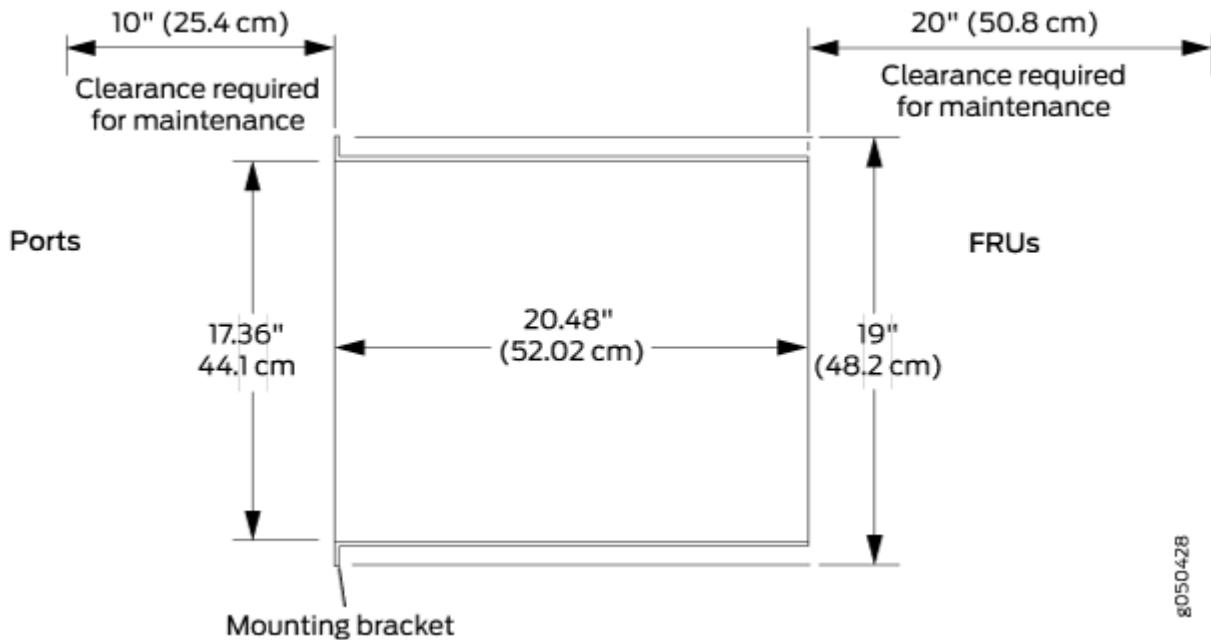


Figure 46: Clearance Requirements for Airflow and Hardware Maintenance for a QFX5200-48Y

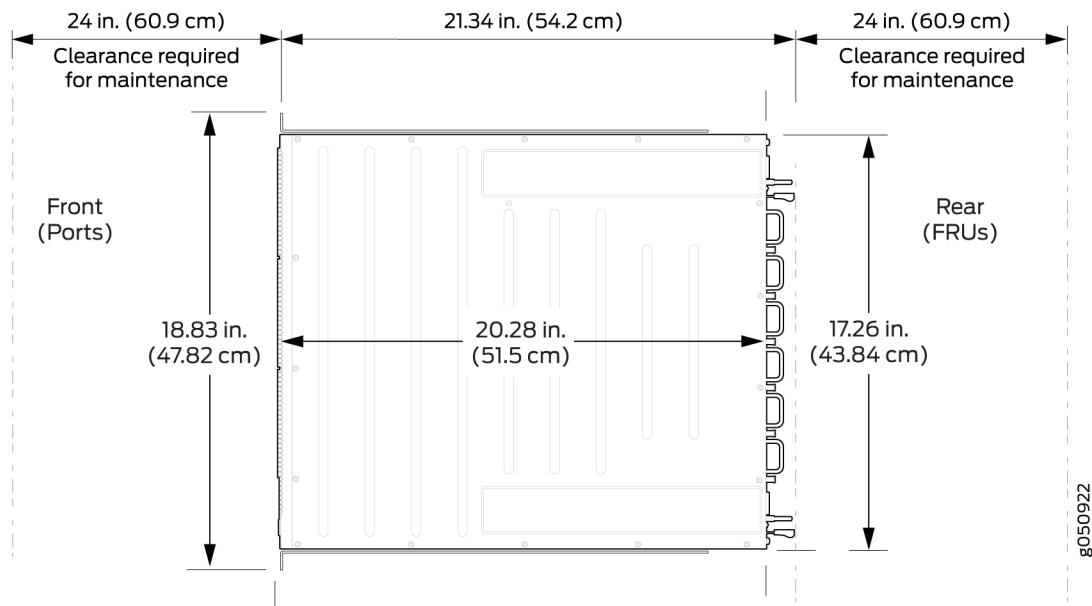

- For the cooling system to function properly, the airflow around the chassis must be unrestricted. See ["QFX5200 Cooling System Description" on page 41](#) for more information about the airflow through the chassis.
- If you are mounting a QFX5200 in a rack or cabinet with other equipment, ensure that the exhaust from other equipment does not blow into the intake vents of the chassis.
- Leave at least 24 in. (61 cm) both in front of and behind the QFX5200. For service personnel to remove and install hardware components, you must leave adequate space at the front and back of the switch. NEBS GR-63 recommends that you allow at least 30 in. (76.2 cm) in front of the rack or cabinet and 24 in. (61 cm) behind the rack or cabinet.

## QFX5200 Chassis Physical Specifications

The QFX5200 is a rigid sheet-metal structure that houses the hardware components. [Table 30 on page 79](#) summarizes the physical specifications of the QFX5200.

**Table 30: Physical Specifications for the QFX5200**

| Product SKU                   | Height             | Width                | Depth                | Weight               |
|-------------------------------|--------------------|----------------------|----------------------|----------------------|
| QFX5200-32C and QFX5200-32C-L | 1.72 in. (4.3 cm)  | 17.36 in. (44.1 cm)  | 20.48 in. (52 cm)    | 23.5 lbs (10.66 kg)  |
| QFX5200-48Y                   | 1.71 in. (4.34 cm) | 17.25 in. (43.81 cm) | 20.27 in. (51.48 cm) | 30.00 lbs (13.60 kg) |

## Site Electrical Wiring Guidelines

[Table 31 on page 80](#) describes the factors you must consider while planning the electrical wiring at your site.



**WARNING:** You must provide a properly grounded and shielded environment and use electrical surge-suppression devices.

**Avertissement** Vous devez établir un environnement protégé et convenablement mis à la terre et utiliser des dispositifs de parasurtension.

**Table 31: Site Electrical Wiring Guidelines**

| Site Wiring Factor            | Guidelines  |
|-------------------------------|---|
| Signaling limitations         | <p>If your site experiences any of the following problems, consult experts in electrical surge suppression and shielding:</p> <ul style="list-style-type: none"> <li>• Radio frequency interference (RFI) because of improperly installed wires.</li> <li>• Damage from lightning strikes occurring when wires exceed recommended distances or pass between buildings.</li> <li>• Damage to unshielded conductors and electronic devices as a result of electromagnetic pulses (EMPs) caused by lightning.</li> </ul> |
| Radio frequency interference  | <p>To reduce or eliminate RFI from your site wiring, do the following:</p> <ul style="list-style-type: none"> <li>• Use a twisted-pair cable with a good distribution of grounding conductors.</li> <li>• If you need to exceed the recommended distances, use a high-quality twisted-pair cable with one ground conductor for each data signal, when applicable.</li> </ul>  |
| Electromagnetic compatibility | <p>If your site is susceptible to problems with electromagnetic compatibility (EMC), particularly from lightning or radio transmitters, seek expert advice.</p> <p>Strong sources of electromagnetic interference (EMI) can cause:</p> <ul style="list-style-type: none"> <li>• Destruction of the signal drivers and receivers in the device.</li> <li>• Electrical hazards as a result of power surges conducted over the lines into the equipment.</li> </ul>  |

## QFX5200 Rack Requirements

QFX5200 switches are designed to be installed on four-post racks.

Rack requirements consist of:

- Rack type
- Mounting bracket hole spacing
- Rack size and strength

Table 32 on page 81 provides the rack requirements and specifications for the QFX5200.

**Table 32: Rack Requirements for the QFX5200**

| Rack Requirement              | Guidelines   |
|-------------------------------|--|
| Rack type                     | <p>Use a four-post rack that provides bracket holes or hole patterns spaced at 1 U (1.75 in. or 4.45 cm) increments and that meets the size and strength requirements to support the weight.</p> <p>A U is the standard rack unit defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association.</p>   |
| Mounting bracket hole spacing | <p>The holes in the mounting brackets are spaced at 1 U (1.75 in. or 4.45 cm), so that the switch can be mounted in any rack that provides holes spaced at that distance.</p>  |
| Rack size and strength        | <ul style="list-style-type: none"> <li>Ensure that the rack complies with the standards for a 19-in. or 23-in. rack as defined in <i>Cabinets, Racks, Panels, and Associated Equipment</i> (document number EIA-310-D) published by the Electronics Industry Association.</li> <li>A 600-mm rack as defined in the four-part <i>Equipment Engineering (EE); European telecommunications standard for equipment practice</i> (document numbers ETS 300 119-1 through 119-4) published by the European Telecommunications Standards Institute (<a href="http://www.etsi.org">http://www.etsi.org</a>).</li> </ul> <p>The horizontal spacing between the rails in a rack that complies with this standard is usually wider than the device's mounting brackets, which measure 19 in. (48.26 cm) from outer edge to outer edge. Use approved wing devices to narrow the opening between the rails as required.</p> <ul style="list-style-type: none"> <li>Ensure that the rack rails are spaced widely enough to accommodate the switch chassis' external dimensions. The outer edges of the front-mounting brackets extend the width to 19 in. (48.26 cm).</li> <li>For four-post installations, the front and rear rack rails must be spaced between 23.25 in. (59.1 cm) to 30.6 in. (77.7 cm) front-to-back.</li> <li>The rack must be strong enough to support the weight of the switch.</li> <li>Ensure that the spacing of rails and adjacent racks allows for proper clearance around the switch and rack.</li> </ul> |

**Table 32: Rack Requirements for the QFX5200 (Continued)**

| Rack Requirement                      | Guidelines  |
|---------------------------------------|---|
| Rack connection to building structure | <ul style="list-style-type: none"> <li>Secure the rack to the building structure.</li> <li>If earthquakes are a possibility in your geographical area, secure the rack to the floor.</li> <li>Secure the rack to the ceiling brackets as well as wall or floor brackets for maximum stability.</li> </ul> |

## QFX5200 Cabinet Requirements

You can mount the QFX5200 in an enclosure or cabinet that contains a four-post 19-in. open rack as defined in *Cabinets, Racks, Panels, and Associated Equipment* (document number EIA-310-D) published by the Electronics Industry Association.

Cabinet requirements consist of:

- Cabinet size and clearance
- Cabinet airflow requirements

[Table 33 on page 82](#) provides the cabinet requirements and specifications for the QFX5200.

**Table 33: Cabinet Requirements for the QFX5200**

| Cabinet Requirement        | Guidelines   |
|----------------------------|--|
| Cabinet size and clearance | The minimum cabinet size for accommodating a QFX5200 device is 36 in. (91.4 cm) deep. Large cabinets improve airflow and reduce the chance of overheating. |

**Table 33: Cabinet Requirements for the QFX5200 (*Continued*)**

| Cabinet Requirement          | Guidelines   |
|------------------------------|--|
| Cabinet airflow requirements | <p>When you mount the switch in a cabinet, ensure that ventilation through the cabinet is sufficient to prevent overheating.</p> <ul style="list-style-type: none"> <li>• Ensure that the cool air supply you provide through the cabinet adequately dissipates the thermal output of the switch (or switches).</li> <li>• Ensure that the cabinet allows the chassis hot exhaust air to exit the cabinet without recirculating into the switch. An open cabinet (without a top or doors) that employs hot air exhaust extraction from the top allows the best airflow through the chassis. If the cabinet contains a top or doors, perforations in these elements assist with removing the hot air exhaust.</li> <li>• The QFX5200 fans exhaust hot air either through the vents on the port panel or through the fans and power supplies. Install the switch in the cabinet in a way that maximizes the open space on the FRU side of the chassis. This maximizes the clearance for critical airflow.</li> <li>• Route and dress all cables to minimize the blockage of airflow to and from the chassis.</li> <li>• Ensure that the spacing of rails and adjacent cabinets allows for the proper clearance around the switch and cabinet.</li> </ul> |

## RELATED DOCUMENTATION

[QFX5200 Installation Overview | 104](#)

[Connect the QFX5200 to Earth Ground | 129](#)

[QFX5200 Cooling System Description | 41](#)

# QFX5200 Network Cable and Transceiver Planning

## IN THIS SECTION

- Determining QFX5200 Optical Interface Support | [84](#)
- Cable Specifications for QSFP+, QSFP28, and QSFP-DD Transceivers | [85](#)
- Understand QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion | [87](#)
- Calculate Power Budget and Power Margin for Fiber-Optic Cables | [89](#)

## Determining QFX5200 Optical Interface Support

You can find information about the optical transceivers supported on your Juniper device by using the Hardware Compatibility Tool. In addition to transceiver and connection type, the optical and cable characteristics—where applicable—are documented for each transceiver. The Hardware Compatibility Tool enables you to search by product, displaying all the transceivers supported on that device, or category, by interface speed or type. The list of supported transceivers for the QFX5200-32C and QFX5200-32C-L is located at <https://apps.juniper.net/hct/product/#prd=QFX5200-32C> and <https://apps.juniper.net/hct/product/#prd=QFX5200-48Y>



**CAUTION:** The Juniper Networks Technical Assistance Center (JTAC) provides complete support for Juniper-supplied optical modules and cables. However, JTAC does not provide support for third-party optical modules and cables that are not qualified or supplied by Juniper Networks. If you face a problem running a Juniper device that uses third-party optical modules or cables, JTAC may help you diagnose host-related issues if the observed issue is not, in the opinion of JTAC, related to the use of the third-party optical modules or cables. Your JTAC engineer will likely request that you check the third-party optical module or cable and, if required, replace it with an equivalent Juniper-qualified component.

Use of third-party optical modules with high-power consumption (for example, coherent ZR or ZR+) can potentially cause thermal damage to or reduce the lifespan of the host equipment. Any damage to the host equipment due to the use of third-party optical modules or cables is the users' responsibility. Juniper Networks will accept no liability for any damage caused due to such use.



**NOTE:** For interoperability with other QFX Series switches, ensure auto-negotiation on the QFX5200 is disabled.

## Cable Specifications for QSFP+, QSFP28, and QSFP-DD Transceivers

The 40-GbE QSFP+, 100-GbE QSFP28, 400GbE (QDD-400G-DR4 and QDD-400G-SR4P2), and 800GbE transceivers that are used in QFX Series switches use 12-ribbon multimode fiber crossover cables with socket MPO-12 (UPC/APC) connectors. The fiber can be either OM3 or OM4. These cables are not sold by Juniper Networks.



**CAUTION:** To maintain agency approvals, use only a properly constructed, shielded cable.



**TIP:** Ensure that you order cables with the correct polarity. Vendors refer to these crossover cables as *key up to key up*, *latch up to latch up*, *Type B*, or *Method B*. If you are using patch panels between two QSFP+ or QSFP28 transceivers, ensure that the proper polarity is maintained through the cable plant.

[Table 34 on page 85](#) describes the signals on each fiber. [Table 35 on page 86](#) shows the pin-to-pin connections for proper polarity.

**Table 34: QSFP+ and QSFP28 Optical Module Receptacle Pinouts**

| Fiber | Signal         |
|-------|----------------|
| 1     | Tx0 (Transmit) |
| 2     | Tx1 (Transmit) |
| 3     | Tx2 (Transmit) |
| 4     | Tx3 (Transmit) |
| 5     | Unused         |

**Table 34: QSFP+ and QSFP28 Optical Module Receptacle Pinouts (*Continued*)**

| Fiber | Signal        |
|-------|---------------|
| 6     | Unused        |
| 7     | Unused        |
| 8     | Unused        |
| 9     | Rx3 (Receive) |
| 10    | Rx2 (Receive) |
| 11    | Rx1 (Receive) |
| 12    | Rx0 (Receive) |

**Table 35: QSFP+ MPO Fiber-Optic Crossover Cable Pinouts**

| Pin | Pin |
|-----|-----|
| 1   | 12  |
| 2   | 11  |
| 3   | 10  |
| 4   | 9   |
| 5   | 8   |
| 6   | 7   |
| 7   | 6   |

**Table 35: QSFP+ MPO Fiber-Optic Crossover Cable Pinouts (Continued)**

| Pin | Pin |
|-----|-----|
| 8   | 5   |
| 9   | 4   |
| 10  | 3   |
| 11  | 2   |
| 12  | 1   |

## Understand QFX Series Fiber-Optic Cable Signal Loss, Attenuation, and Dispersion

### IN THIS SECTION

- [Signal Loss in Multimode and Single-Mode Fiber-Optic Cables | 87](#)
- [Attenuation and Dispersion in Fiber-Optic Cable | 88](#)

To determine the power budget and power margin needed for fiber-optic connections, you need to understand how signal loss, attenuation, and dispersion affect transmission. The QFX Series uses various types of network cables, including multimode and single-mode fiber-optic cables.

### Signal Loss in Multimode and Single-Mode Fiber-Optic Cables

Multimode fiber is large enough in diameter to allow rays of light to reflect internally (bounce off the walls of the fiber). Interfaces with multimode optics typically use LEDs as light sources. However, LEDs are not coherent light sources. They spray varying wavelengths of light into the multimode fiber, which reflect the light at different angles. Light rays travel in jagged lines through a multimode fiber, causing signal dispersion. When light traveling in the fiber core radiates into the fiber cladding (layers of lower

refractive index material in close contact with a core material of higher refractive index), higher-order mode loss occurs. Together, these factors reduce the transmission distance of multimode fiber compared to that of single-mode fiber.

Single-mode fiber is so small in diameter that rays of light reflect internally through one layer only. Interfaces with single-mode optics use lasers as light sources. Lasers generate a single wavelength of light, which travels in a straight line through the single-mode fiber. Compared to multimode fiber, single-mode fiber has a higher bandwidth and can carry signals for longer distances. It is consequently more expensive.

For information about the maximum transmission distance and supported wavelength range for the types of single-mode and multimode fiber-optic cables that are connected to the QFX Series, see [the Hardware Compatibility Tool](#). Exceeding the maximum transmission distances can result in significant signal loss, which causes unreliable transmission.

## Attenuation and Dispersion in Fiber-Optic Cable

An optical data link functions correctly provided that modulated light reaching the receiver has enough power to be demodulated correctly. *Attenuation* is the reduction in strength of the light signal during transmission. Passive media components such as cables, cable splices, and connectors cause attenuation. Although attenuation is significantly lower for optical fiber than for other media, it still occurs in both multimode and single-mode transmission. An efficient optical data link must transmit enough light to overcome attenuation.

*Dispersion* is the spreading of the signal over time. The following two types of dispersion can affect signal transmission through an optical data link:

- Chromatic dispersion, which is the spreading of the signal over time caused by the different speeds of light rays.
- Modal dispersion, which is the spreading of the signal over time caused by the different propagation modes in the fiber.

For multimode transmission, modal dispersion, rather than chromatic dispersion or attenuation, usually limits the maximum bit rate and link length. For single-mode transmission, modal dispersion is not a factor. However, at higher bit rates and over longer distances, chromatic dispersion limits the maximum link length.

An efficient optical data link must have enough light to exceed the minimum power that the receiver requires to operate within its specifications. In addition, the total dispersion must be within the limits specified for the type of link in the Telcordia Technologies document GR-253-CORE (Section 4.3) and International Telecommunications Union (ITU) document G.957.

When chromatic dispersion is at the maximum allowed, its effect can be considered as a power penalty in the power budget. The optical power budget must allow for the sum of component attenuation, power penalties (including those from dispersion), and a safety margin for unexpected losses.

## Calculate Power Budget and Power Margin for Fiber-Optic Cables

### IN THIS SECTION

- [Calculate Power Budget for Fiber-Optic Cables | 89](#)
- [How to Calculate Power Margin for Fiber-Optic Cables | 89](#)

Use the information in this topic and the specifications for your optical interface to calculate the power budget and power margin for fiber-optic cables.



**TIP:** You can use the [Hardware Compatibility Tool](#) to find information about the pluggable transceivers supported on your Juniper Networks device.

To calculate the power budget and power margin, perform the following tasks:

### Calculate Power Budget for Fiber-Optic Cables

To ensure that fiber-optic connections have sufficient power for correct operation, you need to calculate the link's power budget ( $P_B$ ), which is the maximum amount of power it can transmit. When you calculate the power budget, you use a worst-case analysis to provide a margin of error, even though all the parts of an actual system do not operate at the worst-case levels. To calculate the worst-case estimate of  $P_B$ , you assume minimum transmitter power ( $P_T$ ) and minimum receiver sensitivity ( $P_R$ ):

$$P_B = P_T - P_R$$

The following hypothetical power budget equation uses values measured in decibels (dB) and decibels referred to one milliwatt (dBm):

$$P_B = P_T - P_R$$

$$P_B = -15 \text{ dBm} - (-28 \text{ dBm})$$

$$P_B = 13 \text{ dB}$$

### How to Calculate Power Margin for Fiber-Optic Cables

After calculating a link's  $P_B$ , you can calculate the power margin ( $P_M$ ), which represents the amount of power available after subtracting attenuation or link loss (LL) from the  $P_B$ . A worst-case estimate of  $P_M$  assumes maximum LL:

$$P_M = P_B - LL$$

$P_M$  greater than zero indicates that the power budget is sufficient to operate the receiver.

Factors that can cause link loss include higher-order mode losses, modal and chromatic dispersion, connectors, splices, and fiber attenuation. [Table 36 on page 90](#) lists an estimated amount of loss for the factors used in the following sample calculations. For information about the actual amount of signal loss caused by equipment and other factors, refer to vendor documentation.

**Table 36: Estimated Values for Factors Causing Link Loss**

| Link-Loss Factor               | Estimated Link-Loss Value  |
|--------------------------------|--|
| Higher-order mode losses       | Single mode—None   |
|                                | Multimode—0.5 dB   |
| Modal and chromatic dispersion | Single mode—None   |
|                                | Multimode—None, if product of bandwidth and distance is less than 500 MHz-km |
| Faulty connector               | 0.5 dB   |
| Splice                         | 0.5 dB   |
| Fiber attenuation              | Single mode—0.5 dB/km  |
|                                | Multimode—1 dB/km  |

The following sample calculation for a 2-km-long multimode link with a  $P_B$  of 13 dB uses the estimated values from [Table 36 on page 90](#). This example calculates LL as the sum of fiber attenuation (2 km @ 1 dB/km, or 2 dB) and loss for five connectors (0.5 dB per connector, or 2.5 dB) and two splices (0.5 dB per splice, or 1 dB) as well as higher-order mode losses (0.5 dB). The  $P_M$  is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 2 \text{ km (1 dB/km)} - 5 (0.5 \text{ dB}) - 2 (0.5 \text{ dB}) - 0.5 \text{ dB}$$

$$P_M = 13 \text{ dB} - 2 \text{ dB} - 2.5 \text{ dB} - 1 \text{ dB} - 0.5 \text{ dB}$$

$$P_M = 7 \text{ dB}$$

The following sample calculation for an 8-km-long single-mode link with a  $P_B$  of 13 dB uses the estimated values from [Table 36 on page 90](#). This example calculates LL as the sum of fiber attenuation (8 km @ 0.5 dB/km, or 4 dB) and loss for seven connectors (0.5 dB per connector, or 3.5 dB). The  $P_M$  is calculated as follows:

$$P_M = P_B - LL$$

$$P_M = 13 \text{ dB} - 8 \text{ km (0.5 dB/km)} - 7(0.5 \text{ dB})$$

$$P_M = 13 \text{ dB} - 4 \text{ dB} - 3.5 \text{ dB}$$

$$P_M = 5.5 \text{ dB}$$

In both the examples, the calculated  $P_M$  is greater than zero, indicating that the link has sufficient power for transmission and does not exceed the maximum receiver input power.

## RELATED DOCUMENTATION

[Maintaining Transceivers and Fiber Optic Cables on QFX5200 | 154](#)

# QFX5200 Management Cable Specifications and Pinouts

## IN THIS SECTION

- [Cable Specifications for Console and Management Connections for the QFX Series | 92](#)
- [RJ-45 Management Port Connector Pinout Information | 93](#)
- [Console Port Connector Pinouts for the QFX Series | 93](#)
- [RJ-45 Port, SFP Port, SFP+ Port, QSFP+ Port, and QSFP28 Port Connector Pinout Information | 95](#)
- [USB Port Specifications for the QFX Series | 101](#)

## Cable Specifications for Console and Management Connections for the QFX Series

Table 37 on page 92 lists the specifications for the cables that connect the QFX Series switch to a management device.



**NOTE:** The QFX Series switches have small form-factor pluggable (SFP) management ports that support 1000BASE-SX transceivers. QFX switches come with a RJ-45 management port, and support 10-Gbps speed. See the [Hardware Compatibility Tool](#) for more information about the fiber-optic cables required for use with these transceivers.

**Table 37: Cable Specifications for Console and Management Connections for the QFX Series**

| Port on QFX Series Device | Cable Specification  | Maximum Length | Device Receptacle |
|---------------------------|--|----------------|-------------------|
| Console port              | RS-232 (EIA-232) serial cable                                    | 7 ft (2.13 m)  | RJ-45             |
| Management port           | Category 5 cable or equivalent suitable for 1000BASE-T operation | 328 ft (100 m) | RJ-45             |



**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

## RJ-45 Management Port Connector Pinout Information

[Table 38 on page 93](#) provides the pinout information for the RJ-45 connector for the management port on Juniper Networks devices.

**Table 38: RJ-45 Management Port Connector Pinout Information**

| Pin | Signal | Description                  |
|-----|--------|------------------------------|
| 1   | TRP1+  | Transmit/receive data pair 1 |
| 2   | TRP1-  | Transmit/receive data pair 1 |
| 3   | TRP2+  | Transmit/receive data pair 2 |
| 4   | TRP3+  | Transmit/receive data pair 3 |
| 5   | TRP3-  | Transmit/receive data pair 3 |
| 6   | TRP2-  | Transmit/receive data pair 2 |
| 7   | TRP4+  | Transmit/receive data pair 4 |
| 8   | TRP4-  | Transmit/receive data pair 4 |

## Console Port Connector Pinouts for the QFX Series

The console port (labeled **CON** or **CONSOLE**) is an RS-232 serial interface that uses an RJ-45 connector to connect to a console management device. The default baud rate for the console port is 9600 baud. You can also use a RJ45 to USB 2.0 Type-A cable and a RJ45 to USB 2.0 Type-C cable.

[Table 39 on page 94](#) provides the pinout information for the RJ-45 console connector.



**NOTE:** If your laptop or PC does not have a DB-9 plug connector pin and you want to connect your laptop or PC directly to a QFX Series device, use a combination of an RJ-45 to DB-9 adapter and a USB to DB-9 plug adapter. You must provide the USB to DB-9 plug adapter.



**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

**Table 39: Console Port Connector Pinouts for the QFX Series**

| Pin | Signal        | Description         |
|-----|---------------|---------------------|
| 3   | TxD Output    | Transmit data       |
| 4   | Signal Ground | Signal ground       |
| 5   | Signal Ground | Signal ground       |
| 6   | RxD Input     | Receive data        |
| 7   | DCD Input     | Data carrier detect |

## RJ-45 Port, SFP Port, SFP+ Port, QSFP+ Port, and QSFP28 Port Connector Pinout Information

The tables in this topic describe the connector pinout information for the RJ-45, QSFP+, QSFP28, SFP+, and SFP ports.

- [Table 40 on page 95](#)—10/100/1000BASE-T Ethernet network port connector pinout information
- [Table 41 on page 96](#)—SFP network port connector pinout information
- [Table 42 on page 97](#)—SFP+ network port connector pinout information
- [Table 43 on page 98](#)—QSFP+ and QSFP28 network module ports connector pinout information

**Table 40: 10/100/1000BASE-T Ethernet Network Port Connector Pinout Information**

| Pin | Signal | Description  |
|-----|--------|--|
| 1   | TRP1+  | Transmit/receive data pair 1<br>Negative Vport (in PoE models) |
| 2   | TRP1-  | Transmit/receive data pair 1<br>Negative Vport (in PoE models) |
| 3   | TRP2+  | Transmit/receive data pair 2<br>Positive Vport (in PoE models) |
| 4   | TRP3+  | Transmit/receive data pair 3                                   |
| 5   | TRP3-  | Transmit/receive data pair 3                                   |
| 6   | TRP2-  | Transmit/receive data pair 2<br>Positive Vport (in PoE models) |
| 7   | TRP4+  | Transmit/receive data pair 4                                   |
| 8   | TRP4-  | Transmit/receive data pair 4                                   |

**Table 41: SFP Network Port Connector Pinout Information**

| Pin | Signal     | Description                        |
|-----|------------|------------------------------------|
| 1   | VeeT       | Module transmitter ground          |
| 2   | TX_Fault   | Module transmitter fault           |
| 3   | TX_Disable | Transmitter disabled               |
| 4   | SDA        | 2-wire serial interface data line  |
| 5   | SCL-       | 2-wire serial interface clock      |
| 6   | MOD_ABS    | Module absent                      |
| 7   | RS         | Rate select                        |
| 8   | RX_LOS     | Receiver loss of signal indication |
| 9   | VeeR       | Module receiver ground             |
| 10  | VeeR       | Module receiver ground             |
| 11  | VeeR       | Module receiver ground             |
| 12  | RD-        | Receiver inverted data output      |
| 13  | RD+        | Receiver noninverted data output   |
| 14  | VeeR       | Module receiver ground             |
| 15  | VccR       | Module receiver 3.3 V supply       |

**Table 41: SFP Network Port Connector Pinout Information *(Continued)***

| Pin | Signal | Description                        |
|-----|--------|------------------------------------|
| 16  | VccT   | Module transmitter 3.3 V supply    |
| 17  | VeeT   | Module transmitter ground          |
| 18  | TD+    | Transmitter noninverted data input |
| 19  | TD-    | Transmitter inverted data input    |
| 20  | VeeT   | Module transmitter ground          |

**Table 42: SFP+ Network Port Connector Pinout Information**

| Pin | Signal     | Description   |
|-----|------------|---|
| 1   | VeeT       | Module transmitter ground                               |
| 2   | TX_Fault   | Module transmitter fault                                |
| 3   | TX_Disable | Transmitter disabled                                    |
| 4   | SDA        | 2-wire serial interface data line                       |
| 5   | SCL-       | 2-wire serial interface clock                           |
| 6   | MOD_ABS    | Module absent   |
| 7   | RS0        | Rate select 0, optionally controls SFP+ module receiver |
| 8   | RX_LOS     | Receiver loss of signal indication                      |
| 9   | RS1        | Rate select 1, optionally controls SFP+ transmitter     |

**Table 42: SFP+ Network Port Connector Pinout Information *(Continued)***

| Pin | Signal | Description                        |
|-----|--------|------------------------------------|
| 10  | VeeR   | Module receiver ground             |
| 11  | VeeR   | Module receiver ground             |
| 12  | RD-    | Receiver inverted data output      |
| 13  | RD+    | Receiver noninverted data output   |
| 14  | VeeR   | Module receiver ground             |
| 15  | VccR   | Module receiver 3.3-V supply       |
| 16  | VccT   | Module transmitter 3.3-V supply    |
| 17  | VeeT   | Module transmitter ground          |
| 18  | TD+    | Transmitter noninverted data input |
| 19  | TD-    | Transmitter inverted data input    |
| 20  | VeeT   | Module transmitter ground          |

**Table 43: QSFP+ and QSFP28 Network Port Connector Pinout Information**

| Pin | Signal |
|-----|--------|
| 1   | GND    |
| 2   | TX2n   |
| 3   | TX2p   |

**Table 43: QSFP+ and QSFP28 Network Port Connector Pinout Information (*Continued*)**

| Pin | Signal       |
|-----|--------------|
| 4   | GND          |
| 5   | TX4n         |
| 6   | TX4p         |
| 7   | GND          |
| 8   | ModSelL      |
| 9   | LPMode_Reset |
| 10  | VccRx        |
| 11  | SCL          |
| 12  | SDA          |
| 13  | GND          |
| 14  | RX3p         |
| 15  | RX3n         |
| 16  | GND          |
| 17  | RX1p         |
| 18  | RX1n         |

**Table 43: QSFP+ and QSFP28 Network Port Connector Pinout Information (*Continued*)**

| Pin | Signal   |
|-----|----------|
| 19  | GND      |
| 20  | GND      |
| 21  | RX2n     |
| 22  | RX2p     |
| 23  | GND      |
| 24  | RX4n     |
| 25  | RX4p     |
| 26  | GND      |
| 27  | ModPrsL  |
| 28  | IntL     |
| 29  | VccTx    |
| 30  | Vcc1     |
| 31  | Reserved |
| 32  | GND      |
| 33  | TX3p     |

**Table 43: QSFP+ and QSFP28 Network Port Connector Pinout Information (Continued)**

| Pin | Signal |
|-----|--------|
| 34  | TX3n   |
| 35  | GND    |
| 36  | TX1p   |
| 37  | TX1n   |
| 38  | GND    |

## USB Port Specifications for the QFX Series

The following Juniper Networks USB flash drives have been tested and are officially supported for the USB port in QFX Series devices:

- RE-USB-1G-S—1-gigabyte (GB) USB flash drive (except QFX3100 Director device)
- RE-USB-2G-S—2-GB USB flash drive (except QFX3100 Director device)
- RE-USB-4G-S—4-GB USB flash drive



**CAUTION:** Any USB memory product not listed as supported for the QFX Series has not been tested by Juniper Networks. The use of any unsupported USB memory product could expose your device to unpredictable behavior. Juniper Networks Technical Assistance Center (JTAC) can provide only limited support for issues related to unsupported hardware. We strongly recommend that you use only supported USB flash drives.



**CAUTION:** Remove the USB flash drive before upgrading Junos OS or rebooting a QFX Series device. Failure to do so could expose your device to unpredictable behavior.



**NOTE:** Executing the request system snapshot CLI command on a QFX3500 device requires an external USB flash drive with at least 4 GB of free space. We recommend using the RE-USB-4G-S flash drive.



**NOTE:** USB flash drives used with the QFX Series device must support USB 2.0 or later.

## RELATED DOCUMENTATION

[Connecting the QFX5200 to External Devices | 125](#)

# 4

CHAPTER

## Initial Installation and Configuration

---

### IN THIS CHAPTER

- [QFX5200 Installation Overview | 104](#)
- [Unpacking and Mounting the QFX5200 | 105](#)
- [Connecting the QFX5200 to External Devices | 125](#)
- [Connecting the QFX5200 to Power | 128](#)
- [Register Products—Mandatory to Validate SLAs | 142](#)
- [Performing the Initial Software Configuration for QFX5200 Switches | 142](#)

---

# QFX5200 Installation Overview

## IN THIS SECTION

- [Overview of Installing the QFX5200 | 104](#)
- [QFX5200 Installation Safety Guidelines | 105](#)

## Overview of Installing the QFX5200

You can mount a QFX5200:

- Flush with the front of a 19-in. four-post rack. Use the standard mounting brackets provided with the switch for this configuration.
- (QFX5200-32C and QFX5200-32C-L) Recessed 2 in. (5 cm) from the front of a 19-in. four-post rack. Use the extension bracket provided in the standard mounting kit for this configuration. Recessed mounting is primarily used in enclosed cabinets.

To install and connect a QFX5200:

1. Follow the instructions in ["Unpacking a QFX5200" on page 106](#).
2. Determine how the switch is to be mounted.  
Flush or recessed mounted in a rack or cabinet, see ["Unpacking and Mounting the QFX5200" on page 105](#).
3. Follow the instructions in:
  - a. ["Connect the QFX5200 to Earth Ground" on page 129](#)
  - b. ["Connecting AC Power to a QFX5200" on page 132](#) or ["Connecting DC Power to a QFX5200" on page 135](#), or ["Connecting DC Power to a QFX5200" on page 135](#)
  - c. ["Update Base Installation Data" on page 108](#)
4. Follow the instructions in ["Performing the Initial Software Configuration for QFX5200 Switches" on page 142](#).

## QFX5200 Installation Safety Guidelines

The weight of a fully -loaded QFX5200-32C and QFX5200-32C-L switch chassis is approximately 23.5 lb (10.66 kg); and a QFX5200-48Y weighs between 20.78 lbs (9.43 kg) to 21.16 (9.6 kg) with power supplies and fans installed. Observe the following guidelines for lifting and moving a QFX5200:



**CAUTION:** If you are installing the QFX5200 above 60 in. (152.4 cm) from the floor, either remove the power supplies, fan modules, and any expansion modules before attempting to install the switch, or ask someone to assist you during the installation.

- Before installing a QFX5200, read the guidelines in ["QFX5200 Site Preparation Checklist" on page 66](#) to verify that the intended site meets the specified power, environmental, and clearance requirements.
- Before lifting or moving the QFX5200, disconnect all external cables.
- As when lifting any heavy object, lift most of the weight with your legs rather than your back. Keep your knees bent and your back relatively straight and avoid twisting your body as you lift. Balance the load evenly and be sure that your footing is solid.

### RELATED DOCUMENTATION

[QFX5200 Site Guidelines and Requirements | 74](#)

[Installation Instructions Warning | 193](#)

[General Safety Guidelines and Warnings | 188](#)

## Unpacking and Mounting the QFX5200

### IN THIS SECTION

- [Unpacking a QFX5200 | 106](#)
- [Update Base Installation Data | 108](#)
- [Mounting a QFX5200 in a Rack or Cabinet | 108](#)

## Unpacking a QFX5200

The QFX5200 switch chassis is a rigid sheet-metal structure that houses the hardware components. A QFX5200 is shipped in a cardboard carton, secured with foam packing material. The carton also contains an accessory box and quick start instructions.



**CAUTION:** The QFX5200 is maximally protected inside the shipping carton. Do not unpack the switch until you are ready to begin installation.

To unpack a QFX5200:

1. Move the shipping carton to a staging area as close to the installation site as possible, but where you have enough room to remove the system components.
2. Position the carton so that the arrows are pointing up.
3. Open the top flaps on the shipping carton.
4. Remove the accessory box and verify the contents against the inventory included in the box. [Table 44 on page 106](#) lists the inventory of components supplied with a QFX5200.
5. Pull out the packing material holding the switch in place.
6. Verify the chassis components received:
  - Two power supplies
  - Five fan modules for QFX5200-32C or QFX5200-32C-L and six fan modules for QFX5200-48Y
7. Save the shipping carton and packing materials in case you need to move or ship the switch later.

**Table 44: Inventory of Components Supplied with a QFX5200 Device**

| Component   | Quantity  |
|---|---|
| Chassis with five or six fan modules and two power supplies | 1   |
| Fan modules   | 5 (QFX5200-32C or QFX5200-32C-L)<br>6 (QFX5200-48Y) |
| Power supplies  | 2   |

**Table 44: Inventory of Components Supplied with a QFX5200 Device (Continued)**

| Component   | Quantity   |
|---|--|
| <p>Rack mount kit for QFX5200-32C or QFX5200-32C-L<br/>- JNP-4PST-RMK-1U-E (Partial toolless RMK)</p> <p>JNP-4PST-RMK-1U-E rack mount kit consists of the following parts:</p> <ul style="list-style-type: none"> <li>• A pair of front and rear-mounting rails</li> <li>• A pair of mounting brackets</li> <li>• 16 flat-head M4 x 6mm Phillips screws</li> </ul> <p>Spare rack mount kits order numbers:</p> <ul style="list-style-type: none"> <li>• JNP-4PST-RMK-1U-E</li> <li>• EX-4PST-RMK</li> </ul> | 1  |
| <p>Rack mount kit for QFX5200-48Y</p> <ul style="list-style-type: none"> <li>• Front mounting brackets</li> <li>• Rear mounting brackets</li> <li>• Flathead screws (Phillips, M4 x 6mm)</li> <li>• Washer head screws</li> </ul> <p>The order number for a spare rack mount kit is QFX520048Y-RMKT.</p>  | <p>1</p> <ul style="list-style-type: none"> <li>• 2</li> <li>• 2</li> <li>• 20</li> <li>• 2</li> </ul> |
| Rack mount assembly drawing   | 1  |
| Power cords with plugs appropriate to your geographical location  | 2  |
| Documentation roadmap card  | 1  |
| Warranty  | 1  |



**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

## Update Base Installation Data



**CAUTION:** Update the installation base data if any addition or change to the installation base occurs or if the installation base is moved. Juniper Networks is not responsible for not meeting the hardware replacement SLA for products that do not have accurate installation base data.

Update your installation base at <https://supportportal.juniper.net/s/CreateCase> .

## Mounting a QFX5200 in a Rack or Cabinet

### IN THIS SECTION

- Before You Begin Rack Installation | [109](#)
- Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the EX-4PST-RMK Rack Mount Kit | [110](#)
- Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the JNP-4PST-RMK-1U-E Rack Mount Kit | [112](#)
- Mount a QFX5200-48Y in a Rack or Cabinet by Using the QFX520048Y-RMKT Rack Mount Kit | [122](#)

You can mount all QFX5200 switches on a four post 19-in. rack or cabinet using the mounting kit provided with the switch.

The remainder of this topic uses "rack" to mean "rack or cabinet." The front and rear rack rails must be spaced between 23.5 in. (59.7 cm) and 30.6 in. (77.7 cm) front to back.

This topic describes:

## Before You Begin Rack Installation

Before you begin mounting a QFX5200 switch in the rack or cabinet:

1. Ensure that you understand how to prevent electrostatic discharge (ESD) damage. See "[Prevention of Electrostatic Discharge Damage](#)" on page 213.
2. Verify that the site meets the requirements described in "[QFX5200 Site Preparation Checklist](#)" on page 66.
3. Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.
4. Read "[General Site Guidelines](#)" on page 76, with particular attention to "[QFX5200 Installation Safety Guidelines](#)" on page 105.
5. Remove the switch from the shipping carton (see "[Unpacking a QFX5200](#)" on page 106).
6. Ensure that you have the following parts and tools available to mount the switch in a rack:
  - ESD grounding strap (not provided).
  - Rack Mount Kit (provided).
  - Appropriate screwdriver for the mounting screws (not provided).
  - Two power cords with plugs appropriate to your geographical location (provided).
  - RJ-45 cable and RJ-45 to DB-9 serial port adapter (not provided).
  - Management host, such as a PC laptop, with a serial port (not provided).



**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)

- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

Optional equipment: Grounding cable kit with bracket, lug, and three nuts with integrated washers.



**WARNING:** A QFX5200 switch must be supported at all four corners. Mounting the chassis using only the front brackets will damage the chassis and can result in serious bodily injury.



**CAUTION:** All QFX5200 switches require two people for installation, one person to lift the switch into place and another person to attach the switch to the rack. If you are installing the QFX5200 switch above 60 in. (152.4 cm) from the floor, you can remove the power supplies and fan modules to minimize the weight before attempting to install the switch.




**CAUTION:** If you are mounting multiple switches on a rack, mount the switch in the lowest position of the rack first. Proceed to mount the rest of the switches from the bottom to the top of the rack to minimize the risk of the rack toppling.

## Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the EX-4PST-RMK Rack Mount Kit

To mount the QFX5200-32C or QFX5200-32C-L on four posts in a rack by using the EX-4PST-RMK rack mount kit:


1. Attach the ESD grounding strap to your bare wrist and to a site ESD point.
2. Decide whether the Field Replaceable Unit (FRU) end of the switch or the port end is to be placed at the front of the rack. Position the switch in such a manner that the **AIR IN** labels on components are next to the cold aisle and **AIR OUT** labels on components are next to the hot aisle.
3. Align the holes in the mounting rail with the holes on the side of the chassis. See [Figure 47 on page 111](#) to see the proper alignment for the QFX5200-32C or QFX5200-32C-L switch.

**Figure 47: Attaching Mounting Rails to the QFX5200-32C or QFX5200-32C-L**

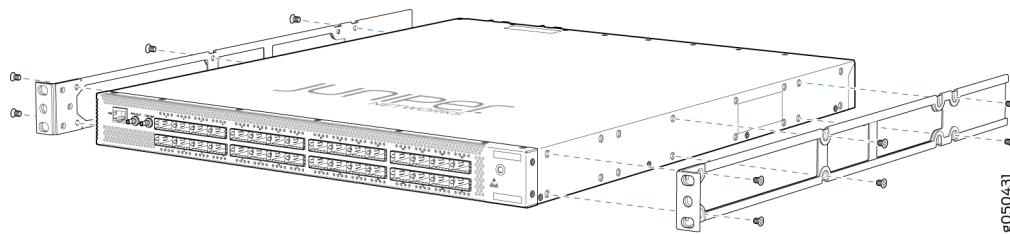


4. Attach the mounting rail to the switch using the mounting screws. Tighten the screws.
5. Repeats steps 3 and 4 on the opposite side of the switch.
6. Have one person grasp both sides of the switch, lift it, and position it in the rack so that the front bracket is aligned with the rack holes.
7. Have a second person secure the front of the switch to the rack using four mounting screws (and cage nuts and washers if your rack requires them.) Tighten the screws. See [Figure 48 on page 111](#) for an example of connecting the mounting rails and blades to a QFX5200-32C or QFX5200-32C-L.

**Figure 48: Attach QFX5200-32C or QFX5200-32C-L Switch to Rack**

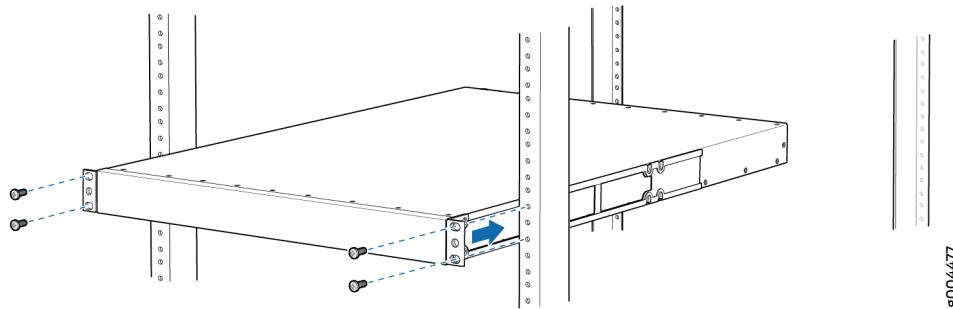

8. Continue to support the switch while sliding the rear mounting-blades into the channel of the side mounting-rails and securing the blades to the rack. Use the four mounting screws (and cage nuts and washers if your rack requires them) to attach each blade to the rack. Tighten the screws. See [Figure 49 on page 112](#).

**Figure 49: Slide Mounting Blade into Mounting Rail**

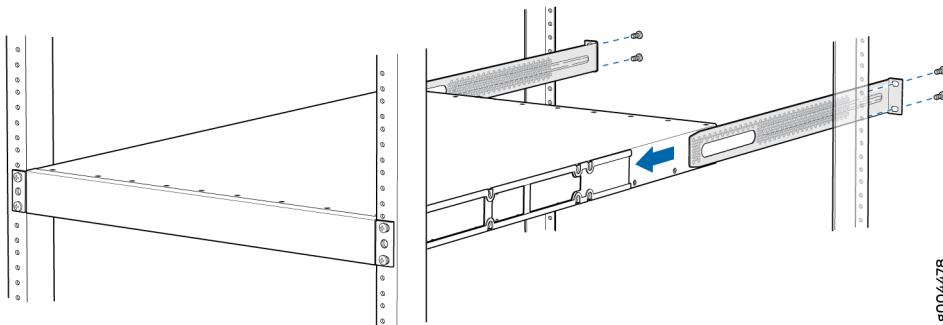

8004478

9. Ensure that the switch chassis is level by verifying that all the screws on the front of the rack are aligned with the screws at the back of the rack.

## Mount a QFX5200-32C or QFX5200-32C-L in a Rack or Cabinet by Using the JNP-4PST-RMK-1U-E Rack Mount Kit

### IN THIS SECTION

- Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit On a Square Hole Rack | [112](#)
- Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit On a Threaded Hole Rack | [117](#)

You can mount QFX5200-32C or QFX5200-32C-L switches on a square hole or threaded hole four-post 19-in. racks using the JNP-4PST-RMK-1U-E rack mount kit. A four-post installation evenly supports the switch by all four corners.

### Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit On a Square Hole Rack


Ensure that you have the following tools and parts available:

- An ESD grounding strap—not provided.
- Number 2 Phillips (+) screwdriver—not provided
- A pair of front and rear mounting rails that attach to the rack posts—provided with the rack mount kit
- A pair of mounting brackets and 16 flat head M4 x 6mm Phillips screws. These brackets attach to the device if not pre-installed—provided with the rack mount kit

To mount the device on four posts in a rack by using the JNP-4PST-RMK-1U-E rack mount kit:

1. Wrap and fasten the ESD grounding strap to your bare wrist and connect the other end of the strap to the ESD point on the device.
2. Assemble the mounting rails.
  - a. Slide the rear floating bracket into the front bracket. See Figure 4.


**Figure 50: Assemble the Mounting Rails**

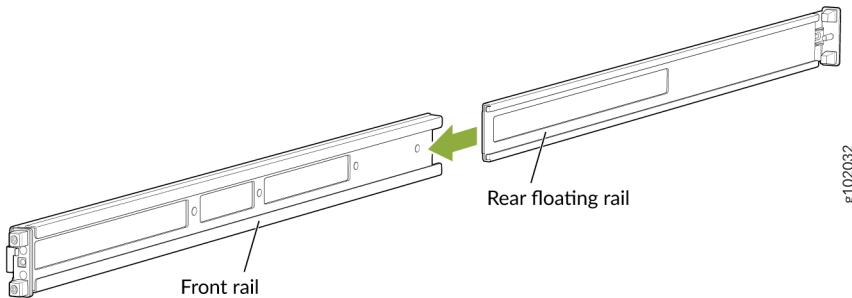

g102032

- b. Mounting rails assembled. See Figure 5.


**Figure 51: Front and Rear Rails Assembled**

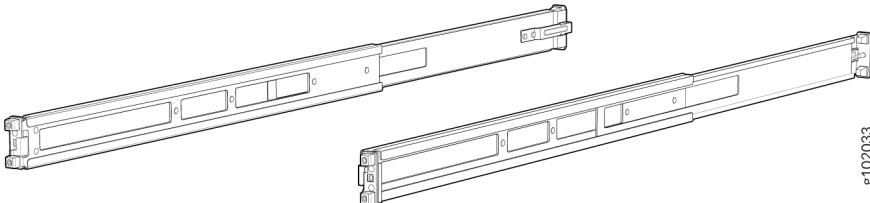

g102033


3. Attach the mounting rails to the rack.
  - a. Align the guide blocks of the rear mounting rails with the rear-post holes. Pull the rear mounting rails toward the front of the rack to lock the rails in place. You will hear a click sound when the latch locks into the corresponding rack holes. See Figure 6.

**Figure 52: Install the Rear Floating Rails**

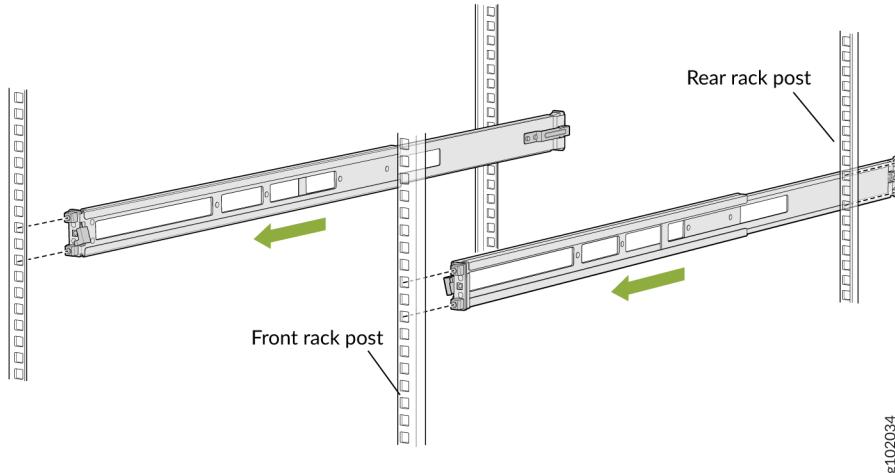


- b. Move the latch lock on the front mounting rails to open position, slide the front mounting rails, and insert the guide blocks into the front rack posts. See Figure 7.

**Figure 53: Install the Front Mounting Rails**

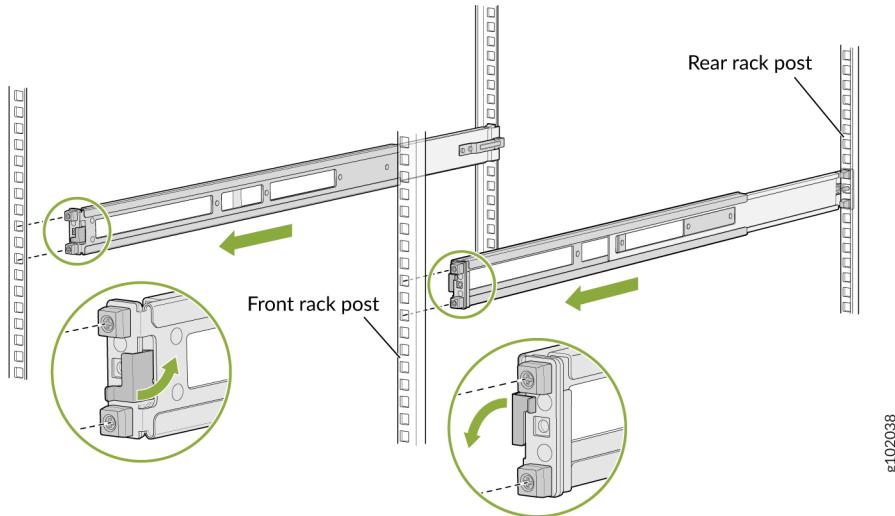


- c. Push the lock latch to the locked position. See Figure 8.

Figure 54: Front Mounting Rails Lock Latch

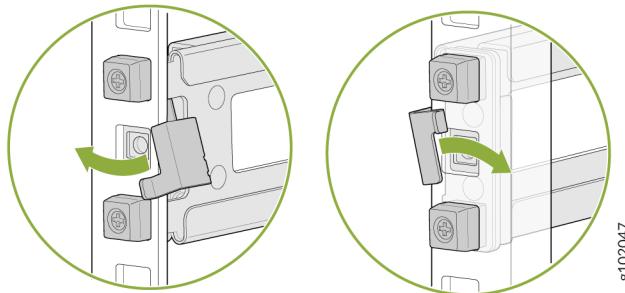


- d. Visually ensure that the front and rear latches are locked into place on the mounting rails. See Figure 9.

Figure 55: Mounting Rails Installed and Locked

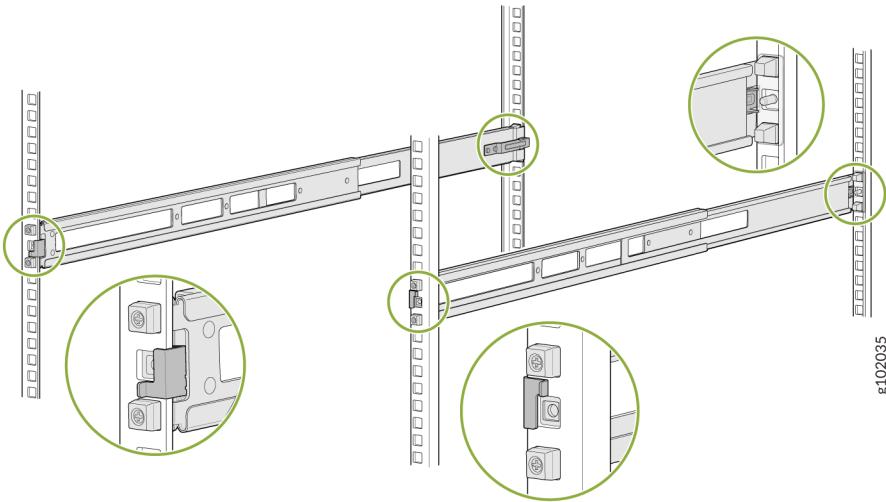


4. Attach mounting brackets to the device if not pre-installed. If your device already has the mounting brackets pre-installed than skip this step and move to the next step.
  - a. Align the holes on the mounting bracket with the screw holes on the side panel of the chassis.
  - b. Insert the flat head M4 x 6mm Phillips screws to attach the mounting bracket into the aligned holes on the chassis (see Figure 10). Tighten the screws.

Figure 56: Attach the Mounting Brackets to the Device

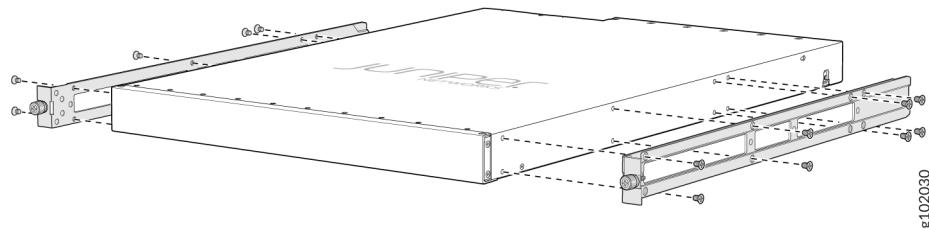


5. Position the device in such a manner that the **AIR OUT** labels on components are next to the hot aisle.
6. Grasp both sides of the device, lift it, and position the device such that the mounting rails slide into the channels of the mounting brackets. See Figure 11.

Figure 57: Slide the Device into the Rack

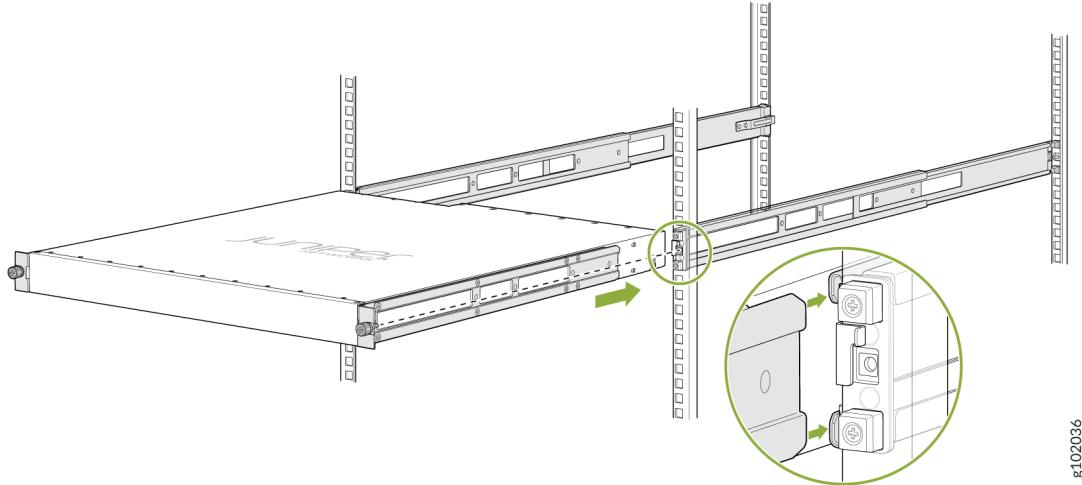

7. Tighten the two thumbscrews to secure the device. See Figure 12.

**Figure 58: Tighten the Thumb Screws**

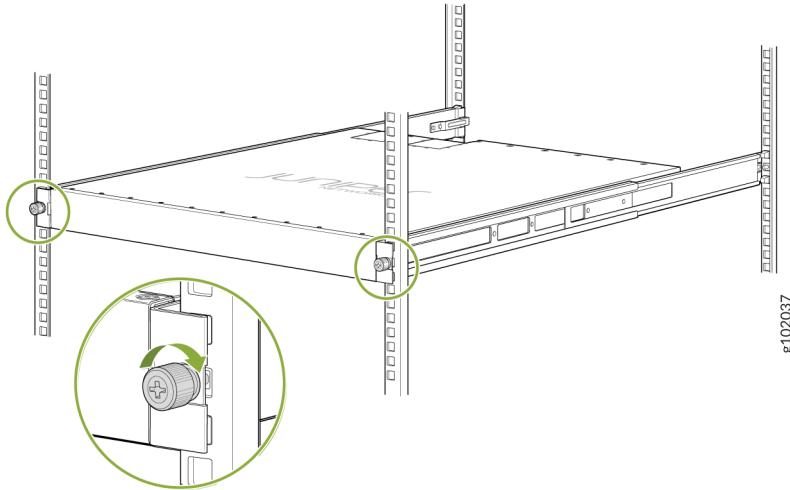

#### **Mount the Device by Using the JNP-4PST-RMK-1U-E Rack Mount Kit On a Threaded Hole Rack**


Ensure that you have the following tools and parts available:

- An ESD grounding strap—not provided
- Number 2 Phillips (+) screwdriver—not provided
- A pair of front and rear mounting rails that attach to the rack posts—provided with the rack mount kit
- A pair of side mounting brackets and 16 flat head M4 x 6mm Phillips screws. These brackets attach to the device if not pre-installed—provided with the rack mount kit

To mount the device on four posts in a threaded hole rack by using the JNP-4PST-RMK-1U-E rack mount kit:


1. Wrap and fasten the ESD grounding strap to your bare wrist and connect the other end of the strap to the ESD point on the device.
2. Assemble the mounting rails.
  - a. Remove the guide blocks from the front mounting rails by loosening the screws and preserve them for later use. See Figure 13.

**Figure 59: Remove Guide Blocks from Front Mounting Rail**

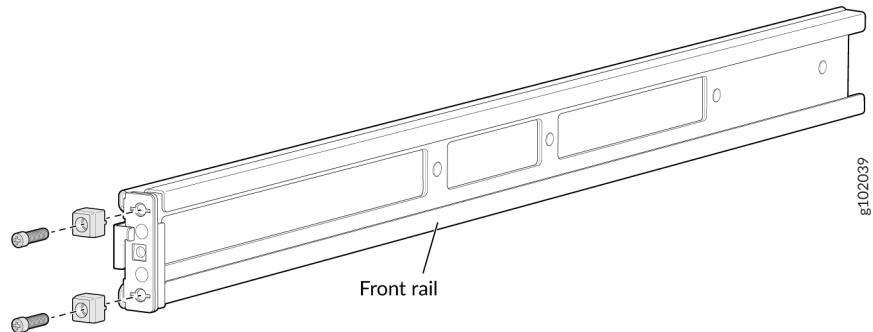


- b. Remove the guide blocks from the rear floating rails by loosening the screws and washers. Preserve the guide blocks, screws, and washers for later use. See Figure 14

**Figure 60: Remove Guide Blocks from Rear Floating Rail**

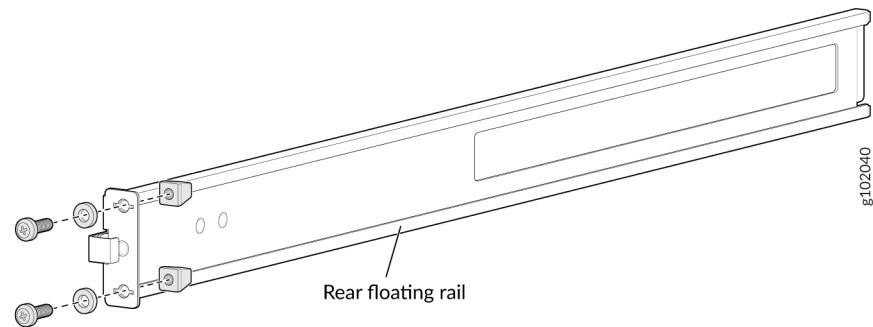


- c. Slide the rear floating rails into the front mounting rails. See Figure 15.

**Figure 61: Slide Rear Floating Rail into Front Mounting Rail**

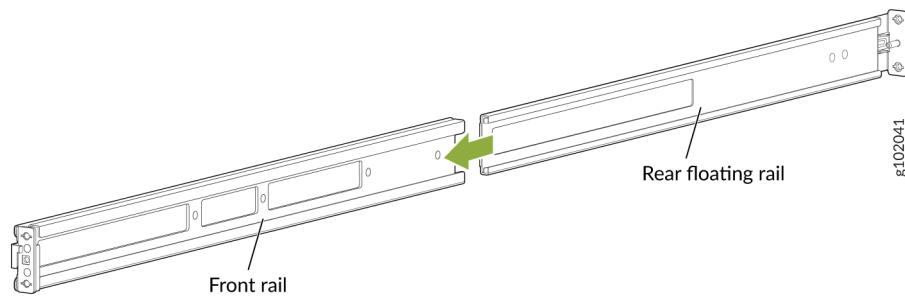

d. Mounting rails assembled. See Figure 16.


**Figure 62: Front and Rear Rails Assembled**

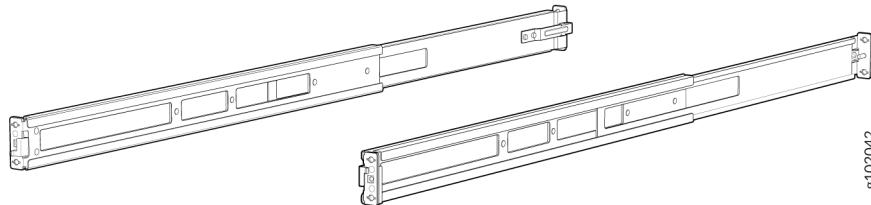

3. Attach the mounting rails to the threaded hole rack.


a. Align the guide blocks of the rear mounting rails with the rear-post holes. Pull the rear mounting rails toward the front of the rack to lock the rails in place. You will hear a click sound when the latch locks into the corresponding rack holes. See Figure 17.

**Figure 63: Install the Rear Floating Rails**

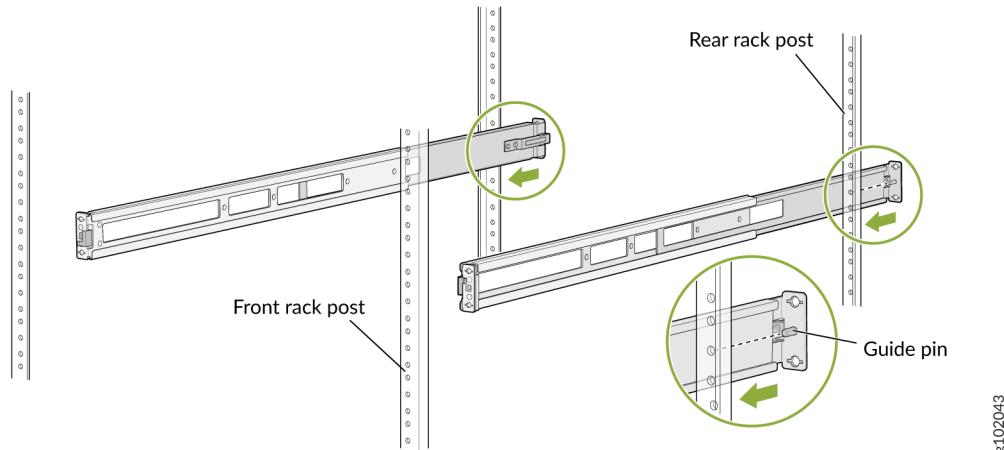

b. Move the latch locks on the front mounting rails to open position, slide the front mounting rails and align them to the front rack post. Push the lock latch to locked position and using the screws removed in step 2.a and the washers removed in step 2.b, secure the front mounting rails to the front rack post. See Figure 18.


Figure 64: Install the Front Mounting Rails

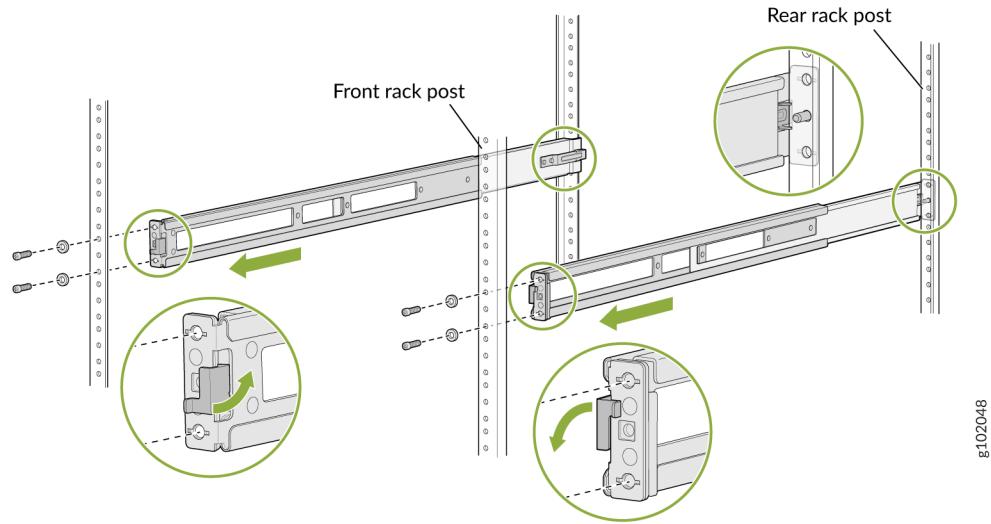

g102048

- c. Secure the rear floating rails to the rear rack post by using screws (not provided) appropriate for your rack threaded size. See Figure 19.


Figure 65: Secure the Rear Floating Rails

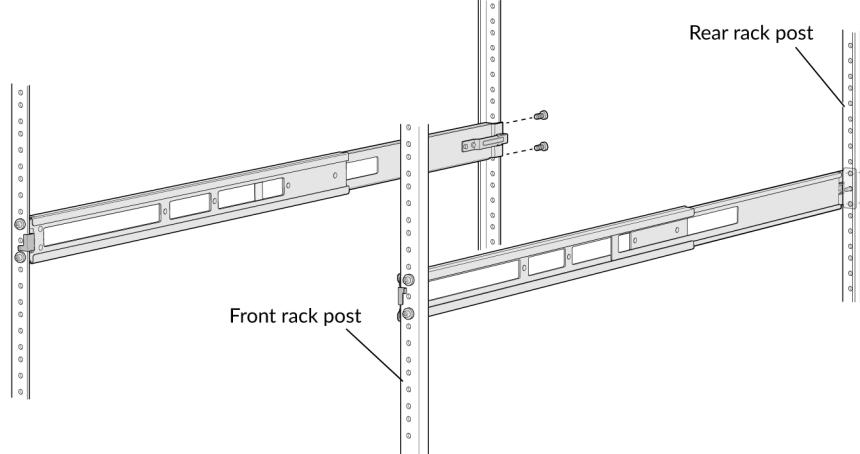

g102049


- d. Visually ensure that the front and rear latches are locked into place on the mounting rails. See Figure 20.

Figure 66: Mounting Rails Installed and Secured

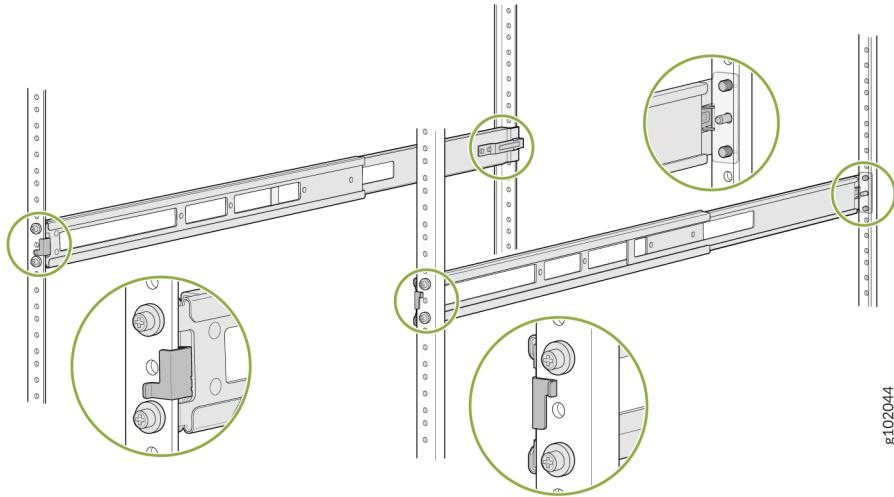


4. Attach mounting brackets to the device if not pre-installed. If your device already has the mounting brackets pre-installed than skip this step and move to the next step.
  - a. Align the holes on the mounting bracket with the screw holes on the side panel of the chassis.
  - b. Insert the flat head M4 x 6mm Phillips screws to attach the mounting bracket into the aligned holes on the chassis (see Figure 21). Tighten the screws.

Figure 67: Attach the Mounting Brackets to the Device

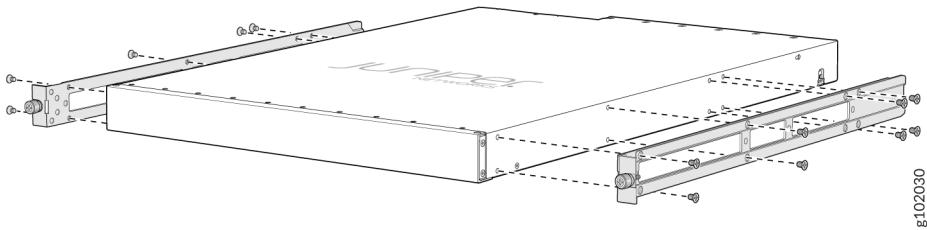


5. Position the device in such a manner that the **AIR OUT** labels on components are next to the hot aisle.
6. Grasp both sides of the device, lift it, and position the device such that the mounting rails slide into the channels of the mounting brackets. See Figure 22.

**Figure 68: Slide the Device into the Rack**

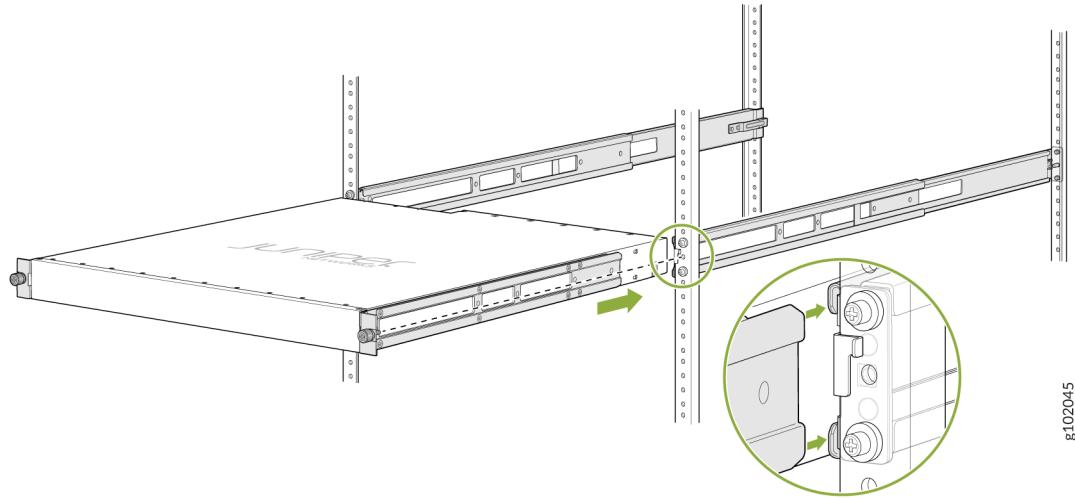

7. Tighten the two thumbscrews to secure the device. See Figure 23.

**Figure 69: Tighten Thumb Screws**

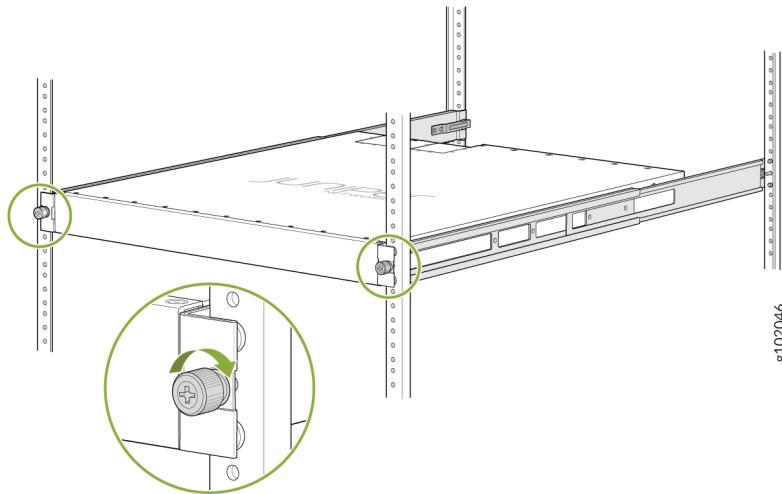


### Mount a QFX5200-48Y in a Rack or Cabinet by Using the QFX520048Y-RMKT Rack Mount Kit

To mount the QFX5200-48Y on four posts in a rack by using the QFX520048Y-RMKT rack mount kit:

1. Attach the ESD grounding strap to your bare wrist and to a site ESD point.
2. Place the rack in its permanent location, allowing adequate clearance for airflow and maintenance, and secure it to the building structure.


3. Decide whether the FRU end of the switch or the port end is to be placed at the front of the rack. For airflow in (AFI) installations, position the switch with the blue components next to the cold aisle and for airflow out (AFO) installations, position the switch with the red components next to the hot aisle.
4. Align the holes in the front mounting bracket with the holes on the side of the chassis so that the bracket is flush with the port panel. See [Figure 70 on page 123](#).

**Figure 70: Align the Front Mounting Bracket and Secure with Screws**

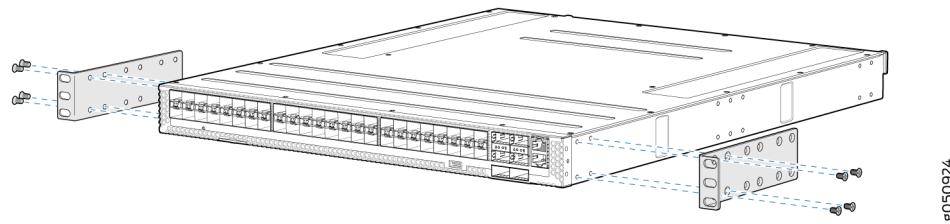


5. Using a Phillips screwdriver, attach the front mounting bracket to the switch using four of the flat head screws in the holes closest to the port panel. Tighten the screws.
6. Repeat Steps 4 and 5 on the opposite side of the switch.
7. Align the holes in the adjustable mounting rail with the remaining holes in the chassis. The alignment should permit two screws at mid-chassis and four screws nearest the power supplies. The adjustable blades fit standard racks between 22.05 in. (56 cm) to 29.5 in. (75 cm).
8. Attach the adjustable mounting rail to the chassis using the Phillips screwdriver and six of the flat head screws. Tighten the screws. See [Figure 71 on page 123](#).

**Figure 71: Align Holes for Mounting Rail and Attach with Screws**

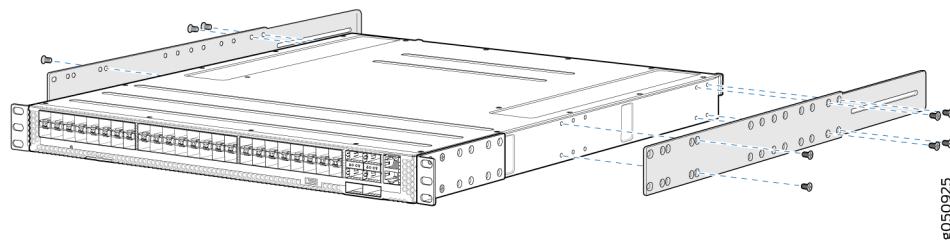


9. Repeat Steps 7 and 8 on the opposite side of the switch.
10. Have one person grasp both sides of the unit, lift it, and position it in the rack so that the front mounting bracket is aligned with the rack holes.
11. Have a second person secure the front of the device to the rack using four mounting screws (and cage nuts and washers if your rack requires them). Tighten the screws. See [Figure 72 on page 124](#).

Figure 72: Attach the Front Mounting Bracket to the Rack

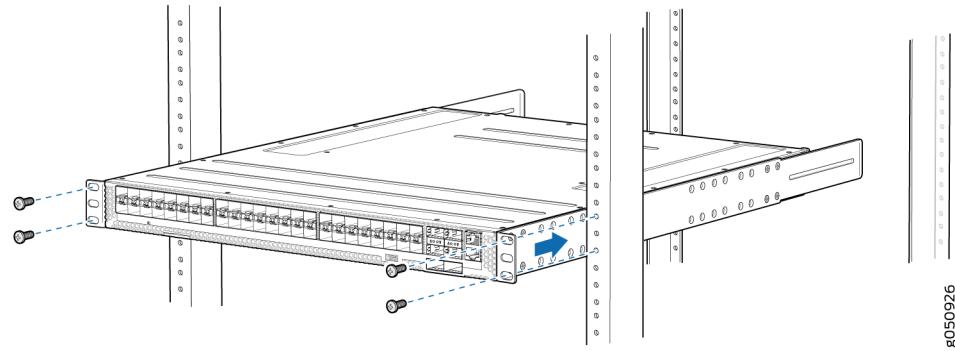


12. Continue to support the switch while sliding the rear mounting brackets into the channel of the adjustable mounting blades and securing the blades and the brackets to the rack. Use four mounting screws (and cage nuts and washers if your rack requires them) to attach the blades and rear mounting brackets to the rack. Tighten the screws. See [Figure 73 on page 124](#).

Figure 73: Slide Blades into Mounting Rails and Attach to the Rack

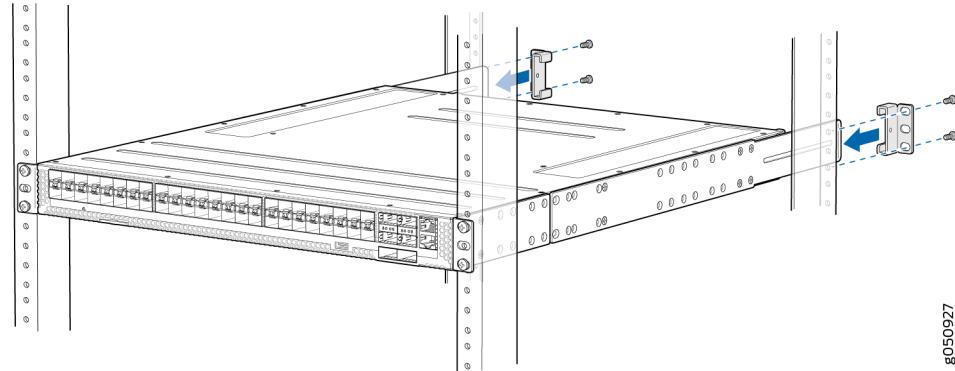

13. Ensure that the chassis is level by verifying that all the screws on the front of the rack are aligned with the screws at the back of the rack.
14. Secure the mounting rails to the rear mounting brackets using the two washer head screws. Tighten the screws. See [Figure 74 on page 125](#).

Figure 74: Lock the Mounting Rails to the Rack

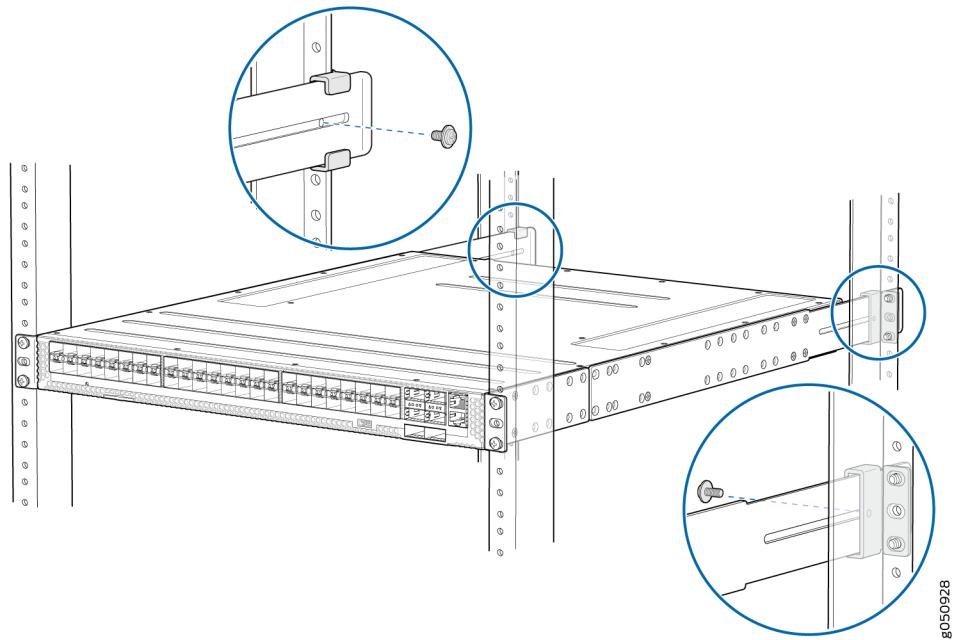

15. Attach a grounding cable to earth ground and then attach it to the chassis grounding points..

#### RELATED DOCUMENTATION

[Rack-Mounting and Cabinet-Mounting Warnings | 196](#)

[Connecting the QFX5200 to Power | 128](#)

[Connect the QFX5200 to Earth Ground | 129](#)

## Connecting the QFX5200 to External Devices


#### IN THIS SECTION

- [Connect a Device to a Network for Out-of-Band Management | 126](#)
- [Connect a Device to a Management Console Using an RJ-45 Connector | 126](#)

## Connect a Device to a Network for Out-of-Band Management

Ensure that you have an Ethernet cable that has an RJ-45 connector at either end.


Figure 75: RJ-45 Connector on an Ethernet Cable

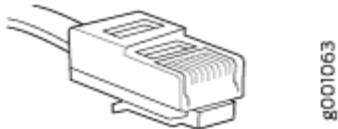

You can monitor and manage a network device, such as a router or a switch, by using a dedicated management channel. Each device has a management port to which you can connect an Ethernet cable with an RJ-45 connector. Use the management port to connect the device to the management device.

To connect a device to a network for out-of-band management:


1. Connect one end of the Ethernet cable to the management port on the device.
2. Connect the other end of the Ethernet cable to the management device.

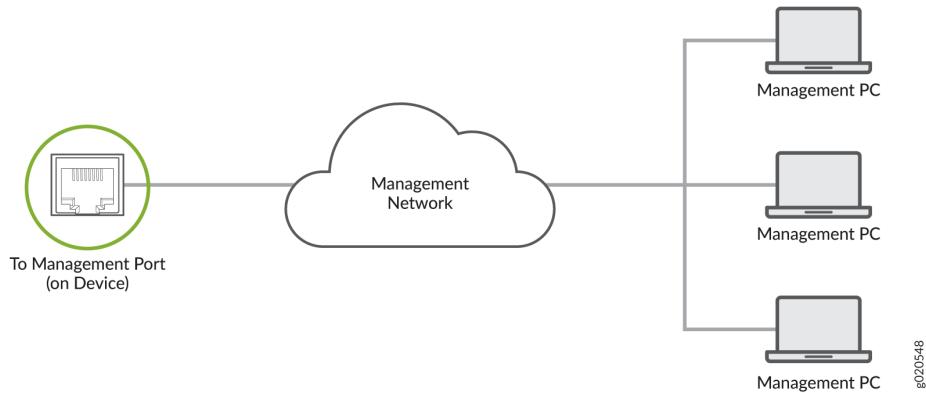

## Connect a Device to a Management Console Using an RJ-45 Connector

Ensure that you have an Ethernet cable that has an RJ-45 connector at either end and an RJ-45-to-DB-9 serial port adapter.

Figure 76: RJ-45 Connector on an Ethernet Cable

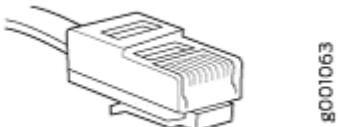

**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter, you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.




**NOTE:** If your laptop or desktop PC does not have a DB-9 plug connector pin and you want to connect your laptop or desktop PC directly to the device, use a combination of the RJ-45-to-DB-9 socket adapter and a USB-to-DB-9 plug adapter. You must provide the USB-to-DB-9 plug adapter.

You can configure and manage your network devices using a dedicated management channel. Each device has a console port that you can connect to using an Ethernet cable with an RJ-45 connector. Use the console port to connect the device to the console server or management console. The console port accepts a cable that has an RJ-45 connector.

To connect the device to a management console:

1. Connect one end of the Ethernet cable to the console port (labeled **CON**, **CONSOLE**, or **CON1**) on the device.
2. Connect the other end of the Ethernet cable to the console server (see [Figure 77 on page 128](#)) or management console (see [Figure 78 on page 128](#)).

Figure 77: Connect a Device to a Management Console Through a Console Server

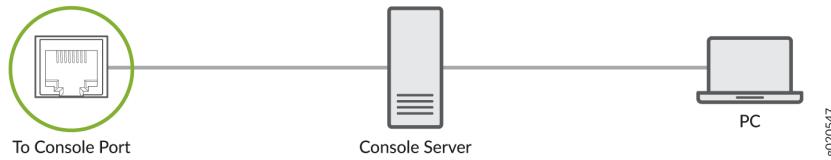

g020547

Figure 78: Connect a Device Directly to a Management Console



g020570

#### RELATED DOCUMENTATION

[General Safety Guidelines and Warnings | 188](#)

[Grounded Equipment Warning | 200](#)

[Connecting the QFX5200 to Power | 128](#)

## Connecting the QFX5200 to Power

#### IN THIS SECTION

- [Connect the QFX5200 to Earth Ground | 129](#)
- [Alternate Method to Ground QFX5200-32C-DC Systems | 130](#)
- [Connecting AC Power to a QFX5200 | 132](#)
- [Connecting DC Power to a QFX5200 | 135](#)

## Connect the QFX5200 to Earth Ground

You must install the QFX5200 in a restricted-access location and ensure that the chassis is always properly grounded. The QFX5200 has a two-hole protective grounding terminal provided on the chassis. See [Figure 79 on page 130](#). Under all circumstances, use this grounding connection to ground the chassis. For AC-powered systems, you must also use the grounding wire in the AC power cord along with the two-hole grounding lug connection. This tested system meets or exceeds all applicable EMC regulatory requirements with the two-hole protective grounding terminal.



**CAUTION:** Ensure that a licensed electrician has attached an appropriate grounding lug to the grounding cable that you supply. Using a grounding cable with an incorrectly attached lug can damage the switch (for example by causing a short circuit.)



**NOTE:** Mount your switch in the rack or cabinet before attaching the grounding lug to the switch. See ["Unpacking and Mounting the QFX5200" on page 105](#).

Ensure that you have the following parts and tools available:


- Grounding cable for your QFX5200 device—The grounding cable must be 14 AWG (2 mm<sup>2</sup>), minimum 90° C wire, or as permitted by the local code (not provided).
- (QFX5200-32C and QFX5200-32C-L) Grounding lug for your grounding cable—The grounding lug required is a Panduit LCD10-10A-L or equivalent (not provided).
- For QFX5200-32C and QFX5200-32C-L, two 10-32 x 0.25 screws with #10 split-lock washers—Two screws are used to secure the grounding lug to the grounding lug bracket protective earthing terminal. These screws and washers are not provided.
- For QFX5200-48Y, two 4.3 ring terminals, 14-18 AWG, and the provided M4 screw with star washer.
- Number 2 screwdriver.

An AC-powered QFX5200 switch chassis gains additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using an AC power cord appropriate for your geographical location. See ["QFX5200 Power Cord Specifications" on page 54](#).

To connect earth ground to a QFX5200-32C or QFX5200-32C-L:

1. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
2. Place the grounding lug attached to the grounding cable over the protective earthing terminal.
3. Secure the grounding lug to the protective earthing terminal with two screws and washers. See [Figure 79 on page 130](#).

Figure 79: Connecting a Grounding Cable to a QFX5200-32C and QFX5200-32C-L

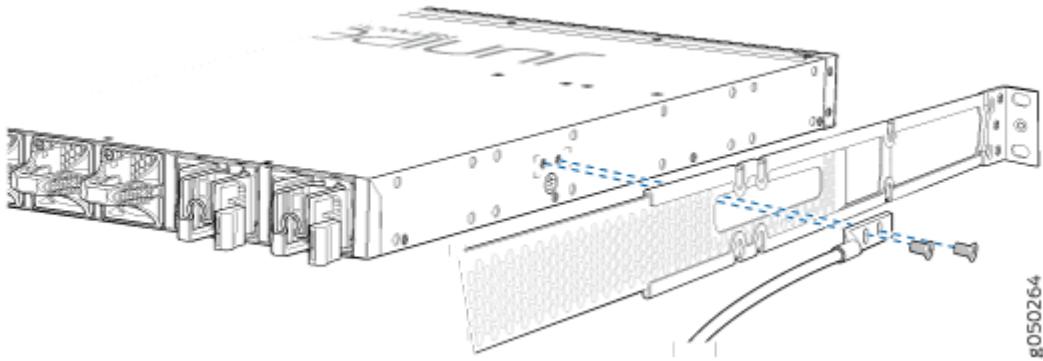

4. Dress the grounding cable and ensure that it does not touch or block access to other device components and that it does not drape where people could trip over it.

To connect earth ground to a QFX5200-48Y:

1. Ensure the rack is properly grounded and is in compliance with ETSI ETS 300 253.
2. Verify that there is a good electrical connection to the grounding point on the rack.
3. Attach the ring terminals to each end of the #14 AWG grounding wire.
4. Connect one of the ring terminals to the grounding point on the FRU panel.
5. Connect the other ring terminal to the rack ground.



**CAUTION:** Do not remove the earth connection until all power supply connections are disconnected.

## Alternate Method to Ground QFX5200-32C-DC Systems

Ensure that you have the following parts and tools available to ground the chassis using this method:

- M5 pan-head screw x .08 mm with integrated washer (not provided)
- M5 lug (not provided)
- 12 AWG (2.5 mm<sup>2</sup>) standard wire, 90° C wire or heavier (not provided)
- Number 2 screwdriver (not provided)

To connect earth ground to a QFX5200-32C-DC power supply:

1. Have a licensed electrician attached the M5 grounding lug to the grounding cable that you supply.




**CAUTION:** Using a grounding cable with an incorrectly attached lug can damage the switch.

2. Ensure that all grounding surfaces are clean and brought to a bright finish before grounding connections are made.
3. Connect one end of the grounding cable to a proper earth ground, such as the rack in which the switch is mounted.
4. Place the grounding lug that is attached to the grounding cable over the protective earthing terminal on the DC power supply.
5. Use a screwdriver to secure the grounding lug to the protective earthing terminal with a M5 pan-head screw with integrated washer.
6. Dress the grounding cable and ensure that it does not touch or block access to other device components and that it does not drape where people could trip over it.

We recommend that you connect earth ground to a QFX5110 DC chassis using the "["Connect the QFX5200 to Earth Ground" on page 129](#) method. However if you can't access the chassis using the two-holed grounding lug, you can ground the chassis using the DC protective earthing terminal on the DC power supply.

The DC power supplies have a protective earthing terminal on the face that holds an M5 pan-head screw with integrated washer. See [Figure 80 on page 132](#).

Figure 80: DC Power Supply Faceplate on a QFX5200-32C-DC

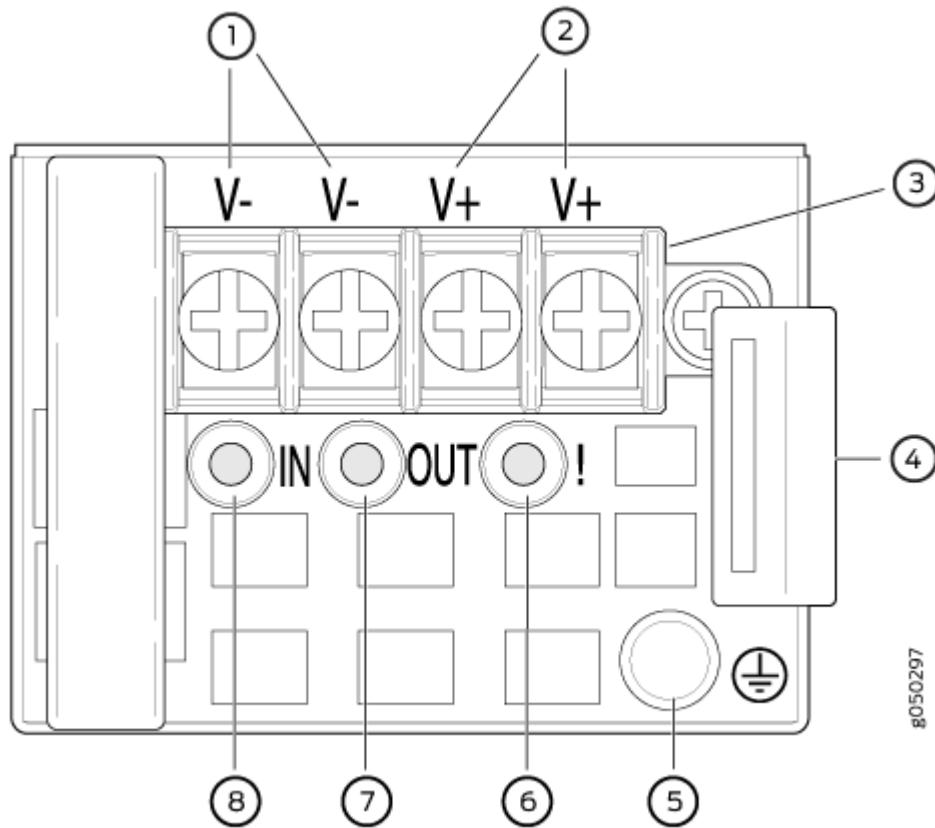

|  |                                 |
|--|---------------------------------|
| 1– Shunt negative input terminals (-48V) | 5– Protective earthing terminal |
| 2– Shunt positive input terminals (+RTN) | 6– Fault LED                    |
| 3– Terminal block                        | 7– Output LED                   |
| 4– Security latch                        | 8– Input LED                    |

## Connecting AC Power to a QFX5200

Ensure that you have a power cord appropriate for your geographical location available to connect AC power to the switch.

Before you begin connecting AC power to the switch:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).
- Ensure that you have connected the switch chassis to earth ground.



**CAUTION:** Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit). To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground before you connect it to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see "[Connect the QFX5200 to Earth Ground](#)" on page 129. The switch gains additional grounding when you plug the power supply in the switch into a grounded AC power outlet by using the AC power cord appropriate for your geographical location (see "[QFX5200 Power Cord Specifications](#)" on page 54).

- Install the power supply in the chassis. For instructions on installing a power supply in a QFX5200, see "[Installing a Power Supply in a QFX5200](#)" on page 153.

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.



**NOTE:** Each power supply must be connected to a dedicated power source outlet.

To connect AC power to a QFX5200:


1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Ensure that the power supplies are fully inserted in the chassis and the latches are secure. If only one power supply is installed, ensure a blank cover panel is installed over the second power supply slot.
3. Locate the power cord or cords shipped with the switch; the cords have plugs appropriate for your geographical location.




**WARNING:** Ensure that the power cord does not block access to device components or drape where people can trip on it.

4. Connect each power supply to the power sources. Insert the coupler end of the power cord into the AC power cord inlet on the AC power supply faceplate.
5. For QFX5200-32C and QFX5200-32C-L models, push the power cord retainer onto the power cord (see [Figure 81 on page 134](#)). Power cord retainers are not available for QFX5200-48Y PSUs.

Figure 81: Connecting an AC Power Cord to an AC Power Supply in a QFX5200-32C and QFX5200-32C-L

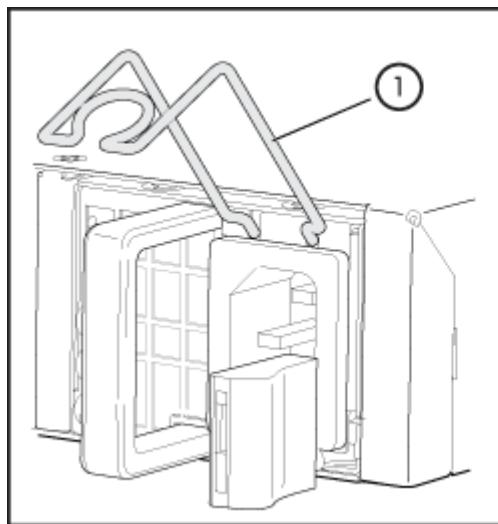

1– Power cord retainer

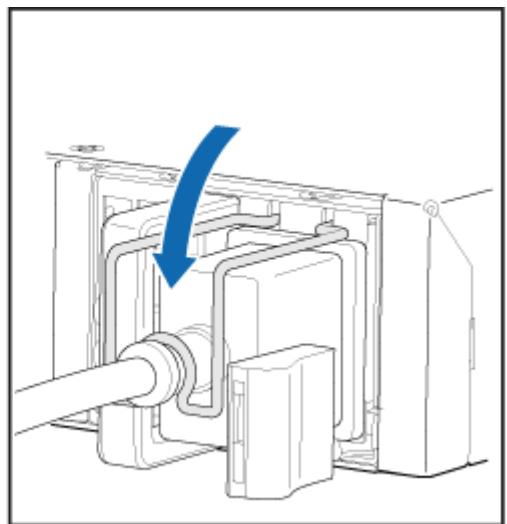

8050296

6. If the AC power source outlet has a power switch, set it to the OFF (O) position.



**NOTE:** The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.

7. Insert the power cord plug into an AC power source outlet.
8. If the AC power source outlet has a power switch, set it to the ON (I) position.
9. Verify that the AC and DC LEDs on each power supply are lit green.

If the amber fault LED is lit, remove power from the power supply, and replace the power supply (see "Removing a Fan Module from a QFX5200" on page 147). Do not remove the power supply until you have a replacement power supply ready: the power supplies or a blank cover panel must be installed in the switch to ensure proper airflow.



**CAUTION:** Replace a failed power supply with a blank panel or new power supply within 1 minute of removal to prevent chassis overheating.



**CAUTION:** A system reboot with Routing Engine FPGA version 7.1 might not successfully boot the Junos OS software. In case of a system reboot failure, you need to power cycle the switch. To check the current FPGA version, issue the `show chassis firmware` command.

## Connecting DC Power to a QFX5200

### IN THIS SECTION

- [Before You Begin | 135](#)
- [Connecting DC Power to a QFX5200-32C-DC | 136](#)
- [Connecting DC Power to a QFX5200-48Y | 140](#)

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.



**WARNING:** A DC-powered QFX5200 is intended for installation only in a restricted access location.



**NOTE:** The battery returns of the DC power supply must be connected as an isolated DC return (DC-I).



**NOTE:** The QFX5200-32C-L is only available for AC.

This topic includes:

### Before You Begin

Before you begin connecting DC power to the switch:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).
- Ensure that you have connected the switch chassis to earth ground.



**CAUTION:** Before you connect power to the switch, a licensed electrician must attach a cable lug to the grounding and power cables that you supply. A cable with an incorrectly attached lug can damage the switch (for example, by causing a short circuit).

To meet safety and electromagnetic interference (EMI) requirements and to ensure proper operation, you must connect the chassis to earth ground before you connect it to power. For installations that require a separate grounding conductor to the chassis, use the protective earthing terminal on the switch chassis to connect to the earth ground. For instructions on connecting earth ground, see ["Connect the QFX5200 to Earth Ground" on page 129](#).

On QFX5200-32C-DC systems, you can also ground the chassis using the DC protective earthing terminal on the DC power supply as an alternate method. This method is useful if you are unable to access the chassis ground point by using the two-holed grounding lug, see ["Alternate Method to Ground QFX5200-32C-DC Systems" on page 130](#).

- Install the power supply in the chassis. For instructions on installing a power supply in a QFX5200, see ["Installing a Power Supply in a QFX5200" on page 153](#).

Ensure that you have the following parts and tools available:

- For QFX5200-32C-DC power source cables (14-16 AWG) with ring lug (Molex 190700069 or equivalent) (not provided)
- For QFX5200-48Y-DC power source cables (12 AWG) with ring lug (provided)
- Phillips (+) screwdriver, number 2 (not provided)
- Multimeter (not provided)

## Connecting DC Power to a QFX5200-32C-DC

To connect DC power to a QFX5200-32C:

1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Verify that the DC power cables are correctly labeled before making connections to the power supply. In a typical power distribution scheme where the return is connected to chassis ground at the battery plant, you can use a multimeter to verify the resistance of the -48V and RTN DC cables to chassis ground:
  - The cable with very low resistance (indicating a closed circuit) to chassis ground is positive (+) and will be installed on the V+ (return) DC power input terminal.
  - The cable with very high resistance (indicating an open circuit) to chassis ground is negative (-) and will be installed on the V- (input) DC power input terminal.



**CAUTION:** You must ensure that power connections maintain the proper polarity. The power source cables might be labeled (+) and (-) to indicate their polarity. There

is no standard color coding for DC power cables. The color coding used by the external DC power source at your site determines the color coding for the leads on the power cables that attach to the DC power input terminals on each power supply.

**3. Install heat-shrink tubing insulation around the power cables.**

To install heat-shrink tubing:


- a. Slide the tubing over the portion of the cable where it is attached to the lug barrel. Ensure that tubing covers the end of the wire and the barrel of the lug attached to it.
- b. Shrink the tubing with a heat gun. Ensure that you heat all sides of the tubing evenly so that it shrinks around the cable tightly.

[Figure 82 on page 137](#) shows the steps to install heat-shrink tubing.



**NOTE:** Do not overheat the tubing.

**Figure 82: How to Install Heat-Shrink Tubing**

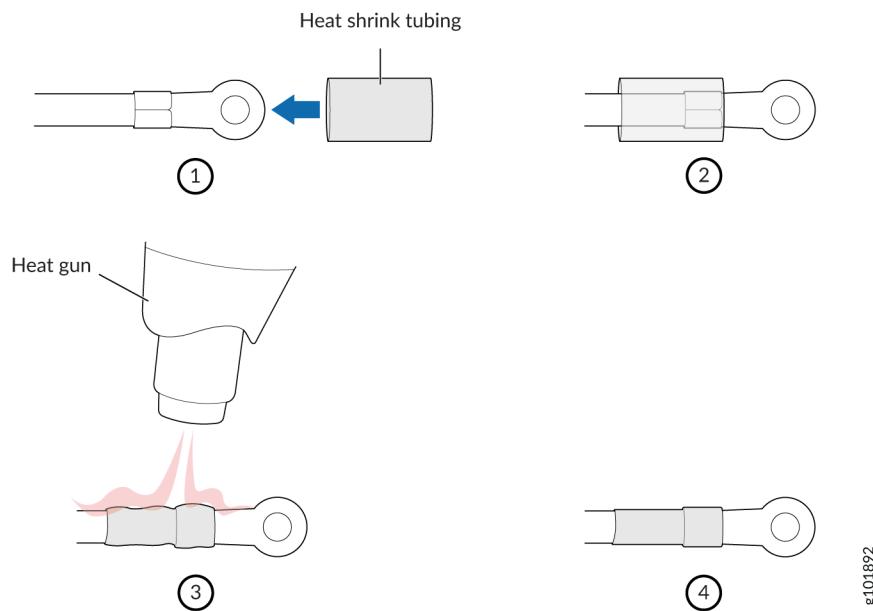

**4. Ensure that the input circuit breaker is open so that the voltage across the DC power source cable leads is 0 V and that the cable leads do not become active while you are connecting DC power.**



**NOTE:** The V+ terminals are referred to as +RTN, and V- terminals are referred to as -48 V in "DC Power Wiring Sequence Warning" on page 220 and "DC Power Electrical Safety Guidelines" on page 216.

5. Ensure that the power supplies are fully inserted in the chassis.
6. Remove the terminal block cover. The terminal block cover is a piece of clear plastic that snaps into place over the terminal block (see [Figure 83 on page 139](#)).
7. Remove the screws on the terminals using the screwdriver. Save the screws.



**WARNING:** Ensure that the power cables do not block access to device components or drape where people can trip on them.

8. Connect each power supply to the power sources. Secure power source cables to the power supplies by screwing the ring lugs attached to the cables to the appropriate terminals by using the screw from the terminals (see [Figure 83 on page 139](#) and [Figure 84 on page 140](#)).

The QFX5200-32C is designed to operate with a DC power supply that has a single, non-redundant, feed input. For source redundancy, two DC power supplies must be installed in QFX5200-32C; connect source (A) to one power supply and connect source (B) to the second power supply. This configuration provides the commonly deployed A/B feed redundancy for the system.

The terminal block of the power supply has four terminals labeled V+, V+, V-, and V- for connecting DC power source cables labeled positive (+) and negative (-). The V+ terminals are shunted internally together, as are the V- terminals.




**CAUTION:** The connection between each power source and power supply must include a circuit breaker.

Do not connect two sources to a single power supply because doing so can potentially cause circulating current in feed wires whenever there is any difference in the voltage of the two sources.


- a. Secure the ring lug of the positive (+) DC power source cable to the V+ terminal on the DC power supply.
- b. Secure the ring lug of the negative (-) DC power source cable to the V- terminal on the DC power supply.
- c. Tighten the screws on the power supply terminals until snug using the screwdriver. Do not overtighten—apply between 5 in-lb (0.56 Nm) and 6 in-lb (0.68 Nm) of torque to the screws.

Figure 83: QFX5200-32C-DC Faceplate

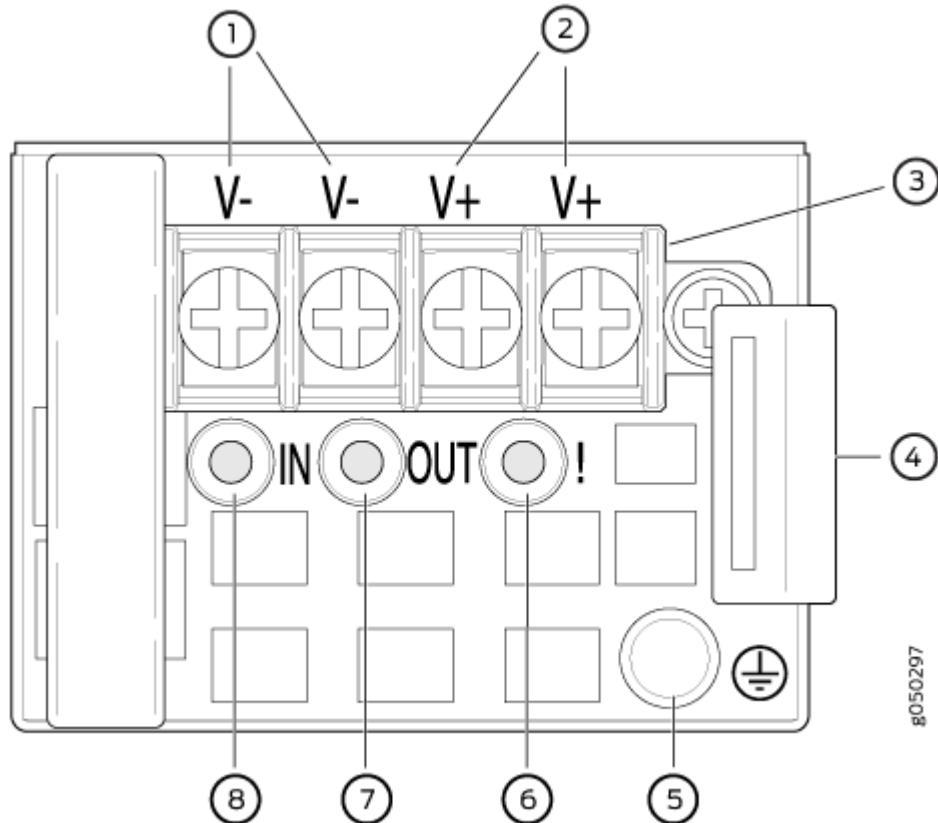

**CAUTION:** The V+ terminals are shunted internally together, as are the V- terminals. The same polarity terminal can be wired together from the same source to provide an additional current path in a higher power chassis. Do not connect the terminals to different sources.

Figure 84: Securing Ring Lugs to the Terminals on the QFX5200-32C DC Power Supply

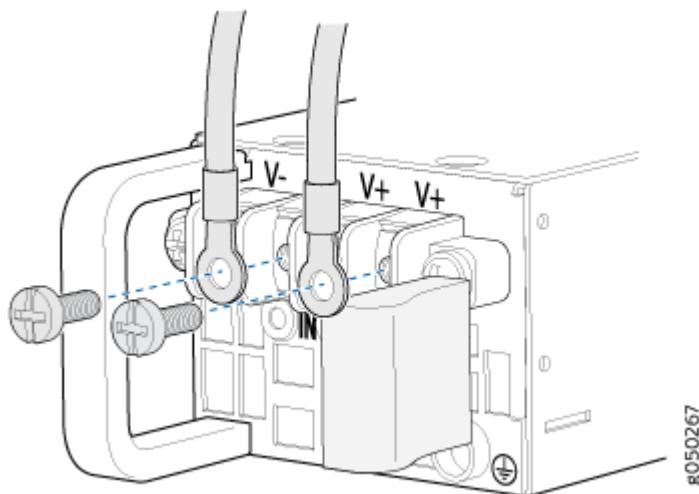

|  |                                 |
|--|---------------------------------|
| 1– Shunt negative input terminals (+RTN) | 5– Protective earthing terminal |
| 2– Shunt positive input terminals (-48V) | 6– Fault LED                    |
| 3– Terminal block                        | 7– Output LED                   |
| 4– Ejector lever                         | 8– Input LED                    |

9. Replace the terminal block cover.
10. Close the input circuit breaker.



**NOTE:** The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.


11. Verify that the **IN** and **OUT** LEDs on the power supply are lit green and are on steadily.

## Connecting DC Power to a QFX5200-48Y

To connect DC power to a QFX5200-48Y:

1. Attach the grounding strap to your bare wrist and to a site ESD point.
2. Ensure that the input circuit breaker is open so that the voltage across the DC power source cable leads is 0 V and that the cable leads do not become active while you are connecting DC power.
3. Ensure that the power supplies are fully inserted in the chassis.
4. Connect each power supply to the power source by inserting the DC connector of the provided power cable into the power supply. See [Figure 85 on page 141](#).

Figure 85: Connecting DC Power Cable to QFX5200-48Y

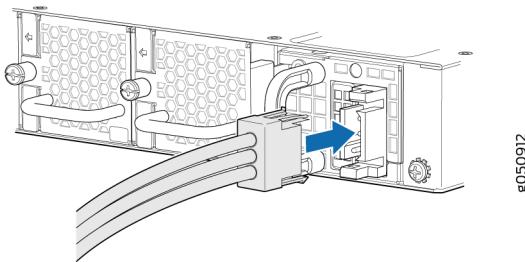

5. Connect each power cable to the power sources. Secure power source cables to the power supplies by screwing the ring lugs attached to the cables to the appropriate terminals
  - Connect the ring lug of the green-yellow cable to earth ground.
  - Connect the ring lug of the black cable to the negative (-) DC power source.
  - Connect the ring lug of the red cable to the positive (+) DC power source.

The QFX5200-48Y is designed to operate with a DC power supply that has a single, non-redundant, feed input. For source redundancy, two DC power supplies must be installed in QFX5200-48Y; connect source (A) to one power supply and connect source (B) to the second power supply. This configuration provides the commonly deployed A/B feed redundancy for the system.



**CAUTION:** The connection between each power source and power supply must include a circuit breaker.

Do not connect two sources to a single power supply because doing so can potentially cause circulating current in feed wires whenever there is any difference in the voltage of the two sources.

6. Close the input circuit breaker.



**NOTE:** The switch powers on as soon as power is provided to the power supply. There is no power switch on the device.

7. Verify that the LED on each power supply is lit green and on steadily.

## RELATED DOCUMENTATION

[QFX5200 Power System | 50](#)

[QFX5200 Power Cord Specifications | 54](#)

# Register Products—Mandatory to Validate SLAs

Juniper Networks auto registers newly purchased products based on the end customer information provided at the point of sale. Registering products and changes to products activates your hardware replacement service-level agreements (SLAs).



**CAUTION:** Update the installation base data if any installation base data is added or changed or if the installation base is moved. Juniper Networks is not responsible for customers not meeting the hardware replacement service-level agreement (SLA) for products that do not have registered serial numbers or accurate installation base data. To know more about how to register your product and update your installation base, see [Juniper Networks Product Registration and Install Base Management](#).

# Performing the Initial Software Configuration for QFX5200 Switches

Before you begin connecting and configuring a QFX5200, set the following parameter values on the console server or PC:

- Baud Rate—9600
- Flow Control—None
- Data—8
- Parity—None
- Stop Bits—1
- DCD State—Disregard

You must perform the initial configuration of the QFX5200 through the console port using the CLI or through Zero Touch Provisioning (ZTP). In order to use ZTP to provision the device, you must have access to a Dynamic Host Control Protocol (DHCP) server, and a File Transfer Protocol (anonymous FTP), Hypertext Transfer Protocol (HTTP), or Trivial File Transfer Protocol (TFTP) server on which the software image and configuration files are stored. For more information about using ZTP for provisioning the device, see [Understanding Zero Touch Provisioning](#) in the *Installation and Upgrade Guide*.



**NOTE:** We no longer include the RJ-45 console cable with the DB-9 adapter as part of the device package. If the console cable and adapter are not included in your device package, or if you need a different type of adapter, you can order the following separately:

- RJ-45 to DB-9 adapter (JNP-CBL-RJ45-DB9)
- RJ-45 to USB-A adapter (JNP-CBL-RJ45-USBA)
- RJ-45 to USB-C adapter (JNP-CBL-RJ45-USBC)

If you want to use RJ-45 to USB-A or RJ-45 to USB-C adapter you must have X64 (64-Bit) Virtual COM port (VCP) driver installed on your PC. See, <https://ftdichip.com/drivers/vcp-drivers/> to download the driver.

To connect and configure the switch from the console:

1. Connect the console port to a laptop or PC using an RJ-45 cable and RJ-45 to DB-9 adapter. The console (**CON**) port is located on the management panel of the switch.
2. Log in as **root**. There is no password. If the software booted before you connected to the console port, you might need to press the Enter key for the prompt to appear.

```
login: root
```

3. Start the CLI.

```
root@% cli
```

4. Enter configuration mode.

```
root> configure
```

5. Add a password to the root administration user account.

```
[edit]
root@# set system root-authentication plain-text-password
New password: password
Retype new password: password
```

6. (Optional) Configure the name of the switch. If the name includes spaces, enclose the name in quotation marks (" ").

```
[edit]
root@# set system host-name host-name
```

7. Configure the default gateway.

- For standard Junos OS systems:

```
[edit]
root@# set routing-options static route default next-hop address
```

- For Junos OS Evolved systems:

```
[edit]
root@# set system management-instance
root@# set routing-instances mgmt_junos routing-options static route prefix/prefix-length next-hop default-gateway-ip-address
```

8. Configure the IP address and prefix length for the switch management interface.

- For standard Junos OS systems:

```
[edit]
root@# set interfaces em0 unit 0 family inet address ip-address/prefix-length
```

- For Junos OS Evolved systems:

```
[edit]
root@# set interfaces re0:mgmt-0 unit 0 family inet address ip-address/prefix-length
```



**CAUTION:** Although the CLI permits you to configure two management Ethernet interfaces within the same subnet, only one interface is usable and supported.



**NOTE:** On the QFX5200-48Y, the management port `em0` is the top right-hand RJ-45 port on the port panel.

9. (Optional) Configure the static routes to remote prefixes with access to the management port.

```
[edit]
root@# set routing-options static route remote-prefix next-hop destination-ip retain no-
readvertise
```

10. Enable services such as SSH and Telnet.



**NOTE:** You will not be able to log in to the switch as the root user through Telnet.  
Root login is allowed only through SSH.

- The default option for SSH is yes. Select this to enable SSH.
- The default option for Telnet is no. Change this to yes to enable Telnet.

11. Commit the configuration to activate it on the switch.

```
[edit]
root@# commit
```

## RELATED DOCUMENTATION

| [QFX5200 Installation Overview | 104](#)

# 5

CHAPTER

## Maintaining Components

---

### IN THIS CHAPTER

- Maintaining QFX5200 Cooling System | **147**
- Maintaining QFX5200 Power System | **150**
- Maintaining Transceivers and Fiber Optic Cables on QFX5200 | **154**
- Powering Off a QFX5200 | **163**

# Maintaining QFX5200 Cooling System

## IN THIS SECTION

- [Removing a Fan Module from a QFX5200 | 147](#)
- [Installing a Fan Module in a QFX5200 | 149](#)

## Removing a Fan Module from a QFX5200

Before you remove a fan module from a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).

Ensure that you have the following parts and tools available to remove a fan module from a QFX5200:

- ESD grounding strap
- Antistatic bag or an antistatic mat

The fan modules in QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs): you can remove and replace them without powering off the switch or disrupting switch functions.



**CAUTION:** Replace a failed fan module with a new fan module within 1 minute of removal to prevent chassis overheating. Before removing the fan module, ensure you have a replacement fan module at hand.

To remove a fan module from a QFX5200-32C or a QFX5200-32C-L (see [Figure 86 on page 148](#) and [Figure 87 on page 148](#)):

1. Place the antistatic bag or the antistatic mat on a flat, stable surface.
2. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.
3. Using a Phillips screwdriver, loosen the locking screw (3 or 4 turns).
4. On QFX5200-32C and QFX5200-32C-L models, grasp the handle on the fan module and squeeze the outside of the handle to release the module. On QFX5200-48Y models, use a screwdriver to loosen the captive screw with 3 or 4 turns.



**WARNING:** To avoid injury, do not touch the fan with your hands or any tools as you slide the fan module out of the chassis—the fan might still be running.

5. Pull firmly to slide the fan module halfway out of the chassis.
6. When the fan stop spinning, use your other hand to support the fan and slide the fan module completely out of the chassis.
7. Place the fan module in the antistatic bag or on the antistatic mat placed on a flat, stable surface.

Figure 86: Removing a Fan Module from a QFX5200-32C or QFX5200-32C-L


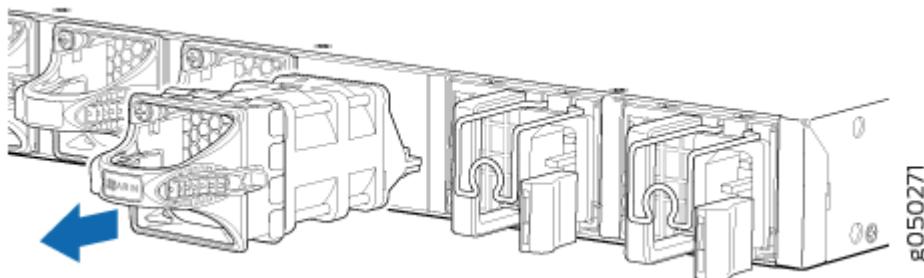


Figure 87: Removing a Fan Module from a QFX5200-48Y

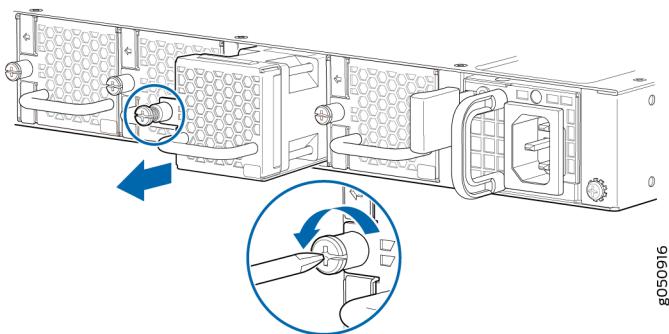

**NOTE:** When a fan module is removed, the CLI message **Fan/Blower is Absent** is logged in the system log, and the system raises a minor alarm.

## Installing a Fan Module in a QFX5200

Before you install a fan module in a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).

The fan modules in a QFX5200 are hot-removable and hot-insertable field-replaceable units (FRUs): you can remove and replace them without powering off the switch or disrupting switch functions.



**CAUTION:** Replace a failed fan module with a new fan module within 1 minute of removal to prevent chassis overheating. Before removing the fan module, ensure you have a replacement fan module at hand.



**NOTE:** The fan module provides FRU-to-port or port-to-FRU airflow depending on the switch product SKU you purchase. In legacy switches, or switches with an LCD, this airflow is called front to back and back to front.

To install a fan module in a QFX5200 (see [Figure 88 on page 150](#) and [Figure 89 on page 150](#)):

1. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.
2. Taking care not to touch the connectors, remove the fan module from its bag.
3. Align the module with the open slot on the management panel of the chassis and slide it in until it is fully seated.



**CAUTION:** Damage can occur if you attempt to install a fan module into a chassis with a different airflow direction. Compare the switch product SKU with the airflow marking on the handle to ensure that you are installing a fan module with the same airflow direction as the chassis. The fan modules are designed so that they can only be inserted into the QFX5200 product SKU that supports the same airflow type. See ["QFX5200 Cooling System" on page 40](#) for more information.

4. On QFX5200-48Y models, use a Phillips screwdriver to turn the locking screw until it is tight.

Figure 88: Installing a Fan Module in a QFX5200-32C and QFX5200-32C-L


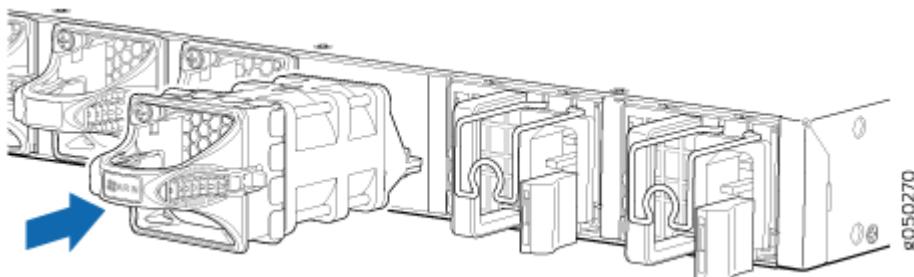


Figure 89: Installing a Fan Module in a QFX5200-48Y

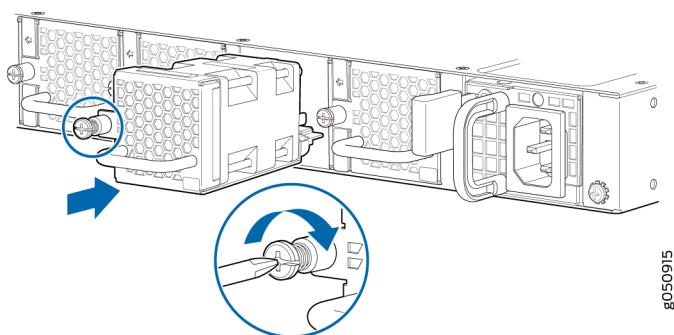

## RELATED DOCUMENTATION

[QFX5200 Cooling System | 40](#)

[QFX5200 Field-Replaceable Units | 20](#)

[QFX5200 Switch Management | 30](#)

# Maintaining QFX5200 Power System

## IN THIS SECTION

- [Removing a Power Supply from a QFX5200 | 151](#)

- Installing a Power Supply in a QFX5200 | 153

## Removing a Power Supply from a QFX5200

Before you remove a power supply from a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see ["Prevention of Electrostatic Discharge Damage" on page 213](#)).

Ensure that you have the following parts and tools available to remove a power supply from a QFX5200:

- ESD grounding strap
- Antistatic bag or an antistatic mat
- Phillips (+) screwdriver, number 2 (DC power supply)

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.



**CAUTION:** Replace the power supply with a new power supply within 1 minute of removal to prevent chassis overheating.

To remove a power supply from a QFX5200 (see [Figure 90 on page 152](#) and [Figure 91 on page 152](#)):

1. Place the antistatic bag or the antistatic mat on a flat, stable surface.
2. Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.



**NOTE:** If only one power supply is installed in your QFX5200, you need to power off the switch before removing the power supply. See ["Powering Off a QFX5200" on page 163](#).

3. Disconnect power to the switch:
  - AC power supply—If the AC power source outlet has a power switch, set it to the OFF (O) position. If the AC power source outlet does not have a power switch, gently pull out the plug end of the power cord connected to the power source outlet.


- DC power supply—Switch the circuit breaker on the panel board that services the DC circuit to the OFF position.

4. Remove the power source cable from the power supply faceplate:
  - AC power supply—Remove the power cord from the power supply faceplate by detaching the power cord retainer and gently pulling out the socket end of the power cord connected to the power supply faceplate.
  - DC power supply—On QFX5200-32C, remove the screws securing the ring lugs attached to the power source cables to the power supply using the screwdriver, and remove the power source cables from the power supply. Replace the screws on the terminals and tighten them.


On QFX5200-48Y, remove the power source cables from the power supply

5. Slide the locking lever toward the handle until it stops.
6. Grasp the power supply handle and pull firmly to slide the power supply halfway out of the chassis.
7. Place one hand under the power supply to support it and slide it completely out of the chassis. Take care not to touch power supply components, pins, leads, or solder connections.
8. Place the power supply in the antistatic bag or on the antistatic mat placed on a flat, stable surface.

**Figure 90: Removing a Power Supply from a QFX5200-32C or a QFX5200-32C-L**

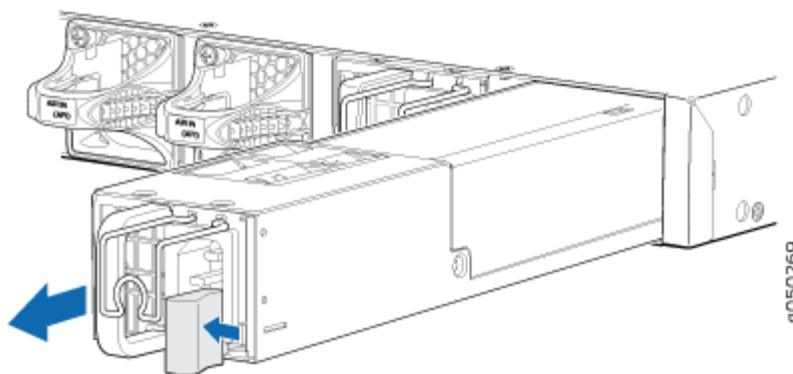

**Figure 91: Removing a Power Supply from a QFX5200-48Y**

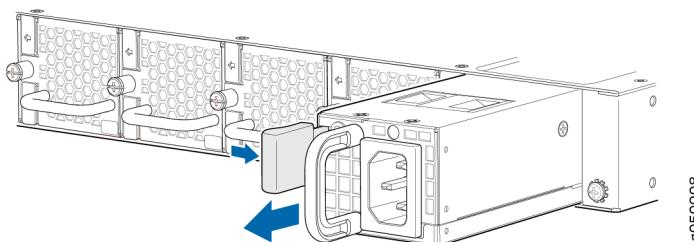

## Installing a Power Supply in a QFX5200

- Before you install a power supply in a QFX5200, ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage (see "Prevention of Electrostatic Discharge Damage" on page 213).
- Ensure that the airflow direction of the power supply is the same as the chassis. Labels on the power supply handle indicate the direction of airflow. See "QFX5200 Cooling System" on page 40 for more information.

The QFX5200 is shipped from the factory with two power supplies. Each power supply is a hot-removable and hot-insertable field-replaceable unit (FRU) when the second power supply is installed and running. You can install replacement power supplies in the two slots next to the fan modules without powering off the switch or disrupting the switching function.

To install a power supply in a QFX5200 (see Figure 92 on page 153 and Figure 93 on page 154):

- Attach the ESD grounding strap to your bare wrist, and connect the strap to the ESD point on the chassis.
- Taking care not to touch power supply components, pins, leads, or solder connections, remove the power supply from its bag.



**CAUTION:** Verify that the direction of the arrow on the power supply handle matches the direction of airflow in the chassis. Ensure that each power supply you install in the chassis has the same airflow direction. If you install power supplies with two different airflow directions, Junos OS raises an alarm, and the status (**ALM**) LED blinks amber.

- Using both hands, place the power supply in the power supply slot on the FRU panel of the switch and slide it in until it is fully seated and the locking lever slides into place.

Figure 92: Installing a Power Supply in a QFX5200-32C or a QFX5200-32C-L


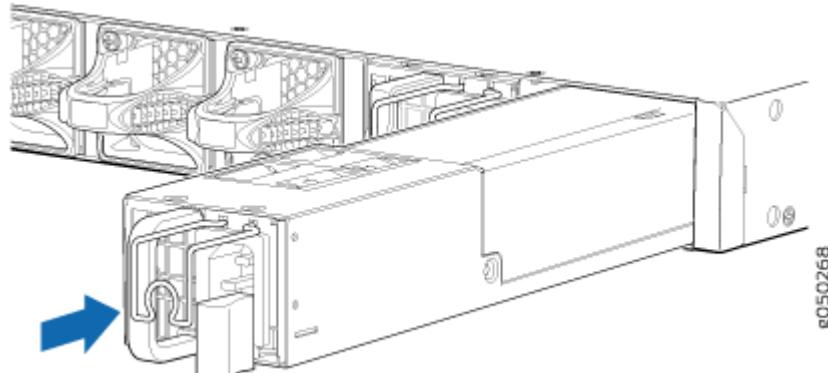


Figure 93: Installing a Power Supply in a QFX5200-48Y



**NOTE:** Each power supply must be connected to a dedicated power source outlet.

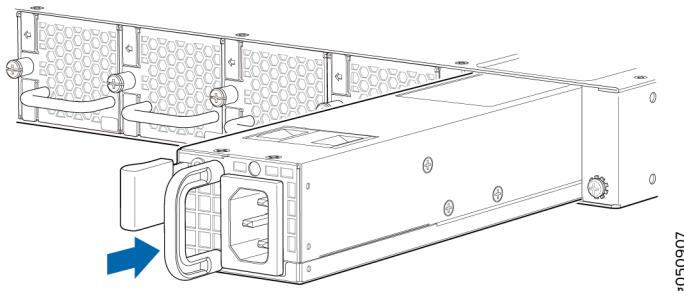

**NOTE:** If you have a Juniper Care service contract, register any addition, change, or upgrade of hardware components at <https://www.juniper.net/customers/support/tools/updateinstallbase/>. Failure to do so can result in significant delays if you need replacement parts. This note does not apply if you replace existing components with the same type of component.

## RELATED DOCUMENTATION

[QFX5200 Power System | 50](#)

[Connecting the QFX5200 to Power | 128](#)

[QFX5200 Field-Replaceable Units | 20](#)

# Maintaining Transceivers and Fiber Optic Cables on QFX5200

## IN THIS SECTION

● [QFX5200-32C-L Time Allowance | 155](#)

- Remove a Transceiver | 155
- Install a Transceiver | 157
- Disconnect a Fiber-Optic Cable | 160
- Connect a Fiber-Optic Cable | 161
- How to Handle Fiber-Optic Cables | 162

## QFX5200-32C-L Time Allowance



**NOTE:** When removing and inserting optics in Junos OS Evolved systems, maintain a 5 second pause between removing the optic and inserting an optic in a port.

## Remove a Transceiver

Before you remove a transceiver from a device, ensure that you have taken the necessary precautions for the safe handling of lasers (see [Laser and LED Safety Guidelines and Warnings](#)).

Ensure that you have the following parts and tools available:

- An antistatic bag or an antistatic mat
- Rubber safety caps to cover the transceiver and fiber-optic cable connector
- A dust cover to cover the port or a replacement transceiver

The transceivers for Juniper Networks devices are hot-removable and hot-insertable field-replaceable units (FRUs). You can remove and replace the transceivers without powering off the device or disrupting device functions.



**NOTE:** After you remove a transceiver, or when you change the media-type configuration, wait for 6 seconds for the interface to display the operational commands.

[Figure 94 on page 157](#) shows how to remove a quad small form-factor pluggable plus (QSFP+) transceiver. The procedure is the same for all types of transceivers except the QSFP28 and C form-factor pluggable (CFP) transceivers.

To remove a transceiver from a device:

1. Place the antistatic bag or antistatic mat on a flat, stable surface.
2. Wrap and fasten one end of the ESD wrist strap around your bare wrist, and connect the other end of the strap to the ESD point on the rack.
3. Label the cable connected to the transceiver so that you can reconnect it correctly.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.



**LASER WARNING:** Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.



**CAUTION:** Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

4. Remove the cable connected to the transceiver (see [Disconnect a Fiber-Optic Cable](#)). Cover the transceiver and the end of each fiber-optic cable connector with a rubber safety cap immediately after disconnecting the fiber-optic cables.
5. If there is a cable management system, arrange the cable in the cable management system to prevent it from dislodging or developing stress points. Secure the cable so that it does not support its own weight as it hangs to the floor. Place excess cable out of the way in a neatly coiled loop in the cable management system. Placing fasteners on the loop helps to maintain its shape.
6. To remove an SFP56-DD, SFP, SFP+, XFP, a QSFP+, or QSFP56-DD transceiver:

- a. Using your fingers, pull open the ejector lever on the transceiver to unlock the transceiver.

Note that QSFP-DD and SFP-DD transceivers don't have ejector levers, instead they have a pull tab which can be used to unlock and remove the transceiver.




**CAUTION:** Before removing the transceiver, make sure that you open the ejector lever completely until you hear it click. This precaution prevents damage to the transceiver.

- b. Grasp the transceiver ejector lever and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



**CAUTION:** To prevent ESD damage to the transceiver, do not touch the connector pins at the end of the transceiver.

Figure 94: Remove a QSFP+ Transceiver

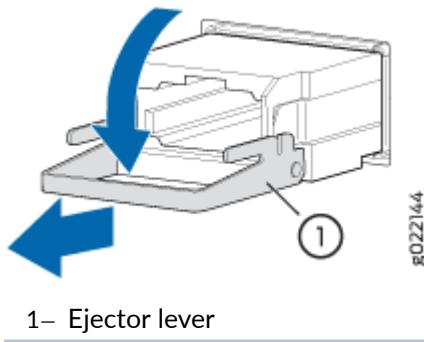

To remove a CFP transceiver:

- a. Using your fingers, loosen the screws on the transceiver.
- b. Grasp the screws on the transceiver and gently slide the transceiver approximately 0.5 in. (1.3 cm) straight out of the port.



**CAUTION:** To prevent ESD damage to the transceiver, do not touch the connector pins at the end of the transceiver.

7. Using your fingers, grasp the body of the transceiver and pull it straight out of the port.
8. Place the transceiver in the antistatic bag or on the antistatic mat placed on a flat, stable surface.
9. Place the dust cover over the empty port, or install the replacement transceiver.

## Install a Transceiver

Before you install a transceiver in a device, ensure that you have taken the necessary precautions for safe handling of lasers (see [Laser and LED Safety Guidelines and Warnings](#)).

Ensure that you have a rubber safety cap available to cover the transceiver.

The transceivers for Juniper Networks devices are hot-removable and hot-insertable field-replaceable units (FRUs). You can remove and replace the transceivers without powering off the device or disrupting the device functions.



**NOTE:** After you insert a transceiver or after you change the media-type configuration, wait for 6 seconds for the interface to display operational commands.



**NOTE:** We recommend that you use only optical transceivers and optical connectors purchased from Juniper Networks with your Juniper Networks device.



**CAUTION:** The Juniper Networks Technical Assistance Center (JTAC) provides complete support for Juniper-supplied optical modules and cables. However, JTAC does not provide support for third-party optical modules and cables that are not qualified or supplied by Juniper Networks. If you face a problem running a Juniper device that uses third-party optical modules or cables, JTAC may help you diagnose host-related issues if the observed issue is not, in the opinion of JTAC, related to the use of the third-party optical modules or cables. Your JTAC engineer will likely request that you check the third-party optical module or cable and, if required, replace it with an equivalent Juniper-qualified component.

Use of third-party optical modules with high-power consumption (for example, coherent ZR or ZR+) can potentially cause thermal damage to or reduce the lifespan of the host equipment. Any damage to the host equipment due to the use of third-party optical modules or cables is the users' responsibility. Juniper Networks will accept no liability for any damage caused due to such use.

[Figure 95 on page 160](#) shows how to install a QSFP+ transceiver. The procedure is the same for all types of transceivers except the QSFP28 and CFP transceivers.

To install a transceiver:



**CAUTION:** To prevent electrostatic discharge (ESD) damage to the transceiver, do not touch the connector pins at the end of the transceiver.

1. Wrap and fasten one end of the ESD wrist strap around your bare wrist, and connect the other end of the strap to a site ESD point or to the ESD point on the device.
2. Remove the transceiver from its bag.
3. Check to see whether the transceiver is covered with a rubber safety cap. If it is not, cover the transceiver with a rubber safety cap.



**LASER WARNING:** Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

4. If the port in which you want to install the transceiver is covered with a dust cover, remove the dust cover and save it in case you need to cover the port later. If you are hot-swapping a transceiver, wait for at least 10 seconds after removing the transceiver from the port before installing a new transceiver.
5. Using both hands, carefully place the transceiver in the empty port. The connectors must face the chassis.



**CAUTION:** Before you slide the transceiver into the port, ensure that the transceiver is aligned correctly. Misalignment might cause the pins to bend, making the transceiver unusable.

6. Slide the transceiver in gently until it is fully seated. If you are installing a CFP transceiver, use your fingers to tighten the captive screws on the transceiver.
7. Remove the rubber safety cap from the transceiver and the end of the cable, and insert the cable into the transceiver.



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cable connected to a transceiver emit laser light that can damage your eyes.



**CAUTION:** Do not leave a fiber-optic transceiver uncovered except when inserting or removing cable. The safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

8. If there is a cable management system, arrange the cable in the cable management system to prevent the cable from dislodging or developing stress points. Secure the cable so that it does not support its own weight as it hangs toward the floor. Place excess cable out of the way in a neatly coiled loop in the cable management system. Placing fasteners on the loop helps to maintain its shape.



**CAUTION:** Do not let fiber-optic cable hang free from the connector. Do not allow fastened loops of cable to dangle, which stresses the cable at the fastening point.



**CAUTION:** Avoid bending the fiber-optic cable beyond its minimum bend radius. An arc smaller than a few inches in diameter can damage the cable and cause problems that are difficult to diagnose.



**NOTE:** When you install SFP-DD transceivers, push it hard until you hear a click sound. Use a long nose plier to pull the SFP-DD transceiver connected on the top and bottom rows of the chassis where the pull tabs face each other.




**NOTE:** Make sure to use a dust cap to cover ports that are unused.



**NOTE:** While using Finisar AOC SFP+ optical module with the QFX5130-48C switch, you may need to pull the module upwards to pull out the module smoothly from the cage.

**Figure 95: Install a Transceiver**

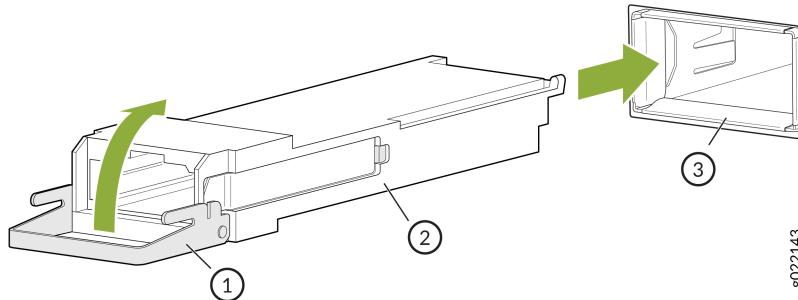

8022143

1– Ejector lever

3– Port

2– Transceiver

## Disconnect a Fiber-Optic Cable

Before you disconnect a fiber-optic cable from an optical transceiver, ensure that you have taken the necessary precautions for safe handling of lasers. See [Laser and LED Safety Guidelines and Warnings](#).

Ensure that you have the following parts and tools available:

- A rubber safety cap to cover the transceiver
- A rubber safety cap to cover the fiber-optic cable connector

Juniper Networks devices have optical transceivers to which you can connect fiber-optic cables.

To disconnect a fiber-optic cable from an optical transceiver installed in the device:

1. Disable the port in which the transceiver is installed by issuing the following command:

```
[edit interfaces]
user@device# set interface-name disable
```



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

2. Carefully unplug the fiber-optic cable connector from the transceiver.

3. Cover the transceiver with a rubber safety cap.



**LASER WARNING:** Do not leave a fiber-optic transceiver uncovered except when inserting or removing a cable. The rubber safety cap keeps the port clean and protects your eyes from accidental exposure to laser light.

4. Cover the fiber-optic cable connector with the rubber safety cap.

## Connect a Fiber-Optic Cable

Before you connect a fiber-optic cable to an optical transceiver installed in a device, take the necessary precautions for safe handling of lasers (see [Laser and LED Safety Guidelines and Warnings](#)).


To connect a fiber-optic cable to an optical transceiver installed in a device:



**LASER WARNING:** Do not look directly into a fiber-optic transceiver or into the ends of fiber-optic cables. Fiber-optic transceivers and fiber-optic cables connected to transceivers emit laser light that can damage your eyes.

1. If the fiber-optic cable connector is covered with a rubber safety cap, remove the cap. Save the cap.

2. Remove the rubber safety cap from the optical transceiver. Save the cap.
3. Insert the cable connector into the optical transceiver.

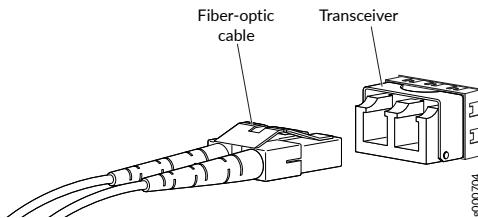

4. Secure the cables so that they do not support their own weight. Place excess cable out of the way in a neatly coiled loop. Placing fasteners on a loop helps cables maintain their shape.



**CAUTION:** Do not bend fiber-optic cables beyond their minimum bend radius. An arc smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.

Do not let fiber-optic cables hang free from the connector. Do not allow fastened loops of cables to dangle, which stresses the cables at the fastening point.

## How to Handle Fiber-Optic Cables

Fiber-optic cables connect to optical transceivers that are installed in Juniper Networks devices.

Follow these guidelines when handling fiber-optic cables:

- When you unplug a fiber-optic cable from a transceiver, place rubber safety caps over the transceiver and on the end of the cable.
- Anchor fiber-optic cables to prevent stress on the connectors. When attaching a fiber-optic cable to a transceiver, secure the fiber-optic cable so that it does not support its own weight as it hangs to the floor. Never let a fiber-optic cable hang free from the connector.
- Avoid bending the fiber-optic cables beyond their minimum bend radius. Bending fiber-optic cables into arcs smaller than a few inches in diameter can damage the cables and cause problems that are difficult to diagnose.
- Frequent plugging and unplugging of fiber-optic cables in and out of optical instruments can damage the instruments, which are expensive to repair. To prevent damage from overuse, attach a short fiber extension to the optical equipment. The short fiber extension absorbs wear and tear due to frequent plugging and unplugging. It is easier and more cost-efficient to replace the short fiber extension than to replace the instruments.

- Keep fiber-optic cable connections clean. Microdeposits of oil and dust in the canal of the transceiver or cable connector can cause loss of light, reduction in signal power, and possibly intermittent problems with the optical connection.
- To clean the transceiver canal, use an appropriate fiber-cleaning device such as RIFOCS Fiber Optic Adaptor Cleaning Wands (part number 946). Follow the instructions in the cleaning kit you use.
- After cleaning the transceiver, make sure that the connector tip of the fiber-optic cable is clean. Use only an approved alcohol-free fiber-optic cable cleaning kit such as the Opptex Cletop-S® Fiber Cleaner. Follow the instructions in the cleaning kit you use.

## RELATED DOCUMENTATION

| [QFX5200 Network Cable and Transceiver Planning | 84](#)

# Powering Off a QFX5200

Before you remove the power cord to power off a QFX5200:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage. See ["Prevention of Electrostatic Discharge Damage" on page 213](#).
- Ensure that you do not need to forward traffic through the switch.



**NOTE:** Use the following procedure to turn off power on a QFX5200 standalone switch.

Ensure that you have the following parts and tools available to power off the switch:

- An ESD grounding strap
- An external management device such as a PC
- An RJ-45 to DB-9 rollover cable to connect the external management device to the console port

To power off a QFX5200 switch:

1. Connect to the switch using one of the following methods:
  - Connect a management device to the console (CON) port on a QFX5200. For instructions about connecting a management device to the console (CON) port, see ["Connect a Device to a Management Console Using an RJ-45 Connector" on page 126](#).

- You can shut down the QFX5200 from a management device on your out-of-band management network. For instructions about connecting a management device to the management (CO) port, see ["Connect a Device to a Network for Out-of-Band Management" on page 126](#).

2. Shut down Junos OS from the external management device.

For Junos OS Evolved systems:

- Issue the `request system shutdown power-off` operational mode CLI command. This command shuts down the switch gracefully and preserves system state information. A message appears on the console, confirming that the operating system has halted.

On Junos OS Evolved systems, you see the following output:

```
user@host>request system shutdown power-off
Power off the system ? [yes,no] (n) yes

poweroff the system at Tue Sep 18 11:15:27 2018
```

For standard Junos OS systems:

- Issue the `request system halt` operational mode CLI command. This command shuts down the switch gracefully and preserves system state information. A message appears on the console, confirming that the operating system has halted.

You see the following output (or something similar, depending on the hardware being shut down) after entering the command:

```
Shutdown NOW!
System going down IMMEDIATELY

Terminated
Poweroff for hypervisor to respawn
Oct 25 10:35:05 init: event-processing (PID 1114) exited with status=1
Oct 25 10:35:05 init: packet-forwarding-engine (PID 1424) exited with status=8
.

Waiting (max 60 seconds) for system process `vnlnru_mem' to stop...done
Waiting (max 60 seconds) for system process `vnlnru' to stop...done
Waiting (max 60 seconds) for system process `bufdaemon' to stop...done
Waiting (max 60 seconds) for system process `syncer' to stop...
Syncing disks, vnodes remaining...0 0 0 0 done

syncing disks... All buffers synced.
Uptime: 11h0m30s
```

```
Normal shutdown (no dump device defined)
unloading fpga driver
unloading fx-scp1d
Powering system off using ACPI
kvm: 28646: cpu0 disabled perfctr wrmsr: 0xc1 data 0xabcd
pci-stub 0000:01:00.2: transaction is not cleared; proceeding with reset anyway
pci-stub 0000:01:00.1: transaction is not cleared; proceeding with reset anyway
hub 1-1:1.0: over-current change on port 1
Stopping crond: [ OK ]
Stopping libvirda daemon: [ OK ]
Shutting down ntpd: [ OK ]
Shutting down system logger: [ OK ]
Shutting down sntpc: [ OK ]
Stopping sshd: [ OK ]
Stopping vehostd: [ OK ]
Stopping watchdog: [ OK ]
Stopping xinetd: [ OK ]
Sending all processes the TERM signal... [ OK ]
Sending all processes the KILL signal... [ OK ]
Saving random seed: [ OK ]
Syncing hardware clock to system time [ OK ]
Turning off swap: [ OK ]
Unmounting file systems: [ OK ]
init: Re-executing /sbin/init
Halting system...
System halted.
```



**CAUTION:** Wait at least 60 seconds after first seeing the final message before following the instructions in Step 4 and Step 5 to power off the switch.

3. Attach the grounding strap to your bare wrist and to a site ESD point.
4. Disconnect power to the switch by performing one of the following tasks:
  - AC power supply—If the AC power source outlet has a power switch, set it to the OFF (O) position. If the AC power source outlet does not have a power switch, gently pull out the plug end of the power cord connected to the power source outlet.
  - DC power supply—Switch the circuit breaker on the panel board that services the DC circuit to the OFF position.
5. Remove the power source cable from the power supply faceplate:

- AC power supply—Remove the power cord from the power supply faceplate by detaching the power cord retainer and gently pulling out the socket end of the power cord connected to the power supply faceplate.
- DC power supply—Remove the screws securing the ring lugs attached to the power source cables to the power supply using the screwdriver, and remove the power source cables from the power supply. Replace the screws on the terminals and tighten them.

6. Uncable the switch before removing it from the rack or cabinet.

#### RELATED DOCUMENTATION

| [Connecting the QFX5200 to Power | 128](#)

# 6

CHAPTER

## Troubleshooting Hardware

---

### IN THIS CHAPTER

- Troubleshooting the QFX5200 | **168**

---

# Troubleshooting the QFX5200

## IN THIS SECTION

- [QFX5200 Troubleshooting Resources Overview | 168](#)
- [QFX Series Alarm Messages Overview | 169](#)
- [Chassis Alarm Messages | 169](#)

## QFX5200 Troubleshooting Resources Overview

To troubleshoot a QFX5200, you use the Junos OS CLI, alarms, and LEDs on the network ports, management panel, and components.

- LEDs—When the Routing Engine detects an alarm condition, it lights the red or yellow alarm LED on the management panel as appropriate. In addition, you can also use component LEDs and network port LEDs to troubleshoot the QFX5200. For more information, see the following topics:
  - ["QFX5200 Chassis Status LEDs" on page 36](#)
  - ["QFX5200 Management Panel Overview" on page 30](#)
  - ["QFX5200-32C and QFX5200-32C-L Port Panel" on page 21](#)
  - ["QFX5200-48Y Port Panel" on page 25](#)
  - ["QFX5200-32C and QFX5200-32C-L Fan Module LED" on page 48](#)
  - ["QFX5200 AC Power Supply LEDs" on page 56](#)
  - ["QFX5200 DC Power Supply LEDs" on page 62](#)
- CLI—The CLI is the primary tool for controlling and troubleshooting hardware, Junos OS, routing protocols, and network connectivity. CLI commands display information from routing tables, information specific to routing protocols, and information about network connectivity derived from the ping and traceroute utilities. For information about using the CLI to troubleshoot Junos OS, see the appropriate Junos OS configuration guide.
- JTAC—if you need assistance during troubleshooting, you can contact the Juniper Networks Technical Assistance Center (JTAC) by using the Web or by telephone. If you encounter software problems, or problems with hardware components not discussed here, contact JTAC.

- Knowledge Base articles—[Knowledge Base](#).

## SEE ALSO

| [Contact Customer Support](#)

## QFX Series Alarm Messages Overview

When a QFX Series switch detects an alarm condition, it lights the red or yellow alarm LED on the management panel as appropriate. To view a more detailed description of the alarm cause, issue the `show chassis alarms` CLI command:

```
user@host> show chassis alarms
6 alarms currently active
Alarm time          Class  Description
2018-02-07 12:12:18 PST Major   FPC Management1 Ethernet Link Down
2018-02-07 12:11:54 PST Minor   FPC0: LED 3:Alarm LED Read Error
2018-02-07 12:11:54 PST Minor   FPC0: LED 3:Alarm LED Write Error
2018-02-07 12:11:54 PST Major   FPC0: PEM 1 Not Supported
2018-02-07 12:11:54 PST Major   FPC0: PEM 0 Not Supported
2018-02-07 12:11:54 PST Major   FPC0: PEM 0 Not Powered
```

For Junos OS Evolved systems, `show system alarms` CLI command indicates major and minor alarms on the system. In this example from a Junos OS Evolved system, a fan tray error is shown in slot 4.

```
user@host> show system alarms
2 alarms currently active
Alarm time          Class  Description
2018-11-15 11:52:22 PST Major   Fan Tray 4 Failure  <<<<
2018-11-15 10:40:08 PST Minor   Host 0 Disk 2 Labelled incorrectly
```

## Chassis Alarm Messages

Chassis alarms indicate a failure on the device or one of its components. Chassis alarms are preset and cannot be modified.

Chassis alarms on QFX5200 devices have two severity levels:

- Major (red)—Indicates a critical situation on the device that has resulted from one of the conditions described in [Table 45 on page 170](#). A red alarm condition requires immediate action.
- Minor (yellow)—Indicates a noncritical condition on the device that, if left unchecked, might cause an interruption in service or degradation in performance. A yellow alarm condition requires monitoring or maintenance.

[Table 45 on page 170](#) describes the chassis alarm messages on QFX5200-32C and QFX5200-48Y devices. For QFX5200-32C-L devices see [Table 46 on page 174](#).

**Table 45: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y**

| Component | Alarm Type     | CLI Message                        | Recommended Action   |
|-----------|----------------|------------------------------------|--|
| Fans      | Major (red)    | Fan Failure                        | Replace the fan module and report the failure to customer support.   |
|           |                | Fan I2C Failure                    | <p>Check the system log for one of the following error messages and report the message to customer support:</p> <ul style="list-style-type: none"> <li>• CM ENV Monitor: Get fan speed failed.</li> <li>• <i>fan-number</i> is NOT spinning @ correct speed, where <i>fan-number</i> can be 1, 2, 3, 4, or 5.</li> </ul> |
|           |                | Fan <i>fan-number</i> Not Spinning | Remove and check the fan module for obstructions, and then reinsert the fan module. If the problem persists, replace the fan module.   |
|           | Minor (yellow) | Fan/Blower Absent                  | <p>Check the system log for the error message <i>fan-number</i> Absent, where <i>fan-number</i> can be can be 1, 2, 3, 4, or 5.</p> <p>Install fan modules in the slots where they are absent.</p>   |

**Table 45: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (Continued)**

| Component      | Alarm Type     | CLI Message  | Recommended Action  |
|----------------|----------------|--|---|
| Power supplies | Major (red)    | PEM <i>pem-number</i> Airflow not matching Chassis Airflow | Replace the power supply with a power supply that supports the same airflow direction as supported by the chassis.  |
|                |                | PEM <i>pem-number</i> I2C Failure                          | <p>Check the system log for one of the following error messages and report the message to customer support:</p> <ul style="list-style-type: none"> <li>• I2C Read failed for device <i>number</i>, where <i>number</i> where <i>number</i> ranges from 123 through 125.</li> <li>• PS <i>number</i>: Transitioning from online to offline, where power supply <i>number</i> is 1 or 2.</li> </ul> |
|                |                | PEM <i>pem-number</i> is not powered                       | Check the power cord connection and reconnect, if necessary.  |
|                |                | PEM <i>pem-number</i> is not supported                     | Replace the power supply with a supported power supply.   |
|                |                | PEM <i>pem-number</i> Not OK                               | Indicates a problem with the incoming AC power or outgoing DC power. Report the error to customer support.  |
|                | Minor (yellow) | PEM <i>pem-number</i> Absent                               | <p>Reboot the switch after removing one of the power supply. The switch can continue to operate with a single power supply.</p> <p>OR</p> <p>Replace the removed power supply and reboot the switch.</p>  |

**Table 45: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (Continued)**

| Component           | Alarm Type     | CLI Message                                      | Recommended Action  |
|---------------------|----------------|--|---|
|                     |                | PEM <i>pem-number</i> Power Supply Type Mismatch | Check whether there is a mix of AC and DC power supplies in the same chassis. Reboot the switch with only AC or only DC power supplies.   |
|                     |                | PEM <i>pem-number</i> Removed                    | Replace the removed power supply or reboot the switch. The switch can continue to operate with a single power supply.   |
| Temperature sensors | Major (red)    | <i>sensor-location</i> Temp Sensor Fail          | <p>Check the system log for the following error message and report the message to customer support:</p> <p>Temp sensor <i>sensor-number</i> failed, where <i>sensor-number</i> ranges from 1 through 10.</p>                              |
|                     |                | <i>sensor-location</i> Temp Sensor Too Hot       | Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor. If the condition persists, the device might shut down. |
|                     | Minor (yellow) | <i>sensor-location</i> Temp Sensor Too Warm      | Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor.  |
| Routing Engine      | Minor (yellow) | RE <i>RE number</i> /var partition usage is high | Clean up the system file storage space on the switch. For more information, see <i>Cleaning Up the System File Storage Space</i> .  |

Table 45: Chassis Alarm Messages for QFX5200-32C and QFX5200-48Y (Continued)

| Component                     | Alarm Type     | CLI Message   | Recommended Action   |
|-------------------------------|----------------|---|--|
|                               | Major (red)    | RE <i>RE number</i> /var partition is full  | Clean up the system file storage space on the switch. For more information, see <i>Cleaning Up the System File Storage Space</i> .   |
|                               | Minor (yellow) | Rescue configuration is not set   | Use the <b>request system configuration rescue save</b> command to set the rescue configuration. For more information, see <i>Setting or Deleting the Rescue Configuration</i> .   |
|                               |                | <i>Feature</i> usage requires a license<br>or<br>License for <i>feature</i> expired | Install the required license for the feature specified in the alarm. For more information, see <i>Software Features That Require Licenses on the QFX Series</i> .  |
| Management Ethernet interface | Major (red)    | Management Ethernet 1 Link Down   | <p>Check whether a cable is connected to the management Ethernet interface, or whether the cable is defective. Replace the cable, if required.</p> <p>On models that have both em0 and em1 management interfaces available, you must connect both interfaces. If both interfaces are not connected, the alarm is raised. However, the alarm has no service impact.</p> <p>If you are unable to resolve the problem, open a support case by using the Case Manager link at <a href="https://www.juniper.net/support/">https://www.juniper.net/support/</a> or call 1-888-314-5822 (tollfree, US or 1-408-745-9500 (from outside the United States).</p> |

Junos OS Evolved systems, such as QFX5200-32C-L are based on a new alarm infrastructure, not all power supplies and fan alarms are supported. [Table 46 on page 174](#) shows these alarms.

**Table 46: Chassis Alarm Messages for QFX5200-32C-L**

| Component           | Alarm Type     | CLI Message                             | Recommended Action  |
|---------------------|----------------|---|---|
| Fans                | Red (major)    | Fan Tray <i>fan-tray-number</i> Absent  | Install fan modules in the slots where they are absent.   |
|                     |                | Fan Tray <i>fan-tray-number</i> Failure | Remove and check fan module for obstructions. Reinsert the fan module. If the problem persists, replace the fan module.   |
|                     | Yellow (minor) | FAN <i>fan-number</i> Fan Sensor Fail   | Remove and check fan module for obstructions. Reinsert the fan module. If the problem persists, check the system log for the message related to the sensor and report the message to customer service.                                    |
| Power Supplies      | Red (major)    | PEM <i>pem-number</i> Not Powered       | Install a power supply into the empty slot and ensure the power supply is powered.  |
| Temperature sensors | Major (red)    | FPC 0 Temperature Hot                   | Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor. If the condition persists, the device might shut down. |

**Table 46: Chassis Alarm Messages for QFX5200-32C-L (Continued)**

| Component                     | Alarm Type     | CLI Message   | Recommended Action   |
|-------------------------------|----------------|---|--|
|                               | Minor (yellow) | FPC 0 Temperature Warm  | Check environmental conditions and alarms on other devices. Ensure that environmental factors (such as hot air blowing around the equipment) do not affect the temperature sensor. |
|                               |                | FPC 0 Temp Sensor Fail  | Check the system log for the following error message and report the message to customer support:   |
| Management Ethernet interface | Major (red)    | Management interface <i>management-interface-name</i> down on <i>node</i> | Check whether a cable is connected to the management Ethernet interface, or whether the cable is defective. Replace the cable, if required.  |

## RELATED DOCUMENTATION

[Definitions of Safety Warning Levels | 189](#)

[Configuring Junos OS to Determine Conditions That Trigger Alarms on Different Interface Types](#)  
[alarm](#)

# 7

CHAPTER

## Contacting Customer Support and Returning the Chassis or Components

---

### IN THIS CHAPTER

- Contact Customer Support to Obtain a Return Material Authorization | **177**
- Returning the QFX5200 Chassis or Components | **178**

---

# Contact Customer Support to Obtain a Return Material Authorization

If you need to return a device or hardware component to Juniper Networks for repair or replacement, obtain an RMA number from JTAC. You must obtain an RMA number before you attempt to return the component.

After locating the serial number of the device or hardware component you want to return, open a service request with the JTAC on the Web or by telephone.

Before you request an RMA number from JTAC, be prepared to provide the following information:

- Your existing service request number, if you have one
- Serial number of the component
- Your name, organization name, telephone number, fax number, and shipping address
- Details of the failure or problem
- Type of activity being performed on the device when the problem occurred
- Configuration data displayed by one or more show commands

You can contact JTAC 24 hours a day, seven days a week, on the Web or by telephone:

- Service Request Manager: <https://support.juniper.net/support>
- Telephone: +1-888-314-JTAC (+1-888-314-5822), toll free in U.S., Canada, and Mexico



**NOTE:** For international or direct-dial options in countries without toll free numbers, see <https://support.juniper.net/support>.

If you are contacting JTAC by telephone, enter your 12-digit service request number followed by the pound (#) key for an existing case, or press the star (\*) key to be routed to the next available support engineer.

The support representative validates your request and issues an RMA number for return of the component.

# Returning the QFX5200 Chassis or Components

## IN THIS SECTION

- Locating the Serial Number on a QFX5200 Device or Component | [178](#)
- How to Return a Hardware Component to Juniper Networks, Inc. | [182](#)
- Guidelines for Packing Hardware Components for Shipment | [183](#)
- Packing a QFX5200 Device or Component for Shipping | [184](#)

## Locating the Serial Number on a QFX5200 Device or Component

### IN THIS SECTION

- Listing the Chassis and Component Details Using the CLI | [179](#)
- Locating the Chassis Serial Number ID Label on a QFX5200 | [181](#)
- Locating the Serial Number ID Labels on FRU Components | [182](#)

If you are returning a switch or component to Juniper Networks for repair or replacement, you must locate the serial number of the switch or component. You must provide the serial number to the Juniper Networks Technical Assistance Center (JTAC) when you contact them to obtain a Return Materials Authorization (RMA).

If the switch is operational and you can access the command-line interface (CLI), you can list serial numbers for the switch and for some components with a CLI command. If you do not have access to the CLI or if the serial number for the component does not appear in the command output, you can locate the serial number ID label on the switch or component.



**NOTE:** If you want to find the serial number ID label on a component, you need to remove the component from the switch chassis, for which you must have the required parts and tools available.

## Listing the Chassis and Component Details Using the CLI

To list the QFX5200 switch and components and their serial numbers, use the `show chassis hardware` CLI operational mode command. The following examples shows the output for the QFX5200-32C models.

```
user@device> show chassis hardware
Hardware inventory:
  Item      Version  Part number  Serial number  Description
  Chassis                WH3615220019  Qfx5200-32c-32q
  Pseudo CB 0
  Routing Engine 0      BUILTIN    BUILTIN      QFX Routing Engine
  FPC 0                 650-059719  WH3615220019  Qfx5200-32c-32q
    CPU                  BUILTIN    BUILTIN      FPC CPU
    PIC 0                BUILTIN    BUILTIN      32X40G/32X100G-QSFP
      Xcvr 0              REV       740-038623  APF15200013GBR  QSFP+-40G-CU1M
      Xcvr 1              REV 01    740-032986  QC350639    QSFP+-40G-SR4
      Xcvr 2              REV 01    740-038624  MOC12526240244  QSFP+-40G-CU3M
      Xcvr 3              REV 01    740-038624  MOC12286240027  QSFP+-40G-CU3M
      Xcvr 4              REV       740-044512  APF151500097D5  QSFP+-40G-CU50CM
      Xcvr 5              REV 01    740-038623  MOC12526230201  QSFP+-40G-CU1M
      Xcvr 6              REV       740-044512  APF151500097DT  QSFP+-40G-CU50CM
      Xcvr 7              REV       740-044512  APF151500097DK  QSFP+-40G-CU50CM
      Xcvr 8              REV 01    740-038623  MOC12526230104  QSFP+-40G-CU1M
      Xcvr 9              REV 01    740-038623  MOC13016230274  QSFP+-40G-CU1M
      Xcvr 10             REV 01    740-038623  MOC13016230255  QSFP+-40G-CU1M
      Xcvr 11             REV 01    740-038623  MOC13016230234  QSFP+-40G-CU1M
      Xcvr 12             REV       740-044512  APF151500097CW  QSFP+-40G-CU50CM
      Xcvr 13             REV       740-044512  APF151500097D3  QSFP+-40G-CU50CM
      Xcvr 14             REV       740-044512  APF151500097DD  QSFP+-40G-CU50CM
      Xcvr 15             REV       740-038623  APF15200013GAK  QSFP+-40G-CU1M
      Xcvr 16             REV       740-038623  APF15200013GA5  QSFP+-40G-CU1M
      Xcvr 17             REV       740-038623  APF15200013GA9  QSFP+-40G-CU1M
      Xcvr 18             REV       740-038623  APF15200013GBK  QSFP+-40G-CU1M
      Xcvr 19             REV       740-038623  APF15200013GBH  QSFP+-40G-CU1M
      Xcvr 20             REV 01    740-038624  MOC12526240172  QSFP+-40G-CU3M
      Xcvr 21             REV 01    740-032986  QE483777    QSFP+-40G-SR4
      Xcvr 22             REV       740-038623  APF15200013GAP  QSFP+-40G-CU1M
      Xcvr 23             REV       740-038623  APF15200013GBC  QSFP+-40G-CU1M
      Xcvr 24             REV       740-044512  APF151500097DP  QSFP+-40G-CU50CM
      Xcvr 26             REV 01    740-053203  APF15050073YLU  QSFP+-40G-ACU7M
      Xcvr 27             REV       740-038623  APF15200013GAU  QSFP+-40G-CU1M
```

|            |                                       |            |                |                 |
|------------|---------------------------------------|------------|----------------|-----------------|
| Xcvr 28    | REV 01                                | 740-052307 | APF14370078AJ2 | QSFP+-40G-ACU7M |
| Xcvr 29    | REV 01                                | 740-052307 | APF14370078APW | QSFP+-40G-ACU7M |
| Xcvr 30    | REV 01                                | 740-032986 | QE481024       | QSFP+-40G-SR4   |
| Xcvr 31    | REV 01                                | 740-032986 | QD449842       | QSFP+-40G-SR4   |
| Fan Tray 0 | fan-ctrl-2 0, Front to Back Airflow - |            |                |                 |
| AFO        |                                       |            |                |                 |
| Fan Tray 1 | fan-ctrl-2 1, Front to Back Airflow - |            |                |                 |
| AFO        |                                       |            |                |                 |
| Fan Tray 2 | fan-ctrl-2 2, Front to Back Airflow - |            |                |                 |
| AFO        |                                       |            |                |                 |
| Fan Tray 3 | fan-ctrl-2 3, Front to Back Airflow - |            |                |                 |
| AFO        |                                       |            |                |                 |
| Fan Tray 4 | fan-ctrl-2 4, Front to Back Airflow - |            |                |                 |
| AFO        |                                       |            |                |                 |
| {master:0} |                                       |            |                |                 |

The next example shows the output from the QFX5200-32C-L models.

```
user@device> show chassis hardware
Hardware inventory:
Item          Version  Part number  Serial number  Description
Chassis                    WN0218310472  QFX5200-32C-L
PSM 0          REV 05  740-053352  1GD18230909  JPSU-850W-AC-AFO
PSM 1          REV 05  740-053352  1GD18230901  JPSU-850W-AC-AFO
Routing Engine 0          BUILTIN      BUILTIN      RE-QFX5200-32C-32Q
CB 0            REV 02  650-088479  WN0218310472  QFX5200-32C-CHAS
FPC 0            BUILTIN      BUILTIN      QFX5200-32C-32Q
PIC 0            BUILTIN      BUILTIN      32X40G/32X100G-QSFP
  Xcvr 0          REV 01  740-058734  1ACQ130900E  QSFP-100GBASE-SR4
  Xcvr 1          REV 01  740-038624  APF15170031W72  QSFP+-40G-CU3M
  Xcvr 2          REV 01  740-038625  APF165100537Y2  QSFP+-40G-CU5M
  Xcvr 3          REV 01  740-038625  APF165100538UE  QSFP+-40G-CU5M
  Xcvr 4          REV 01  740-038625  APF165100538AB  QSFP+-40G-CU5M
  Xcvr 5          REV 01  740-038624  APF1515003985L  QSFP+-40G-CU3M
  Xcvr 6          REV 01  740-032986  QF3608R5    QSFP+-40G-SR4
  Xcvr 7          REV 01  740-046565  QG1502LM    QSFP+-40G-SR4
  Xcvr 8          REV 01  740-032986  QB500134    QSFP+-40G-SR4
  Xcvr 9          REV 01  740-067442  QI110561    QSFP+-40G-SR4
  Xcvr 10         REV 01  740-032986  QB341588    QSFP+-40G-SR4
  Xcvr 11         REV 01  740-038624  APF151500398DK  QSFP+-40G-CU3M
  Xcvr 12         REV 01  740-058734  1ACQ110401G  QSFP-100GBASE-SR4
```

|             |        |            |                |                   |
|-------------|--------|------------|----------------|-------------------|
| Xcvr 13     | REVj01 | 740-038624 | APF15150039844 | QSFP+-40G-CU3M    |
| Xcvr 14     | REV 01 | 740-058734 | 1ACQ104202B    | QSFP-100GBASE-SR4 |
| Xcvr 15     | REV 01 | 740-061405 | 1ACQ13140NX    | QSFP-100GBASE-SR4 |
| Xcvr 16     | REV 01 | 740-032986 | QF4900G4       | QSFP+-40G-SR4     |
| Xcvr 17     | REVj01 | 740-038624 | APF15150039889 | QSFP+-40G-CU3M    |
| Xcvr 18     | REV 01 | 740-046565 | QF33003P       | QSFP+-40G-SR4     |
| Xcvr 19     | REV 01 | 740-052665 | QH5002AK       | QSFP+-40G-SR4     |
| Xcvr 20     | REV 01 | 740-032986 | QD477662       | QSFP+-40G-SR4     |
| Xcvr 21     | REV 01 | 740-067442 | QI1200SR       | QSFP+-40G-SR4     |
| Xcvr 22     | REV 01 | 740-061405 | 1ECQ11200A9    | QSFP-100GBASE-SR4 |
| Xcvr 23     | REV 01 | 740-061405 | 1ACQ131416W    | QSFP-100GBASE-SR4 |
| Xcvr 24     | REV 01 | 740-061405 | 1ACQ131417A    | QSFP-100GBASE-SR4 |
| Xcvr 25     | REV 01 | 740-061405 | 1ACQ131417W    | QSFP-100GBASE-SR4 |
| Xcvr 26     | REV 01 | 740-061405 | 1ECQ1044045    | QSFP-100GBASE-SR4 |
| Xcvr 27     | REV 01 | 740-058734 | 1ACQ111308Y    | QSFP-100GBASE-SR4 |
| Xcvr 28     | REV 01 | 740-058734 | 1ACQ1305019    | QSFP-100GBASE-SR4 |
| Xcvr 29     | REV 01 | 740-052665 | QH5002CM       | QSFP+-40G-SR4     |
| Xcvr 30     | REV 01 | 740-052665 | QH5002D0       | QSFP+-40G-SR4     |
| Xcvr 31     | REV 01 | 740-058734 | 1ECQ11210G1    | QSFP-100GBASE-SR4 |
| Fan Tray 0  |        |            |                | QFX5200 Fan Tray  |
| Fan Tray 1  |        |            |                | QFX5200 Fan Tray  |
| Fan Tray 2  |        |            |                | QFX5200 Fan Tray  |
| Fan Tray 3  |        |            |                | QFX5200 Fan Tray  |
| Fan Tray 4  |        |            |                | QFX5200 Fan Tray  |
| user@device |        |            |                |                   |




**NOTE:** You must remove the fan module to read the fan serial number from the serial number ID label. The fan module serial number cannot be viewed through the CLI. **Fan Tray 2** refers to the third module from the left, counting from 0.

## Locating the Chassis Serial Number ID Label on a QFX5200

The location for the chassis serial number ID label is located on the right side of the QFX5200-32C and QFX5200-32C-L port panel. See [Figure 96 on page 182](#) for an example of where to find the serial number ID.

Figure 96: Location of the Serial Number ID Label on a QFX5200-32C or a QFX5200-32C-L Switch

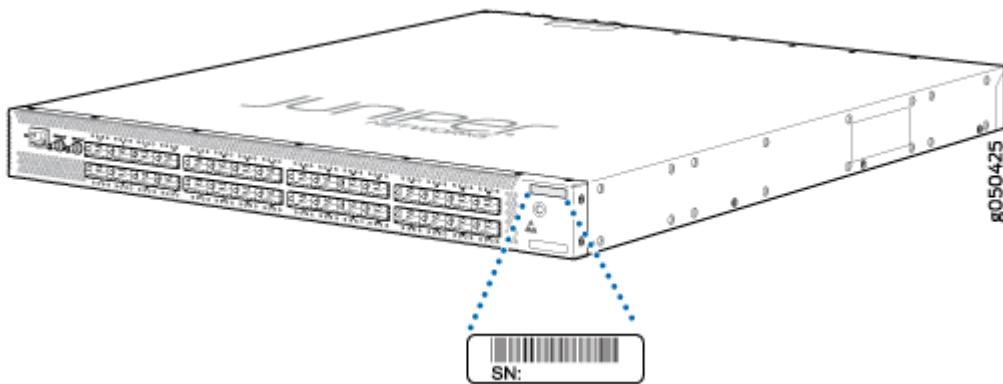

The serial number is also available in the output of the `show chassis hardware operational` mode CLI command.

### Locating the Serial Number ID Labels on FRU Components

The power supplies and fan modules installed in a QFX5200 are field-replaceable units (FRUs). For each FRU, you must remove the FRU from the switch chassis to see the FRU serial number ID label.

- AC power supply—The serial number ID label is on the top of the AC power supply.
- Fan module—The serial number ID label is on the top of the fan module.

### RELATED DOCUMENTATION

[Returning a QFX5200 or Component for Repair or Replacement](#)

## How to Return a Hardware Component to Juniper Networks, Inc.

If a hardware component fails, you need to contact Juniper Networks, Inc. to obtain a Return Material Authorization (RMA) number. This number is used to track the returned material at the factory and to return repaired or new components to the customer as needed.



**NOTE:** Do not return any component to Juniper Networks, Inc. unless you have first obtained an RMA number. Juniper Networks, Inc. reserves the right to refuse shipments that do not have an RMA. Refused shipments are returned to the customer by collect freight.

For more information about return and repair policies, see the customer support webpage at <https://support.juniper.net/support/>.

For product problems or technical support issues, contact the Juniper Networks Technical Assistance Center (JTAC) by using the Service Request Manager link at <https://support.juniper.net/support/> or at 1-888-314-JTAC (within the United States) or 1-408-745-9500 (from outside the United States).

To return a defective hardware component:

1. Determine the part number and serial number of the defective component.
2. Obtain an RMA number from the Juniper Networks Technical Assistance Center (JTAC). You can send e-mail or telephone as described above.
3. Provide the following information in your e-mail message or during the telephone call:
  - Part number and serial number of component
  - Your name, organization name, telephone number, and fax number
  - Description of the failure
4. The support representative validates your request and issues an RMA number for return of the component.
5. Pack the component for shipment.

## Guidelines for Packing Hardware Components for Shipment

To pack and ship individual components:

- When you return components, make sure that they are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Use the original shipping materials if they are available.
- Place individual components in antistatic bags.
- Write the RMA number on the exterior of the box to ensure proper tracking.



**CAUTION:** Do not stack any of the hardware components.

## Packing a QFX5200 Device or Component for Shipping

### IN THIS SECTION

- [Packing a QFX5200 Switch for Shipping | 184](#)
- [Packing QFX5200 Components for Shipping | 185](#)

If you are returning a QFX5200 or component to Juniper Networks for repair or replacement, pack the item as described in this topic.

Before you pack a QFX5200 or component:

- Ensure that you have taken the necessary precautions to prevent electrostatic discharge (ESD) damage. See ["Prevention of Electrostatic Discharge Damage" on page 213](#).
- Retrieve the original shipping carton and packing materials. Contact your JTAC representative if you do not have these materials, to learn about approved packing materials. See [Contacting Customer Support to Obtain a Return Materials Authorization for a QFX Series Device or Component](#).

Ensure that you have the following parts and tools available:

- ESD grounding strap.
- Antistatic bag, one for each component.
- If you are returning the chassis, an appropriate screwdriver for the mounting screws used on your rack or cabinet.

This topic describes:

### Packing a QFX5200 Switch for Shipping

To pack a QFX5200 for shipping:

1. Power down the switch and remove the power cables. See ["Powering Off a QFX5200" on page 163](#).
2. Remove the cables that connect the QFX5200 to all external devices.
3. Remove all field-replaceable units (FRUs) from the switch.
4. Have one person support the weight of the switch while another person unscrews and removes the mounting screws.

5. Remove the switch from the rack or cabinet (see "QFX5200 Installation Safety Guidelines" on page 105) and place the switch in an antistatic bag.
6. Place the switch in the shipping carton.
7. Place the packing foam on top of and around the switch.
8. If you are returning accessories or FRUs with the switch, pack them as instructed in "Packing QFX5200 Components for Shipping" on page 185.
9. Replace the accessory box on top of the packing foam.
10. Close the top of the cardboard shipping box and seal it with packing tape.
11. Write the RMA number on the exterior of the box to ensure proper tracking.

## Packing QFX5200 Components for Shipping



**CAUTION:** Do not stack switch components. Return individual components in separate boxes if they do not fit together on one level in the shipping box.

To pack and ship QFX5200 components:

- Place individual FRUs in antistatic bags.
- Ensure that the components are adequately protected with packing materials and packed so that the pieces are prevented from moving around inside the carton.
- Close the top of the cardboard shipping box and seal it with packing tape.
- Write the RMA number on the exterior of the box to ensure proper tracking.

## RELATED DOCUMENTATION

| [Contact Customer Support to Obtain a Return Material Authorization | 177](#)

# 8

CHAPTER

## Safety and Compliance Information

---

### IN THIS CHAPTER

- General Safety Guidelines and Warnings | [188](#)
- Definitions of Safety Warning Levels | [189](#)
- Qualified Personnel Warning | [191](#)
- Warning Statement for Norway and Sweden | [191](#)
- Fire Safety Requirements | [192](#)
- Installation Instructions Warning | [193](#)
- Chassis and Component Lifting Guidelines | [194](#)
- Restricted Access Warning | [194](#)
- Ramp Warning | [196](#)
- Rack-Mounting and Cabinet-Mounting Warnings | [196](#)
- Grounded Equipment Warning | [200](#)
- Laser and LED Safety Guidelines and Warnings | [201](#)
- Radiation from Open Port Apertures Warning | [204](#)
- Maintenance and Operational Safety Guidelines and Warnings | [205](#)
- General Electrical Safety Guidelines and Warnings | [211](#)
- Action to Take After an Electrical Accident | [212](#)
- Prevention of Electrostatic Discharge Damage | [213](#)
- AC Power Electrical Safety Guidelines | [214](#)
- AC Power Disconnection Warning | [215](#)
- DC Power Electrical Safety Guidelines | [216](#)
- DC Power Copper Conductors Warning | [217](#)
- DC Power Disconnection Warning | [218](#)

- DC Power Grounding Requirements and Warning | **219**
- DC Power Wiring Sequence Warning | **220**
- DC Power Wiring Terminations Warning | **221**
- Multiple Power Supplies Disconnection Warning | **223**
- TN Power Warning | **224**
- Agency Approvals and Compliance Statements for the QFX5200 and QFX5220 | **224**

---

# General Safety Guidelines and Warnings

The following guidelines help ensure your safety and protect the device from damage. The list of guidelines might not address all potentially hazardous situations in your working environment, so be alert and exercise good judgment at all times.

- Perform only the procedures explicitly described in the hardware documentation for this device. Make sure that only authorized service personnel perform other system services.
- Keep the area around the device clear and free from dust before, during, and after installation.
- Keep tools away from areas where people could trip over them while walking.
- Do not wear loose clothing or jewelry, such as rings, bracelets, or chains, which could become caught in the device.
- Wear safety glasses if you are working under any conditions that could be hazardous to your eyes.
- Do not perform any actions that create a potential hazard to people or make the equipment unsafe.
- Never attempt to lift an object that is too heavy for one person to handle.
- Never install or manipulate wiring during electrical storms.
- Never install electrical jacks in wet locations unless the jacks are specifically designed for wet environments.
- Operate the device only when it is properly grounded.
- Follow the instructions in this guide to properly ground the device to earth.
- Replace fuses only with fuses of the same type and rating.
- Do not open or remove chassis covers or sheet-metal parts unless instructions are provided in the hardware documentation for this device. Such an action could cause severe electrical shock.
- Do not push or force any objects through any opening in the chassis frame. Such an action could result in electrical shock or fire.
- Avoid spilling liquid onto the chassis or onto any device component. Such an action could cause electrical shock or damage the device.
- Avoid touching uninsulated electrical wires or terminals that have not been disconnected from their power source. Such an action could cause electrical shock.

- Some parts of the chassis, including AC and DC power supply surfaces, power supply unit handles, SFB card handles, and fan tray handles might become hot. The following label provides the warning for hot surfaces on the chassis:



- Always ensure that all modules, power supplies, and cover panels are fully inserted and that the installation screws are fully tightened.

## Definitions of Safety Warning Levels

The documentation uses the following levels of safety warnings (there are two *Warning* formats):



**NOTE:** You might find this information helpful in a particular situation, or you might overlook this important information if it was not highlighted in a Note.



**CAUTION:** You need to observe the specified guidelines to prevent minor injury or discomfort to you or severe damage to the device.

**Attention** Veillez à respecter les consignes indiquées pour éviter toute incommodité ou blessure légère, voire des dégâts graves pour l'appareil.



**LASER WARNING:** This symbol alerts you to the risk of personal injury from a laser.

**Avertissement** Ce symbole signale un risque de blessure provoquée par rayon laser.



**WARNING:** This symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry, and familiarize yourself with standard practices for preventing accidents.

**Waarschuwing** Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient

u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van standaard maatregelen om ongelukken te voorkomen.

**Varoitus** Tämä varoitusmerkki merkitsee vaaraa. Olet tilanteessa, joka voi johtaa ruumiinvammaan. Ennen kuin työskentelet minkään laitteiston parissa, ota selvää sähkökytkentöihin liittyvistä vaaroista ja tavanomaisista onnettomuuksien ehkäisykeinoista.

**Avertissement** Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant causer des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers posés par les circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents.

**Warnung** Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu einer Körperverletzung führen könnte. Bevor Sie mit der Arbeit an irgendeinem Gerät beginnen, seien Sie sich der mit elektrischen Stromkreisen verbundenen Gefahren und der Standardpraktiken zur Vermeidung von Unfällen bewußt.

**Avvertenza** Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di lavorare su qualsiasi apparecchiatura, occorre conoscere i pericoli relativi ai circuiti elettrici ed essere al corrente delle pratiche standard per la prevenzione di incidenti.

**Advarsel** Dette varselsymbolet betyr fare. Du befinner deg i en situasjon som kan føre til personskade. Før du utfører arbeid på utstyr, må du vare oppmerksom på de faremomentene som elektriske kretser innebærer, samt gjøre deg kjent med vanlig praksis når det gjelder å unngå ulykker.

**Aviso** Este símbolo de aviso indica perigo. Encontra-se numa situação que lhe poderá causar danos físicos. Antes de começar a trabalhar com qualquer equipamento, familiarize-se com os perigos relacionados com circuitos eléctricos, e com quaisquer práticas comuns que possam prevenir possíveis acidentes.

**¡Atención!** Este símbolo de aviso significa peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considerar los riesgos que entraña la corriente eléctrica y familiarizarse con los procedimientos estándar de prevención de accidentes.

**Varning!** Denna varningssymbol signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanligt förfarande för att förebygga skador.

## Qualified Personnel Warning



**WARNING:** Only trained and qualified personnel should install or replace the device.

**Waarschuwing** Installatie en reparaties mogen uitsluitend door getraind en bevoegd personeel uitgevoerd worden.

**Varoitus** Ainoastaan koulutettu ja pätevä henkilökunta saa asentaa tai vaihtaa tämän laitteen.

**Avertissement** Tout installation ou remplacement de l'appareil doit être réalisé par du personnel qualifié et compétent.

**Warnung** Gerät nur von geschultem, qualifiziertem Personal installieren oder auswechseln lassen.

**Avvertenza** Solo personale addestrato e qualificato deve essere autorizzato ad installare o sostituire questo apparecchio.

**Advarsel** Kun kvalifisert personell med riktig opplæring bør montere eller bytte ut dette utstyret.

**Aviso** Este equipamento deverá ser instalado ou substituído apenas por pessoal devidamente treinado e qualificado.

**¡Atención!** Estos equipos deben ser instalados y reemplazados exclusivamente por personal técnico adecuadamente preparado y capacitado.

**Warning!** Denna utrustning ska endast installeras och bytas ut av utbildad och kvalificerad personal.

## Warning Statement for Norway and Sweden



**WARNING:** The equipment must be connected to an earthed mains socket-outlet.

**Advarsel** Apparatet skal kobles til en jordet stikkontakt.

**Varning!** Apparaten skall anslutas till jordat nättuttag.

# Fire Safety Requirements

## IN THIS SECTION

- [Fire Suppression | 192](#)
- [Fire Suppression Equipment | 192](#)

In the event of a fire emergency, the safety of people is the primary concern. You should establish procedures for protecting people in the event of a fire emergency, provide safety training, and properly provision fire-control equipment and fire extinguishers.

In addition, you should establish procedures to protect your equipment in the event of a fire emergency. Juniper Networks products should be installed in an environment suitable for electronic equipment. We recommend that fire suppression equipment be available in the event of a fire in the vicinity of the equipment and that all local fire, safety, and electrical codes and ordinances be observed when you install and operate your equipment.

## Fire Suppression

In the event of an electrical hazard or an electrical fire, you should first turn power off to the equipment at the source. Then use a Type C fire extinguisher, which uses noncorrosive fire retardants, to extinguish the fire.

## Fire Suppression Equipment

Type C fire extinguishers, which use noncorrosive fire retardants such as carbon dioxide and Halotron™, are most effective for suppressing electrical fires. Type C fire extinguishers displace oxygen from the point of combustion to eliminate the fire. For extinguishing fire on or around equipment that draws air from the environment for cooling, you should use this type of inert oxygen displacement extinguisher instead of an extinguisher that leaves residues on equipment.

Do not use multipurpose Type ABC chemical fire extinguishers (dry chemical fire extinguishers). The primary ingredient in these fire extinguishers is monoammonium phosphate, which is very sticky and

difficult to clean. In addition, in the presence of minute amounts of moisture, monoammonium phosphate can become highly corrosive and corrodes most metals.

Any equipment in a room in which a chemical fire extinguisher has been discharged is subject to premature failure and unreliable operation. The equipment is considered to be irreparably damaged.



**NOTE:** To keep warranties effective, do not use a dry chemical fire extinguisher to control a fire at or near a Juniper Networks device. If a dry chemical fire extinguisher is used, the unit is no longer eligible for coverage under a service agreement.

We recommend that you dispose of any irreparably damaged equipment in an environmentally responsible manner.

## Installation Instructions Warning



**WARNING:** Read the installation instructions before you connect the device to a power source.

**Waarschuwing** Raadpleeg de installatie-aanwijzingen voordat u het systeem met de voeding verbindt.

**Varoitus** Lue asennusohjeet ennen järjestelmän yhdistämistä virtalähteeseen.

**Avertissement** Avant de brancher le système sur la source d'alimentation, consulter les directives d'installation.

**Warnung** Lesen Sie die Installationsanweisungen, bevor Sie das System an die Stromquelle anschließen.

**Avvertenza** Consultare le istruzioni di installazione prima di collegare il sistema all'alimentatore.

**Advarsel** Les installasjonsinstruksjonene før systemet kobles til strømkilden.

**Aviso** Leia as instruções de instalação antes de ligar o sistema à sua fonte de energia.

**¡Atención!** Ver las instrucciones de instalación antes de conectar el sistema a la red de alimentación.

**Varning!** Läs installationsanvisningarna innan du kopplar systemet till dess strömförjningsenhet.

# Chassis and Component Lifting Guidelines

- Before moving the device to a site, ensure that the site meets the power, environmental, and clearance requirements.
- Before lifting or moving the device, disconnect all external cables and wires.
- As when lifting any heavy object, ensure that your legs bear most of the weight rather than your back. Keep your knees bent and your back relatively straight. Do not twist your body as you lift. Balance the load evenly and be sure that your footing is firm.
- Use the following lifting guidelines to lift devices and components:
  - Up to 39.7 lb (18 kg): One person.
  - From 39.7 lb (18 kg) to 70.5 lb (32 kg): Two or more people.
  - From 70.5 lb (32 kg) to 121.2 lb (55 kg): Three or more people.
  - Above 121.2 lb (55 kg): Use material handling systems (such as levers, slings, lifts, and so on). When this is not practical, engage specially trained persons or systems (such as riggers or movers).

## Restricted Access Warning



**WARNING:** This unit is intended for installation in restricted access areas. A restricted access area is an area to which access can be gained only by service personnel through the use of a special tool, lock and key, or other means of security, and which is controlled by the authority responsible for the location.

**Waarschuwing** Dit toestel is bedoeld voor installatie op plaatsen met beperkte toegang. Een plaats met beperkte toegang is een plaats waar toegang slechts door servicepersoneel verkregen kan worden door middel van een speciaal instrument, een slot en sleutel, of een ander veiligheidsmiddel, en welke beheerd wordt door de overheidsinstantie die verantwoordelijk is voor de locatie.

**Varoitus** Tämä laite on tarkoitettu asennettavaksi paikkaan, johon pääsy on rajoitettua. Paikka, johon pääsy on rajoitettua, tarkoittaa paikkaa, johon vain huoltohenkilöstö pääsee jonkin erikoistyökalun, lukkoon sopivan avaimen tai jonkin muun turvalaitteen avulla ja joka on paikasta vastuussa olevien toimivaltaisten henkilöiden valvoma.

**Avertissement** Cet appareil est à installer dans des zones d'accès réservé. Ces dernières sont des zones auxquelles seul le personnel de service peut accéder en utilisant un outil spécial, un mécanisme de verrouillage et une clé, ou tout autre moyen de sécurité.

L'accès aux zones de sécurité est sous le contrôle de l'autorité responsable de l'emplacement.

**Warnung** Diese Einheit ist zur Installation in Bereichen mit beschränktem Zutritt vorgesehen. Ein Bereich mit beschränktem Zutritt ist ein Bereich, zu dem nur Wartungspersonal mit einem Spezialwerkzeugs, Schloß und Schlüssel oder anderer Sicherheitsvorkehrungen Zugang hat, und der von dem für die Anlage zuständigen Gremium kontrolliert wird.

**Avvertenza** Questa unità deve essere installata in un'area ad accesso limitato. Un'area ad accesso limitato è un'area accessibile solo a personale di assistenza tramite un'attrezzo speciale, lucchetto, o altri dispositivi di sicurezza, ed è controllata dall'autorità responsabile della zona.

**Advarsel** Denne enheten er laget for installasjon i områder med begrenset adgang. Et område med begrenset adgang gir kun adgang til servicepersonale som bruker et spesielt verktøy, lås og nøkkel, eller en annen sikkerhetsanordning, og det kontrolleres av den autoriteten som er ansvarlig for området.

**Aviso** Esta unidade foi concebida para instalação em áreas de acesso restrito. Uma área de acesso restrito é uma área à qual apenas tem acesso o pessoal de serviço autorizado, que possua uma ferramenta, chave e fechadura especial, ou qualquer outra forma de segurança. Esta área é controlada pela autoridade responsável pelo local.

**¡Atención!** Esta unidad ha sido diseñada para instalarse en áreas de acceso restringido. Área de acceso restringido significa un área a la que solamente tiene acceso el personal de servicio mediante la utilización de una herramienta especial, cerradura con llave, o algún otro medio de seguridad, y que está bajo el control de la autoridad responsable del local.

**Varng!** Denna enhet är avsedd för installation i områden med begränsat tillträde. Ett område med begränsat tillträde får endast tillträdas av servicepersonal med ett speciellt verktyg, lås och nyckel, eller annan säkerhetsanordning, och kontrolleras av den auktoritet som ansvarar för området.

## Ramp Warning



**WARNING:** When installing the device, do not use a ramp inclined at more than 10 degrees.

**Waarschuwing** Gebruik een oprijplaat niet onder een hoek van meer dan 10 graden.

**Varoitus** Älä käytä sellaista kaltevaa pintaa, jonka kaltevuus ylittää 10 astetta.

**Avertissement** Ne pas utiliser une rampe dont l'inclinaison est supérieure à 10 degrés.

**Warnung** Keine Rampen mit einer Neigung von mehr als 10 Grad verwenden.

**Avvertenza** Non usare una rampa con pendenza superiore a 10 gradi.

**Advarsel** Bruk aldri en rampe som heller mer enn 10 grader.

**Aviso** Não utilize uma rampa com uma inclinação superior a 10 graus.

**¡Atención!** No usar una rampa inclinada más de 10 grados.

**Varning!** Använd inte ramp med en lutning på mer än 10 grader.

## Rack-Mounting and Cabinet-Mounting Warnings

Ensure that the rack or cabinet in which the device is installed is evenly and securely supported. Uneven mechanical loading could lead to a hazardous condition.



**WARNING:** To prevent bodily injury when mounting or servicing the device in a rack, take the following precautions to ensure that the system remains stable. The following directives help maintain your safety:

- Install the device in a rack that is secured to the building structure.
- Mount the device at the bottom of the rack if it is the only unit in the rack.
- When mounting the device on a partially filled rack, load the rack from the bottom to the top, with the heaviest component at the bottom of the rack.

- If the rack is provided with stabilizing equipment, install the stabilizers before mounting or servicing the device in the rack.

**Waarschuwing** Om lichamelijk letsel te voorkomen wanneer u dit toestel in een rek monteert of het daar een servicebeurt geeft, moet u speciale voorzorgsmaatregelen nemen om ervoor te zorgen dat het toestel stabiel blijft. De onderstaande richtlijnen worden verstrekt om uw veiligheid te verzekeren:

- De Juniper Networks switch moet in een stellage worden geïnstalleerd die aan een bouwsel is verankerd.
- Dit toestel dient onderaan in het rek gemonteerd te worden als het toestel het enige in het rek is.
- Wanneer u dit toestel in een gedeeltelijk gevuld rek monteert, dient u het rek van onderen naar boven te laden met het zwaarste onderdeel onderaan in het rek.
- Als het rek voorzien is van stabiliseringshulpmiddelen, dient u de stabilisatoren te monteren voordat u het toestel in het rek monteert of het daar een servicebeurt geeft.

**Varoitus** Kun laite asetetaan telineeseen tai huolletaan sen ollessa telineessä, on noudatettava erityisiä varotoimia järjestelmän vakavuuden säilyttämiseksi, jotta välttyään loukaantumiselta. Noudata seuraavia turvallisuusohjeita:

- Juniper Networks switch on asennettava telineeseen, joka on kiinnitettävä rakennukseen.
- Jos telineessä ei ole muita laitteita, aseta laite telineen alaosan.
- Jos laite asetetaan osaksi täytettyyn telineeseen, aloita kuormittaminen sen alaosasta kaikkein raskaimmalla esineellä ja siirry sitten sen yläosaan.
- Jos telineellä varten on vakaimet, asenna ne ennen laitteen asettamista telineeseen tai sen huoltamista siinä.

**Avertissement** Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel:

- Le rack sur lequel est monté le Juniper Networks switch doit être fixé à la structure du bâtiment.

- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.
- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

**Warnung** Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Der Juniper Networks switch muß in einem Gestell installiert werden, das in der Gebäudestruktur verankert ist.
- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

**Avvertenza** Per evitare infortuni fisici durante il montaggio o la manutenzione di questa unità in un supporto, occorre osservare speciali precauzioni per garantire che il sistema rimanga stabile. Le seguenti direttive vengono fornite per garantire la sicurezza personale:

- Il Juniper Networks switch deve essere installato in un telaio, il quale deve essere fissato alla struttura dell'edificio.
- Questa unità deve venire montata sul fondo del supporto, se si tratta dell'unica unità da montare nel supporto.
- Quando questa unità viene montata in un supporto parzialmente pieno, caricare il supporto dal basso all'alto, con il componente più pesante sistemato sul fondo del supporto.
- Se il supporto è dotato di dispositivi stabilizzanti, installare tali dispositivi prima di montare o di procedere alla manutenzione dell'unità nel supporto.

**Advarsel** Unngå fysiske skader under montering eller reparasjonsarbeid på denne enheten når den befinner seg i et kabinett. Vær nøye med at systemet er stabilt. Følgende retningslinjer er gitt for å verne om sikkerheten:

- Juniper Networks switch må installeres i et stativ som er forankret til bygningsstrukturen.
- Denne enheten bør monteres nederst i kabinettet hvis dette er den eneste enheten i kabinettet.
- Ved montering av denne enheten i et kabinett som er delvis fylt, skal kabinettet lastes fra bunnen og opp med den tyngste komponenten nederst i kabinettet.
- Hvis kabinettet er utstyrt med stabiliseringsutstyr, skal stabilisatorene installeres før montering eller utføring av reparasjonsarbeid på enheten i kabinettet.

**Aviso** Para se prevenir contra danos corporais ao montar ou reparar esta unidade numa estante, deverá tomar precauções especiais para se certificar de que o sistema possui um suporte estável. As seguintes directrizes ajudá-lo-ão a efectuar o seu trabalho com segurança:

- O Juniper Networks switch deverá ser instalado numa prateleira fixa à estrutura do edifício.
- Esta unidade deverá ser montada na parte inferior da estante, caso seja esta a única unidade a ser montada.
- Ao montar esta unidade numa estante parcialmente ocupada, coloque os itens mais pesados na parte inferior da estante, arrumando-os de baixo para cima.
- Se a estante possuir um dispositivo de estabilização, instale-o antes de montar ou reparar a unidade.

**¡Atención!** Para evitar lesiones durante el montaje de este equipo sobre un bastidor, oeriormente durante su mantenimiento, se debe poner mucho cuidado en que el sistema quede bien estable. Para garantizar su seguridad, proceda según las siguientes instrucciones:

- El Juniper Networks switch debe instalarse en un bastidor fijado a la estructura del edificio.
- Colocar el equipo en la parte inferior del bastidor, cuando sea la única unidad en el mismo.

- Cuando este equipo se vaya a instalar en un bastidor parcialmente ocupado, comenzar la instalación desde la parte inferior hacia la superior colocando el equipo más pesado en la parte inferior.
- Si el bastidor dispone de dispositivos estabilizadores, instalar éstos antes de montar o proceder al mantenimiento del equipo instalado en el bastidor.

**Warning!** För att undvika kroppsskada när du installerar eller utför underhållsarbete på denna enhet på en ställning måste du vidta särskilda försiktighetsåtgärder för att försäkra dig om att systemet står stadigt. Följande riktlinjer ges för att trygga din säkerhet:

- Juniper Networks switch måste installeras i en ställning som är förankrad i byggnadens struktur.
- Om denna enhet är den enda enheten på ställningen skall den installeras längst ned på ställningen.
- Om denna enhet installeras på en delvis fylld ställning skall ställningen fyllas nedifrån och upp, med de tyngsta enheterna längst ned på ställningen.
- Om ställningen är försedd med stabiliseringsdon skall dessa monteras fast innan enheten installeras eller underhålls på ställningen.

## Grounded Equipment Warning



**WARNING:** This device must be properly grounded at all times. Follow the instructions in this guide to properly ground the device to earth.

**Waarschuwing** Dit apparaat moet altijd goed geaard zijn. Volg de instructies in deze gids om het apparaat goed te aarden.

**Varoitus** Laitteen on oltava pysyvästi maadoitettu. Maadoita laite asianmukaisesti noudattamalla tämän oppaan ohjeita.

**Avertissement** L'appareil doit être correctement mis à la terre à tout moment. Suivez les instructions de ce guide pour correctement mettre l'appareil à la terre.

**Warnung** Das Gerät muss immer ordnungsgemäß geerdet sein. Befolgen Sie die Anweisungen in dieser Anleitung, um das Gerät ordnungsgemäß zu erden.

**Avvertenza** Questo dispositivo deve sempre disporre di una connessione a massa. Seguire le istruzioni indicate in questa guida per connettere correttamente il dispositivo a massa.

**Advarsel** Denne enheten på jordes skikkelig hele tiden. Følg instruksjonene i denne veilediringen for å jorde enheten.

**Aviso** Este equipamento deverá estar ligado à terra. Siga las instrucciones en esta guía para conectar correctamente este dispositivo a tierra.

**¡Atención!** Este dispositivo debe estar correctamente conectado a tierra en todo momento. Siga las instrucciones en esta guía para conectar correctamente este dispositivo a tierra.

**Warning!** Den här enheten måste vara ordentligt jordad. Följ instruktionerna i den här guiden för att jorda enheten ordentligt.

## Laser and LED Safety Guidelines and Warnings

### IN THIS SECTION

- General Laser Safety Guidelines | [202](#)
- Class 1 Laser Product Warning | [202](#)
- Class 1 LED Product Warning | [203](#)
- Laser Beam Warning | [203](#)

Juniper Networks devices are equipped with laser transmitters, which are considered a Class 1 Laser Product by the U.S. Food and Drug Administration and are evaluated as a Class 1 Laser Product per IEC/EN 60825-1 requirements.

Observe the following guidelines and warnings:

## General Laser Safety Guidelines

When working around ports that support optical transceivers, observe the following safety guidelines to prevent eye injury:

- Do not look into unterminated ports or at fibers that connect to unknown sources.
- Do not examine unterminated optical ports with optical instruments.
- Avoid direct exposure to the beam.



**LASER WARNING:** Untermminated optical connectors can emit invisible laser radiation. The lens in the human eye focuses all the laser power on the retina, so focusing the eye directly on a laser source—even a low-power laser—could permanently damage the eye.

**Avertissement** Les connecteurs à fibre optique sans terminaison peuvent émettre un rayonnement laser invisible. Le cristallin de l'œil humain faisant converger toute la puissance du laser sur la rétine, toute focalisation directe de l'œil sur une source laser, — même de faible puissance—, peut entraîner des lésions oculaires irréversibles.

## Class 1 Laser Product Warning



**LASER WARNING:** Class 1 laser product.

**Waarschuwing** Klasse-1 laser produkt.

**Varoitus** Luokan 1 lasertuote.

**Avertissement** Produit laser de classe I.

**Warnung** Laserprodukt der Klasse 1.

**Avvertenza** Prodotto laser di Classe 1.

**Advarsel** Laserprodukt av klasse 1.

**Aviso** Produto laser de classe 1.

**¡Atención!** Producto láser Clase I.

**Varning!** Laserprodukt av klass 1.

## Class 1 LED Product Warning



**LASER WARNING:** Class 1 LED product.

**Waarschuwing** Klasse 1 LED-product.

**Varoitus** Luokan 1 valodiodituote.

**Avertissement** Alarme de produit LED Class I.

**Warnung** Class 1 LED-Produktwarnung.

**Avvertenza** Avvertenza prodotto LED di Classe 1.

**Advarsel** LED-produkt i klasse 1.

**Aviso** Produto de classe 1 com LED.

**¡Atención!** Aviso sobre producto LED de Clase 1.

**Varning!** Lysdiodprodukt av klass 1.

## Laser Beam Warning



**LASER WARNING:** Do not stare into the laser beam or view it directly with optical instruments.

**Waarschuwing** Niet in de straal staren of hem rechtstreeks bekijken met optische instrumenten.

**Varoitus** Älä katso säteeseen äläkä tarkastele sitä suoraan optisen laitteen avulla.

**Avertissement** Ne pas fixer le faisceau des yeux, ni l'observer directement à l'aide d'instruments optiques.

**Warnung** Nicht direkt in den Strahl blicken und ihn nicht direkt mit optischen Geräten prüfen.

**Avvertenza** Non fissare il raggio con gli occhi né usare strumenti ottici per osservarlo direttamente.

**Advarsel** Stirr eller se ikke direkte på strlen med optiske instrumenter.

**Aviso** Não olhe fixamente para o raio, nem olhe para ele directamente com instrumentos ópticos.

**¡Atención!** No mirar fijamente el haz ni observarlo directamente con instrumentos ópticos.

**Varng!** Rikta inte blicken in mot strålen och titta inte direkt på den genom optiska instrument.

## Radiation from Open Port Apertures Warning



**LASER WARNING:** Because invisible radiation might be emitted from the aperture of the port when no fiber cable is connected, avoid exposure to radiation and do not stare into open apertures.

**Waarschuwing** Aangezien onzichtbare straling vanuit de opening van de poort kan komen als er geen fiberkabel aangesloten is, dient blootstelling aan straling en het kijken in open openingen vermeden te worden.

**Varoitus** Koska portin aukosta voi emittoitua näkymätöntä säteilyä, kun kuitukaapelia ei ole kytkettynä, vältä säteilylle altistumista äläkä katso avoimiin aukkoihin.

**Avertissement** Des radiations invisibles à l'il nu pouvant traverser l'ouverture du port lorsqu'aucun câble en fibre optique n'y est connecté, il est recommandé de ne pas regarder fixement l'intérieur de ces ouvertures.

**Warnung** Aus der Port-Öffnung können unsichtbare Strahlen emittieren, wenn kein Glasfaserkabel angeschlossen ist. Vermeiden Sie es, sich den Strahlungen auszusetzen, und starren Sie nicht in die Öffnungen!

**Avvertenza** Quando i cavi in fibra non sono inseriti, radiazioni invisibili possono essere emesse attraverso l'apertura della porta. Evitate di esporvi alle radiazioni e non guardate direttamente nelle aperture.

**Advarsel** Unngå utsettelse for stråling, og stirr ikke inn i åpninger som er åpne, fordi usynlig stråling kan emiteres fra portens åpning når det ikke er tilkoblet en fiberkabel.

**Aviso** Dada a possibilidade de emissão de radiação invisível através do orifício da via de acesso, quando esta não tiver nenhum cabo de fibra conectado, deverá evitar an-

EXposição à radiação e não deverá olhar fixamente para orifícios que se encontrarem a descoberto.

**¡Atención!** Debido a que la apertura del puerto puede emitir radiación invisible cuando no existe un cable de fibra conectado, evite mirar directamente a las aperturas para no exponerse a la radiación.

**Warning!** Osynlig strålning kan avges från en portöppning utan ansluten fiberkabel och du bör därför undvika att bli utsatt för strålning genom att inte stirra in i oskyddade öppningar.

## Maintenance and Operational Safety Guidelines and Warnings

### IN THIS SECTION

- [Battery Handling Warning | 205](#)
- [Jewelry Removal Warning | 207](#)
- [Lightning Activity Warning | 208](#)
- [Operating Temperature Warning | 209](#)
- [Product Disposal Warning | 210](#)

While performing the maintenance activities for devices, observe the following guidelines and warnings:

### Battery Handling Warning



**WARNING:** Replacing a battery incorrectly might result in an explosion. Replace a battery only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

**Waarschuwing** Er is ontstekingsgevaar als de batterij verkeerd vervangen wordt. Vervang de batterij slechts met hetzelfde of een equivalent type dat door de fabrikant aanbevolen is. Gebruikte batterijen dienen overeenkomstig fabrieksvoorschriften weggegooid te worden.

**Varoitus** Räjähdyksen vaara, jos akku on vaihdettu väärään akkuun. Käytä vaihtamiseen ainoastaan saman- tai vastaavantyyppistä akkua, joka on valmistajan suosittelema. Hävitä käytetty akut valmistajan ohjeiden mukaan.

**Avertissement** Danger d'explosion si la pile n'est pas remplacée correctement. Ne la remplacer que par une pile de type semblable ou équivalent, recommandée par le fabricant. Jeter les piles usagées conformément aux instructions du fabricant.

**Warnung** Bei Einsetzen einer falschen Batterie besteht Explosionsgefahr. Ersetzen Sie die Batterie nur durch den gleichen oder vom Hersteller empfohlenen Batterietyp. Entsorgen Sie die benutzten Batterien nach den Anweisungen des Herstellers.

**Advarsel** Det kan være fare for eksplosjon hvis batteriet skiftes på feil måte. Skift kun med samme eller tilsvarende type som er anbefalt av produsenten. Kasser brukte batterier i henhold til produsentens instruksjoner.

**Avvertenza** Pericolo di esplosione se la batteria non è installata correttamente. Sostituire solo con una di tipo uguale o equivalente, consigliata dal produttore. Eliminare le batterie usate secondo le istruzioni del produttore.

**Aviso** Existe perigo de explosão se a bateria for substituída incorrectamente. Substitua a bateria por uma bateria igual ou de um tipo equivalente recomendado pelo fabricante. Destrua as baterias usadas conforme as instruções do fabricante.

**¡Atención!** Existe peligro de explosión si la batería se reemplaza de manera incorrecta. Reemplazar la batería EXclusivamente con el mismo tipo o el equivalente recomendado por el fabricante. Desechar las baterías gastadas según las instrucciones del fabricante.

**Varning!** Explosionsfara vid felaktigt batteribyte. Ersätt endast batteriet med samma batterityp som rekommenderas av tillverkaren eller motsvarande. Följ tillverkarens anvisningar vid kassering av använda batterier.

## Jewelry Removal Warning



**WARNING:** Before working on equipment that is connected to power lines, remove jewelry, including rings, necklaces, and watches. Metal objects heat up when connected to power and ground and can cause serious burns or can be welded to the terminals.

**Waarschuwing** Alvorens aan apparatuur te werken die met elektrische leidingen is verbonden, sieraden (inclusief ringen, kettingen en horloges) verwijderen. Metalen voorwerpen worden warm wanneer ze met stroom en aarde zijn verbonden, en kunnen ernstige brandwonden veroorzaken of het metalen voorwerp aan de aansluitklemmen lassen.

**Varoitus** Ennen kuin työskentelet voimavirtajohtoihin kytkettyjen laitteiden parissa, ota pois kaikki korut (sormukset, kaulakorut ja kellot mukaan lukien). Metalliesineet kuumenevat, kun ne ovat yhteydessä sähkövirran ja maan kanssa, ja ne voivat aiheuttaa vakavia palovammoja tai hitsata metalliesineet kiinni liitääntänapoihin.

**Avertissement** Avant d'accéder à cet équipement connecté aux lignes électriques, ôter tout bijou (anneaux, colliers et montres compris). Lorsqu'ils sont branchés à l'alimentation et reliés à la terre, les objets métalliques chauffent, ce qui peut provoquer des blessures graves ou souder l'objet métallique aux bornes.

**Warnung** Vor der Arbeit an Geräten, die an das Netz angeschlossen sind, jeglichen Schmuck (einschließlich Ringe, Ketten und Uhren) abnehmen. Metallgegenstände erhitzen sich, wenn sie an das Netz und die Erde angeschlossen werden, und können schwere Verbrennungen verursachen oder an die Anschlußklemmen angeschweißt werden.

**Avvertenza** Prima di intervenire su apparecchiature collegate alle linee di alimentazione, togliersi qualsiasi monile (inclusi anelli, collane, braccialetti ed orologi). Gli oggetti metallici si riscaldano quando sono collegati tra punti di alimentazione e massa: possono causare ustioni gravi oppure il metallo può saldarsi ai terminali.

**Advarsel** Fjern alle smykker (inkludert ringer, halskjeder og klokker) før du skal arbeide på utstyr som er koblet til kraftledninger. Metallgjenstander som er koblet til kraftledninger og jord blir svært varme og kan forårsake alvorlige brannskader eller smelte fast til polene.

**Aviso** Antes de trabalhar em equipamento que esteja ligado a linhas de corrente, retire todas as jóias que estiver a usar (incluindo anéis, fios e relógios). Os objectos metálicos aquecerão em contacto com a corrente e em contacto com a ligação à terra, podendo causar queimaduras graves ou ficarem soldados aos terminais.

**¡Atención!** Antes de operar sobre equipos conectados a líneas de alimentación, quitarse las joyas (incluidos anillos, collares y relojes). Los objetos de metal se calientan cuando se conectan a la alimentación y a tierra, lo que puede ocasionar quemaduras graves o que los objetos metálicos queden soldados a los bornes.

**Warning!** Tag av alla smycken (inklusive ringar, halsband och armbandsur) innan du arbetar på utrustning som är kopplad till kraftledningar. Metallobjekt hettas upp när de kopplas ihop med ström och jord och kan förorsaka allvarliga brännskador; metallobjekt kan också sammansvetsas med kontakerna.

## Lightning Activity Warning



**WARNING:** Do not work on the system or connect or disconnect cables during periods of lightning activity.

**Waarschuwing** Tijdens onweer dat gepaard gaat met bliksem, dient u niet aan het systeem te werken of kabels aan te sluiten of te ontkoppelen.

**Varoitus** Älä työskentele järjestelmän parissa äläkä yhdistä tai irrota kaapeleita ukkosilmalla.

**Avertissement** Ne pas travailler sur le système ni brancher ou débrancher les câbles pendant un orage.

**Warnung** Arbeiten Sie nicht am System und schließen Sie keine Kabel an bzw. trennen Sie keine ab, wenn es gewittert.

**Avvertenza** Non lavorare sul sistema o collegare oppure scollegare i cavi durante un temporale con fulmini.

**Advarsel** Utfør aldri arbeid på systemet, eller koble kabler til eller fra systemet når det tordner eller lyner.

**Aviso** Não trabalhe no sistema ou ligue e desligue cabos durante períodos de mau tempo (trovoada).

**¡Atención!** No operar el sistema ni conectar o desconectar cables durante el transcurso de descargas eléctricas en la atmósfera.

**Warning!** Vid åska skall du aldrig utföra arbete på systemet eller ansluta eller koppla loss kablar.

## Operating Temperature Warning



**WARNING:** To prevent the device from overheating, do not operate it in an area that exceeds the maximum recommended ambient temperature. To prevent airflow restriction, allow at least 6 in. (15.2 cm) of clearance around the ventilation openings.

**Waarschuwing** Om te voorkomen dat welke switch van de Juniper Networks router dan ook oververhit raakt, dient u deze niet te bedienen op een plaats waar de maximale aanbevolen omgevingstemperatuur van 40° C wordt overschreden. Om te voorkomen dat de luchtstroom wordt beperkt, dient er minstens 15,2 cm speling rond de ventilatieopeningen te zijn.

**Varoitus** Ettei Juniper Networks switch-sarjan reititin ylikuumentuisi, sitä ei saa käyttää tilassa, jonka lämpötila ylittää korkeimman suositellun ympäristölämpötilan 40° C. Ettei ilmanvaihto estyisi, tuuletusaukkojen ympärille on jätettävä ainakin 15,2 cm tilaa.

**Avertissement** Pour éviter toute surchauffe des routeurs de la gamme Juniper Networks switch, ne l'utilisez pas dans une zone où la température ambiante est supérieure à 40° C. Pour permettre un flot d'air constant, dégagez un espace d'au moins 15,2 cm autour des ouvertures de ventilations.

**Warnung** Um einen Router der switch vor Überhitzung zu schützen, darf dieser nicht in einer Gegend betrieben werden, in der die Umgebungstemperatur das empfohlene Maximum von 40° C überschreitet. Um Lüftungsverschluß zu verhindern, achten Sie darauf, daß mindestens 15,2 cm lichter Raum um die Lüftungsoffnungen herum frei bleibt.

**Avvertenza** Per evitare il surriscaldamento dei switch, non adoperateli in un locale che ecceda la temperatura ambientale massima di 40° C. Per evitare che la circolazione dell'aria sia impedita, lasciate uno spazio di almeno 15.2 cm di fronte alle aperture delle ventole.

**Advarsel** Unngå overoppheeting av eventuelle rutere i Juniper Networks switch. Disse skal ikke brukes på steder der den anbefalte maksimale omgivelsestemperaturen overstiger 40° C (104° F). Sørg for at klaringen rundt luftåpningene er minst 15,2 cm (6 tommer) for å forhindre nedsett luftsirkulasjon.

**Aviso** Para evitar o sobreaquecimento do encaminhador Juniper Networks switch, não utilize este equipamento numa área que exceda a temperatura máxima recomendada de 40° C. Para evitar a restrição à circulação de ar, deixe pelo menos um espaço de 15,2 cm à volta das aberturas de ventilação.

**¡Atención!** Para impedir que un encaminador de la serie Juniper Networks switch se recaliente, no lo haga funcionar en un área en la que se supere la temperatura ambiente máxima recomendada de 40° C. Para impedir la restricción de la entrada de aire, deje un espacio mínimo de 15,2 cm alrededor de las aperturas para ventilación.

**Warning!** Förhindra att en Juniper Networks switch överhettas genom att inte använda den i ett område där den maximalt rekommenderade omgivningstemperaturen på 40° C överskrids. Förhindra att luftcirkulationen inskränks genom att se till att det finns fritt utrymme på minst 15,2 cm omkring ventilationsöppningarna.

## Product Disposal Warning



**WARNING:** Disposal of this device must be handled according to all national laws and regulations.

**Waarschuwing** Dit produkt dient volgens alle landelijke wetten en voorschriften te worden afgedankt.

**Varoitus** Tämän tuotteen lopullisesta hävittämisestä tulee huolehtia kaikkia valtakunnallisia lakeja ja säännöksiä noudattaen.

**Avertissement** La mise au rebut définitive de ce produit doit être effectuée conformément à toutes les lois et réglementations en vigueur.

**Warnung** Dieses Produkt muß den geltenden Gesetzen und Vorschriften entsprechend entsorgt werden.

**Avvertenza** L'eliminazione finale di questo prodotto deve essere eseguita osservando le normative italiane vigenti in materia

**Advarsel** Endelig disponering av dette produktet må skje i henhold til nasjonale lover og forskrifter.

**Aviso** A descartagem final deste produto deverá ser efectuada de acordo com os regulamentos e a legislação nacional.

**¡Atención!** El desecho final de este producto debe realizarse según todas las leyes y regulaciones nacionales

**Warning!** Slutlig kassering av denna produkt bör skötas i enlighet med landets alla lagar och föreskrifter.

# General Electrical Safety Guidelines and Warnings



**WARNING:** Certain ports on the device are designed for use as intrabuilding (within-the-building) interfaces only (Type 2 or Type 4 ports as described in *GR-1089-CORE*) and require isolation from the exposed outside plant (OSP) cabling. To comply with NEBS (Network Equipment-Building System) requirements and protect against lightning surges and commercial power disturbances, the intrabuilding ports *must not* be metallically connected to interfaces that connect to the OSP or its wiring. The intrabuilding ports on the device are suitable for connection to intrabuilding or unexposed wiring or cabling only. The addition of primary protectors is not sufficient protection for connecting these interfaces metallically to OSP wiring.

**Avertissement** Certains ports de l'appareil sont destinés à un usage en intérieur uniquement (ports Type 2 ou Type 4 tels que décrits dans le document *GR-1089-CORE*) et doivent être isolés du câblage de l'installation extérieure exposée. Pour respecter les exigences NEBS et assurer une protection contre la foudre et les perturbations de tension secteur, les ports pour intérieur *ne doivent pas* être raccordés physiquement aux interfaces prévues pour la connexion à l'installation extérieure ou à son câblage. Les ports pour intérieur de l'appareil sont réservés au raccordement de câbles pour intérieur ou non exposés uniquement. L'ajout de protections ne constitue pas une précaution suffisante pour raccorder physiquement ces interfaces au câblage de l'installation extérieure.



**CAUTION:** Before removing or installing components of a device, connect an electrostatic discharge (ESD) grounding strap to an ESD point and wrap and fasten the other end of the strap around your bare wrist. Failure to use an ESD grounding strap could result in damage to the device.

**Attention** Avant de retirer ou d'installer des composants d'un appareil, raccordez un bracelet antistatique à un point de décharge électrostatique et fixez le bracelet à votre poignet nu. L'absence de port d'un bracelet antistatique pourrait provoquer des dégâts sur l'appareil.

- Install the device in compliance with the following local, national, and international electrical codes:
  - United States—National Fire Protection Association (NFPA 70), United States National Electrical Code.
  - Other countries—International Electromechanical Commission (IEC) 60364, Part 1 through Part 7.
  - Evaluated to the TN power system.

- Canada—Canadian Electrical Code, Part 1, CSA C22.1.
- Suitable for installation in Information Technology Rooms in accordance with Article 645 of the National Electrical Code and NFPA 75.

Peut être installé dans des salles de matériel de traitement de l'information conformément à l'article 645 du National Electrical Code et à la NFPA 75.

- Locate the emergency power-off switch for the room in which you are working so that if an electrical accident occurs, you can quickly turn off the power.
- Make sure that you clean grounding surface and give them a bright finish before making grounding connections.
- Do not work alone if potentially hazardous conditions exist anywhere in your workspace.
- Never assume that power is disconnected from a circuit. Always check the circuit before starting to work.
- Carefully look for possible hazards in your work area, such as moist floors, ungrounded power extension cords, and missing safety grounds.
- Operate the device within marked electrical ratings and product usage instructions.
- To ensure that the device and peripheral equipment function safely and correctly, use the cables and connectors specified for the attached peripheral equipment, and make certain they are in good condition.

You can remove and replace many device components without powering off or disconnecting power to the device, as detailed elsewhere in the hardware documentation for this device. Never install equipment that appears to be damaged.

## Action to Take After an Electrical Accident

If an electrical accident results in an injury, take the following actions in this order:

1. Use caution. Be aware of potentially hazardous conditions that could cause further injury.
2. Disconnect power from the device.
3. If possible, send another person to get medical aid. Otherwise, assess the condition of the victim, and then call for help.

# Prevention of Electrostatic Discharge Damage

Device components that are shipped in antistatic bags are sensitive to damage from static electricity. Some components can be impaired by voltages as low as 30 V. You can easily generate potentially damaging static voltages whenever you handle plastic or foam packing material or if you move components across plastic or carpets. Observe the following guidelines to minimize the potential for electrostatic discharge (ESD) damage, which can cause intermittent or complete component failures:

- Always use an ESD wrist strap when you are handling components that are subject to ESD damage, and make sure that it is in direct contact with your skin.

If a grounding strap is not available, hold the component in its antistatic bag (see [Figure 97 on page 214](#)) in one hand and touch the exposed, bare metal of the device with the other hand immediately before inserting the component into the device.



**WARNING:** For safety, periodically check the resistance value of the ESD grounding strap. The measurement must be in the range 1 through 10 Mohms.


**Avertissement** Par mesure de sécurité, vérifiez régulièrement la résistance du bracelet antistatique. Cette valeur doit être comprise entre 1 et 10 mégohms (Mohms).

- When handling any component that is subject to ESD damage and that is removed from the device, make sure the equipment end of your ESD wrist strap is attached to the ESD point on the chassis.

If no grounding strap is available, touch the exposed, bare metal of the device to ground yourself before handling the component.

- Avoid contact between the component that is subject to ESD damage and your clothing. ESD voltages emitted from clothing can damage components.
- When removing or installing a component that is subject to ESD damage, always place it component-side up on an antistatic surface, in an antistatic card rack, or in an antistatic bag (see [Figure 97 on page 214](#)). If you are returning a component, place it in an antistatic bag before packing it.

Figure 97: Placing a Component into an Antistatic Bag

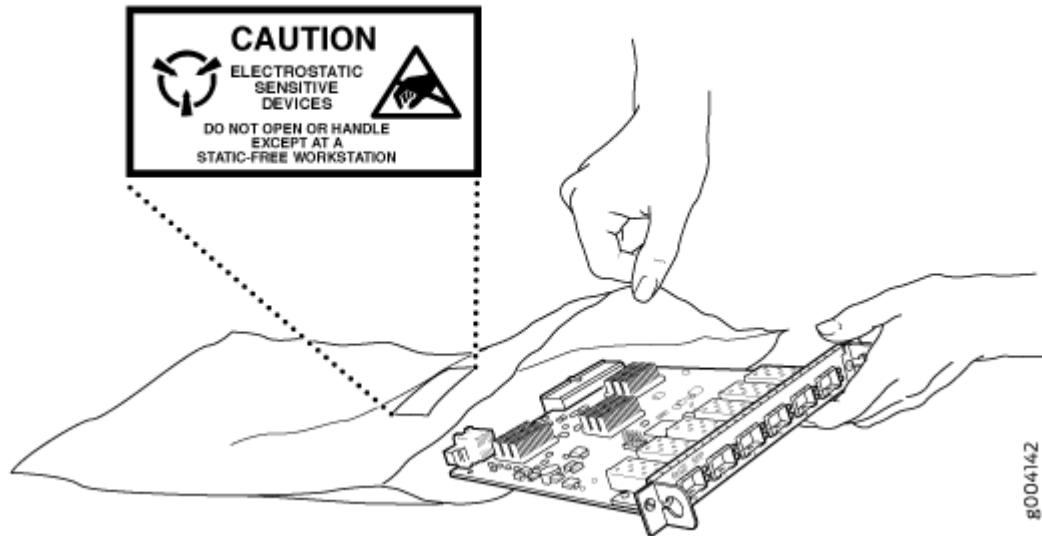

**CAUTION:** ANSI/TIA/EIA-568 cables such as Category 5e and Category 6 can get electrostatically charged. To dissipate this charge, always ground the cables to a suitable and safe earth ground before connecting them to the system.

**Attention** Les câbles ANSI/TIA/EIA-568, par exemple Cat 5e et Cat 6, peuvent emmagasiner des charges électrostatiques. Pour évacuer ces charges, reliez toujours les câbles à une prise de terre adaptée avant de les raccorder au système.

## AC Power Electrical Safety Guidelines

The following electrical safety guidelines apply to AC-powered devices:

- Note the following warnings printed on the device:

**“CAUTION: THIS UNIT HAS MORE THAN ONE POWER SUPPLY CORD. DISCONNECT ALL POWER SUPPLY CORDS BEFORE SERVICING TO AVOID ELECTRIC SHOCK.”**

**“ATTENTION: CET APPAREIL COMPORTE PLUS D’UN CORDON D’ALIMENTATION. AFIN DE PRÉVENIR LES CHOCS ÉLECTRIQUES, DÉBRANCHER TOUT CORDON D’ALIMENTATION AVANT DE FAIRE LE DÉPANNAGE.”**

- AC-powered devices are shipped with a three-wire electrical cord with a grounding-type plug that fits only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical codes.
- You must provide an external certified circuit breaker (2-pole circuit breaker or 4-pole circuit breaker based on your device) rated minimum 20 A in the building installation.
- The power cord serves as the main disconnecting device for the AC-powered device. The socket outlet must be near the AC-powered device and be easily accessible.
- For devices that have more than one power supply connection, you must ensure that all power connections are fully disconnected so that power to the device is completely removed to prevent electric shock. To disconnect power, unplug all power cords (one for each power supply).

Power Cable Warning (Japanese)

**WARNING:** The attached power cable is only for this product. Do not use the cable for another product.

**注意**

附属の電源コードセットはこの製品専用です。  
他の電気機器には使用しないでください。

07753

## AC Power Disconnection Warning



**WARNING:** Before working on the device or near power supplies, unplug all the power cords from an AC-powered device.

**Waarschuwing** Voordat u aan een frame of in de nabijheid van voedingen werkt, dient u bij wisselstroom toestellen de stekker van het netsnoer uit het stopcontact te halen.

**Varoitus** Kytke irti vaihtovirtalaitteiden virtajohto, ennen kuin teet mitään asennuspohjalle tai työskentelet virtalähteiden läheisyydessä.

**Avertissement** Avant de travailler sur un châssis ou à proximité d'une alimentation électrique, débrancher le cordon d'alimentation des unités en courant alternatif.

**Warnung** Bevor Sie an einem Chassis oder in der Nähe von Netzgeräten arbeiten, ziehen Sie bei Wechselstromeinheiten das Netzkabel ab bzw.

**Avvertenza** Prima di lavorare su un telaio o intorno ad alimentatori, scollegare il cavo di alimentazione sulle unità CA.

**Advarsel** Før det utføres arbeid på kabinettet eller det arbeides i nærheten av strømforsyningeneheter, skal strømledningen trekkes ut på vekselstrømsenheter.

**Aviso** Antes de trabalhar num chassis, ou antes de trabalhar perto de unidades de fornecimento de energia, desligue o cabo de alimentação nas unidades de corrente alternada.

**¡Atención!** Antes de manipular el chasis de un equipo o trabajar cerca de una fuente de alimentación, desenchufar el cable de alimentación en los equipos de corriente alterna (CA).

**Varng! Innan du arbetar med ett chassi eller nära strömförsljningsenheter skall du för växelströmsenheter dra ur nätsladden.**

## DC Power Electrical Safety Guidelines

- A DC-powered device is equipped with a DC terminal block that is rated for the power requirements of a maximally configured device.
- For permanently connected equipment, a readily accessible disconnect device shall be incorporated external to the equipment.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Be sure to connect the ground wire or conduit to a solid central office earth ground.
- A closed loop ring is recommended for terminating the ground conductor at the ground stud.
- Run two wires from the circuit breaker box to a source of 48 VDC.
- A DC-powered device that is equipped with a DC terminal block is intended only for installation in a restricted-access location. In the United States, a restricted-access area is one in accordance with Articles 110-16, 110-17, and 110-18 of the National Electrical Code ANSI/NFPA 70.



**NOTE:** Primary overcurrent protection is provided by the building circuit breaker. This breaker must protect against excess currents, short circuits, and earth grounding faults in accordance with NEC ANSI/NFPA 70.

- Ensure that the polarity of the DC input wiring is correct. Under certain conditions, connections with reversed polarity might trip the primary circuit breaker or damage the equipment.
- The marked input voltage of -48 VDC for a DC-powered device is the nominal voltage associated with the battery circuit, and any higher voltages are only to be associated with float voltages for the charging function.
- Because the device is a positive ground system, you must connect the positive lead to the terminal labeled **RTN**, the negative lead to the terminal labeled -48 VDC, and the earth ground to the device grounding points.

## DC Power Copper Conductors Warning



**WARNING:** Use copper conductors only.

**Waarschuwing** Gebruik alleen koperen geleiders.

**Varoitus** Käytä vain kuparijohtimia.

**Attention** Utilisez uniquement des conducteurs en cuivre.

**Warnung** Verwenden Sie ausschließlich Kupferleiter.

**Avvertenza** Usate unicamente dei conduttori di rame.

**Advarsel** Bruk bare kobberledninger.

**Aviso** Utilize apenas fios condutores de cobre.

**¡Atención!** Emplee sólo conductores de cobre.

**Varning!** Använd endast ledare av koppar.

# DC Power Disconnection Warning



**WARNING:** Before performing any of the DC power procedures, ensure that power is removed from the DC circuit. To ensure that all power is off, locate the circuit breaker on the panel board that services the DC circuit, switch the circuit breaker to the OFF position, and tape the device handle of the circuit breaker in the OFF position.

**Waarschuwing** Voordat u een van de onderstaande procedures uitvoert, dient u te controleren of de stroom naar het gelijkstroom circuit uitgeschakeld is. Om u ervan te verzekeren dat alle stroom UIT is geschakeld, kiest u op het schakelbord de stroomverbreker die het gelijkstroom circuit bedient, draait de stroomverbreker naar de UIT positie en plakt de schakelaarhendel van de stroomverbreker met plakband in de UIT positie vast.

**Varoitus** Varmista, että tasavirtapiirissä ei ole virtaa ennen seuraavien toimenpiteiden suorittamista. Varmistaaksesi, että virta on KATKAISTU täysin, paikanna tasavirrasta huolehtivassa kojetaulussa sijaitseva suojakytkin, käänä suojakytkin KATKAISTU-aseentoona ja teippaa suojakytkinen varsi niin, että se pysyy KATKAISTU-asennossa.

**Avertissement** Avant de pratiquer l'une quelconque des procédures ci-dessous, vérifier que le circuit en courant continu n'est plus sous tension. Pour en être sûr, localiser le disjoncteur situé sur le panneau de service du circuit en courant continu, placer le disjoncteur en position fermée (OFF) et, à l'aide d'un ruban adhésif, bloquer la poignée du disjoncteur en position OFF.

**Warnung** Vor Ausführung der folgenden Vorgänge ist sicherzustellen, daß die Gleichstromschaltung keinen Strom erhält. Um sicherzustellen, daß sämtlicher Strom abgestellt ist, machen Sie auf der Schalttafel den Unterbrecher für die Gleichstromschaltung ausfindig, stellen Sie den Unterbrecher auf AUS, und kleben Sie den Schaltergriff des Unterbrechers mit Klebeband in der AUS-Stellung fest.

**Avvertenza** Prima di svolgere una qualsiasi delle procedure seguenti, verificare che il circuito CC non sia alimentato. Per verificare che tutta l'alimentazione sia scollegata (OFF), individuare l'interruttore automatico sul quadro strumenti che alimenta il circuito CC, mettere l'interruttore in posizione OFF e fissarlo con nastro adesivo in tale posizione.

**Advarsel** Før noen av disse prosedyrene utføres, kontroller at strømmen er frakoblet likestrømkretsen. Sørg for at all strøm er slått AV. Dette gjøres ved å lokalisere strømbryteren på brytertavlen som betjener likestrømkretsen, slå strømbryteren AV og teipe bryterhåndtaket på strømbryteren i AV-stilling.

**Aviso** Antes de executar um dos seguintes procedimentos, certifique-se que desligou a fonte de alimentação de energia do circuito de corrente contínua. Para se assegurar que toda a corrente foi DESLIGADA, localize o disjuntor no painel que serve o circuito de corrente contínua e coloque-o na posição OFF (Desligado), segurando nessa posição a manivela do interruptor do disjuntor com fita isoladora.

**¡Atención!** Antes de proceder con los siguientes pasos, comprobar que la alimentación del circuito de corriente continua (CC) esté cortada (OFF). Para asegurarse de que toda la alimentación esté cortada (OFF), localizar el interruptor automático en el panel que alimenta al circuito de corriente continua, cambiar el interruptor automático a la posición de Apagado (OFF), y sujetar con cinta la palanca del interruptor automático en posición de Apagado (OFF).

**Varng! Innan du utför någon av följande procedurer måste du kontrollera att strömförsörjningen till likströmskretsen är bruten. Kontrollera att all strömförsörjning är BRUTEN genom att slå AV det överspänningsskydd som skyddar likströmskretsen och tejpa fast överspänningsskyddets omkopplare i FRÅN-läget.**

## DC Power Grounding Requirements and Warning

An insulated grounding conductor that is identical in size to the grounded and ungrounded branch circuit supply conductors but is identifiable by green and yellow stripes is installed as part of the branch circuit that supplies the device. The grounding conductor is a separately derived system at the supply transformer or motor generator set.



**WARNING:** When you install the device, the ground connection must always be made first and disconnected last.

**Waarschuwing** Bij de installatie van het toestel moet de aardverbinding altijd het eerste worden gemaakt en het laatste worden losgemaakt.

**Varoitus** Laitetta asennettaessa on maahan yhdistäminen aina tehtävä ensiksi ja maadoituksen irti kytäminen viimeiseksi.

**Avertissement** Lors de l'installation de l'appareil, la mise à la terre doit toujours être connectée en premier et déconnectée en dernier.

**Warnung** Der Erdanschluß muß bei der Installation der Einheit immer zuerst hergestellt und zuletzt abgetrennt werden.

**Avvertenza** In fase di installazione dell'unità, eseguire sempre per primo il collegamento a massa e disconnetterlo per ultimo.

**Advarsel** Når enheten installeres, må jordledningen alltid tilkobles først og frakobles sist.

**Aviso** Ao instalar a unidade, a ligação à terra deverá ser sempre a primeira a ser ligada, e a última a ser desligada.

**¡Atención!** Al instalar el equipo, conectar la tierra la primera y desconectarla la última.

**Warning!** Vid installation av enheten måste jordledningen alltid anslutas först och kopplas bort sist.

## DC Power Wiring Sequence Warning



**WARNING:** Wire the DC power supply using the appropriate lugs. When connecting power, the proper wiring sequence is ground to ground, +RTN to +RTN, then -48 V to -48 V. When disconnecting power, the proper wiring sequence is -48 V to -48 V, +RTN to +RTN, then ground to ground. Note that the ground wire must always be connected first and disconnected last.

**Waarschuwing** De juiste bedradingsvolgorde verbonden is aarde naar aarde, +RTN naar +RTN, en -48 V naar -48 V. De juiste bedradingsvolgorde losgemaakt is en -48 naar -48 V, +RTN naar +RTN, aarde naar aarde.

**Varoitus** Oikea yhdistettava kytkentajarjestys on maajohto maajohtoon, +RTN varten +RTN, -48 V varten -48 V. Oikea irrotettava kytkentajarjestys on -48 V varten -48 V, +RTN varten +RTN, maajohto maajohtoon.

**Avertissement** Câblez l'approvisionnement d'alimentation CC En utilisant les crochets appropriés à l'extrême de câblage. En reliant la puissance, l'ordre approprié de câblage est rectifié pour rectifier, +RTN à +RTN, puis -48 V à -48 V. En débranchant la puissance, l'ordre approprié de câblage est -48 V à -48 V, +RTN à +RTN, a alors rectifié pour rectifier. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois. Notez que le fil de masse devrait toujours être relié d'abord et débranché pour la dernière fois.

**Warnung** Die Stromzufuhr ist nur mit geeigneten Ringösen an das DC Netzteil anzuschliessen. Die richtige Anschlussequenz ist: Erdanschluss zu Erdanschluss, +RTN zu +RTN und dann -48V zu -48V. Die richtige Sequenz zum Abtrennen der

Stromversorgung ist -48V zu -48V, +RTN zu +RTN und dann Erdanschluss zu Erdanschluss. Es ist zu beachten dass der Erdanschluss immer zuerst angeschlossen und als letztes abgetrennt wird.

**Avvertenza** Mostra la morsettiera dell'alimentatore CC. Cablare l'alimentatore CC usando i connettori adatti all'estremità del cablaggio, come illustrato. La corretta sequenza di cablaggio è da massa a massa, da positivo a positivo (da linea ad L) e da negativo a negativo (da neutro a N). Tenere presente che il filo di massa deve sempre venire collegato per primo e scollegato per ultimo.

**Advarsel** Riktig tilkoples tilkoplingssekvens er jord til jord, +RTN til +RTN, -48 V til -48 V. Riktig frakoples tilkoplingssekvens er -48 V til -48 V, +RTN til +RTN, jord til jord.

**Aviso** Ate con alambre la fuente de potencia cc Usando los terminales apropiados en el extremo del cableado. Al conectar potencia, la secuencia apropiada del cableado se mueve para moler, +RTN a +RTN, entonces -48 V a -48 V. Al desconectar potencia, la secuencia apropiada del cableado es -48 V a -48 V, +RTN a +RTN, entonces moló para moler. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último. Observe que el alambre de tierra se debe conectar siempre primero y desconectar por último.

**Atenção!** Wire a fonte de alimentação de DC Usando os talões apropriados na extremidade da fiação. Ao conectar a potência, a seqüência apropriada da fiação é moída para moer, +RTN a +RTN, então -48 V a -48 V. Ao desconectar a potência, a seqüência apropriada da fiação é -48 V a -48 V, +RTN a +RTN, moeu então para moer. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último. Anote que o fio à terra deve sempre ser conectado primeiramente e desconectado por último.

**Varng!** Korrekt kopplingssekvens är jord till jord, +RTN till +RTN, -48 V till -48 V. Korrekt kopplas kopplingssekvens är -48 V till -48 V, +RTN till +RTN, jord till jord.

## DC Power Wiring Terminations Warning



**WARNING:** When stranded wiring is required, use approved wiring terminations, such as closed-loop or spade-type with upturned lugs. These terminations must be the appropriate size for the wires and must clamp both the insulation and conductor.

**Waarschuwing** Wanneer geslagen bedrading vereist is, dient u bedrading te gebruiken die voorzien is van goedgekeurde aansluitingspunten, zoals het gesloten-lus type of het grijperschop type waarbij de aansluitpunten omhoog wijzen. Deze aansluitpunten dienen de juiste maat voor de draden te hebben en dienen zowel de isolatie als de geleider vast te klemmen.

**Varoitus** Jos säikeellinen johdin on tarpeen, käytä hyväksyttyä johdinliitintää, esimerkiksi suljettua silmukkaa tai kourumaista liitintää, jossa on ylöspäin käännetty kiinnityskorvat. Tällaisten liitintöjen tulee olla kooltaan johtimiin sopivia ja niiden tulee puristaa yhteen sekä eristeen että johdinosan.

**Avertissement** Quand des fils torsadés sont nécessaires, utiliser des douilles terminales homologuées telles que celles à circuit fermé ou du type à plage ouverte avec cosses rebroussées. Ces douilles terminales doivent être de la taille qui convient aux fils et doivent être refermées sur la gaine isolante et sur le conducteur.

**Warnung** Wenn Litzenverdrahtung erforderlich ist, sind zugelassene Verdrahtungsabschlüsse, z.B. für einen geschlossenen Regelkreis oder gabelförmig, mit nach oben gerichteten Kabelschuhen zu verwenden. Diese Abschlüsse sollten die angemessene Größe für die Drähte haben und sowohl die Isolierung als auch den Leiter festklemmen.

**Avvertenza** Quando occorre usare trecce, usare connettori omologati, come quelli a occhiello o a forcella con linguette rivolte verso l'alto. I connettori devono avere la misura adatta per il cablaggio e devono serrare sia l'isolante che il conduttore.

**Advarsel** Hvis det er nødvendig med flertrådede ledninger, brukes godkjente ledningsavslutninger, som for eksempel lukket sløyfe eller spadetype med oppoverbøyde kabelsko. Disse avslutningene skal ha riktig størrelse i forhold til ledningene, og skal klemme sammen både isolasjonen og lederen.

**Aviso** Quando forem requeridas montagens de instalação eléctrica de cabo torcido, use terminações de cabo aprovadas, tais como, terminações de cabo em circuito fechado e planas com terminais de orelha voltados para cima. Estas terminações de cabo deverão ser do tamanho apropriado para os respectivos cabos, e deverão prender simultaneamente o isolamento e o fio condutor.

**¡Atención!** Cuando se necesite hilo trenzado, utilizar terminales para cables homologados, tales como las de tipo "bucle cerrado" o "espada", con las lengüetas de conexión vueltas hacia arriba. Estos terminales deberán ser del tamaño apropiado para los cables que se utilicen, y tendrán que sujetar tanto el aislante como el conductor.

**Warning!** När flertrådiga ledningar krävs måste godkända ledningskontakter användas, t.ex. kabelsko av sluten eller öppen typ med uppåtvänd tapp. Storleken på dessa kontakter måste vara avpassad till ledningarna och måste kunna hålla både isoleringen och ledaren fastklämda.

## Multiple Power Supplies Disconnection Warning



**WARNING:** The network device has more than one power supply connection. All connections must be removed completely to remove power from the unit completely.

**Waarschuwing** Deze eenheid heeft meer dan één stroomtoevoerverbinding; alle verbindingen moeten volledig worden verwijderd om de stroom van deze eenheid volledig te verwijderen.

**Varoitus** Tässä laitteessa on useampia virtalähdekytkentöjä. Kaikki kytkennät on irrotettava kokonaan, jotta virta poistettaisiin täysin laitteesta.

**Avertissement** Cette unité est équipée de plusieurs raccordements d'alimentation. Pour supprimer tout courant électrique de l'unité, tous les cordons d'alimentation doivent être débranchés.

**Warnung** Diese Einheit verfügt über mehr als einen Stromanschluß; um Strom gänzlich von der Einheit fernzuhalten, müssen alle Stromzufuhren abgetrennt sein.

**Avvertenza** Questa unità ha più di una connessione per alimentatore elettrico; tutte le connessioni devono essere completamente rimosse per togliere l'elettricità dall'unità.

**Advarsel** Denne enheten har mer enn én strømtilkobling. Alle tilkoblinger må kobles helt fra for å eliminere strøm fra enheten.

**Aviso** Este dispositivo possui mais do que uma conexão de fonte de alimentação de energia; para poder remover a fonte de alimentação de energia, deverão ser desconectadas todas as conexões existentes.

**¡Atención!** Esta unidad tiene más de una conexión de suministros de alimentación; para eliminar la alimentación por completo, deben desconectarse completamente todas las conexiones.

**Varng! Denna enhet har mer än en strömförsljningsanslutning; alla anslutningar måste vara helt avlägsnade innan strömtillförseln till enheten är fullständigt bruten.**

## TN Power Warning



**WARNING:** The device is designed to work with a TN power system.

**Waarschuwing** Het apparaat is ontworpen om te functioneren met TN energiesystemen.

**Varoitus** Koje on suunniteltu toimimaan TN-sähkövoimajärjestelmien yhteydessä.

**Avertissement** Ce dispositif a été conçu pour fonctionner avec des systèmes d'alimentation TN.

**Warnung** Das Gerät ist für die Verwendung mit TN-Stromsystemen ausgelegt.

**Avvertenza** Il dispositivo è stato progettato per l'uso con sistemi di alimentazione TN.

**Advarsel** Utstyret er utført til bruk med TN-strømsystemer.

**Aviso** O dispositivo foi criado para operar com sistemas de corrente TN.

**¡Atención!** El equipo está diseñado para trabajar con sistemas de alimentación tipo TN.

**Warning!** Enheten är konstruerad för användning tillsammans med elkraftssystem av TN-typ.

## Agency Approvals and Compliance Statements for the QFX5200 and QFX5220

### IN THIS SECTION

- [Agency Approvals for the QFX Series | 225](#)

See the following topics for agency and compliance information:

## Agency Approvals for the QFX Series

### IN THIS SECTION

- [Compliance Statement for Argentina | 226](#)

The QFX Series complies with the following standards:

- Safety
  - CAN/CSA-C22.2 No. 60950-1 Safety of Information Technology Equipment
  - UL 62368-1 Audio/Video, Information and Communication Technology Equipment- Safety
  - IEC 62368-1: 2014 Audio/Video, Information and Communication Technology Equipment–Safety
  - IEC 60950-1: 2005/A2:2013 Information Technology Equipment -Safety (All country deviations): CB Scheme
  - EN 60825-1 Safety of Laser Products - Part 1: Equipment Classification, Requirements and User's Guide
- Electromagnetic Compatibility (EMC)
  - EN 300 386 V1.6.1 (2012) Telecom Network Equipment–EMC requirements
  - EN 55024: 1998/A1:2001/A2:2003 Information Technology Equipment Immunity Characteristics
  - TEC/SD/DD/EMC-221–India EMC standard
  - EN 301 489-1 V1.92 (2011-09)–EMC and Radio spectrum Matters
  - EN 55024
  - CISPR 24
  - BSMI, Class A
  - CNS 13438
- Electromagnetic Interference (EMI)
  - FCC 47 CFR Part 15, Class A (2009) USA Radiated Emissions
  - EN 55022 Class A (2010) European Radiated Emissions

- VCCI Class A:(2010) Japanese Emissions
- BSMI CNS 13438 and NCC C6357 Class A Taiwan Radiated Emissions
- AS/NZS CISPR 22:2009: Class A, Australian/New Zealand Radiated Emissions
- Immunity
  - EN 55024: 1998/A1:2001/A2:2003 Information Technology Equipment Immunity Characteristics
  - EN-61000-3-2 (2006) Power Line Harmonics
  - EN-61000-3-3 (2013) Power Line Voltage Fluctuations
  - EN-61000-4-2 (2009) Electrostatic Discharge
  - EN-61000-4-3 (2007) Radiated Immunity
  - EN-61000-4-4 (2012) Electrical Fast Transients
  - EN-61000-4-5 (2006) Surge
  - EN-61000-4-6 (2009) Immunity to Conducted Disturbances
  - EN-61000-4-11 (2004) Voltage Dips and Sags

### **Compliance Statement for Argentina**

EQUIPO DE USO IDÓNEO.

### **RELATED DOCUMENTATION**

| *General Safety Guidelines and Warnings*